

Mobile Thin Client Solution Atrust mt168W

for Windows 10 IoT Enterprise

Topics Covered:

Setup and Maintenance Basics as an Endpoint Device in VDI Atrust Client Setup Console



USER'S MANUAL

Internal Draft 0.02	
Copyright © 2016-17 Atrust Computer Corp.	

Copyright and Trademark Statements

Copyright © 2016-17 Atrust Computer Corp. All rights reserved.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Atrust Computer Corp.

Disclaimer

Atrust Computer Corp. ("Atrust") makes no representations or warranties with respect to the contents or use of this document, and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. Atrust is not liable for technical or editorial errors or omissions contained herein. The information in this document is subject to change without notice.

Trademark Statements

Atrust is a trademark of Atrust Computer Corp.

Intel is a registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

Microsoft, Windows, Windows Server, RemoteFX, and MultiPoint are trademarks or registered trademarks of the Microsoft group of companies.

Citrix, ICA, XenApp, XenDesktop, and VDI-in-a-Box are trademarks of Citrix Systems, Inc. and/or one or more of its subsidiaries, and may be registered in the United States Patent and Trademark Office and in other countries.

VMware, VMware View, and VMware Horizon View are trademarks or registered trademarks of the VMware, Inc.

PCoIP is a registered trademark of Teradici Corporation in the United States and/or other countries.

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

About This User's Manual

This manual provides detailed instructions on how to set up, use, and maintain Atrust mt168W mobile thin clients.

Manual Structure and Subjects

Chapter	Subject
1	Provides an overview of Atrust mt168W mobile thin clients.
2	Provides detailed instructions on how to set up Atrust mt168W mobile thin clients.
3	Provides the basics of how to use Atrust mt168W mobile thin clients.
4	Provides instructions on how to configure client settings and customize Atrust mt168W mobile thin clients with the Atrust Client Setup console.
Appendices	Provides supplementary instructions on the maintenance and upgrade of Atrust mt168W mobile thin clients.
Specifications	Provides detailed information on key components of Atrust mt168W mobile thin clients.

Notes, Tips, and Warnings

Throughout this manual, the notes, tips, and warnings in the following formats are used to provide important information, useful advice, and prevent injuries to you, damage to your devices, or loss of data on your system.



NOTE

• A note provides important information for a specific situation.



TIP

• A tip gives a piece of useful advice to perform a task more efficiently.



WARNING

• A warning provides crucial information that must be followed to prevent injuries to you, damage to your devices, or loss of data on your system.

Style Conventions

The following styles are used throughout this manual while referring to operational items on input devices, hardware panels, or application interfaces.

Item	Style	Example
keys on the keyboard	bold	Ctrl + Alt + Pause, Ctrl + Alt, Alt + Tab
application windows or entry lists	first letter capitalized	ICA Connection list, RDP Connection list, View Connection list
buttons or tabs on a window, toolbars, taskbar, or menu	bold	OK, Next, Save, Applications tab
options on a window, screen, list, or menu	bold	Start the following program on connection, Remote Desktop Services, Better Appearance (32-bit), Web Logon
selecting a series of options	bold	Applications > Citrix ICA, Applications > Remote Desktop, Applications > VMware View, System > UWF

Safety and Regulatory Information

Regulatory Statement

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Regulatory Information

WEEE (Waste Electrical and Electronic Equipment) Directive



In the European Union, this symbol indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling. For proper disposal, please contact your local recycling or hazardous waste center.

Safety Information



WARNING

• Use only power supplies listed in the user instructions.



WARNING

 Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.



WARNING

- For safety, do not make mechanical or electrical modifications to the equipment.
- Do not remove equipment covers and access any of the components inside the
 equipment. Any access inside the equipment without an authorized or certified
 technician may cause serious injuries and damage. For any problem, contact your
 dealer for assistance.
- You should only make repairs as authorized by the product documentation.
 Repairs, replacement, expansion, and upgrades not performed by a certified service technician may cause injuries to you, damage your system, and void your warranty.

Table of Contents

Copyri	gnt and	i irademark Sta	atements	'			
Discla Trade	imer mark Stat	i ements i					
About	This Us	er's Manual	ii				
Notes		re and Subjects I Warnings ons iii	ii ii				
Safety	and Re	gulatory Inforn	nation iv				
Regul	atory Stat atory Info Informat	rmation v					
1	Over	view 1					
	1.1	Introduction	3				
	1.2	Features	3				
	1.3	Package Cont	ents 3				
	1.4	Exterior Views	4				
	1.5	Exterior Comp	onents	5			
	1.6	Before Getting	g Started	10			
	1.7	Service Access	with your	mt168W	11		
2	Settii	ng Up Your ı	nt168W	13			
	2.1	About the AC	Adapter	15			
	2.2	Charging You	Lithium-io	n Battery	15		
	2.3	Setting Up Yo	ur mt168W	16			
3	Getti	ng Started	17				
	3.1	Standard Sho	rtcuts 19				
	3.2	Accessing Citr	ix Services	20			
	3.3	Accessing Mic	rosoft Rem	ote Deskto	p Services	26	
	3.4	Accessing VM	ware View a	ınd Horizoı	n View Services	;	28
4	Confi	guring Clie	nt Setting	gs 31			
	4.1	Atrust Client S	Setup 33				
		4.1.1 Interface	Overview ettings at a Glar	33 nce 34			
	4.2	Configuring S	_		35		
			ab Overview	35			
			e Settings at a		36		
			the Access to ring Shadow Se			38	
		4.2.4 Configuring Shadow Settings for Remote Assistance4.2.5 Updating Firmware from the Management Computer			40		

	4.2.6 4.2.7 4.2.8 4.2.9 4.2.10 4.2.11	Taking Snapshots for Mass Deployment or Syste Deploying Systems with a Created Snapshot Restoring Systems with a Created Snapshot Enabling or Disabling the Appliance Mode Configuring UWF (Unified Write Filter) Enabling or Disabling Auto Registration	em Recove 43 46 49 53 55	ery 42	
4.3	Config	uring External Device Settings	56		
	4.3.1 4.3.2 4.3.3 4.3.4	Devices Tab Overview 56 Available Settings at a Glance 56 Configuring Settings for USB Storage Devices Disabling or Enabling Attached Audio Devices	57 58		
4.4	Config	uring User Interface Settings 59			
	4.4.1 4.4.2 4.4.3 4.4.4	User Interface Tab Overview 59 Available Settings at a Glance 59 Configuring the Display of Standard Desktop Sh Configuring the Num Lock Mode 61	nortcuts fo	or Quick Access	60
4.5	Config	uring Service Access Settings	62		
	4.5.1 4.5.2 4.5.3 4.5.4 4.5.5 4.5.6 4.5.7 4.5.8 4.5.9 4.5.10 4.5.11 4.5.12	Applications Tab Overview 62 Available Settings at a Glance 63 Configuring Basic RDP Connection Settings Accessing Remote Desktop Services 71 Configuring Advanced RDP Connection Setting Configuring Basic ICA Connection Settings Accessing Citrix Services 97 Configuring Advanced ICA Connection Settings Configuring Basic VMware View Connection Settings Configuring Basic VMware View Connection Settings Configuring Advanced View Connection Settings Configuring Web Browser Settings 118	89 stings	76 101 112 114 116	

Appendices 121

- A.1 Resetting Your mt168W 123
- A.2 Updating Firmware for Your mt168W 124

Specifications 127

1

Overview

This chapter provides an overview of Atrust mt168W.

1.1 Introduction	
Desktop virtualization and simple endpoint devices	3
1.2 Features	
Key features of Atrust mt168W	3
1.3 Package Contents	
Check your package contents	3
1.4 Exterior Views	
Exterior design of Atrust mt168W	4
1.5 Exterior Components	
Exterior components of Atrust mt168W	5
1.6 Before Getting Started	
About UWF (Unified Write Filter)	10
About the default user accounts	10
About the behavior of the system startup	10
1.7 Service Access with your mt168W	
Standard and customized desktop shortcuts	11

1.1 Introduction

Desktop virtualization provides a new perspective to reconsider the design and implementation of an IT infrastructure. In a desktop virtualization infrastructure, a station is no longer a cumbersome desktop, but simply an endpoint device for users to access delivery services from the server(s).

With the introduction of the desktop virtualization technologies, you can considerably benefit from:

- On-demand applications/desktops
- · Centralized management of work environments
- Drastically reduced endpoint software/hardware issues
- Simplified system maintenance and improved system security
- · More scalability with low-cost endpoint devices

1.2 Features

The key features of Atrust mt168W mobile thin clients are:


- Built-in Wireless 802.11 a/b/g/n and Ethernet network interface
- Support for a wide range of desktop virtualization solutions from industry-leading companies:

 - Citrix® XenApp™, XenDesktop®, and VDI-in-a-Box™
 - > VMware® View™ and Horizon View™
- · Support for high-definition technologies

 - Citrix[®] HDX[™]
 - > VMware® View™ PCoIP®
- Simple click-access to various applications/desktops
- Built-in Atrust Client Setup as the local client management console

1.3 Package Contents

Please check your package contents. Ensure that all of the items are present in your package. If any items are missing or damaged, please contact your dealer immediately.

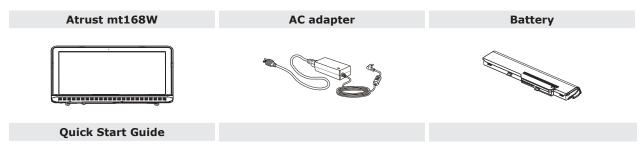





NOTE: Your package may not contain a hard copy of the Quick Start Guide. In this case, a soft copy in PDF format will be provided.

1.4 Exterior Views


Front View

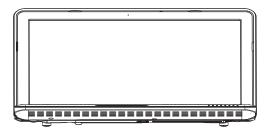

Left View Right View

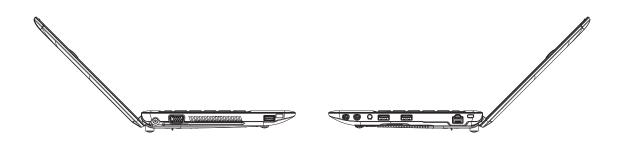


Bottom View and Battery

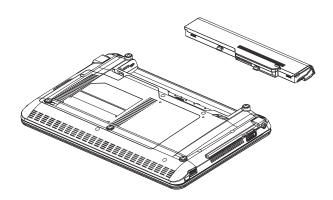


1.5 Exterior Components

Display and Base Components

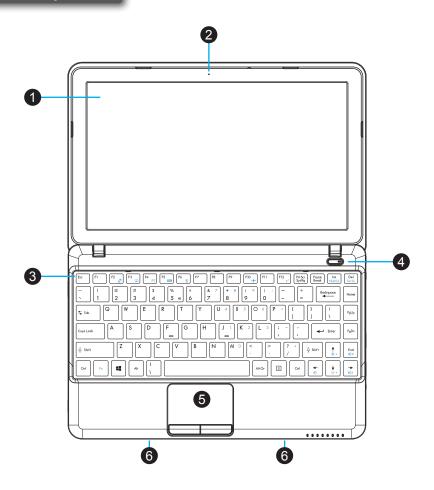


No.	Sign	Component	Description
1		LCD display	Built-in display for visual output.
2		Microphone	Built-in microphone for audio input.
3		Keyboard	Built-in keyboard for control and input.
4	ڻ	Power button	 Press to power on / shut down the mobile thin client. Press to <i>resume</i> from the System Sleep mode (Orange LED).
5		Touchpad	Built-in pointing device for control and input.
6		Speaker	Built-in speakers for audio output.

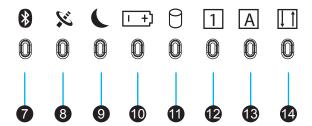

No.	Sign	Component	Description
7	*	Bluetooth LED	Glows blue when Bluetooth is enabled (not supported).
8	E	Wi-Fi LED	Glows blue when Wi-Fi is enabled.
9		Sleep Mode LED	Glows orange when the system is in Sleep mode.
10	[+]	Battery LED	Glows orange when the battery is being charged. Glows blue when the battery is fully charged.
11	0	Storage LED	Glows blue when flash memory is being accessed.
12	1	Num Lock LED	Glows blue when Num Lock is enabled.
13	Α	Caps Lock LED	Glows blue when Caps Lock is enabled.
14	ŢŢ.	Scroll Lock LED	Glows blue when Scroll Lock is enabled.

Fn Key Combinations


With the combination of **Fn** plus another specific key (with one printed blue symbol on it), you can quickly adjust hardware settings to suit your needs.

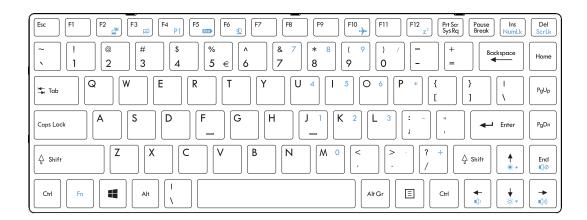





NOTE


• To use an Fn key combination, press and hold **Fn**, and then press another key.

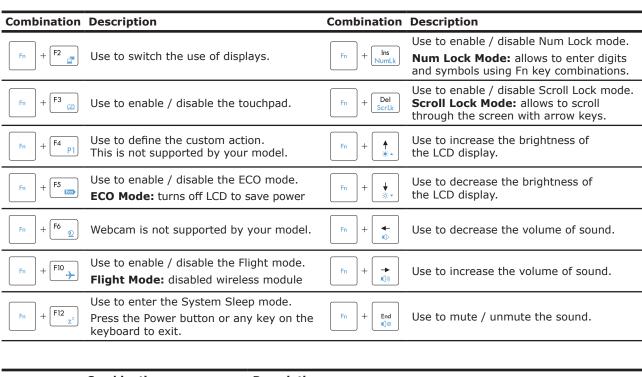

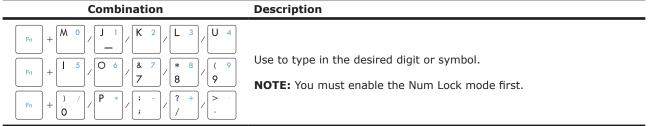


Left and Right Side Components

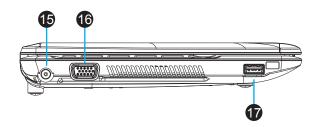

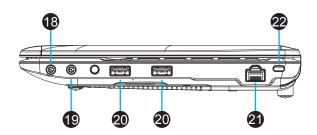

No.	Sign	Component	Description
15	==	DC IN	Connects to an AC adapter.
16		VGA port	Connects to an external display.
17	SS∕G→	USB port (USB 3.0)	Connects to a USB device.
18		Headphone port	Connects to a set of headphones or a speaker system.
19		Microphone port	Connects to a microphone.
20	•	USB port (USB 2.0)	Connects to a USB device.
21	<u></u>	LAN port	Connects to a network.
22		Kensington security slot	Connects a Kensington cable to secure the mobile thin client.

Bottom Components

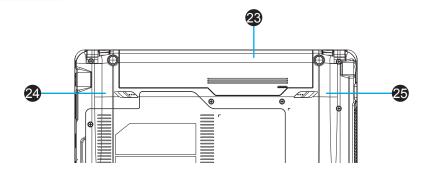

No.	Sign	Component	Description
23		Lithium-ion battery	Supplies the mobile thin client with the power when an external power source is not available.
			Unlocks the battery by sliding and holding left.
24	RELEASE (+)	Left battery latch	NOTE: To remove the battery, use the right battery latch to unlock the battery, and then slide left and hold this latch to remove the battery.
		'	Locks / Unlocks the battery by sliding left / right.
25	+ UNLOCK	Right battery latch	NOTE: To remove the battery, use this latch to unlock the battery, and then slide left and hold the left battery latch to remove the battery.

1.6 Before Getting Started

About UWF (Unified Write Filter)

Before getting started on client configuration through the Atrust Client Setup console or through the Windows 10 IoT Enterprise operating system, please note that in a session any changes to the system will not be kept by default after the system restart. This is due to a special feature called UWF (Unified Write Filter) in your Windows Embedded-based system.

By default, your mt168W is UWF-enabled. Unified Write Filter (UWF) is a sector-based write filter intercepting all write attempts to a protected volume and redirecting those write attempts to a virtual overlay. With UWF, all system changes will only affect the session where the changes are made. After restart, all changes will be discarded.

You can change the default via the Atrust Client Setup console. It's strongly recommended that you read the related section in this user's manual first before making any changes to your system.



WARNING

• Please read the following section FIRST before making any changes to your system: "4.2.10 Configuring UWF (Unified Write Filter)" on page 53.



NOTE

- As a thin client device, your mt168W is mainly for access to remote or virtual
 desktops on servers. With the limited and protected (UWF-enabled) hard disk space,
 it's not recommended to save data on your mt168W. Instead, you can use storage
 spaces over remote / virtual desktops, removable storage devices, or networks.
- In case that you need to copy a file to the protected volume, ensure that its size is smaller than the free memory (overlay) space. Otherwise, your system may have unexpected results or become unresponsive.

About Default User Accounts

There are two default user accounts for your Windows 10 IoT Enterprise-based system: one is the standard, the other administrative. The default credentials are shown as follows:

Туре	Account Name	Password
Administrator	Administrator	Atrustadmin
Standard user	User	Atrustuser



NOTE

• The passwords are case sensitive.

About the Behavior of System Startup

Every time when the system is started up, it will automatically log in to the Windows 10 IoT Enterprise operating system using the default standard user account as indicated in the preceding table about default user accounts.

1.7 Service Access with your mt168W

With Atrust mt168W, you can simply access desktop virtualization solutions from Microsoft, Citrix, and VMware, by mouse-clicking. Two types of access shortcuts are available: *standard* and *customized*. The former is available on the desktop of Windows 10 IoT Enterprise by default; the latter can be created and customized through the Atrust Client Setup console.

Standard Desktop Shortcuts

You can find the instructions on how to use standard desktop shortcuts to access on-demand applications or desktops in chapter 3 "Getting Started" on page 17 or in the Quick Start Guide for mt168W.



Customized Desktop Shortcuts

You can find the instructions on how to create and customize access shortcuts in chapter 4 "Configuring Client Settings" on page 31.

Setting Up Your mt168W

This chapter provides detailed instructions on how to set up your mt168W mobile thin client.

2.1 About the AC Adapter	
Information on the use of the AC adapter	15
2.2 Charging Your Lithium-ion Battery	
How to charge your lithium-ion battery (Recommended for first time use)	15
2.3 Setting Up Your mt168W	
How to set up your mt168W	16

2.1 About the AC Adapter

To use the supplied AC adapter, please do the following:

- 1. Unpack your mt168W package, and then take out the AC adapter and its detached power cord.
- 2. Attach the power cord to the AC adapter to assemble your AC adapter.

2.2 Charging Your Lithium-ion Battery




NOTE

• For the first time use, it's recommended to charge your Lithium-ion battery first.

To charge your lithium-ion battery, please do the following:

1. Slide the battery into the battery compartment until it clicks into place, and then Slide left the right battery latch to lock the battery securely.

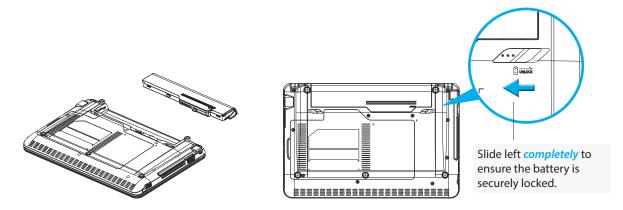


- 2. Attach the DC plug of the AC adapter to your mt168W, and then connect the AC plug of the adapter to a power outlet.
- 3. The Battery LED glows orange while the battery is being charged.
- 4. On completion, the Battery LED glows blue.

2.3 Setting Up Your mt168W

To set up your mt168W, please do the following:

- 1. Use the AC adapter or the Lithium-ion battery as the power source:
 - To use the AC adapter, attach its DC plug to your mt168W, and connect its AC plug to a power outlet.
 - To use the Lithium-ion battery, slide it into the battery compartment until it clicks into place, and then slide left the right battery latch to lock the battery securely.

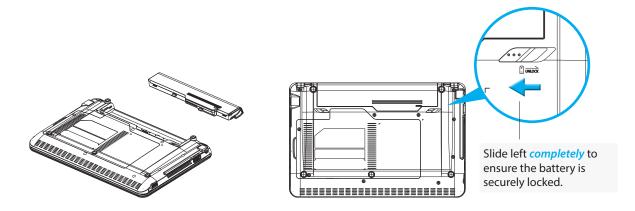

2. Connect the LAN port to your local network with an Ethernet cable or set up a wireless connection later.

Getting Started

This chapter provides the basics of how to use your mt168W.

3.1 Standard Shortcuts	
Default shortcuts on the local (Windows 10 IoT Enterprise) desktop	19
3.2 Accessing Citrix Services	
How to access Citrix services	20
3.3 Accessing Microsoft Remote Desktop Services	
How to access Microsoft Remote Desktop services	26
3.4 Accessing VMware View and Horizon View Services	
How to access VMware View and Horizon View services	28

3.1 Standard Shortcuts

You can access virtual desktop or application services simply through standard shortcuts available on the desktop.



No.	Shortcuts	Description	See
1	Citrix Receiver	Double click to access Citrix services. NOTE: If the secure network connection is not implemented in your Citrix environment, you might not be able to access Citrix services through Citrix Receiver of this new version. Alternatively, Citrix allows service access simply through a Web browser. Try to use the built-in Internet Explorer if you have problems with Citrix Receiver (refer to instructions in this chapter).	3.2
2	Remote Desktop Connection	Double click to access Microsoft Remote Desktop services.	3.3
3	VMware Horizon View Client	Double click to access VMware View and VMware Horizon View services.	3.4

3.2 Accessing Citrix Services

Accessing Citrix Service with Internet Explorer

To quickly access Citrix services with the Internet Explorer, please do the following:

- 1. Open the Internet Explorer by clicking its icon on **Start**.
- 2. Enter the IP address / URL / FQDN of the server through which Citrix services are accessible.




NOTE

- For XenDesktop 7.0 or the later, consult your IT administrator for the appropriate IP address / URL / FQDN.
- 3. Follow the on-line instructions to provide the required data and access Citrix services.

Logon Screen Example

XenDesktop / XenApp 7.5 Platinum

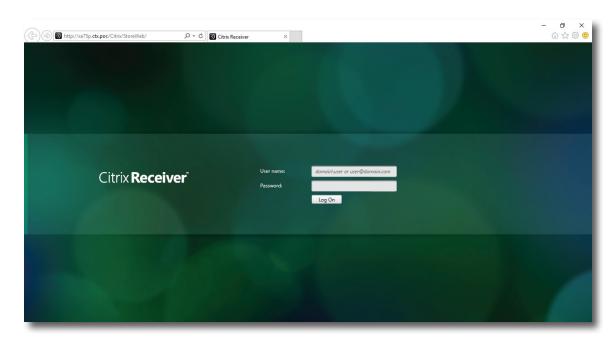


Virtual Desktop Example

Windows 7 Ultimate (launched in mt168W)



Virtual Application Examples

LINE, Firefox, Calculator, and Adobe Reader (launched in mt168W)

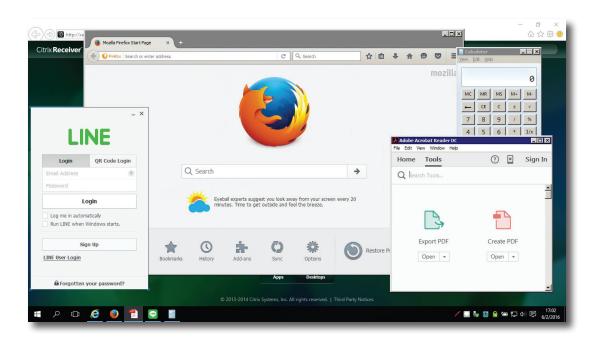

Accessing Citrix Service through the Citrix Receiver Shortcut

To access Citrix services through the Citrix Receiver shortcut, please do the following:


- 1. Import the required safety certificate for available Citrix services with an administrator account. **Consult your** *IT administrator for necessary assistance*.
 - a. On the desktop, click in the bottom-left corner.




b. Enter **mmc** on the opened window, and then press **Enter**.




c. On the Console window, click the File menu to select Add/Remove Snap-in.

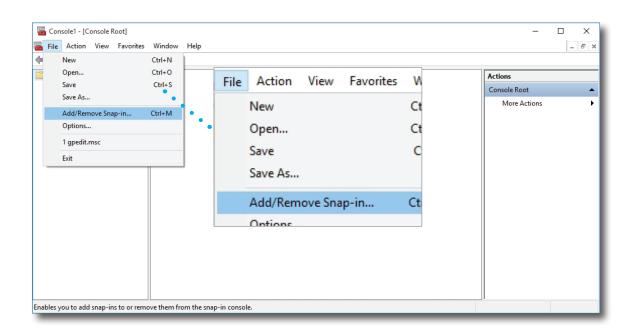

d. On the opened window, click **Certificates** > **Add** > **Computer account** > **Local computer** > **OK** to add the Certificates snap-in.

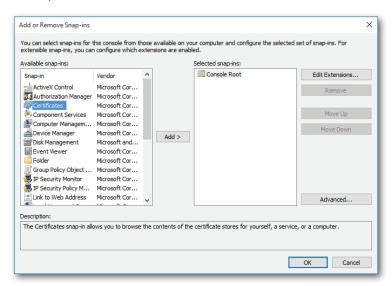

e. On the Console window, click to expand the group tree of Certificates, right-click on **Trusted Root Certification Authorities**, and then select **All Tasks** > **Import** on the popup menu.

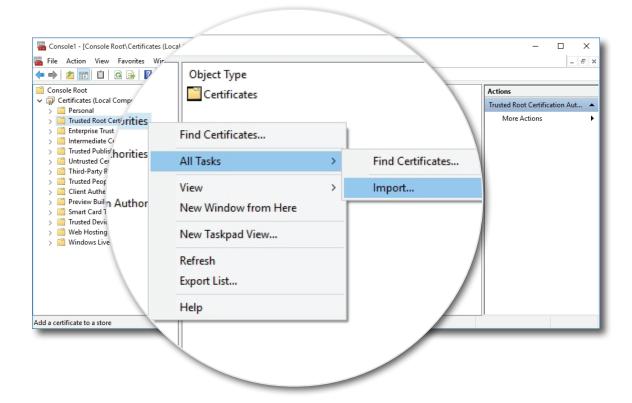

f. Follow the Certificate Import Wizard to import your certificate, and then close the Console window when it's done.




2. Double click **Citrix Receiver**




on the desktop.

3. A window appears prompting for the work email or server address. Consult your IT administrator for proper information to provide here, enter the required data, and then click **Add** to continue.

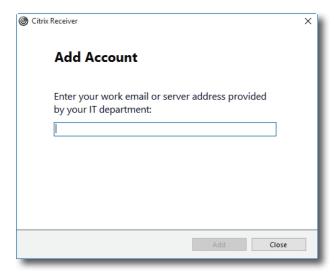

4. Select the desired store account if more than one store is available, type credentials in the opened window, and then click **Log On**.

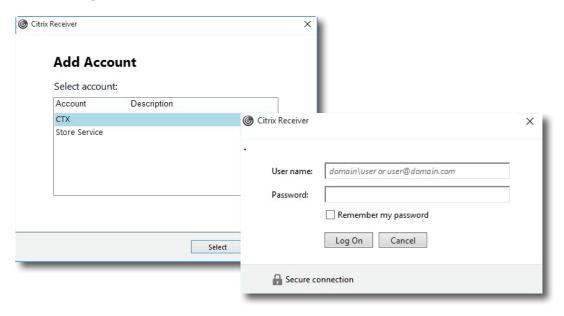

5. A window appears allowing you to add favorite apps (virtual desktops and applications) for the provided credentials. Click to select the desired application(s). The selected application(s) will appear on that window.




6. Now you can click to launch the desired application. The virtual desktop or application will be displayed on the screen.

3.3 Accessing Microsoft Remote Desktop Services

To quickly access Remote Desktop services, please do the following:


- 1. Double click **Remote Desktop Connection** on the desktop.
- 2. Enter the name or IP address of the remote computer on the opened window, and then click **Connect**.

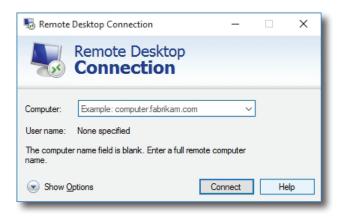

3. Enter your credentials, and then click **OK**.



4. A window may appear with a certificate message about the remote computer. Consult your IT administrator for details and ensure the connection is secure *first*. To bypass, click **Yes** to continue.

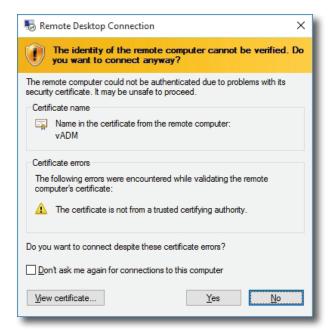


5. The remote desktop will be displayed on the screen (in full-screen by default).


3.4 Accessing VMware View and Horizon View Services

To quickly access VMware View or Horizon View services, please do the following:


- 1. Double click **VMware Horizon View Client** on the desktop
- 2. A window appears allowing you to add the name or IP address of the View Connection Server.
- 3. Double-click **Add Server** icon or click **New Server** in the top-left corner.

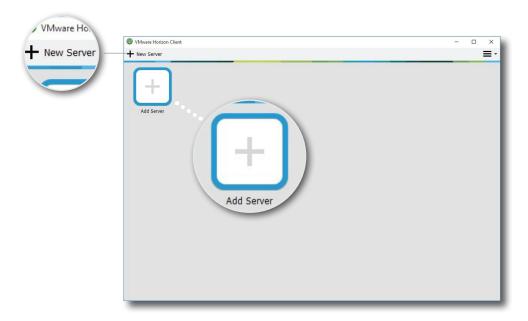

4. A window appears prompting for the name or IP address of the View Connection Server. Enter the required information, and then click **Connect**.

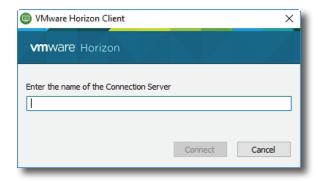


5. A window may appear with a certificate message about the remote server. Consult your IT administrator for details and ensure the connection is secure *first*. To bypass, click **Continue**.

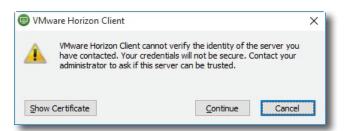

- 6. A window may appear with a Welcome message. Click **OK** to continue.
- 7. Provide your user name and password on the opened window, and then click **Login**.



8. A window appears with available desktops or applications for your credentials. Double-click to select the desired desktop or application.

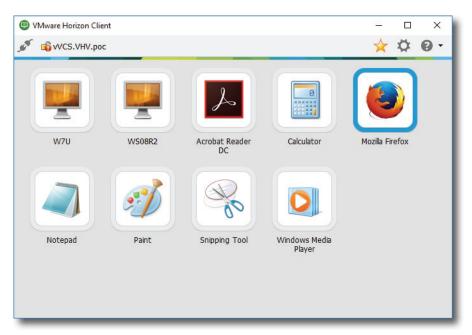

9. The desktop or application will be displayed on the screen.

Configuring Client Settings

This chapter provides instructions on how to configure advanced settings and customize your mt168W with Atrust Client Setup.

4.1 Atrust Client Setup	
Interface overview	33
Available settings at a glance	34
4.2 Configuring System Settings	
System tab overview	35
Available settings at a glance	36
4.3 Configuring External Device Settings	
Devices tab overview	56
Available settings at a glance	56
4.4 Configuring User Interface Settings	
User Interface tab overview	59
Available settings at a glance	59
4.5 Configuring Service Access Settings	
Applications tab overview	62
Available settings at a glance	63


4.1 Atrust Client Setup

4.1.1 Interface Overview

To access Atrust Client Setup on your mt168W thin client, please do the following:

- 1. Log in to your mt168W with an administrator account (see page 4 for the default).
- 2. Click **Atrust Client Setup** on the Start screen.
- 3. The Atrust Client Setup window appears.

Interface Overview

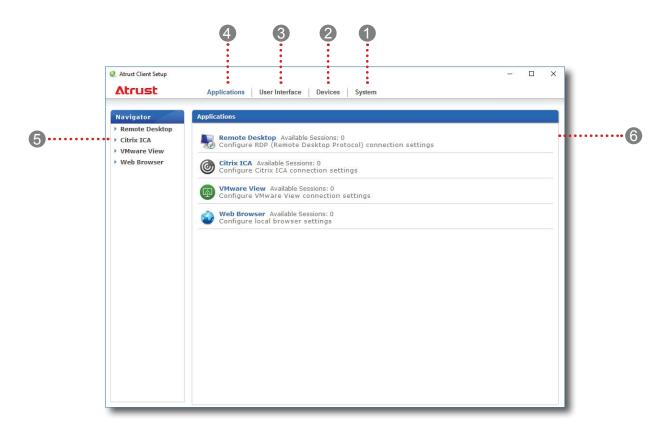

Interf	Interface Elements			
No.	Name	Description		
1	System tab	Click to configure settings for the operation and maintenance of the client.		
2	Devices tab	Click to configure settings for external devices of the client.		
3	User Interface tab	Click to configure the user interface of the client.		
4	Applications tab	Click to configure settings for service access through the client.		
5	Navigation area	Click to select a setting item under a selected tab or to select a setting entry under a selected setting item.		
6	Configuration area	Configures setting values when a setting item or entry is selected.		
	·	<u> </u>		

4.1.2 Client Settings at a Glance

The following table provides a brief description of each setting item under four main setting categories.

Tab	Setting Item	Section	Page
System	 Configuring passwords Configuring remote assistance settings Updating firmware Taking snapshots Enabling/Disabling the Appliance mode Configuring UWF (Unified Write Filter) settings Configuring Auto Registration 	4.2 Configuring System Settings	35
Devices	Configuring settings for USB storage devicesConfiguring settings for audio devices	4.3 Configuring External Device Settings	56
User Interface	Configuring the display of service access shortcutsConfiguring the Num Lock mode	4.4 Configuring User Interface Settings	59
Applications	 Configuring Microsoft RDP connection settings Configuring Citrix ICA connection settings Configuring VMware View connection settings Configuring Web browser session settings 	4.5 Configuring Service Access Settings	62



NOTE


 The table above is only applicable to Atrust mt168W thin clients running Windows 10 IoT Enterprise. The available setting categories and items of the Atrust Client Setup console for other Windows 10 IoT Enterprise-based, Windows Embedded-based, Linux-based, and ARM Linux-based thin clients might be different.

4.2 Configuring System Settings

4.2.1 System Tab Overview

System tab enables you to configure settings for the operation and maintenance of clients. To access available settings of **System** tab, click the tab on Atrust Client Setup.

System Tab Overview

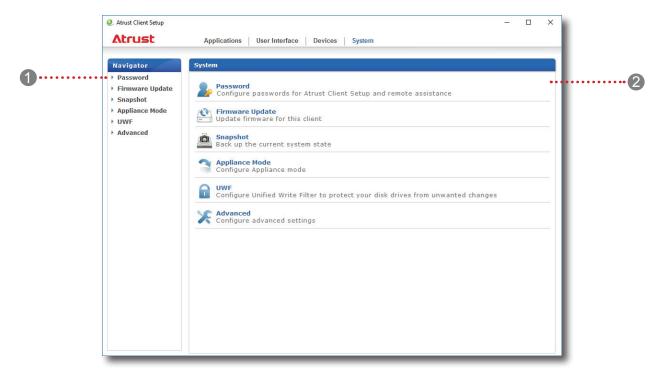

Interf	Interface Elements				
No.	Name	Description			
1	Navigation area	Click to select a setting item under System tab.			
2	Configuration area	Configures setting values when a setting item is selected.			

4.2.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
	Password	2	Click to secure the access to Atrust Client Setup.	4.2.3	37
	1 43311014		Click to configure settings for remote assistance.	4.2.4	38
	Firmware Update	(3)	Click to update firmware locally with the help of a remote management computer. This feature is only applicable when the client is managed by the Atrust Device Manager console.	4.2.5	40
	Snapshot		Click to take a snapshot (system image) of the client for mass deployment or system recovery.	4.2.6 4.2.7 4.2.8	42 43 46
System	Appliance Mode	3	Click to enable/disable the Appliance mode to allow/disallow the automatic RDP / ICA / View sessions. In Appliance mode, the client starts up with the desired RDP / ICA / View session and performs the configured action after exiting the session.	4.2.9	49
	UWF		Click to configure UWF (Unified Write Filter) settings. Enabling UWF option will redirect all writes targeted for disk volumes to a RAM cache. All system changes will only affect the session where the changes are made.	4.2.10	53
	Advanced	×	Click to configure advanced settings such as Auto Registration.	4.2.11	55



NOTE

Atrust Device Manager is a remote and mass client management console, helping
you remotely mange a large number of endpoint devices in a desktop virtualization
infrastructure. For more information about Atrust Device Manager, please refer to
the User's Manual for Atrust Device Manager.


4.2.3 Securing the Access to Atrust Client Setup

You can password protect the access to Atrust Client Setup by the **Password** setting.

To secure the access to Atrust Client Setup, please do the following:



- System administrators (and only administrators) are allowed to access Atrust Client Setup. If you don't secure the access to Atrust Client Setup, administrator privileges are sufficient to access Atrust Client Setup. If a password is set here, administrators will need that password to enter Atrust Client Setup.
- 1. On Atrust Client Setup, click **System** > **Password**.

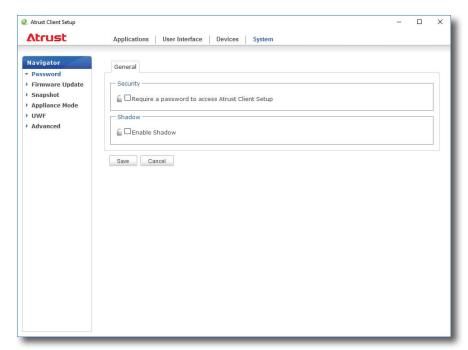

- 2. Under the Security section, click to check **Require a password to access Atrust Client Setup**.
- 3. A window appears prompting you to set the password.



- 4. Type in the desired password, and then click **Save** to confirm.
- 5. Click **Save** to store all the changes.

4.2.4 Configuring Shadow Settings for Remote Assistance

The Shadow feature allows an administrator to remotely assist client users in resolving problems or configuring local settings. When this feature is enabled, an administrator can monitor and control a client from a remote computer just like a local user.




NOTE


To use the Shadow feature on a remote computer, you need to install the Atrust
Device Manager and also Java software on the remote computer, and add your
client into a managed group under Atrust Device Manager. For detailed instructions,
please refer to the User's Manual for Atrust Device Manager.

To enable the Shadow feature and set the password for remote assistance, please do the following:

1. On Atrust Client Setup, click **System** > **Password**.

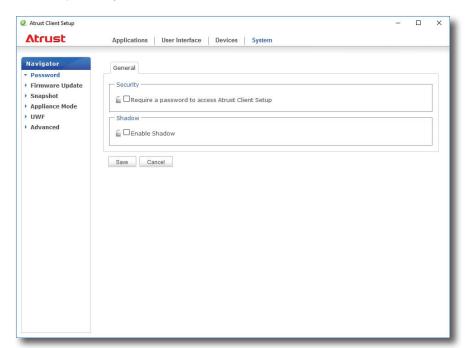

- 2. Under the Shadow section, click **Enable Shadow**.
- 3. The Shadow feature is enabled and a window appears for you to set the password for remote assistance.

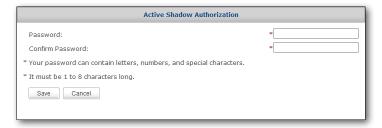



NOTE

- On a remote computer, an administrator will need this password to use the Shadow feature (remote assistance) available in the Atrust Device Manager console. For more information, please refer to the User's Manual for Atrust Device Manager.
- 4. Type in the desired password, and then click **Save** to confirm.
- 5. Click **Save** to store all the changes.



NOTE

• When the Shadow feature is enabled, on mt168W, the icon will appear in the Notification area of the Task bar. If this feature is currently being performed from a remote computer, the icon will change its color to yellow.

4.2.5 Updating Firmware from the Management Computer

Update Firmware allows users to update client firmware from the remote management computer to get the client device up-to-date.




NOTE

- Ensure that your client has been added into a managed group under Atrust Device Manager installed on a remote computer, and that you have imported client firmware files into Atrust Device Manager. These are prerequisites of this feature.
- For more information on firmware update and Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

To update client firmware from the remote management computer, please do the following:


1. On Atrust Client Setup, click **System** > **Firmware Update**.

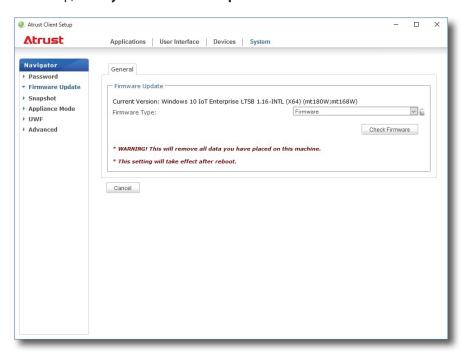

- 2. Under the Firmware Update section, click the Firmware Type drop-down menu to select **Firmware**, and then click **Check Firmware**.
- 3. On completion, a window appears notifying you that the Firmware list has been loaded. Click **OK** to continue.



- The available firmware versions depend on how many versions have been imported into the remote Atrust Device Manager.
- 4. Click drop-down menus to select the desired firmware version and other options.

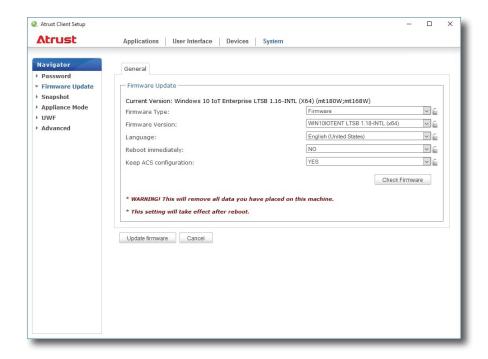

Firmware Update Options			
Item		Description	
	Click to sele	ect the desired firmware type.	
	Туре	Description	
Firmana Tana	ALL	All firmware types, Firmware and Snapshot .	
Firmware Type	Firmware	The system image of a client.	
	Snapshot	The system image of a client coming from another client of the same model.	
	NOTE: Opti	ions may not be available for the firmware version of your model.	
Firmware Version	Click to select the desired firmware version from the Firmware list.		
Language	Click to sele Setup conso	ect the interface language of the system, including the Atrust Client ole.	
	NOTE: Avai	ilable languages may vary with the firmware version.	
Reboot immediately	Click to choose whether to restart the system immediately for firmware update or manually restart the system later.		
		ose whether to keep client settings under Atrust Client Setup.	
Keep ACS configuration	unc	es is selected, all client settings under Atrust Client Setup will remain hanged after firmware update. Io is selected, all settings will be restored to the factory default.	
·	sele firm	ne client is managed by Atrust Device Manager and here No is ected, Atrust Device Manager will fail to manage the client after aware update. For more information on Atrust Device Manager, please or to the User's Manual for Atrust Device Manager.	

5. Click **Update firmware** to confirm your selections. The system will start updating its firmware after restart.

4.2.6 Taking Snapshots for Mass Deployment or System Recovery

A snapshot is the system image of a client, allowing you to use that image for mass deployment or system recovery. This image can be stored on a remote management computer or a locally attached USB flash drive.




NOTE

 To store the system image on a remote computer, ensure that Atrust Device Manager has been installed on that computer, and that the client has been added into a managed group under Atrust Device Manager.

To take a snapshot from a client, please do the following:

1. On Atrust Client Setup, click **System** > **Snapshot**.

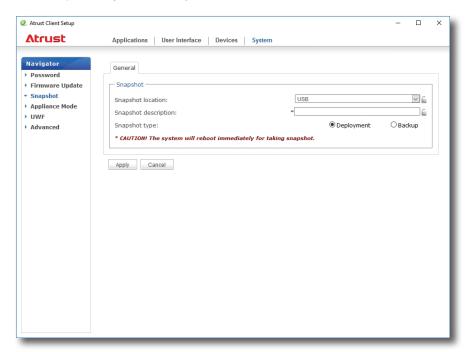

- 2. Under the Snapshot section, click the drop-down menu to select where to store the snapshot. Two options are available: **Network** and **USB**.
 - To store the snapshot file set on the remote computer, please select **Network**.
 - To store the snapshot file set on the locally attached USB flash drive, please select USB.
- 3. Type in the desired description for the snapshot, and then select its type: **Deployment** or **Backup**.



- Taking a snapshot for mass deployment (**Deployment** is selected) will reset the startup behavior to the default (auto-login with the default standard user account).
 For details, please see "About the Behavior of System Startup" on page 10.
- Additionally, all system specific information, including the Computer Security Identifier (SID) and computer name, will be reset or removed from the system image by performing the System Preparation (**Sysprep**) tool automatically.

- 4. Click **Apply** to start taking the snapshot.
- 5. A message will appear prompting for confirmation. Click **Yes** to confirm.
- 6. The system will restart to complete the process *automatically*.



NOTE

Please wait for the process to complete *automatically*. Taking a snapshot needs several minutes and requires system reboot more than one time. In addition, if **Deployment** is selected, the **Sysprep** process will not be shown on the desktop but only be performed in the background.

4.2.7 Deploying Systems with a Created Snapshot

Your snapshots may be stored on a remote computer over the network or on a USB flash drive. Depending on where your snapshot is located, you can deploy a system image either through the network or a USB flash drive.




NOTE

• For detailed information on how to take a snapshot, please refer to section "4.2.6 Taking Snapshots for Mass Deployment or System Recovery" on page 42.

With a Snapshot on a Remote Computer

To deploy a system image on your mt168W with a snapshot on a remote computer, please do the following:

1. On Atrust Client Setup, click **System** > **Firmware Update**.

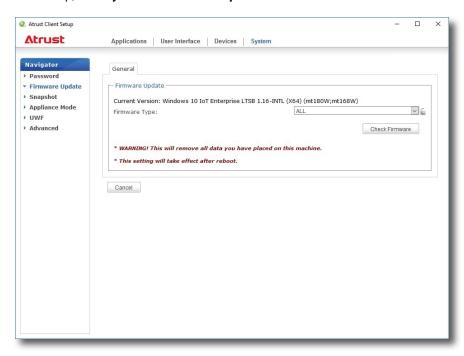


- 2. Under the Firmware Update section, click the Firmware Type drop-down menu to select **Snapshot**. The system will automatically download the Snapshot list from the remote computer.
- 3. Upon completion, a message appears notifying you that the Snapshot list has been loaded.



NOTE

- Client snapshots stored on the remote computer are managed by Atrust Device Manager. For more information on how to manage client snapshots with Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.
- 4. Click **OK** to continue.
- 5. Click drop-down menus to select the desired snapshot and other options.

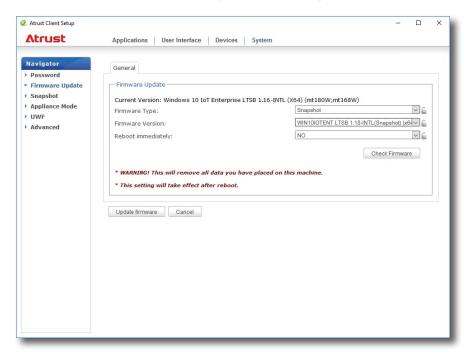


Options for Deploying a Snapshot			
Item	Description		
Firmware Version	Click to select the desired snapshot from the Snapshot list.		
Reboot immediately	Click to choose whether to restart the system immediately for firmware update or manually restart the system later.		

6. Click **Update firmware** to confirm your selections. The system will start deploying the snapshot after restart.

With a Snapshot on a USB Flash Drive

To deploy a system image on your mt168W with a snapshot on a USB flash drive, please do the following:

- 1. Plug the USB flash drive into a free USB port of the client.
- 2. Start up or restart the client.
- 3. During the period of POST (Power-On Self-Test), press **F7** to enter the Boot Device menu.
- 4. Select to boot from the attached USB flash drive.
- 5. The Atrust Thin Client Recovery System is launched.
- 6. Select **USB**, and then click **Next** to continue.

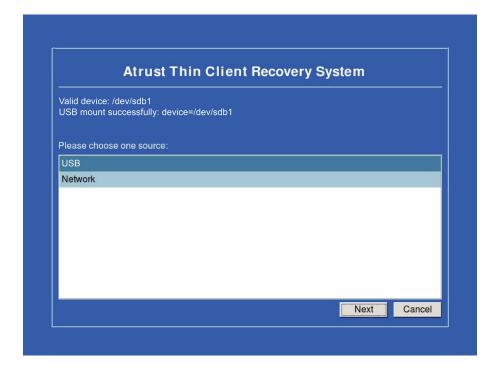

- 7. The recovery system start deploying the snapshot to the client.
- 8. After completion, click **Finish** to restart the client.

4.2.8 Restoring Systems with a Created Snapshot

Your snapshots may be stored on a remote computer over the network or on a USB flash drive. Depending on where your snapshot is located, you can restore a system image either through the network or a USB flash drive.




NOTE

• For detailed information on how to take a snapshot, please refer to section "4.2.6 Taking Snapshots for Mass Deployment or System Recovery" on page 42.

With a Snapshot on a Remote Computer

To restore a system image to your mt168W with a snapshot on a remote computer, please do the following:

1. On Atrust Client Setup, click **System** > **Firmware Update**.

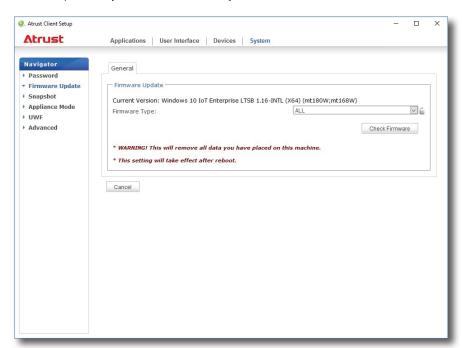


- 2. Under the Firmware Update section, click the Firmware Type drop-down menu to select **Snapshot**. The system will automatically download the Snapshot list from the remote computer.
- 3. Upon completion, a message appears notifying you that the Snapshot list has been loaded.



NOTE

 Client snapshots stored on the remote computer are managed by Atrust Device Manager. For more information on how to manage client snapshots with Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

- 4. Click **OK** to continue.
- 5. Click drop-down menus to select the desired snapshot and other options.

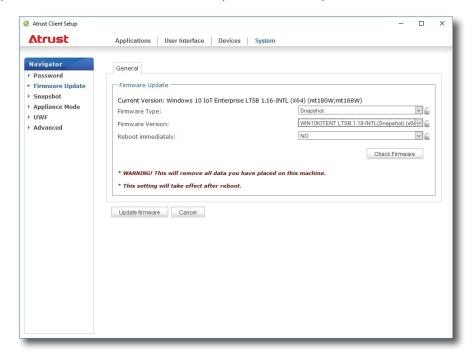


Options for Restoring a Snapshot			
Item	Description		
Firmware Version	Click to select the desired snapshot from the Snapshot list.		
Reboot immediately	Click to choose whether to restart the system immediately for firmware update or manually restart the system later.		

6. Click **Update firmware** to confirm your selections. The system will start restoring the snapshot after restart.

With a Snapshot on a USB Flash Drive

To restore a system image to your mt168W with a snapshot on a USB flash drive, please do the following:

- 1. Plug the USB flash drive into a free USB port of the client.
- 2. Start up or restart the client.
- 3. During the period of POST (Power-On Self-Test), press **F7** to enter the Boot Device menu.
- 4. Select to boot from the attached USB flash drive.
- 5. The Atrust Thin Client Recovery System is launched.
- 6. Select **USB**, and then click **Next** to continue.

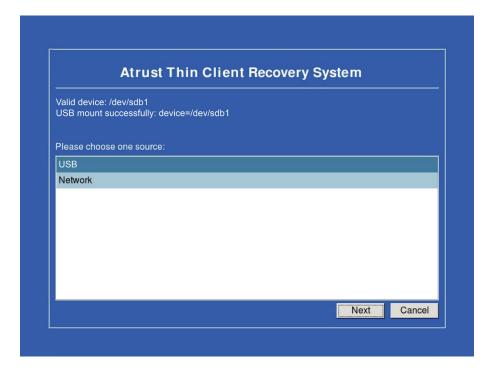

- 7. The recovery system start restoring the snapshot to the client.
- 8. After completion, click **Finish** to restart the client.

4.2.9 Enabling or Disabling the Appliance Mode

The Appliance mode allows your thin client to start up directly with the desired Microsoft Remote Desktop, Citrix ICA, VMware View or Horizon View session. After exiting a session, the client will perform the configured action.



NOTE

• There are two similar but different modes for your thin client:

No.	Mode	Description
		The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.
	Amaliana	Available actions include:
1	Appliance	Re-launching a new session
		 Restarting the thin client
		Turning off the thin client
		The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.
		Available actions include:
2	Autostart	Returning to the local desktop
		 Re-launching a new session
		Restarting the thin client
		Turning off the thin client

- For more information on above modes, please refer to sections:
 - ♦ 4.2.9 on page 49 (Appliance mode)
 - ♦ 4.5.5 on page 76 (Autostart mode for RDP sessions)
 - ♦ 4.5.8 on page 101 (Autostart mode for ICA sessions)
 - ♦ 4.5.11 on page 116 (Autostart mode for View sessions)

Enabling the Appliance Mode


To enable the Appliance mode, please do the following:




- Ensure that you have configured the connection settings for the desired Microsoft Remote Desktop, Citrix ICA, VMware View or Horizon View session under Applications tab. You need to specify which service type and connection settings entry will be used under the Appliance mode. For detailed instructions, please see sections:

 - ♦ "4.5.6 Configuring Basic ICA Connection Settings" on page 89
 - ♦ "4.5.9 Configuring Basic VMware View Connection Settings" on page 112


1. On Atrust Client Setup, click **System** > **Appliance Mode**.

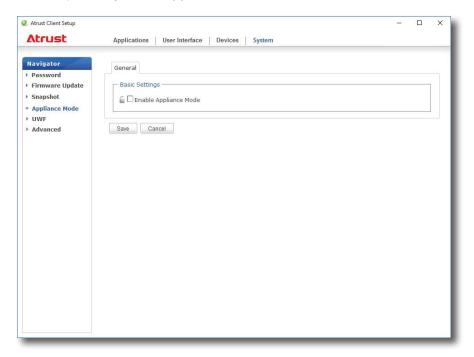

- 2. Click to check **Enable Appliance Mode**.
- 3. Other settings of the Appliance mode appear.

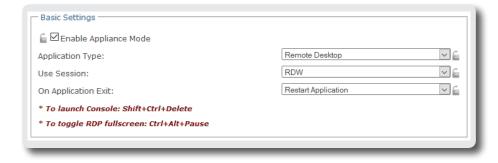

4. Click drop-down menus to select the application (or service) type: **Citrix ICA**, **Remote Desktop**, or **VMware View**, and the specific service available in that type.

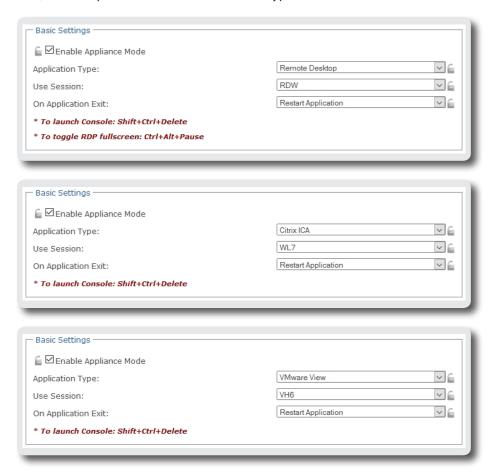

- 5. Click **Save** to confirm your selections.
- 6. The system will enter the Appliance mode after restart.



NOTE

• To disable the Appliance mode or to access Atrust Client Setup under the Appliance mode, please refer to "Disabling the Appliance Mode" on page 52.

Disabling the Appliance Mode

To disable the Appliance mode, please do the following:

- 1. Under the Appliance mode, exit the Full Screen mode of the RDP / ICA session, or release the keyboard and mouse from the View session (virtual desktop):
 - To exit the Full Screen mode of the RDP session, press Ctrl + Alt + Pause.
 - To exit the Full Screen mode of the ICA session, use the XenDesktop toolbar at the top (You may not in the Full Screen mode).
 - To release the keyboard and mouse from the View session (virtual desktop), press Ctrl + Alt.



NOTE

- Please note that the View session (virtual desktop) will remain on the background after you release the keyboard and mouse from the View session (virtual desktop).
- 2. Click **Ctrl + Shift + Del** to launch Atrust Client Setup.



- You cannot access the local desktop under the Appliance mode.
- 3. On Atrust Client Setup, click **System** > **Appliance Mode**.
- 4. Click to uncheck **Enable Appliance Mode**, and then click **Save** to apply the change.
- 5. Return to the current RDP / ICA / View session:
 - To return to the current RDP / ICA session, use **Alt + Tab** (press and hold **Alt**, and then press **Tab** to switch between different items) to select and restore the current RDP / ICA session.
 - To return to the current View session, click any place of the View session (virtual desktop) on the background.
- 6. Log off from the current RDP / ICA / View session.
- 7. The client might shut down then. Restart your client manually.

4.2.10 Configuring UWF (Unified Write Filter)

Your mt168W is UWF-enabled by default. Unified Write Filter (UWF) is a sector-based write filter intercepting all write attempts to a protected volume and redirecting those write attempts to a RAM cache. With UWF, all system changes will only affect the session where the changes are made. After restart, all changes will be discarded.




WARNING

- The UWF feature is enabled by factory default. Except for changes to ACS settings, all the changes made in a session will not be kept after the system restart. Ensure that you choose the desired settings here before making any changes to the system.
- An icon in the Notification area of the Taskbar will indicate the current UWF state
 of your system. For details, please refer to the description at the end of this section.

To configure the UWF settings, please do the following:

- 1. On Atrust Client Setup, click **System** > **UWF**.
- 2. Click the State drop-down menu to enable/disable the UWF feature.

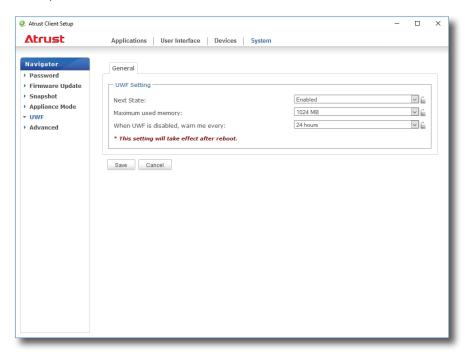

3. Click to select other options if needed.

UWF Options		
Item	Description	
Next State	Click to enable / disable UWF. A restart is required for switching.	
Maximum used memory	Click to select the maximum memory used for UWF.	
When UWF is disabled, warn me every	Click to select how often the system warns you when UWF is disabled.	

- 4. Click **Save** to confirm your selections.
- 5. You may need to restart the system for the change(s) to take effect.



WARNING


 You need to restart the system for switching between the UWF enabled and disabled states. An icon will appear in the Notification area of the Taskbar to indicate the current UWF state of the system. The following table provides a description of each icon:

Icon	Name	Description
•	Green Lock	The UWF is currently enabled. Except for changes to ACS settings, all the other changes made to the system in current session will not be kept after the system restart.
7	Orange Lock	The UWF state was changed and will take effect after the system restart.
Ħ	Red Lock	The UWF is currently disabled.



TIP

 When UWF is enabled, you can move the mouse pointer over the UWF icon to check currently free memory (overlay) for UWF. A tooltip as below will be shown.

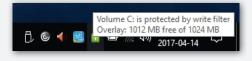



- As a thin client device, your mt168W is mainly for access to remote or virtual
 desktops on servers. With the limited and protected (UWF-enabled) hard disk space,
 it's not recommended to save data on your mt168W. Instead, you can use storage
 spaces over remote / virtual desktops, removable storage devices, or networks.
- In case that you need to copy a file to the protected volume, ensure that its size is smaller than the free memory (overlay) space. Otherwise, your system may have unexpected results or become unresponsive.

4.2.11 Enabling or Disabling Auto Registration

Auto Registration allows that thin clients automatically register with Atrust Device Manager when they are online and then become managed by Atrust Device Manager.




NOTE

- For this feature to work, Auto Registration must be enabled on both sides: thin
 clients and target Atrust Device Manager. In addition, some configurations on
 DHCP or DNS server over your network are required. For details, please refer to the
 User's Manual for Atrust Device Manager.
- By default, Auto Registration is enabled on thin client side, disabled Atrust Device Manger.

To enable or disable Auto Registration on your thin client, please do the following:

- 1. On Atrust Client Setup, click **System** > **Advanced**.
- 2. Check / Uncheck to **Enable Auto Registration** to enable / disable Auto Registration.

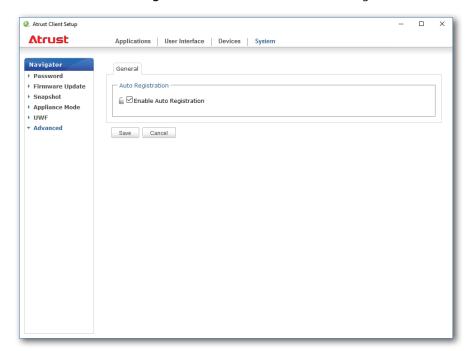


3. Click Save to apply.

4.3 Configuring External Device Settings

4.3.1 Devices Tab Overview

Devices tab enables you to configure settings for external devices of clients. To access available settings of **Devices** tab, click the tab on Atrust Client Setup.

Devices Tab Overview

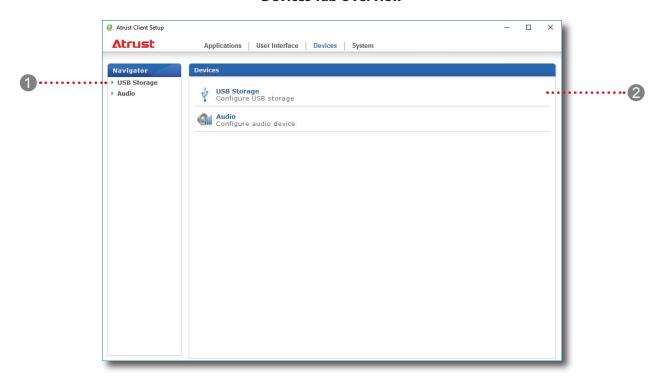

Interface Elements				
No.	Io. Name Description			
1	Navigation area	Click to select a setting item under Devices tab.		
2	Configuration area	Configures setting values when a setting item is selected.		


4.3.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Dovises	USB Storage	ψ	Click to configure settings for USB storage devices.	4.3.3	57
Devices	Audio	Gil	Click to configure settings for audio devices.	4.3.4	58

4.3.3 Configuring Settings for USB Storage Devices

To configure settings for USB storage devices, please do the following:

1. On Atrust Client Setup, click **Devices** > **USB Storage**.

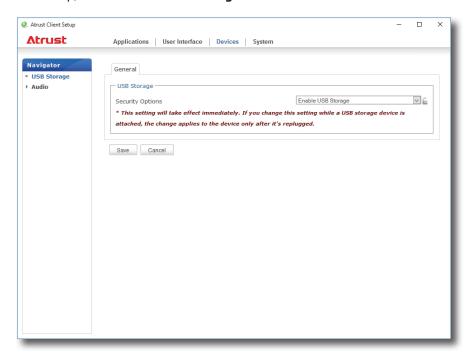

2. Click the drop-down menu to select the desired setting. Three options are available: **Enable USB Storage**, **Read-Only Access**, and **Disable USB Storage**.



- When Enable USB Storage is selected, settings of RDP / ICA connection entries under Applications tab may affect if you can use mapped USB storage devices in remote / virtual desktop sessions. For details, please refer to sections:
- When **Disable USB Storage** is selected, Citrix ICA and VMware View / Horizon View sessions may still allow users to use locally attached USB storage devices through *redirection*. To really prevent the use of USB storage devices in virtual desktop sessions, some configurations in Citrix and VMware service delivery environments are required.
- 3. Click **Save** to store your change.


4.3.4 Disabling or Enabling Attached Audio Devices

To disable/enable attached audio devices, please do the following:



NOTE

- If you disable locally attached audio devices, client users are not allowed to perform audio playback or recording with these devices in an RDP / ICA / View session.
- To perform audio playback or recording with local audio devices in an RDP / ICA / View session, you need to enable locally attached audio devices here (the **Audio** setting item under **Devices** tab) and configure audio related settings (if any) in the RDP / ICA / View connection settings. For detailed instructions, please refer to sections:
- 1. On Atrust Client Setup, click **Devices** > **Audio**.

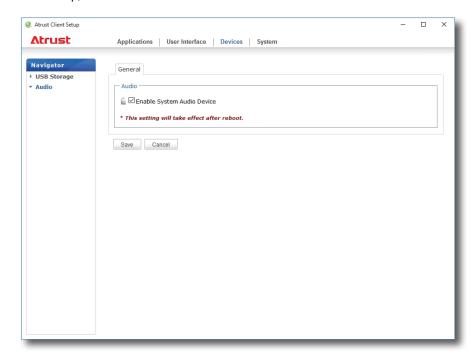

- 2. Click to check/uncheck **Enable System Audio Device**.
- 3. Click **Save** to confirm your selection.



NOTE


• The change will not take effect until the client has been restarted.

4.4 Configuring User Interface Settings

4.4.1 User Interface Tab Overview

User Interface tab enables you to configure settings for the user interface of clients. To access available settings of **User Interface** tab, click the tab on Atrust Client Setup.

User Interface Tab Overview

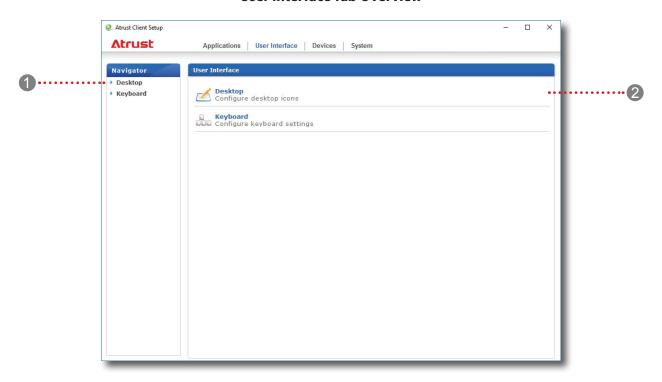

Inter	Interface Elements			
No.	No. Name Description			
1	Navigation area	Click to select a setting item under User Interface tab.		
2	Configuration area	Configures setting values when a setting item is selected.		

4.4.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
User	Desktop	∠	Click to configure the display of standard desktop shortcuts for quick service access.	4.4.3	60
Interface	Keyboard	2:0	Click to configure the Num Lock mode.	4.4.4	61

4.4.3 Configuring the Display of Standard Desktop Shortcuts for Quick Access

The **Desktop** setting enables you to display or hide the standard desktop shortcuts for service quick access. Three standard desktop shortcuts are available: **Citrix Receiver**, **Remote Desktop Connection**, and **VMware Horizon View Client**, separately for quick service access of Citrix XenApp / XenDesktop / VDI-in-a-Box, Microsoft Remote Desktop / Remote Application (RemoteApp), and VMware View / VMware Horizon View.







Remote Desktop Connection

Citrix Receive

VMware Horizon View Client



TIP

• You can use these standard desktop shortcuts to quickly access services. For detailed instructions, please refer to chapter 3 "Getting Started" on page 17.




NOTE

 You can also customize your desktop shortcuts for quick service access. For detailed instructions on how to create and customize your own desktop shortcuts, please refer to section "4.5 Configuring Service Access Settings" on page 62.

To display or hide the standard desktop shortcuts for quick service access, please do the following:

1. On Atrust Client Setup, click **User Interface** > **Desktop**.

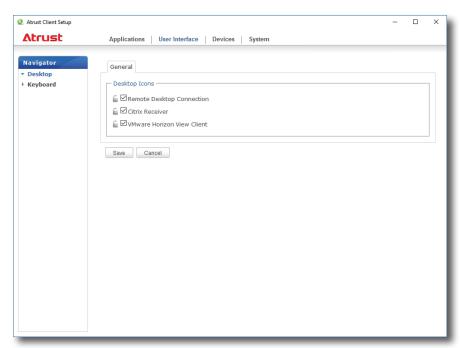


- 2. Click to check/uncheck Remote Desktop Connection, Citrix Receiver, or VMware Horizon View Client.
- 3. Click Save to apply.

4.4.4 Configuring the Num Lock Mode

To configure the Num Lock mode, please do the following:

1. On Atrust Client Setup, click **User Interface** > **Keyboard**.

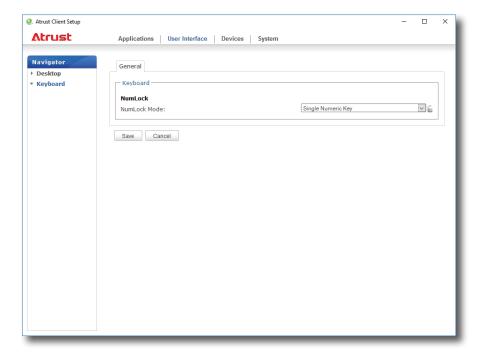

2. Click the drop-down menu to configure the Num Lock mode. Two options are available: **Single Numeric Key** or **Fn + Numeric Key**.

Keyboard				
Item		Description		
NumLock	Single Numeric Key	In NumLock mode, single numeric key is sufficient to enter a number.		
Mode	Fn + Numeric Key	In NumLock mode, Fn plus numeric key is required to enter a number.		


3. Click **Save** to apply.

4.5 Configuring Service Access Settings

4.5.1 Applications Tab Overview

Applications tab enables you to configure settings for service access on clients. To access available settings of **Applications** tab, click the tab on Atrust Client Setup.

Applications Tab Overview

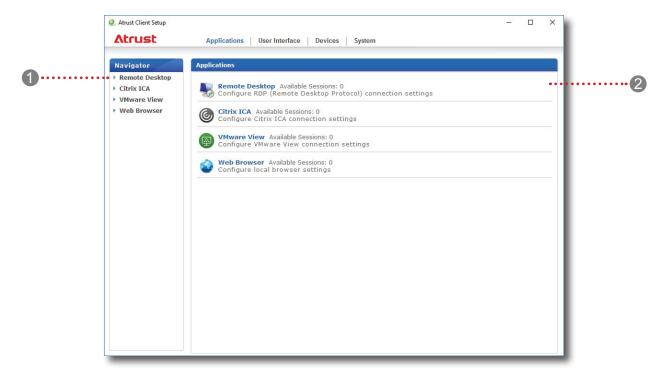

Inter	Interface Elements				
No.	Name	Description			
1	Navigation area	Click to select a setting item under Applications tab or to select a setting entry under a selected setting item.			
2	Configuration area	Configures setting values when a setting item or entry is selected.			

4.5.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
	Remote Desktop		Click to configure RDP (Remote Desktop Protocol) connection settings and create access shortcuts on the desktop for RDP sessions.	4.5.3 4.5.4 4.5.5	64 71 76
Applications	Citrix ICA	©	Click to configure Citrix ICA (Independent Computing Architecture) connection settings and create access shortcuts on the desktop for ICA sessions.	4.5.6 4.5.7 4.5.8	89 97 101
	VMware View		Click to configure VMware View connection settings and create access shortcuts on the desktop for View sessions.	4.5.9 4.5.10 4.5.11	112 114 116
	Web Browser	②	Click to configure browser session settings and create access shortcuts on the desktop for browser sessions.	4.5.12	118

4.5.3 Configuring Basic RDP Connection Settings

The **Remote Desktop** setting allows you to configure RDP (Remote Desktop Protocol) connection settings and create shortcuts on the desktop or Start screen for Remote Desktop services. You can access services for work simply through these shortcuts.



NOTE

 For more information on Microsoft Remote Desktop services, please visit Microsoft website at www.microsoft.com.


Three connection types are available:

Connection Type	Description	Page
Remote Desktop	Select to access remote desktops/applications.	65
Remote Web Access	Select to access remote desktops/applications through a Web browser.	67
Web Feed	Select to access remote applications through published Start screen tiles.	69

Connection Type: Remote Desktop

To quickly configure RDP connection settings for Remote Desktop connection type, please do the following:


1. On Atrust Client Setup, click **Applications** > **Remote Desktop**.

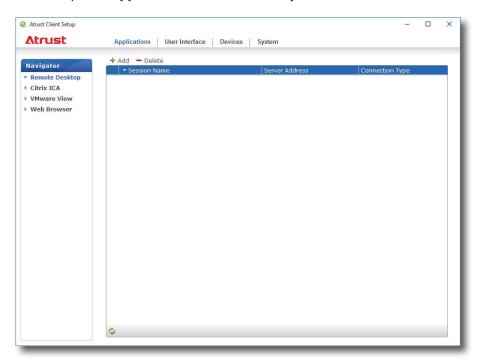

2. The RDP Connection list appears in the Configuration area.



3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

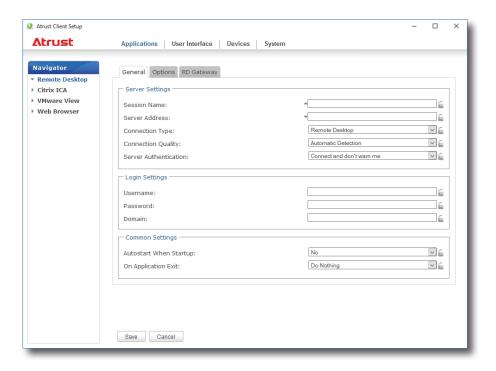

4. On **General** sub-tab, type in the session name and the server/virtual machine address under the Server Settings section.



NOTE

- · The red asterisks indicate the required fields.
- The remote computer can be a physical server or a virtual machine. Please visit
 Microsoft's websites at www.microsoft.com or support.microsoft.com for more
 information.
- 5. Click **Save** to add this RDP connection entry.
- 6. The shortcut for Remote Desktop connection is automatically created on the desktop.



NOTE

 Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced RDP connection settings for service access. For more information on other available settings, please refer to section "4.5.5 Configuring Advanced RDP Connection Settings" on page 76.


Connection Type: Remote Web Access

To quickly configure RDP connection settings for Remote Web Access connection type, please do the following:



NOTE

- Your mt168W supports only RD Web Access based on Windows Server 2012 R2;
 Windows Server 2008 R2 based is not supported.
- 1. On Atrust Client Setup, click **Applications** > **Remote Desktop**.

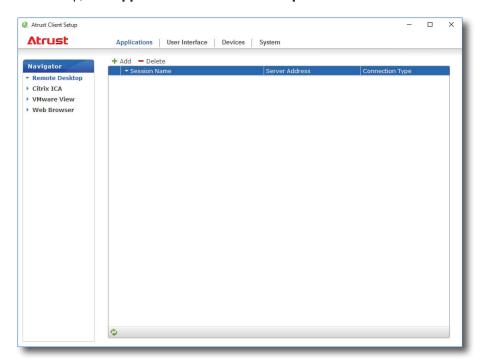


2. The RDP Connection list appears in the Configuration area.



NOTE

- If you haven't create any entry, the RDP Connection list will be empty.
- 3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

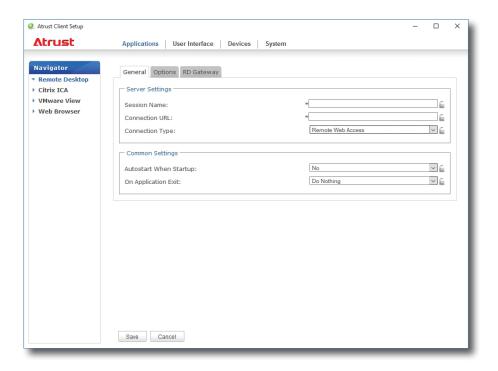

- 4. On General sub-tab, click the Connection Type drop-down menu to select Remote Web Access.
- 5. Type in the session name and connection URL through which Web-based remote applications/desktops is accessible.



NOTE

- The red asterisks indicate the required fields.
- Consult your IT administrator for the appropriate connection URL.
- 6. Click **Save** to add this RDP connection entry.
- 7. The shortcut for Remote Web Access connection is automatically created on the desktop.



NOTE

 Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced RDP connection settings for service access. For more information on other available settings, please refer to section "4.5.5 Configuring Advanced RDP Connection Settings" on page 76.


Connection Type: Web Feed

To quickly configure RDP connection settings for Web Feed connection type, please do the following:



NOTE

- Your mt168W supports only RD Web Feed based on Windows Server 2012 R2;
 Windows Server 2008 R2 based is not supported.
- 1. On Atrust Client Setup, click **Applications** > **Remote Desktop**.

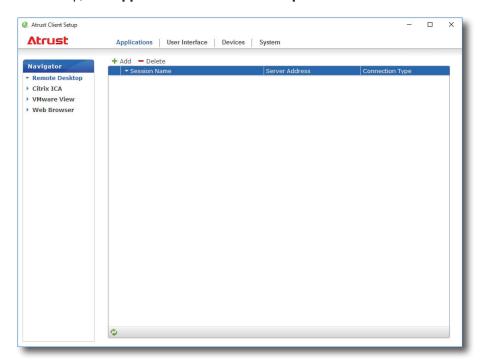


2. The RDP Connection list appears in the Configuration area.



NOTE

- If you haven't create any entry, the RDP Connection list will be empty.
- 3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

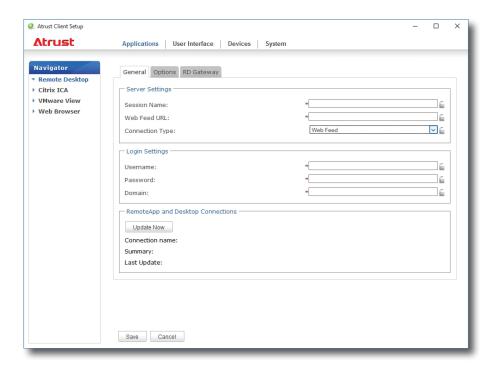

- 4. On General sub-tab, click the Connection Type drop-down menu to select Web Feed.
- 5. Type in the session name, the Web Feed URL through which remote applications is accessible, and your credentials for Web Feed.



NOTE

- The red asterisks indicate the required fields.
- Consult your IT administrator about the appropriate Web Feed URL.
- 6. Click **Update Now** in the RemoteApp and Desktop Connections section. After completion, the result will be shown as blow in that section.



- 7. Click **Save** to add this RDP connection entry.
- 8. The application tiles for Web Feed are automatically created on the Start screen.



NOTE

 Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced RDP connection settings for service access. For more information on other available settings, please refer to section "4.5.5 Configuring Advanced RDP Connection Settings" on page 76.

4.5.4 Accessing Remote Desktop Services

Connection Type: Remote Desktop

To access Remote Desktop services, please do the following:

1. Double click the created (customized) shortcut on the desktop.



NOTE

- You can also access Remote Desktop services through the standard desktop shortcut Remote Desktop Connection. For detailed instructions on how to access services via this standard shortcut, please refer to section "3.3 Accessing Microsoft Remote Desktop Services" on page 26.
- 2. Follow the on-screen instructions and provide required credentials if needed.
- 3. The desired remote desktop will be displayed on the desktop in full screen (by default).




NOTE

 The connection type of Remote Desktop also allows you to launch applicationonly sessions; only a specific application is launched rather than a full desktop. For details, please refer to "4.5.5 Configuring Advanced RDP Connection Settings" on page 76.

Example: Windows MultiPoint Server 2012



Example: Windows Server 2012

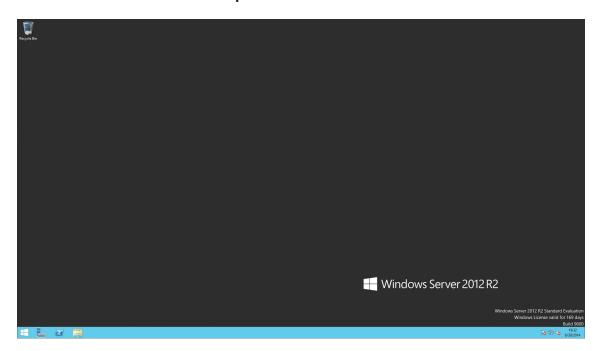


Example: Windows 8 Enterprise



Connection Type: Remote Web Access

To access remote applications/desktops, please do the following:

- 1. Double click the created shortcut on the desktop.
- 2. A window appears prompting for credentials.

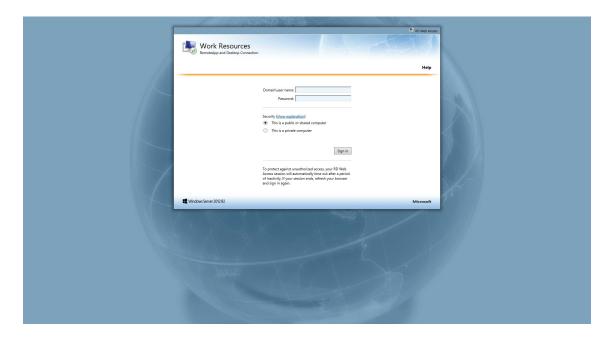





NOTE

- A warning message about security might appear. Consult your IT administrator
 for details and ensure the connection is secure first. To by pass, click Continue to
 this website.
- Click to select **Allow** to enable ActiveX Control when a popup message appears at the bottom of the page.
- 3. Provide your credentials, and then click **Sign in**.

74

4. Click to select **RemoteApp and Desktops** or **Connect to a remote PC**.

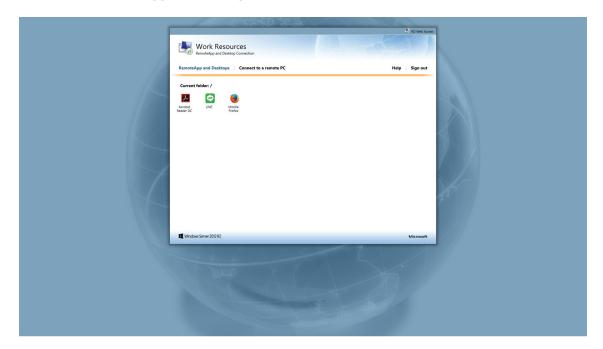

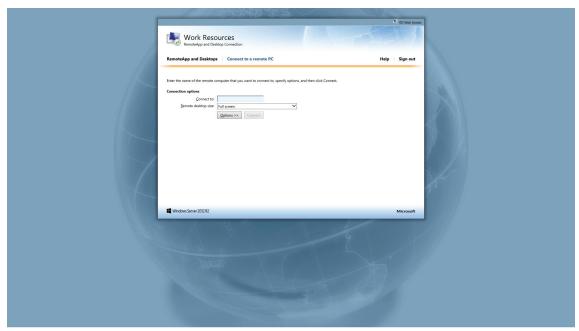

5. Click icons or follow the on-screen instructions to launch applications or desktops.

Connection Type: Web Feed

To access remote applications, please do the following:

1. On Start screen, click **All apps**.



2. Click to launch the desired application.



4.5.5 Configuring Advanced RDP Connection Settings

The table below provides a description of each setting item for RDP connections. Please see this table to configure advanced settings and customize your mt168W desktop shortcuts or Start screen tiles for service access.



NOTE

• Please note that available settings vary with the selected connection type.

Settings for the Connection Type of Remote Desktop



NOTE

- For descriptions of settings for the connection type of Remote Web Access, please refer to "Settings for the Connection Type of Remote Web Access" on page 83.
- For descriptions of settings for the connection type of Web Feed, please refer to "Settings for the Connection Type of Web Feed" on page 85.

General Sub-tab

Server Settings				
Item	Description			
Session Name	Type in the name for Re	Type in the name for Remote Desktop sessions.		
Sever Address	1	Type in the computer name or IP address of the server/virtual machine where to deliver a Remote Desktop session.		
	This table only provides descriptions for available settings when Remote Desktop is selected.			
	Three connection types are available:			
	Option	Description		
Connection Type	Remote Desktop	Provides access to remote desktops/applications.		
	Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).		
	Web Feed	Provides access to remote applications through published Start screen tiles.		
Connection Quality		best describes the quality of your network connection. able: Very Fast (LAN), Fast (Broadband), automatic Detection.		

	Select what to do next if the client cannot verify the identity of the remote computer. Three options are available: Connect and don't warn me , Warn me , and Do not connect .			
	Option	Description		
Server Authentication	Connect and don't warn me	Connects anyway without any warning.		
	Warn me	Warns and allows users to choose whether to connect or not.		
	Do not connect	Disallows the connection.		
Login Settings				
Item	Description			
Username	Type in the user/accor	unt name used for authentication.		
Password	Type in the password	of the user account used for authentication.		
Domain	Type in the domain of	Type in the domain of the server.		
	NOTE: Leave this field	NOTE: Leave this field blank if the server doesn't belong to any domain.		
Common Settings				
Item	Description	Description		
Autoritari Whar Charles		Select whether to open a Remote Desktop session automatically or not when Windows 10 IoT Enterprise starts.		
Autostart When Startup		If Yes is selected, every time when you log in to the system, the Remote Desktop session will be opened automatically.		
		Select what to do when a Remote Desktop session is ended. Four options are available: Do Nothing , Restart Application , Reboot , and Shutdown .		
	Option	Description		
On Application Exit	Do Nothing	Returns to the Windows 10 IoT Enterprise desktop.		
- F F	Restart Application	Opens a Remote Desktop session again.		
	Reboot	Restarts your thin client.		
	Shutdown	Turns off your thin client.		

Options Sub-tab

Programs				
Item	Description			
	Click the drop-down menu to enable/disable the Application mode. You can use this option to select the session type. Two remote session types are available:			
	Remote Desktop (when the Application mode is disabled)			
	Remote Application (when the Application mode is enabled)			
Start the following program on connection	NOTE: Remote Application sessions are Remote sessions used to access only specific applications rather than full desktops.			
	NOTE: Before you can open a Remote Application session, you need to add the desired application to the RemoteApp Programs list with RemoteApp Manager on the application hosted server. For detailed instructions on how to add a desired application to the RemoteApp Programs list on the server, please visit Microsoft Support website at support.microsoft.com.			
	Start the following	f the desired application (on the host server) if program on connection is enabled.		
Start in the following folder NOTE: You can type in the location/path of the desired application and specify only the name of the application in Program name (the next field). Or, you can type in the full path an application in Program path and file name , and leave the				
	Type in the path and program on connec	name of the desired application if Start the following :tion is enabled.		
	Remote APP	Format Example		
Program path and file name	Windows Media Player	C:\Programs Files (x86)\Windows Media Player\wmplayer.exe		
	Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32.exe		
	Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32		
	NOTE: the file extension can be omitted.			
Window Settings				
Item	Description			
	Click the drop-down menu to select the desired color depth for a Remote Desktop session. Four options are available: 15 Bit , 16 Bit , 24 Bit , and 32 Bit .			
Color Depth	NOTE: If RemoteFX is enabled, then no matter which color depth you choose here, 32 bit per pixel will be applied.			
	NOTE: You can configure the upper limit of the color depth for a Remote Desktop session on the host server. In this case, no matter which color depth you choose here, the value cannot exceed the defined limit.			
Resolution	Click the drop-down menu to select the desired display resolution on a Remote Desktop session. Twelve options are available: Fullscreen, 1920x1200, 1920x1080, 1680x1050, 1400x1050, 1440x900, 1280x1024, 1280x768, 1280x720, 1024x768, 800x600, and 640x480.			

Multi-Monitor	Click the drop-down menu to enable/disable multiple displays in a Remote Desktop session.		
Display the connection bar when I use the full screen	Click the drop-down menu to select if the Connection bar is displayed or not in full-screen mode.		
Connection Settings			
Item	Description		
	Click the drop-down menu to enable/disable printer mapping.		
	When Enable is selected, users can access a local or network printer in a Remote Desktop session.		
Printer Mapping		desired local or network printer(s) for your thin enable this feature here to use that printer in a sion.	
	NOTE: To add a local or network printer for your Windows 10 IoT Enterprise-based thin client, go to Control Panel, click Hardware and Sound > Devices and Printers > Add a printer, and then follow the on-screen instructions to add the desired local or network printer.		
	Click the drop-down menu to enable/disable Clipboard redirection.		
Clipboard Redirection	NOTE: When Enable is selected, Clipboard can be used across local and remote desktops (in both directions).		
	Click the drop-down menu to enable/disable smart card mapping.		
Smart Card Mapping	When Enable is selected, users can access smart cards through a smart card reader in a Remote Desktop session.		
	Click the drop-down menu to enable/disable port mapping.		
	When Enable is selected, users can access attached devices using locally available ports, in a Remote Desktop session.		
Port Mapping	NOTE: The types and availability of device ports on thin clients may vary, depending on your product models.		
Local Resources Settings			
Item	Description		
	setting in a Remote Desktop	configure the computer sounds and audio playback session. Three options are available: Bring to this d Leave at remote computer .	
	Option	Description	
Remote Audio Playback	Bring to this computer	Allows computer sounds and audio playback in a Remote Desktop session using locally attached audio devices.	
	Do not play	Disables computer sounds and audio playback in a Remote Desktop session.	

	Click the drop-down menu to configure the audio recording setting in a Remote Desktop session. Two options are available: Recording from this computer and Do not record .		
	Option	Description	
Remote Audio Recording	Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.	
	Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.	
	NOTE: When Leave at remote computer is selected on the drop-down menu of Remote Audio Playback, this setting item will be grayed out.		
Apply Windows key combinations	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: On this computer, On the remote computer, Only when using the full screen.		
Drives	Click the drop-down menu to enable/disable locally attached drives in a Remote Desktop session.		
Supported plug and play devices	Click the drop-down menu to enable/disable the supported plug and play devices in a Remote Desktop session.		

Click to enable/disable locally attached RemoteFX USB devices.

NOTE: To use RemoteFX USB devices in remote desktops, you need to configure the policy setting about device redirection to allow RemoteFX USB Device Redirection as well. To do so, please follow the steps below:

- 1. Log in to your mt168W with an administrative account.
- 2. Disable UWF (Unified Write Filter) through Atrust Client Setup (See "4.2.10 Configuring UWF (Unified Write Filter)" on page 53).
- 3. On the **desktop**, click in the bottom-left corner.




4. On the appeared Search window, type **group policy**, and then click to select **Edit group policy**.



RemoteFX USB redirection

- On the opened window, select Computer Configuration >
 Administrative Templates > Windows Components > Remote
 Desktop Services > Remote Desktop Connection Client >
 RemoteFX USB Device Redirection > Allow RDP redirection of
 other supported RemoteFX USB devices from this computer.
- Select Enabled and to which users this setting applies: Administrators Only or Administrators and Users, and then click OK.

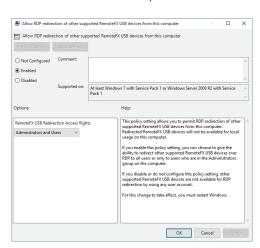

7. Enable UWF through Atrust Client Setup.

RD Gateway Sub-tab

Connection Settings			
Item	Description		
RD Gateway Server Settings	Click the drop-down menu to choose if a RD Gateway server is used, automatically detected, or manually configured. Three options are available: Automatically detect RD Gateway server settings, Use these RD Gateway server settings, and Do not use an RD Gateway server.		
Sever Name	Type the IP address / URL / FQDN of the RD Gateway server. NOTE: Consult your network administrator for details.		
	Click the drop-down menu to select the logon method. Three options are available: Allow me to select later, Ask for password (NTLM), and Smart card.		
	Option	Description	
Logon method	Allow me to select later	Users can select a logon method while connecting to the server.	
	Ask for password (NTLM)	Users will be prompted for a password while connecting to the server.	
	Smart card	Users will be prompted for a smart card while connecting to the server.	
Bypass RD Gateway server for local addresses	Check to prevent traffic to and from local network addresses from being routed through the RD Gateway server and make a connection faster.		
Logon Settings			
Item	Description		
Use my RD Gateway credentials for the remote computer	Check to use the same set of credentials for authenticating to both the R Gateway server and the remote computer.		

Settings for the Connection Type of Remote Web Access



NOTE

- For descriptions of settings for the connection type of Remote Desktop, please refer to "Settings for the Connection Type of Remote Desktop" on page 76.
- For descriptions of settings for the connection type of Web Feed, please refer to "Settings for the Connection Type of Web Feed" on page 85.

General Sub-tab

Server Settings				
Item		Description		
Session Name	Type in the name for Remote Web Access sessions.			
Connection URL	Type in the connection	URL through which RD Web Access is available.		
		This table only provides descriptions for available settings when Remote Web Access is selected.		
	Three connection types are available:			
	Option	Description		
Connection Type	Remote Desktop	Provides access to remote desktops/applications.		
	Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).		
	Web Feed	Provides access to remote applications through published Start screen tiles.		
Common Settings				
Item	Description	Description		
A	Select whether to open a Remote Desktop session automatically or not when Windows 10 IoT Enterprise starts.			
Autostart When Startup	If Yes is selected, every time when you log in to the system, the Remote Desktop session will be opened automatically.			
		n a Remote Desktop session is ended. Four options are , Restart Application, Reboot, and Shutdown.		
	Option	Description		
On Application Exit	Do Nothing	Returns to the Windows 10 IoT Enterprise desktop.		
On Application Exit	Restart Application	Opens a Remote Desktop session again.		
	Reboot	Restarts your thin client.		
	Shutdown	Turns off your thin client.		

Options Sub-tab



NOTE

• No options are available under the **Options** sub-tab in the connection type of Remote Web Access.

RD Gateway Sub-tab



NOTE

 No options are available under the RD Gateway sub-tab in the connection type of Remote Web Access.

Settings for the Connection Type of Web Feed



NOTE

- For descriptions of settings for the connection type of Remote Desktop, please refer to "Settings for the Connection Type of Remote Desktop" on page 76.
- For descriptions of settings for the connection type of Remote Web Access, please refer to "Settings for the Connection Type of Remote Web Access" on page 83.

General Sub-tab

Server Settings				
Item		Description		
Session Name	Type in the name for W	Type in the name for Web Feed sessions.		
Web Feed URL	Type in the URL through	Type in the URL through which RD Web Feed is accessible.		
	is selected.	This table only provides descriptions for available settings when Web Feed is selected. Three connection types are available:		
	Option	Description		
Connection Type	Remote Desktop	Provides access to remote desktops/applications.		
	Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).		
	Web Feed	Provides access to remote applications through published Start screen tiles.		
Login Settings				
Item	Description			
Username	Type in the user/accour	Type in the user/account name used for authentication.		
Password	Type in the password of	Type in the password of the user account used for authentication.		
	Type in the domain of the	Type in the domain of the server.		
Domain	NOTE: Leave this field	NOTE: Leave this field blank if the server doesn't belong to any domain.		
RemoteApp and Deskto	p Connection			
Item	Description			
Update Now	Click to fetch and updat	Click to fetch and update the published applications list from the server.		

Options Sub-tab

Window Settings		
Item Description		
	Click the drop-down menu to select the desired color depth for a Remote Desktop session. Four options are available: 15 Bit , 16 Bit , 24 Bit , and 32 Bit .	
Color Depth	NOTE: If RemoteFX is enabled, then no matter which color depth you choose here, 32 bit per pixel will be applied.	
	NOTE: You can configure the upper limit of the color depth for a Remote Desktop session on the host server. In this case, no matter which color depth you choose here, the value cannot exceed the defined limit.	
Resolution	Click the drop-down menu to select the desired display resolution on a Remote Desktop session. Twelve options are available: Fullscreen, 1920x1200, 1920x1080, 1680x1050, 1400x1050, 1440x900, 1280x1024, 1280x768, 1280x720, 1024x768, 800x600, and 640x480.	
Multi-Monitor	Click the drop-down menu to enable/disable multiple displays in a Remote Desktop session.	
Display the connection bar when I use the full screen	Click the drop-down menu to select if the Connection bar is displayed or not in full-screen mode.	
Local Resources Settings		
Item	Description	
Apply Windows key combinations	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: On this computer, On the remote computer, Only when using the full screen.	


Click to enable/disable locally attached RemoteFX USB devices.

NOTE: To use RemoteFX USB devices in remote desktops, you need to configure the policy setting about device redirection to allow RemoteFX USB Device Redirection as well. To do so, please follow the steps below:

- 1. Log in to your mt168W with an administrative account.
- 2. Disable UWF (Unified Write Filter) through Atrust Client Setup (See "4.2.10 Configuring UWF (Unified Write Filter)" on page 53).
- 3. On the **desktop**, click in the bottom-left corner.




4. On the appeared Search window, type **group policy**, and then click to select **Edit group policy**.

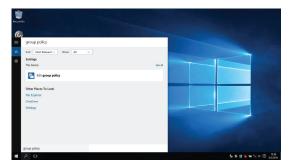

RemoteFX USB redirection

- On the opened window, select Computer Configuration >
 Administrative Templates > Windows Components > Remote
 Desktop Services > Remote Desktop Connection Client >
 RemoteFX USB Device Redirection > Allow RDP redirection of
 other supported RemoteFX USB devices from this computer.
- Select Enabled and to which users this setting applies: Administrators Only or Administrators and Users, and then click OK.

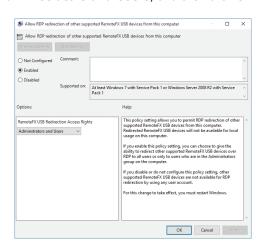

7. Enable UWF through Atrust Client Setup.

RD Gateway Sub-tab



NOTE

• No options are available under the **RD Gateway** sub-tab in the connection type of Remote Web Access.

4.5.6 Configuring Basic ICA Connection Settings

The **Citrix ICA** setting allows you to configure ICA connections for Citrix services and create shortcuts on the local desktop for service access. You can access virtual desktops and applications for work simply through these shortcuts.



NOTE

• For more information on Citrix desktop virtualization solutions, please visit Citrix website at www.citrix.com or Citrix Knowledge Center at support.citrix.com.




NOTE

- You can also access Citrix services through the Internet Explorer or the standard desktop shortcut Citrix Receiver. For detailed instructions on how to access services via this standard desktop shortcut, please refer to section "3.2 Accessing Citrix Services" on page 20.
- The following topics in this section will guide you through the steps of creating and customizing your own service access shortcuts on the desktop and Start menu.
- To configure connection settings for Citrix VDI-in-a-Box, you can choose Web Logon or XenDesktop connection type.

Connection Type: Web Logon

To quickly configure ICA connection settings for the connection type of Web Logon, please do the following:


- 1. On Atrust Client Setup, click **Applications** > **Citrix ICA**.
- 2. The available ICA Connection list appears in the Configuration area.

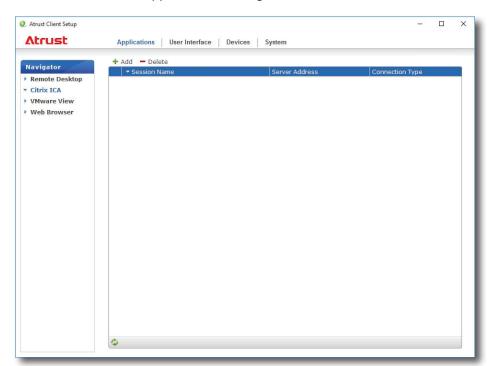



NOTE

- If you haven't create any entry, the ICA Connection list will be empty.
- 3. Click Add on the top of the ICA Connection list to create a new entry of ICA connection.
- 4. On **General** sub-tab, leave the connection type as **Web Logon** as default, and then type in the desired session name and the IP address / URL / FQDN of the server through which Citrix services are accessible under the Server Settings section.

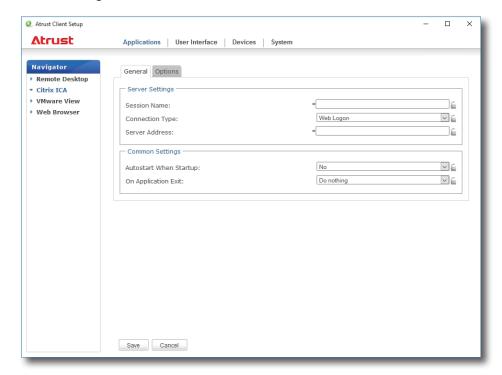



NOTE

- The applicable or best suitable information type of the server side may vary with your Citrix environment. Consult your IT administrator for more information.
- 5. Click **Save** to add this ICA connection entry. The access shortcut will be created automatically on the desktop.




NOTE

 Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.5.8 Configuring Advanced ICA Connection Settings" on page 101.

Connection Type: XenDesktop

To quickly configure ICA connection settings for the connection type of XenDesktop, please do the following:


- 1. On Atrust Client Setup, click **Applications** > **Citrix ICA**.
- 2. The available ICA Connection list appears in the Configuration area.

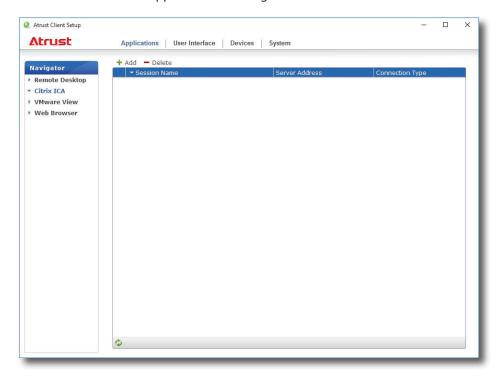



NOTE

- If you haven't create any entry, the ICA Connection list will be empty.
- 3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.
- 4. On **General** sub-tab, click the Connection Type drop-down menu to select **XenDesktop**.

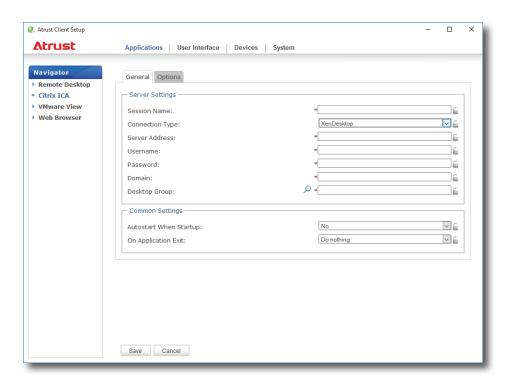

5. Type the session name, the IP address / FQDN of the server through which XenDesktop is accessible, user credentials, the domain of the server, and then click the Search icon proups.



NOTE

- The applicable or best suitable information type of the server side may vary with your Citrix environment. Consult your IT administrator for more information.
- The Search icon works only when required data (fields marked with a red asterisk) have been provided.
- 6. Upon completion, the Search Dialog window appears for you to select the desktop group. Click the drop-down menu to select the desired desktop group, and then click **Select** to confirm.



- 7. The selected desktop group name automatically appears in the Desktop Group field.
- 8. Click **Save** to confirm. The access shortcut will be created automatically on the desktop.




NOTE

 Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.5.8 Configuring Advanced ICA Connection Settings" on page 101.

Connection Type: XenApp

To quickly configure ICA connection settings for the connection type of XenApp, please do the following:


- 1. On Atrust Client Setup, click **Applications** > **Citrix ICA**.
- 2. The available ICA Connection list appears in the Configuration area.

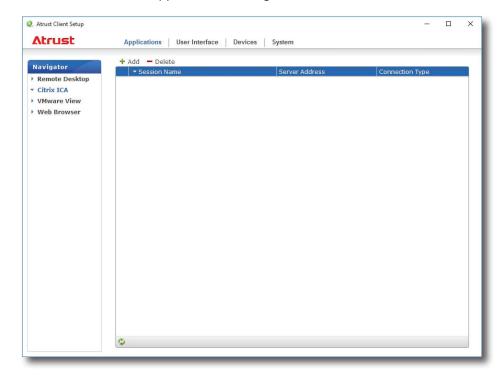



NOTE

- If you haven't create any entry, the ICA Connection list will be empty.
- 3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.
- 4. On **General** sub-tab, click the Connection Type drop-down menu to select **XenApp**.

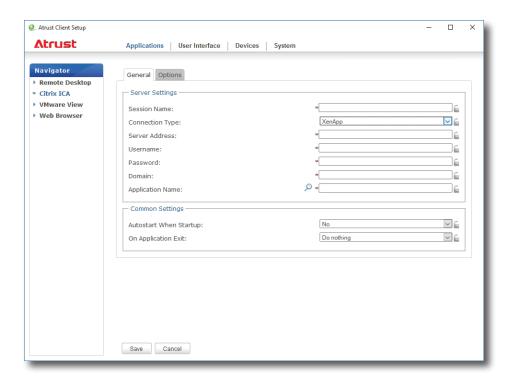

5. Type the session name, the IP address / FQDN of the server through which XenApp is accessible, user credentials, the domain of the server, and then click the Search icon \bigcirc to discover available applications.



NOTE

- The applicable or best suitable information type of the server side may vary with your Citrix environment. Consult your IT administrator for more information.
- The Search icon works only when required data (fields marked with a red asterisk)
 have been provided. If your XenApp server doesn't belong to any domain, just type
 its computer name in the Domain field.
- 6. Upon completion, the Search Dialog window appears for you to select the application. Click the drop-down menu to select the desired application, and then click **Select** to confirm.



- 7. The selected application name automatically appears in the Application Name field.
- 8. Click **Save** to confirm. The access shortcut will be created automatically on the desktop.




NOTE

 Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.5.8 Configuring Advanced ICA Connection Settings" on page 101.

Connection Type: Server Connection

To quickly configure ICA connection settings for the connection type of Server Connection, please do the following:


- 1. On Atrust Client Setup, click **Applications** > **Citrix ICA**.
- 2. The available ICA Connection list appears in the Configuration area.

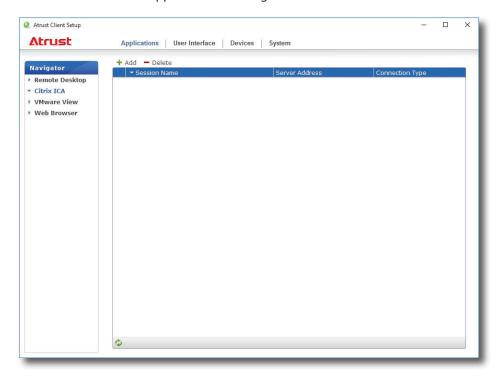



NOTE

- If you haven't create any entry, the ICA Connection list will be empty.
- 3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.
- 4. On **General** sub-tab, click the Connection Type drop-down menu to select **Server Connection**.

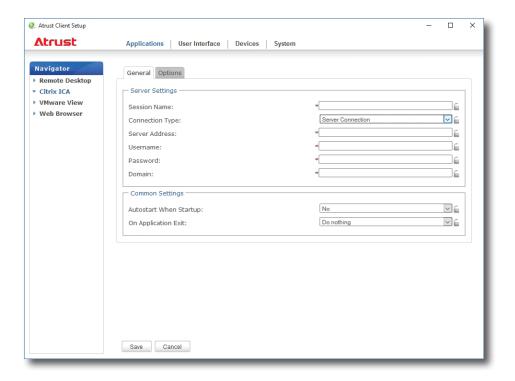

5. Type the session name, the IP address / FQDN of the server, user credentials, and the domain of the server.



NOTE

- The applicable or best suitable information type of the server side may vary with your Citrix environment. Consult your IT administrator for more information.
- Only connections to XenApp servers are supported by this connection type.
- 6. Click **Save** to confirm. The access shortcut will be created automatically on the desktop.



NOTE

 Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.5.8 Configuring Advanced ICA Connection Settings" on page 101.

4.5.7 Accessing Citrix Services

For Connection Types of XenDesktop, XenApp, and Server Connection

To access Citrix services, please do the following:

1. Double click the created (customized) shortcut on the desktop.



NOTE

- You can also access Citrix services through the standard desktop shortcut Citrix Receiver. For details on how to access services via the standard desktop shortcut, please refer to section "3.2 Accessing Citrix Services" on page 20.
- 2. The desired application or desktop is displayed on the screen.

For Connection Types of Web Logon

To access Citrix services, please do the following:


1. Double click the created (customized) shortcut on the desktop.



NOTE

- You can also access Citrix services through the standard desktop shortcut
 Citrix Receiver. For details on how to access services via the standard desktop shortcut, please refer to section "3.2 Accessing Citrix Services" on page 20.
- 2. The Web browser is launched with the Citrix Logon screen.

Logon Screen Example: XenApp and XenDesktop 7.5 Platinum

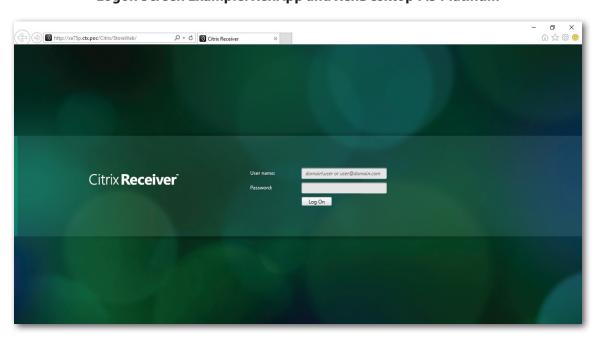


3. Type in the required credentials and domain name, and then click **Log On**.




4. Click to select the desired application(s) or desktop(s).

Screen for On-Demand Applications: XenApp 7.5 Platinum

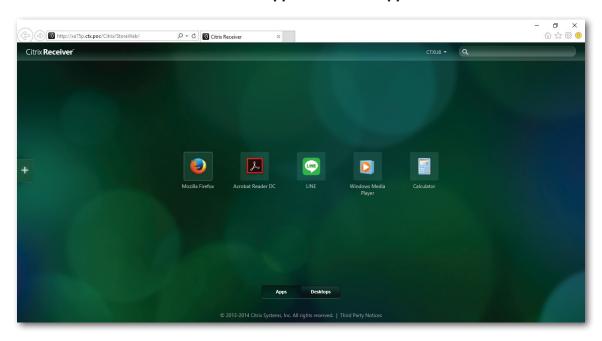


Screen for On-Demand Desktops: XenDesktop 7.5 Platinum

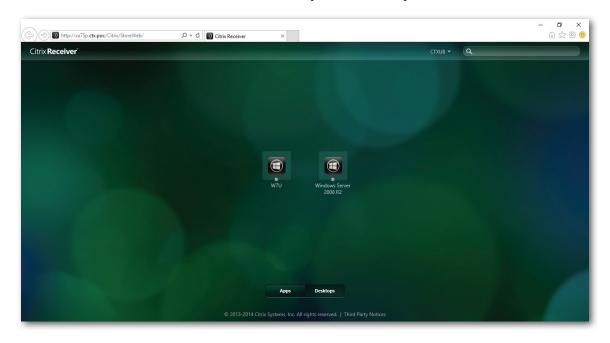

5. The selected application(s) or desktop(s) will be displayed on the screen.

Example: Applications Delivered by XenApp 7.5 Platinum

LINE, Mozilla Firefox, Adobe Reader, and Calculator

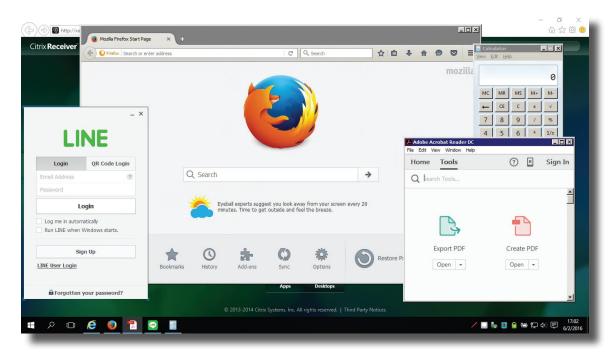

Example: Desktop Delivered by XenDesktop 7.5 Platinum

Windows Server 2008 R2



Example: Desktop Delivered by XenDesktop 7.5 Platinum

Windows 7 Ultimate



4.5.8 Configuring Advanced ICA Connection Settings

The table below provides a description of each setting item for ICA connections. Please refer to this table to configure advanced settings and customize shortcuts on the desktop and Start menu for service access.



NOTE

• Please note that available settings vary depending on the selected connection type.

Settings for the Connection Type of Web Logon



NOTE

- For descriptions of available settings for the connection type of XenDesktop, please refer to "Settings for the Connection Type of XenDesktop" on page 103.
- For descriptions of available settings for the connection type of XenApp, please refer to "Settings for the Connection Type of XenApp" on page 106.
- For descriptions of settings for the connection type of Server Connection, please refer to "Settings for the Connection Type of Server Connection" on page 109.

Server Settings			
Item		Description	
Session Name	Type in the name for Citr	Type in the name for Citrix ICA sessions.	
	This table only provides of is selected.	descriptions for available settings when Web Logon	
	Four connection types are	e available:	
	Option	Description	
	Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).	
Connection Type	XenDesktop	Provides desktop delivery services.	
Commedian Type	XenApp	Provides application delivery services.	
	Server Connection	Provides full server access services for administrators (XenApp servers only).	
	service access. The have installed oth	n is selected, your mt168W will use a Web browser for the Internet Explorer is always used no matter if you her browsers and which browser you have set as default. please refer to section "4.5.7 Accessing Citrix Services"	
Sever Address	Type in the IP address / URL / FQDN of the server through which Citrix services are accessible.		

Common Settings			
Item	Description		
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when Windows 10 IoT Enterprise starts. If Yes is selected, every time when you log in to the system, the Citrix ICA session will be opened automatically.		
On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: Do nothing, Restart Application, Reboot, and Shutdown .		
	Option	Option Description	
	Do nothing	Returns to the Windows 10 IoT Enterprise desktop.	
	Restart Application	Opens a Citrix ICA session again.	
	Reboot	Restarts your thin client.	
	Shutdown	Turns off your thin client.	

Options sub-tab

Web Settings	Web Settings	
Item	Description	
	Click the drop-down menu to select the desired browser window mode. Two options are available: Full Screen and Normal Mode .	
	Option	Description
	Full Screen	The browser is opened in the Full Screen mode.
Mode Setting	Normal Mode	The browser is opened in the Normal mode.
	NOTE: This setting item is available only when Web Logon is selected in the Connection Type field. This type of connection allows you to access services through the interface of the Web browser. NOTE: The used Web browser for service access is always the Internet Explorer, no matter which browser you set as the default.	

Settings for the Connection Type of XenDesktop



NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to "Settings for the Connection Type of Web Logon" on page 101.
- For descriptions of available settings for the connection type of XenApp, please refer to "Settings for the Connection Type of XenApp" on page 106.
- For descriptions of settings for the connection type of Server Connection, please refer to "Settings for the Connection Type of Server Connection" on page 109.

Server Settings			
Item		Description	
Session Name	Type in the name for Cit	Type in the name for Citrix ICA sessions.	
	selected.	This table only provides descriptions for available settings when XenDesktop is selected. Four connection types are available:	
	Option	Description	
Connection Type	Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).	
	XenDesktop	Provides desktop delivery services.	
	XenApp	Provides application delivery services.	
	Server Connection	Provides full server access services for administrators (XenApp servers only).	
Sever Address	Type in the IP address /	FQDN of the server through which XenDesktop	
Username	Type in the user/account name used for authentication.		
Password	Type in the password of the user account used for authentication.		
Domain	Type in the domain of the server.		
	Type in the desktop group. NOTE: You can use the Search icon in front of the field to discover available desktop groups. For detailed instructions, please refer to "Connection Type: XenDesktop" on page 91.		
Desktop Group			

Common Settings		
Item	Description	
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when Windows 10 IoT Enterprise starts. If Yes is selected, every time when you log in to the system, the Citrix ICA session will be opened automatically.	
On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: Do nothing , Restart Application , Reboot , and Shutdown .	
	Option Description	
	Do nothing	Returns to the Windows 10 IoT Enterprise desktop.
	Restart Application	Opens a Citrix ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

Options sub-tab

Window Settings		
Item	Description	
	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: No preference , Better Speed (16-bit) , and Better Appearance (32-bit) .	
	Option	Description
Requested Color Quality	No preference	No preference for a specific color quality.
toquotes sees Quant,	Better Speed (16-bit)	The 16-bit color quality is used for better display speed.
	Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Eight options are available: Default, Seamless, Full Screen, 640 x 480, 800 x 600, 1024 x 768, 1280 x 1024, and 1600 x 1200. NOTE: When the XenDesktop toolbar is enabled on the server side, you may not be able to change the window size. NOTE: For more information about how to disable the XenDesktop toolbar, please visit Citrix websites at support.citrix.com or www.citrix.com for online help. NOTE: In case that you don't want to disable the toolbar, you can use the toolbar or your mouse to resize the launched window if needed.	

Device Mapping			
Item	Description		
Mapping Local Drive		Click the drop-down menu to enable/disable the mapping of the local drive(s) in a Citrix ICA session. If Yes is selected, the locally attached drive(s) will become available in launched Citrix ICA sessions.	
Mapping Local Serial Ports	in a Citrix ICA session. If Yes is selected	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If Yes is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.	
Mapping local Printers		disable the mapping of the local printer(s) in a e locally attached printer(s) will become available	
Connection Settings			
Item	Description		
Network Protocol	Click the drop-down menu to select options are available: TCP/IP, TC SSL/TLS + HTTPS server location	t the protocol(s) used for connection. Three P/IP + HTTP server location, and on.	
	Click the drop-down menu to disable audio playback or choose the desired sound quality in a Citrix ICA session. Click the drop-down menu to disable audio playback or to configure the quality setting for audio playback in a Citrix ICA session. Four options are available: High - high definition audio, Medium - optimized for speech, Low - for low-speed connections, and Off.		
	Option	Description	
Audio Quality	High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	
	Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LANbased connections.	
	Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.	
	Off	Disables audio playback in opened ICA sessions.	
Encryption	Click the drop-down menu to select the desired encryption method. Five options are available: Not configured, Basic, RC5 128 bit (login only), RC5 40 bit, RC5 56 bit, RC5 128 bit.		
Apply Windows key combinations	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: On the local desktop, On the remote desktop, In full screen desktops only.		

Settings for the Connection Type of XenApp



NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to "Settings for the Connection Type of Web Logon" on page 101.
- For descriptions of available settings for the connection type of XenDesktop, please refer to "Settings for the Connection Type of XenDesktop" on page 103.
- For descriptions of settings for the connection type of Server Connection, please refer to "Settings for the Connection Type of Server Connection" on page 109.

Server Settings			
Item		Description	
Session Name	Type in the name for Cit	Type in the name for Citrix ICA sessions.	
	This table only provides selected.	This table only provides descriptions for available settings when XenApp is selected.	
	Four connection types a	re available:	
	Option	Description	
Connection Type	Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).	
	XenDesktop	Provides desktop delivery services.	
	XenApp	Provides application delivery services.	
	Server Connection	Provides full server access services for administrators (XenApp servers only).	
Sever Address	Type in the IP address /	FQDN of the server through which XenApp is accessible.	
Username	Type in the user/account name used for authentication.		
Password	Type in the password of the user account used for authentication.		
	Type in the domain of the server.		
Domain	NOTE: Type in the full computer/server name if your XenApp server doesn't belong to any domain.		
	Type in the application n	ame.	
Application Name	NOTE: You can use the Search icon pin front of the field to discover availab applications. For detailed instructions, please refer to "Connection Type: XenApp" on page 93.		

Common Settings	Common Settings		
Item	Description		
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when Windows 10 IoT Enterprise starts. If Yes is selected, every time when you log in to the system, the Citrix ICA session will be opened automatically.		
On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: Do nothing, Restart Application, Reboot, and Shutdown .		
	Option Description		
	Do nothing Returns to the Windows 10 IoT Enterprise desktop.		
	Restart Application	Opens a Citrix ICA session again.	
	Reboot	Restarts your thin client.	
	Shutdown	Turns off your thin client.	

Options Sub-tab

Window Settings		
Item	Description	
		select the desired color quality for a Citrix ICA ilable: No preference , Better Speed (16-bit) , bit) .
	Option	Description
Requested Color Quality	No preference	No preference for a specific color quality.
,	Better Speed (16-bit)	The 16-bit color quality is used for better display speed.
	Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Eight options are available: Default, Seamless, Full Screen , 640 x 480, 800 x 600, 1024 x 768, 1280 x 1024 , and 1600 x 1200 .	
Device Mapping		
Item	Description	
Mapping Local Drive	Click the drop-down menu to enable/disable the mapping of the local drive(s) in a Citrix ICA session. If Yes is selected, the locally attached drive(s) will become available in launched Citrix ICA sessions through this connection.	
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If Yes is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.	

Mapping local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If Yes is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions through this connection.		
Connection Settings			
Item	Description		
Network Protocol	options are available: TCP/IP, TC	Click the drop-down menu to select the protocol(s) used for connection. Three options are available: TCP/IP, TCP/IP + HTTP server location, and SSL/TLS + HTTPS server location.	
	Click the drop-down menu to disable audio playback or choose the desired sound quality in a Citrix ICA session. Click the drop-down menu to disable audio playback or to configure the quality setting for audio playback in a Citrix ICA session. Four options are available: High - high definition audio, Medium - optimized for speech, Low - for low-speed connections, and Off.		
	Option	Description	
Audio Quality	High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	
	Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	
	Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.	
	Off	Disables audio playback in opened ICA sessions.	
Encryption		Click the drop-down menu to select the desired encryption method. Five options are available: Not configured, Basic, RC5 128 bit (login only), RC5 40 bit, RC5 56 bit, RC5 128 bit.	
Apply Windows key combinations	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: On the local desktop, On the remote desktop, In full screen desktops only.		

Settings for the Connection Type of Server Connection



NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to "Settings for the Connection Type of Web Logon" on page 101.
- For descriptions of available settings for the connection type of XenDesktop, please refer to "Settings for the Connection Type of XenDesktop" on page 103.
- For descriptions of settings for the connection type of XenApp, please refer to "Settings for the Connection Type of XenApp" on page 106.

Server Settings			
Item	Description		
Session Name	Type in the name for Citr	Type in the name for Citrix ICA sessions.	
	This table only provides descriptions for available settings when Server Connection is selected. Four connection types are available:		
	Option	Description	
Connection Type	Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).	
	XenDesktop	Provides desktop delivery services.	
	XenApp	Provides application delivery services.	
	Server Connection	Provides full server access services for administrators (XenApp servers only).	
Sever Address	, , ,	Type in the IP address / URL / FQDN of the XenApp server. NOTE: Server Connection only supports connections to XenApp servers.	
Username	Type in the user/account name used for authentication.		
Password	Type in the password of	Type in the password of the user account used for authentication.	
Domain	Type in the domain of the server. NOTE: Type in the full computer/server name if the server doesn't belong to any domain.		

Common Settings				
Item	Description			
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when Windows 10 IoT Enterprise starts. If Yes is selected, every time when you log in to the system, the Citrix ICA session will be opened automatically.			
On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: Do nothing , Restart Application , Reboot , and Shutdown .			
	Option Description			
	Do nothing	Returns to the Windows 10 IoT Enterprise desktop.		
	Restart Application Opens a Citrix ICA session again.			
	Reboot Restarts your thin client.			
	Shutdown Turns off your thin client.			

Options Sub-tab

Window Settings				
Item	Description			
	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: No preference , Better Speed (16-bit) , and Better Appearance (32-bit) .			
	Option	Description		
Requested Color Quality	No preference	No preference in a specific color quality.		
quodeda doilo. Quality	Better Speed (16-bit)	The 16-bit color quality is used for better display speed.		
	Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.		
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Eight options are available: Default, Seamless, Full Screen, 640 x 480, 800 x 600, 1024 x 768, 1280 x 1024, and 1600 x 1200 .			
Device Mapping				
Item	Description			
Mapping Local Drive	Click the drop-down menu to enable/disable the mapping of the local drive(s) in a Citrix ICA session. If Yes is selected, the locally attached drive(s) will become available in launched Citrix ICA sessions through this connection.			
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If Yes is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.			

Mapping local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If Yes is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions through this connection.				
Connection Settings					
Item	Description				
Network Protocol	options are available: TCP/IP, TC	Click the drop-down menu to select the protocol(s) used for connection. Three options are available: TCP/IP, TCP/IP + HTTP server location, and SSL/TLS + HTTPS server location.			
	quality in a Citrix ICA session. Click the drop-down menu to disab setting for audio playback in a Citri High - high definition audio, Me	Click the drop-down menu to disable audio playback or choose the desired sound quality in a Citrix ICA session. Click the drop-down menu to disable audio playback or to configure the quality setting for audio playback in a Citrix ICA session. Four options are available: High - high definition audio, Medium - optimized for speech, Low - for low-speed connections, and Off.			
	Option	Description			
Audio Quality	High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.			
	Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LANbased connections.			
	Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.			
	Off	Disables audio playback in opened ICA sessions.			
Encryption		t the desired encryption method. Five options sic, RC5 128 bit (login only), RC5 40 bit,			
Apply Windows key combinations	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: On the local desktop, On the remote desktop, In full screen desktops only.				

4.5.9 Configuring Basic VMware View Connection Settings

The **VMware View** setting enables you to configure View connection settings for VMware View or Horizon View desktop services and create shortcuts on the desktop and Start menu for service access. You can access on-demand desktop services for work simply through these shortcuts.



NOTE

 For more information on VMware desktop virtualization solutions, please visit VMware website at www.vmware.com.




NOTE

- You can also access VMware View or Horizon View services through the standard desktop shortcut VMware Horizon View Client. For detailed instructions on how to access services via the standard desktop shortcut, please refer to chapter 3 "Getting Started" on page 17 or the Quick Start Guide for mt168W.
- The following sections will guide you through the steps of creating your own service access shortcuts on the desktop.

To quickly configure VMware View connection settings, please do the following:


- 1. On Atrust Client Setup, click **Applications** > **VMware View**.
- 2. The View Connection list appears in the Configuration area.

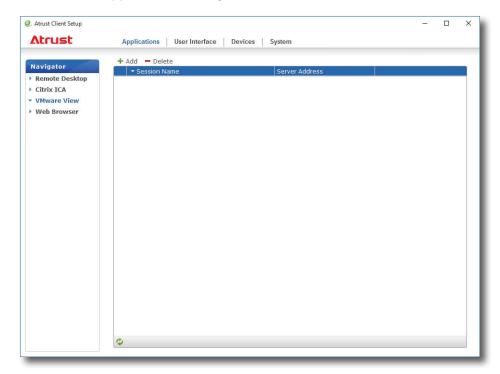



NOTE

- If you haven't create any entry, the View Connection list will be empty.
- 3. Click **Add** on the top of the View Connection list to add a new entry of View connection.

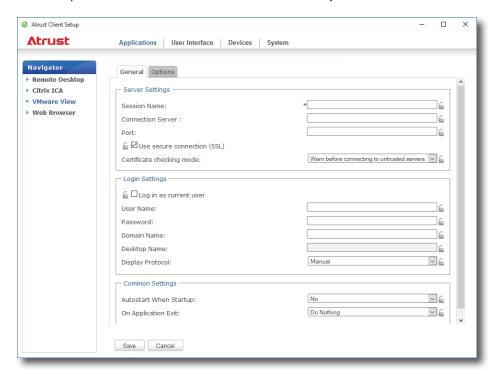

4. Type in the desired session name, and then click **Save** to confirm.




NOTE

- This is the only required field for the creation of a service access shortcut on the desktop. Other data can be provided during the period of service access. Depending on your needs, you might choose to type in more other data.
- 5. The new entry is added to the View Connection list and the access shortcut is created automatically on the desktop.


4.5.10 Accessing VMware View or Horizon View Services

To access VMware View or Horizon View services, please do the following:


- 1. Double click the created (customized) access shortcut on the desktop.
- 2. A window appears allowing you to add the name or IP address of the View Connection Server.
- 3. Double-click **Add Server** icon or click **New Server** in the top-left corner.

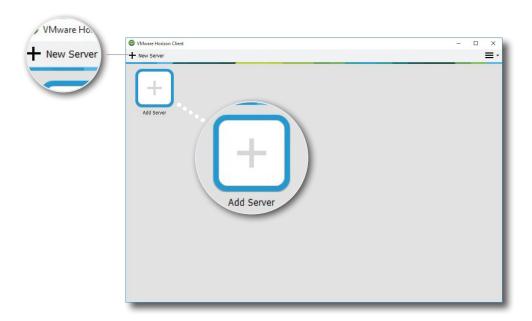

4. A window appears prompting for the name or IP address of the View Connection Server. Enter the required information, and then click **Connect**.

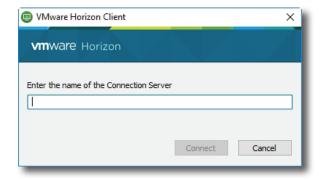


5. A window may appear with a certificate message about the remote server. Consult your IT administrator for details and ensure the connection is secure *first*. To bypass, click **Continue**.

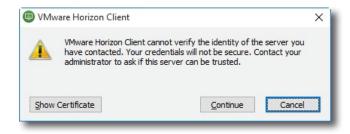


6. A window may appear with a Welcome message. Click **OK** to continue.

7. Provide your user name and password on the opened window, and then click **Login**.

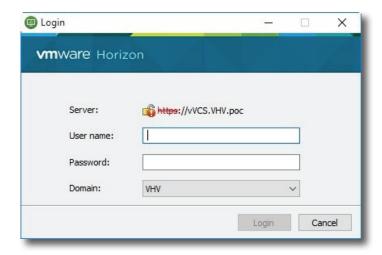

8. A window appears with available desktops or applications for your credentials. Double-click to select the desired desktop or application.

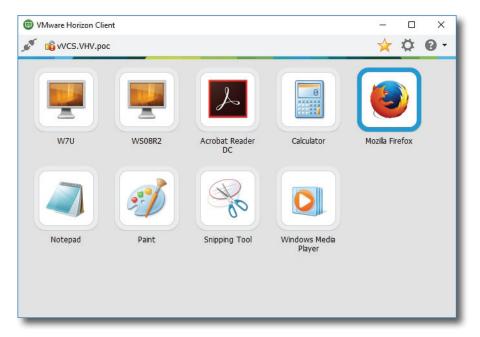

9. The desktop or application will be displayed on the screen.

4.5.11 Configuring Advanced View Connection Settings

The table below provides a description of each setting item for View connections. Please refer to this table to configure advanced settings and customize shortcuts on the desktop and Start menu for service access.

Server Settings				
Item		Description		
Session Name	Type in the name for VMware View or Horizon View sessions.			
	Type in the computer name or IP address of the View Connection Server. NOTE: For more information on View Connection Sever, please visit VMware website at www.vmware.com.			
Connection Server				
Port	Type in the port number used To use the default value, sim	d to communicate with the View Connection Server. ply leave it blank.		
Use secure connection (SSL)	Check/Uncheck to enable/dis	able secure connection.		
	to connect to an untrusted se	rify the identity of the remote server and whether erver. Three options are available: Do not verify s, Warn before connecting to untrusted et to untrusted servers.		
	Option	Description		
Certificate checking mode	Do not verify server identity certificates	Do not verify the identity of the remote server and connect to it anyway.		
	Warn before connecting to untrusted servers	Warns and allows users to choose whether to connect or not.		
	Never connect to untrusted servers	Disallows untrusted connections.		
Login Settings				
Item	Description			
Log in as current user	Check to log in to VMware View or Horizon View services with the current user credentials. When checked, the User Name, Password, and Domain Name fields will be grayed out.			
User Name	Type in the user name for authentication.			
Password	Type in the password for authentication.			
Domain Name	Type in the domain name of the View Connection Sever.			
	Type in the desktop name. O	r, leave it blank for users to select one.		
Desktop Name	NOTE: If Manual is selected for the Display Protocol field below, this field will be grayed out.			

		Click the drop-down menu to select the display protocol. Three options are available: Manual , Microsoft RDP , and PCoIP .			
	Option	Description			
Display Protocol	Manual	Manually select the desired display protocol.			
	Microsoft RDP	Use Microsoft RDP as the display protocol.			
	PCoIP	Use VMware PCoIP as the display protocol.			
Common Settings					
Item	Description				
Autostart When Startup	Select whether to open a VMware View or Horizon View session automatically or not when Windows 10 IoT Enterprise starts. If Yes is selected, when you log in to the system, the VMware View or Horizon View session will be opened automatically.				
On Application Exit	Select what to do when a VMware View or Horizon View session is ended. Four options are available: Do Nothing , Restart Application , Reboot , and Shutdown .				
	Option	Description			
	Do Nothing	Returns to the Windows 10 IoT Enterprise desktop.			
	Restart Applicat	ion Opens a View or Horizon View session again.			
	Reboot	Restarts your thin client.			
	Shutdown Turns off your thin client.				

Options Sub-tab

Window Settings			
Item	Description		
	Click the drop-down menu to select the desired display size of a View desktop. Five options are available: Full Screen , Multi Monitor , Large Window , and Small Window .		
	Option	Description	
Display	Full Screen	Opens the selected View desktop in full screen.	
	Multi Monitor	Opens the selected View desktop in multiple displays.	
	Large Window	Opens the selected View desktop in a large window.	
	Small Window	Opens the selected View desktop in a small window.	


4.5.12 Configuring Web Browser Settings

The **Web Browser** setting item allows you to configure browser session settings and create shortcuts on the desktop or Start menu for browser sessions.

Configuring General Browser Session Settings

To configure general browser session settings, please do the following:

1. On Atrust Client Setup, click **Applications** > **Web Browser** > **Global Setting**.

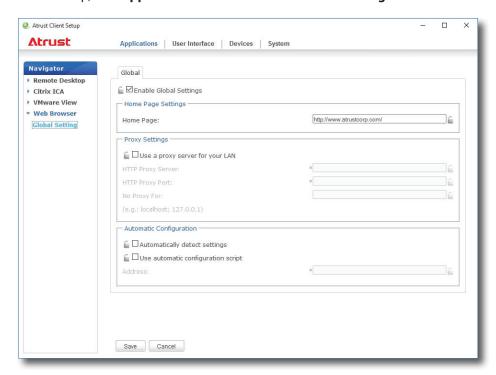

2. Refer to the table below to set up home page, proxy, and automatic configuration settings, and then click **Save** to apply.

Basic Settings			
Item	Description		
Home Page	Type in the URL of a Web page for quick access via the Home button.		
Proxy Settings			
Item	Description		
Use a proxy server for your LAN	Check to use a proxy server in your local area network.		
HTTP Proxy Server	Type in the IP address of the proxy server.		
HTTP Proxy Port	Type in the communication port of the proxy server.		
No Proxy For	Type in the IP address(es) to bypass the proxy server.		

Automatic Configuration		
Item	Description	
Automatically detect settings	Check to automatically detect browser settings.	
Use automatic configuration script	Check to allow automatic configuration and indicate the IP address where a configuration file is located.	
Address	Type in the IP address when Use automatic configuration script is selected.	


Configuring Specific Browser Session Settings

To configure specific browser session settings and create shortcuts on the desktop and Start menu, please do the following:



TIP

- You can use this feature to create a desktop shortcut for a specific web page, for example, your intranet home page.
- 1. On Atrust Client Setup, click **Applications** > **Web Browser**.
- 2. The Browser Session list appears in the Configuration area.

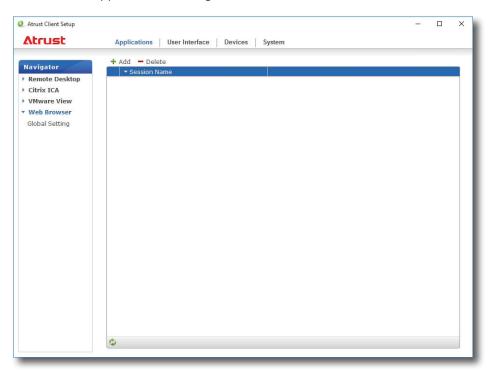




NOTE

• If you haven't create any entry, the Browser Session list will be empty.

- 3. Click **Add** on the top of the Browser Session list.
- 4. On **General** sub-tab, type in the desired session name, the URL of the initial web page, and select other settings if needed (refer to the table below for descriptions).

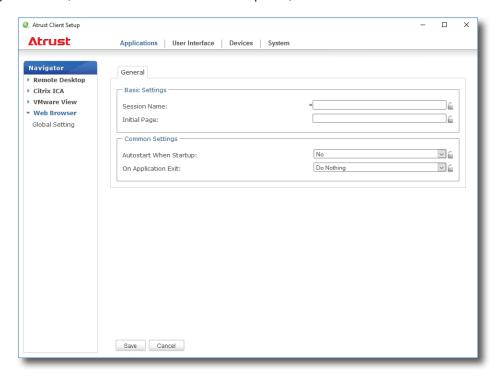

Common Settings					
Item	Description				
Autostart When Startup	Select whether to open a browser session automatically or not when Windows 10 IoT Enterprise starts. If Yes is selected, every time when you log in to the system, the browser session will be opened automatically.				
On Application Exit	Select what to do when a browser session is ended. Four options are available: Do Nothing, Restart Application, Reboot, and Shutdown.				
	Option Description				
	Do Nothing	Returns to the Windows 10 IoT Enterprise desktop.			
	Restart Application Opens a browser session again.				
	Reboot Restarts your thin client.				
	Shutdown Turns off your thin client.				

5. Click **Save** to confirm. The access shortcut will be created automatically on the desktop.

Appendices

This chapter provides instructions for the maintenance of your mt168W thin clients.

A.1 Resetting Your mt168W

now to reset your introow to the unmanaged state and its settings	12.
under Atrust Client Setup to factory defaults	

A.2 Updating Firmware for Your mt168W

Four ways to upo	date firmware	for your mt168W 1	.2	4
------------------	---------------	-------------------	----	---

A.1 Resetting Your mt168W

Reset Mode enables you to restore settings under Atrust Client Setup to the factory defaults. Additionally, it also releases a managed mt168W from the management of Atrust Device Manager, a management console developed by Atrust for remote and mass client management.

You can perform **Reset Mode** locally through Atrust Thin Client Menu.




NOTE

You can also release a managed mt168W remotely from Atrust Device Manager.
 For details, please refer to the User's Manual for Atrust Device Manager.

To reset your mt168W, please do the following:

- 1. Restart your mt168W.
- 2. During the POST (Power-On Self-Test) period, press **Esc** on the keyboard to enter Atrust Thin Client Menu.

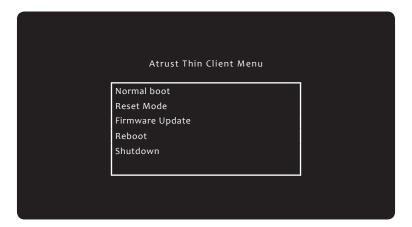



NOTE

 Five options are available on Atrust Thin Client Menu: Normal boot, Reset Mode, Firmware Update, Reboot, and Shutdown. See the table below for the description of each option:

Description		
Powers up your mt168W as the normal startup procedure.		
Resets Atrust Client Setup settings and remote management status for your mt168W.		
Updates firmware for your mt168W through the network.		
Restarts your mt168W.		
Powers off your mt168W.		

- 3. Use arrow keys to select **Reset Mode**, and then press **Enter** to continue.
- 4. A message appears prompting you for confirmation. Type \mathbf{y} to confirm.
- 5. Upon completion, press **Enter** to restart.

A.2 Updating Firmware for Your mt168W

Four ways are available to update firmware for your mt168W:

Method	Description			
Atrust Thin Client Menu	Downloads firmware from a remote computer and updates firmware for your thin client.			
USB Flash Drive	Updates firmware with a USB flash drive created by Recovery USB Disk Creator.			
Atrust Client Setup	Initiates firmware update locally on the thin client with the help of Atrust Client Setup.			
Atrust Device Manger	Initiates firmware update remotely on the remote computer with Atrust Device Manager.			

Using Atrust Thin Client Menu

To update firmware using Atrust Thin Client Menu, please do the following:

- 1. Connect your thin client to the network, and then restart it.
- 2. During the POST (Power-On Self-Test) period, press **Esc** on the keyboard to enter Atrust Thin Client Menu.
- 3. Select **Firmware Update** and then follow the on-screen instructions to complete the task.



NOTE

- You need to specify the IP address of the firmware server over the network. A
 firmware server is the server where Atrust Device Manager is installed and client
 firmware files are imported through Atrust Device Manager.
- For more information about Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

Using a USB Flash Drive

To update firmware using a USB flash drive created by Recovery USB Disk Creator, please do the following:



NOTE

- For instructions on how to create a USB flash drive using Recovery USB Disk Creator, please refer to the Quick Guide for USB Creator.
- 1. Plug the USB flash drive, and then restart your thin client.
- 2. During the POST period, press **F7** to enter the Boot Device menu.
- 3. Select the USB flash drive on that menu to enter Atrust Thin Client Recovery System screen.
- 4. Follow the on-screen instructions to complete the task.

Using Atrust Client Setup

To update firmware using Atrust Client Setup, please refer to section "4.2.5 Updating Firmware from the Management Computer" on page 40.

Using Atrust Device Manager

To update firmware using Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

Specifications

Atrust mt168W mobile thin client

Attast introov mobile tilli ellerit							
Processor	Intel® Celeron® N2807, Dual-c	ore, 1.58 GHz					
System Memory	4 GB DDR3	4 GB DDR3					
Flash Memory	16 GB mSATA (Optional: 32 / 6	16 GB mSATA (Optional: 32 / 64 GB)					
Display	Type: 11.6" 16:9 Glare Maximum Resolution: 1366 x 768 Color Depth: 18-bit (262,144 color tones for each RGB color)						
Keyboard / Touchpad	Keyboard: 87 keys Touchpad: 2-button Glide pad						
Sound	Built-in speakers						
I/O interfaces	Left side: 1 x VGA 1 x DC IN 1 x USB 3.0	Right side: 1 x RJ-45 2 x USB 2.0	1 x Microphone port 1 x Headphone port	Display and base: 1 x Built-in microphone 2 x Built-in speaker			
Networking	10/100/1000 Mb Ethernet Wi-Fi 802.11 a/b/g/n						
AC Adapter	INPUT: 100-240 V, ~2.5 A, 50-60 Hz OUTPUT: 19 V, 2.1 A, 40 W						
Battery Pack	Rechargeable lithium-ion battery 11.1 V, 2800 mAh, 31 Wh						
Operating system	Windows 10 IoT Enterprise						
Supported Protocols	Microsoft RDP with RemoteFX / Citrix ICA with HDX / VMware PCoIP						
Management	Atrust Client Setup / Atrust Device Manager						
Security	Kensington security slot						
Dimensions	(W)297 x (D)193 x (H)36 mm						
Weight	1.18 kg (approx.)						
Environment	Operating Temperature: Non-operating Temperature: Operating Humidity (Rh): Non-operating Humidity (Rh):	0° C ~ 35° C -30° C ~ 60° C 10% ~ 90% (non-condensing 5% ~ 95%	3)				

