



## Mobile Thin Client Solution Atrust mt180L

**Topics Covered:**

Setup and Maintenance  
Basics as an Endpoint Device in VDI  
Atrust Client Setup Console



# USER'S MANUAL

---

**Internal Draft 0.04**

Copyright © 2015-16 Atrust Computer Corp.

## Copyright and Trademark Statements

Copyright © 2015-16 Atrust Computer Corp. All rights reserved.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Atrust Computer Corp.

### Disclaimer

Atrust Computer Corp. ("Atrust") makes no representations or warranties with respect to the contents or use of this document, and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. Atrust is not liable for technical or editorial errors or omissions contained herein. The information in this document is subject to change without notice.

### Trademark Statements

Atrust is a trademark of Atrust Computer Corp.

Intel is a registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

Microsoft, Windows, Windows Server, RemoteFX, and MultiPoint are trademarks or registered trademarks of the Microsoft group of companies.

Citrix, ICA, XenApp, XenDesktop, and VDI-in-a-Box are trademarks of Citrix Systems, Inc. and/or one or more of its subsidiaries, and may be registered in the United States Patent and Trademark Office and in other countries.

VMware, VMware View, and VMware Horizon View are trademarks or registered trademarks of the VMware, Inc.

PCoIP is a registered trademark of Teradici Corporation in the United States and/or other countries.

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

## About This User's Manual

This manual provides detailed instructions on how to set up, use, and maintain Atrust mt180L mobile thin clients.

### Manual Structure and Subjects

Chapter	Subject
1	Provides an overview of Atrust mt180L mobile thin clients.
2	Provides detailed instructions on how to set up Atrust mt180L mobile thin clients.
3	Provides the basics of how to use Atrust mt180L mobile thin clients.
4	Provides instructions on how to configure client settings and customize Atrust mt180L mobile thin clients with the Atrust Client Setup console.
Appendices	Provides supplementary instructions on the maintenance and upgrade of Atrust mt180L mobile thin clients.
Specifications	Provides detailed information on key components of Atrust mt180L mobile thin clients.

### Notes, Tips, and Warnings

Throughout this manual, the notes, tips, and warnings in the following formats are used to provide important information, useful advice, and prevent injuries to you, damage to your devices, or loss of data on your system.



#### NOTE

- A note provides important information for a specific situation.



#### TIP

- A tip gives a piece of useful advice to perform a task more efficiently.



#### WARNING

- A warning provides crucial information that must be followed to prevent injuries to you, damage to your devices, or loss of data on your system.



## Style Conventions

The following styles are used throughout this manual while referring to operational items on input devices, hardware panels, or application interfaces.

Item	Style	Example
keys on the keyboard	bold	<b>Ctrl + F2, Alt + F9, Alt + Tab</b>
application windows or entry lists	first letter capitalized	Confirm Dialog window, RDP Connection list, ICA Connection list, View Connection list
buttons or tabs on a window, toolbars, taskbar, or menu	bold	<b>OK, Next, Save, Applications</b> tab
options on a window, screen, list, or menu	bold	<b>Add, Domain, Connection Type, High Quality</b>
selecting a series of options	bold	<b>Applications &gt; Citrix ICA, Applications &gt; Remote Desktop, Applications &gt; VMware View, Network &gt; Wireless, Devices &gt; Printer, System &gt; Time Zone</b>

## Safety and Regulatory Information

### Regulatory Statement

#### Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### IMPORTANT NOTE:

#### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Regulatory Information

### WEEE (Waste Electrical and Electronic Equipment) Directive



In the European Union, this symbol indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling. For proper disposal, please contact your local recycling or hazardous waste center.

## Safety Information



### WARNING

- Use only power supplies listed in the user instructions.



### WARNING

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.



### WARNING

- For safety, do not make mechanical or electrical modifications to the equipment.
- Do not remove equipment covers and access any of the components inside the equipment. Any access inside the equipment without an authorized or certified technician may cause serious injuries and damage. For any problem, contact your dealer for assistance.
- You should only make repairs as authorized by the product documentation. Repairs, replacement, expansion, and upgrades not performed by a certified service technician may cause injuries to you, damage your system, and void your warranty.



# Table of Contents

## Copyright and Trademark Statements i

Disclaimer	i
Trademark Statements	i

## About This User's Manual ii

Manual Structure and Subjects	ii
Notes, Tips, and Warnings	ii
Style Conventions	iii

## Safety and Regulatory Information iv

Regulatory Statement	iv
Regulatory Information	v
Safety Information	v

## 1 Overview 1

1.1	Introduction	3
1.2	Features	3
1.3	Package Contents	3
1.4	Exterior Views	4
1.5	Exterior Components	5

## 2 Setting Up Your mt180L 9

2.1	About the AC Adapter	11
2.2	Charging Your Lithium-ion Battery	11
2.3	Setting Up Your mt180L	12

## 3 Getting Started 13

3.1	Learning the Basics	15
-----	---------------------	----

## 4 Configuring Client Settings 39

4.1	Atrust Client Setup	41
4.1.1	Interface Overview	41
4.1.2	Client Settings at a Glance	42
4.2	Configuring System Settings	43
4.2.1	System Tab Overview	43
4.2.2	Available Settings at a Glance	44
4.2.3	Configuring Time Zone and Time Server	45
4.2.4	Configuring the Access Privileges and Passwords of Atrust Client Setup	46
4.2.5	Configuring the Login Password for the Local Desktop	48
4.2.6	Configuring Shadow Settings for Remote Assistance	50
4.2.7	Updating Firmware from the Management Computer	52
4.2.8	Enabling or Disabling the Appliance Mode	54
4.2.9	Enabling or Disabling Auto Setup	58
4.2.10	Configuring the Quick Connection Mode	58
4.2.11	Configuring Advanced Quick Connection Settings	60
4.2.12	Managing the Use of Power	64
4.2.13	Enabling or Disabling the Command-line Functions	65
4.2.14	Collecting Event Logs and Capturing Related Screens	66
4.2.15	Uploading Files for Error Reporting	68
4.2.16	Importing Certificates for Remote Computers	69
4.2.17	Enabling or Disabling Auto Registration	73

<b>4.3</b>	<b>Configuring User Interface Settings</b>	<b>74</b>
4.3.1	User Interface Tab Overview	74
4.3.2	Available Settings at a Glance	75
4.3.3	Configuring Display Settings	75
4.3.4	Customizing Desktop and System Language Settings	78
4.3.5	Hiding or Showing Quick Access Shortcuts	80
4.3.6	Using a Custom Wallpaper	81
4.3.7	Adjusting Keyboard Settings	82
4.3.8	Adjusting Mouse Settings	84
4.3.9	Configuring Screensaver Settings	85
<b>4.4</b>	<b>Configuring External Device Settings</b>	<b>86</b>
4.4.1	Devices Tab Overview	86
4.4.2	Available Settings at a Glance	87
4.4.3	Configuring Settings for USB Storage Devices	87
4.4.4	Manually Mount and Eject Attached USB Storage Devices	88
4.4.5	Disabling or Enabling Attached Audio Devices	89
4.4.6	Using USB Audio Devices	90
4.4.7	Adding a Local Printer	91
4.4.8	Adding a Network Printer	94
<b>4.5</b>	<b>Configuring Network Settings</b>	<b>95</b>
4.5.1	Network Tab Overview	95
4.5.2	Available Settings at a Glance	96
4.5.3	Configuring Wired Network Settings	97
4.5.4	Establishing and Stopping a VPN connection	100
4.5.5	Configuring Virtual Private Network Settings	104
4.5.6	Creating the Mapping of IP Addresses to Names of Hosts	105
4.5.7	Configuring the Failover Cluster List	107
4.5.8	Changing the Host Name of Your Thin Client	109
4.5.9	Enabling or Disabling the Wireless Interface	110
4.5.10	Configuring the Trigger Threshold for Roaming	111
4.5.11	Establishing and Stopping a Wireless Connection	112
4.5.12	Configuring Wireless Connection Settings	115
4.5.13	Configuring Proxy Settings for Web-based Access to Services	116
<b>4.6</b>	<b>Configuring Service Access Settings</b>	<b>118</b>
4.6.1	Applications Tab Overview	118
4.6.2	Available Settings at a Glance	119
4.6.3	Configuring Basic RDP Connection Settings	120
4.6.4	Accessing Remote Desktop Services	129
4.6.5	Configuring Advanced RDP Connection Settings	135
4.6.6	Configuring Basic ICA Connection Settings	150
4.6.7	Switching the Citrix Receiver Version	163
4.6.8	Enabling or Disabling Esc to Quit on the Web Logon Screen	164
4.6.9	Configuring Keyboard Layout and Type for Citrix ICA Sessions	165
4.6.10	Accessing Citrix Services	166
4.6.11	Configuring Advanced ICA Connection Settings	173
4.6.12	Configuring Basic VMware View Connection Settings	202
4.6.13	Accessing VMware View or Horizon View Services	204
4.6.14	Configuring Advanced View Connection Settings	206
4.6.15	Configuring SSH Connection Settings	211
4.6.16	Launching SSH and Telnet Sessions	213

## Appendices 215

<b>A.1</b>	<b>Resetting Your mt180L to the Factory Default</b>	<b>217</b>
<b>A.2</b>	<b>Updating Firmware for Your mt180L</b>	<b>218</b>
<b>A.3</b>	<b>Using SECUREMATRIX Authentication for VMware Connections</b>	<b>220</b>
<b>A.4</b>	<b>Auto Setup Flowchart</b>	<b>227</b>

## Specifications 229

---

## Overview

This chapter provides an overview of Atrust mt180L.

<b>1.1 Introduction</b>	
Desktop virtualization and simple endpoint devices	3
<b>1.2 Features</b>	
Key features of Atrust mt180L	3
<b>1.3 Package Contents</b>	
Check your package contents	3
<b>1.4 Exterior Views</b>	
Exterior design of Atrust mt180L	4
<b>1.5 Exterior Components</b>	
Exterior components of Atrust mt180L	5





# 1.1 Introduction

Desktop virtualization provides a new perspective to reconsider the design and implementation of an IT infrastructure. In a desktop virtualization infrastructure, a station is no longer a cumbersome desktop, but simply an endpoint device for users to access delivery services from the server(s).

With the introduction of the desktop virtualization technologies, you can considerably benefit from:

- On-demand applications/desktops
- Centralized management of work environments
- Drastically reduced endpoint software/hardware issues
- Simplified system maintenance and improved system security
- More scalability with low-cost endpoint devices





# 1.2 Features

The key features of Atrust mt180L mobile thin clients are:

- Built-in Wireless 802.11 b/g/n and Ethernet network interface
- Support for a wide range of desktop virtualization solutions from industry-leading companies:
  - Microsoft® Remote Desktop
  - Citrix® XenApp™, XenDesktop®, and VDI-in-a-Box™
  - VMware® View™ and Horizon View™
- Support for high-definition technologies
  - Microsoft® RemoteFX®
  - Citrix® HDX™
  - VMware® View™ PCoIP®
- Simple click-access to various applications/desktops
- Built-in Atrust Client Setup as the local client management console


# 1.3 Package Contents

Please check your package contents. Ensure that all of the items are present in your package. If any items are missing or damaged, please contact your dealer immediately.


Atrust mt180L	AC adapter	Battery
		
Quick Start Guide		
	<b>NOTE:</b> Your package may not contain a hard copy of the Quick Start Guide. In this case, a soft copy in PDF format will be provided.	

## 1.4 Exterior Views


Front View

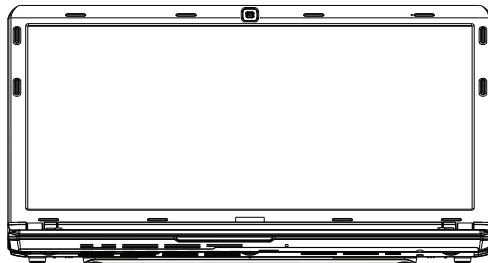


Left View

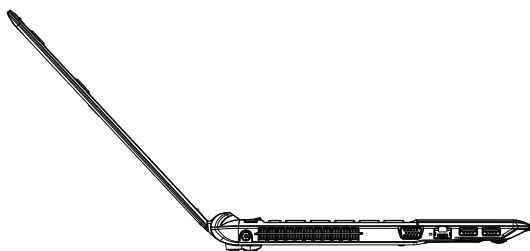

Right View

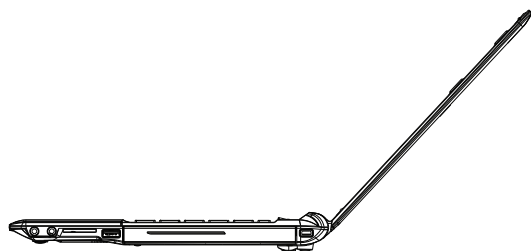


Bottom View and Battery

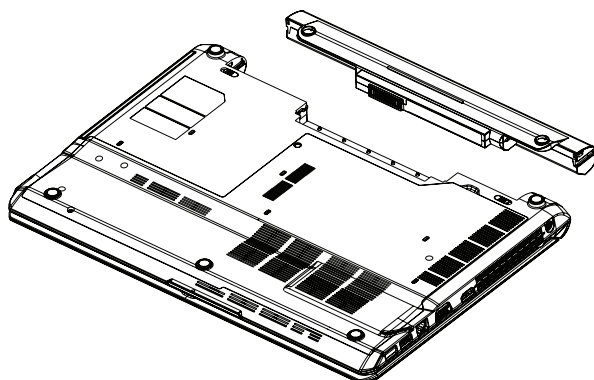


### 1.5 Exterior Components


Display and Base Components

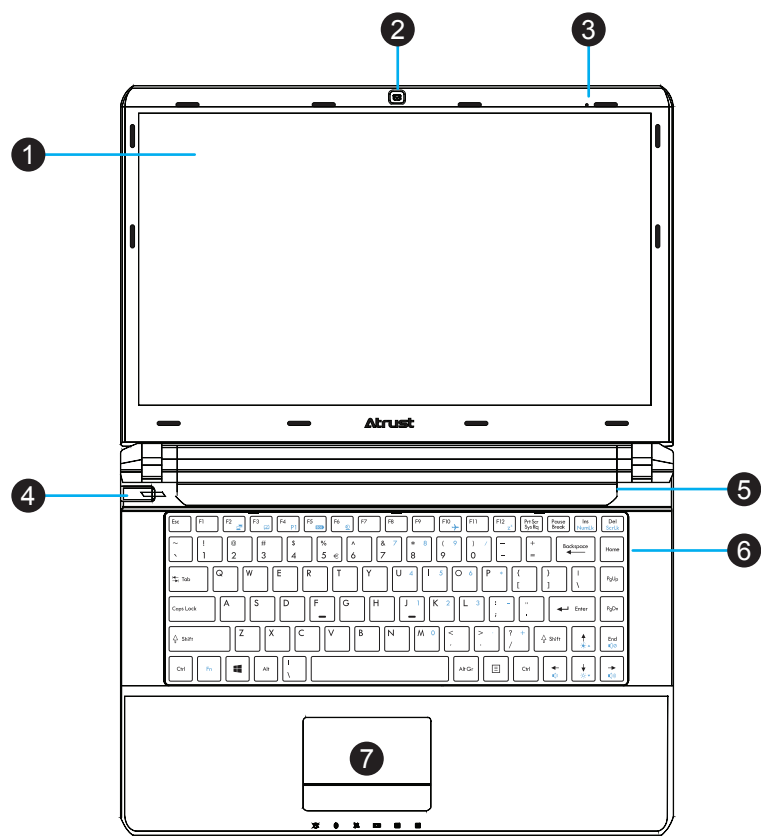

No.	Sign	Component	Description
1		LCD display	Built-in display for visual output.
2		Webcam (optional)	Built-in video camera for real-time video.
3		Microphone	Built-in microphone for audio input.
4		Power button	<ul style="list-style-type: none"><li>Press to power on the mobile thin client.</li><li>Long press to <b>force power off</b> the mobile thin client.</li></ul>
		Power LED	<ul style="list-style-type: none"><li>Glows blue when the system is on.</li><li>Glows orange when the system enters the System Sleep mode.</li></ul>
5		Speaker	Built-in speakers for audio output.
6		Keyboard	Built-in keyboard for control and input.
7		Touchpad	Built-in pointing device for control and input.





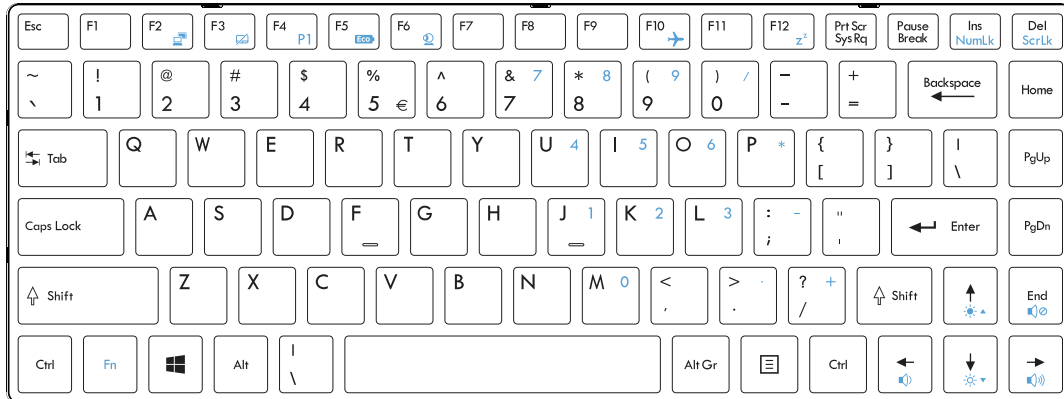























## Fn Key Combinations















With the combination of **Fn**  plus another specific key (with one printed blue symbol on it), you can quickly adjust hardware settings to suit your needs.




### NOTE







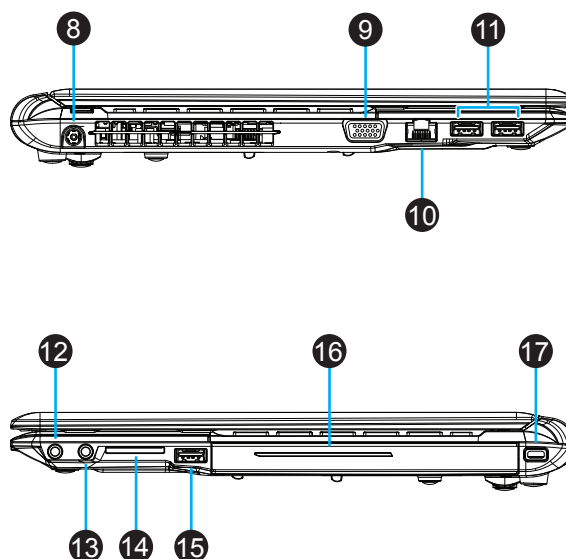

- To use an Fn key combination, press and hold **Fn**, and then press another key.

Combination	Description	Combination	Description
 + 	Use to switch the use of displays.	 + 	Use to enable / disable Num Lock mode. <b>Num Lock Mode:</b> switches specific keys to enter digits and symbols. See <b>table</b> below for details.
 + 	Use to enable / disable the touchpad.	 + 	Use to enable / disable Scroll Lock mode. <b>Scroll Lock Mode:</b> allows to scroll through the screen with arrow keys.
 + 	Use to define the custom action. This is not supported by your model.	 + 	Use to increase the brightness of the LCD display.
 + 	Use to enable / disable the ECO mode. <b>ECO Mode:</b> Screen Off mode	 + 	Use to decrease the brightness of the LCD display.
 + 	This combination is not supported by your model.	 + 	Use to decrease the volume of the built-in speakers.
 + 	Use to enable / disable the Flight mode. <b>Flight Mode:</b> disabled wireless module	 + 	Use to increase the volume of the built-in speakers.
 + 	Use to enter the System Sleep mode. Press the Power button or any key on the keyboard to exit.	 + 	Use to mute / unmute the sound.


Digits and Symbols in Num Lock Mode	Description
    	Use to type in the desired digit or symbol (blue one on the key).
    	<b>NOTE:</b> You must enable the Num Lock mode first.
    > . key" data-bbox="321 875 351 895"/>	<b>NOTE:</b> To customize Num Lock mode, please see "4.3.7 Adjusting Keyboard Settings" on page 82.

## Left and Right Side Components




No.	Sign	Component	Description
8		DC IN	Connects to an AC adapter.
9		VGA port	Connects to an external display.
10		LAN port	Connects to a network.
11		USB port	Connects to a USB device.
12		Headphone port	Connects to a set of headphones or a speaker system.
13		Microphone port	Connects to a microphone.
14		SD card slot (optional)	Connects to an SD card.
15		USB port	Connects to a USB device.
16		Smart card slot (optional)	Reads/Writes data from a smart card.
17		Kensington security slot	Connects a Kensington cable to secure the mobile thin client.

### Front Side Components

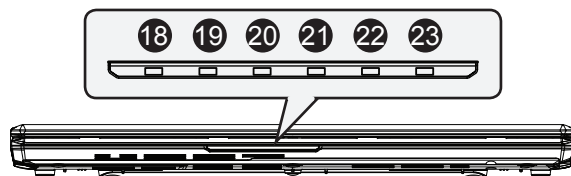

No.	Sign	Component	Description
18		Storage LED	Glow blue when eMMC (flash memory) is being accessed.
19		Bluetooth LED	Glow blue when Bluetooth is enabled (not supported).
20		Wi-Fi LED	Glow blue when Wi-Fi is enabled.
21		Battery LED	<ul style="list-style-type: none"> <li>Glow orange when the battery is being charged.</li> <li>Glow blue when the battery is fully charged.</li> <li>Blink orange when the battery is low.</li> </ul>
22		Caps Lock LED	Glow blue when Caps Lock is enabled.
23		Num Lock LED	Glow blue when Num Lock is enabled.

### Bottom Components

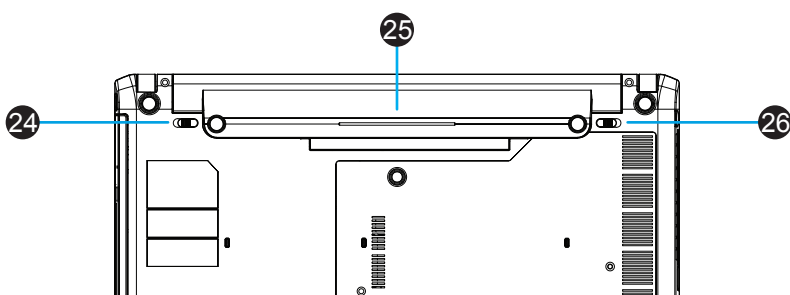

No.	Sign	Component	Description
24		Lithium-ion battery	Supplies the mobile thin client with the power when an external power source is not available.
25		Left battery latch	<p>Unlocks the battery by sliding and holding left.</p> <p><b>NOTE:</b> To remove the battery, use the right battery latch to unlock the battery, and then slide left and hold this latch to remove the battery.</p>
26		Right battery latch	<p>Locks / Unlocks the battery by sliding left / right.</p> <p><b>NOTE:</b> To remove the battery, use this latch to unlock the battery, and then slide left and hold the left battery latch to remove the battery.</p>

# 2

---

## Setting Up Your mt180L

This chapter provides detailed instructions on how to set up your mt180L mobile thin client.

### **2.1 About the AC Adapter**

Information on the use of the AC adapter 11

### **2.2 Charging Your Lithium-ion Battery**

How to charge your lithium-ion battery 11  
(Recommended for first time use)

### **2.3 Setting Up Your mt180L**

How to set up your mt180L 12





## 2.1 About the AC Adapter

To use the supplied AC adapter, please do the following:

1. Unpack your mt180L package, and then take out the AC adapter and its detached power cord.
2. Attach the power cord to the AC adapter to assemble your AC adapter.

## 2.2 Charging Your Lithium-ion Battery




### NOTE

- For the first time use, it's recommended to charge your Lithium-ion battery first.

To charge your lithium-ion battery, please do the following:

1. Slide the battery into the battery compartment until it clicks into place, and then *Slide left the right battery latch to lock the battery securely.*

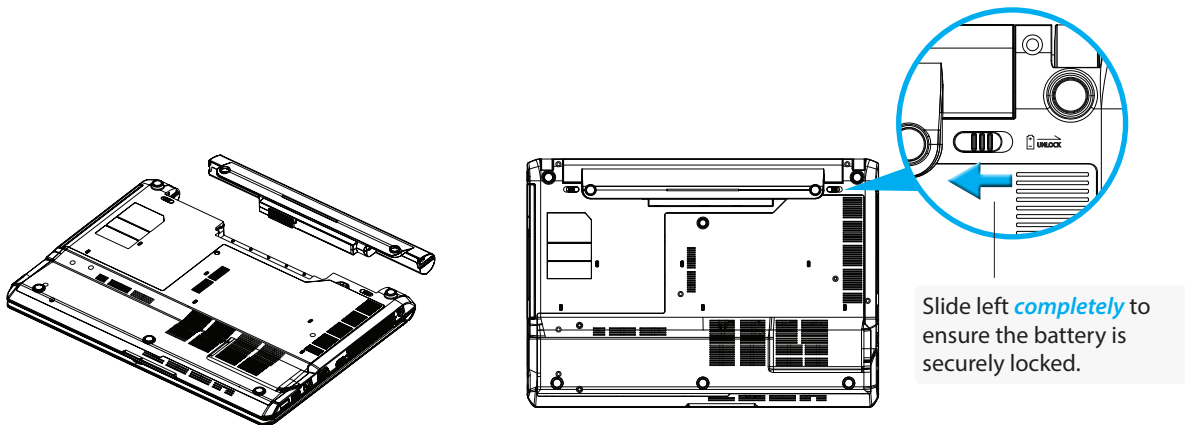


2. Attach the DC plug of the AC adapter to your mt180L, and then connect the AC plug of the adapter to a power outlet.
3. The Battery LED glows orange while the battery is being charged.
4. On completion, the Battery LED glows blue.

## 2.3 Setting Up Your mt180L

To set up your mt180L, please do the following:

1. Use the AC adapter or the Lithium-ion battery as the power source:
  - To use the AC adapter, attach its DC plug to your mt180L, and then connect its AC plug to a power outlet.
  - To use the Lithium-ion battery, slide it into the battery compartment until it clicks into place, and then *slide left the right battery latch to lock the battery securely.*

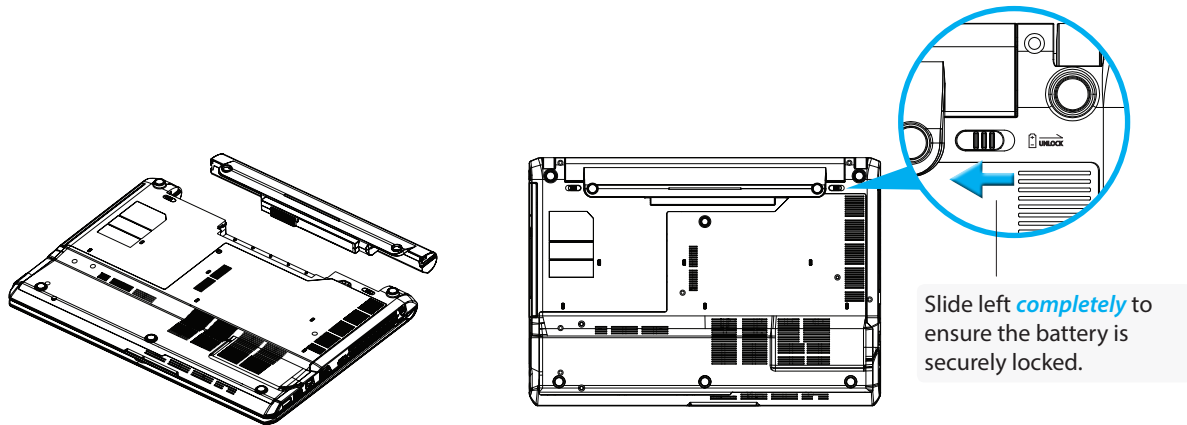

2. Connect the LAN port to your local network with an Ethernet cable or set up a wireless connection later (see ["Topic 2: Setting Up a Wireless Connection" on page 18](#))

# 3

---

## Getting Started

This chapter provides the basics of how to use your mt180L.

### 3.1 Learning the Basics

Topic 1: Atrust Quick Connection	16
Topic 2: Setting Up a Wireless Connection	18
Topic 3: Configuring the Time Zone	20
Topic 4: Accessing Desktops or Applications	21
Topic 5: Using Built-in Applications	35
Topic 6: Viewing and Managing the Use of Power	37



## 3.1 Learning the Basics

The following topics will guide you through the basics of using your mt180L:

**Topic 1:** Atrust Quick Connection

**Topic 2:** Setting Up a Wireless Connection

**Topic 3:** Configuring the Time Zone

**Topic 4:** Accessing Desktops or Applications

- Microsoft Remote Desktop Services (RDP sessions)
- Citrix Services (ICA sessions)
- VMware View or Horizon View Services (View sessions)

**Topic 5:** Using Built-in Applications

**Topic 6:** Viewing and Managing the Use of Power



### NOTE

- In case that **by default** your mt180L is Auto Setup enabled, its user environment might be different from here and will vary with preset configurations. See section 4.2.9 and appendix A.4, and consult your IT administrator for details.



### NOTE

- Three client modes are available for your mt180L:

No.	Mode	Description
1	Appliance	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
2	Autostart	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
3	Quick Connection	<p>The client will enter Atrust Quick Connection screen after system startup.</p>

- In Quick Connection mode, you can access Microsoft Remote Desktop / Citrix / VMware View or Horizon View services **quickly** without much client configuration required. The main purpose of this chapter is to guide you through the use of your mt180L under the Quick Connection mode. The **default** of your mt180L is **NOT** the Quick Connection mode (after restart it will enter the local Linux desktop rather than Atrust Quick Connection screen), but you can enter Atrust Quick Connection screen through its shortcut on the local desktop or START menu.
- To understand other modes, configure advanced settings, and customize your mt180L, please refer to chapter 4 "Configuring Client Settings" on page 39.


## Topic 1: Atrust Quick Connection


To start using your mt180L, please do the following:

1. Press the Power button to turn on the client. Wait a moment for the system to enter the local Linux desktop.

### Local Linux Desktop




2. Click **Atrust Quick Connection**  on the desktop to enter *Atrust Quick Connection screen*.

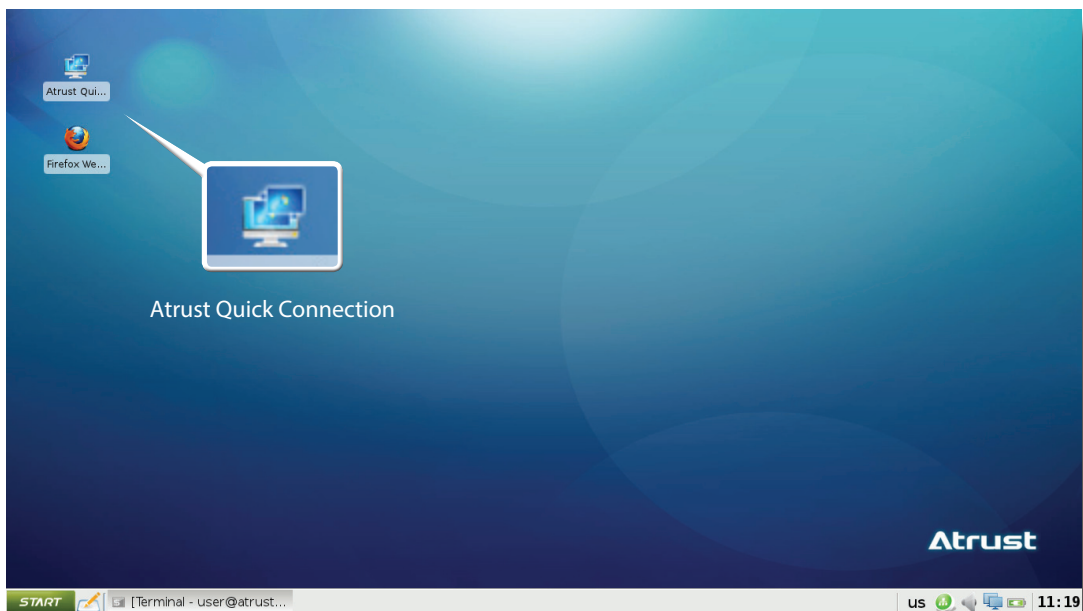

3. (a) Go to [Topic 2](#) to set up a wireless connection if needed.
- (b) Go to [Topic 3](#) to set the time zone for the *first time* use.
- (c) Go to [Topic 4](#) for service access if the time zone had been set.

### Atrust Quick Connection Screen




No.	Icon	Description
1	Power Off	Click to shut down, suspend, or restart the system.
2	Local Desktop	Click to return to the local Linux desktop.
3	Setup	Click to launch Atrust Client Setup.
4	Mixer	Click to configure audio settings.
5	Power	<p>Indicates the power source (adapter, battery, or both) and status. Click to launch Power Management for details.</p> <p><b>NOTE:</b> Power Management enables you to configure power-saving settings for your mt180L. You can choose appropriate options to suit your needs. See "<a href="#">Topic 6: Viewing and Managing the Use of Power</a>" on page 37 for details.</p> <p><b>NOTE:</b> When your mt180L enters <b>System Sleep mode</b> manually (<b>Fn + F12</b> or  &gt; <b>Suspend</b>) or automatically (configured in Atrust Client Setup through <b>System &gt; Power Management</b>), it still requires a certain amount of power. You can use <b>Shut down</b> option instead to save the power to a greater degree.</p> <p><b>NOTE:</b> When using only the battery as the power source, ensure that it has enough power to prevent data loss.</p>
6	Network	<p>Indicates the network type (wired or wireless) and status. Click to configure network settings.</p> <p><b>NOTE:</b> To set up a wireless connection, please see "<a href="#">Topic 2: Setting Up a Wireless Connection</a>" on page 18.</p>


## Topic 2: Setting Up a Wireless Connection

To set up a wireless connection, please do the following:


1. On Atrust Quick Connection screen, click the Network  icon. Atrust Client Setup is launched.

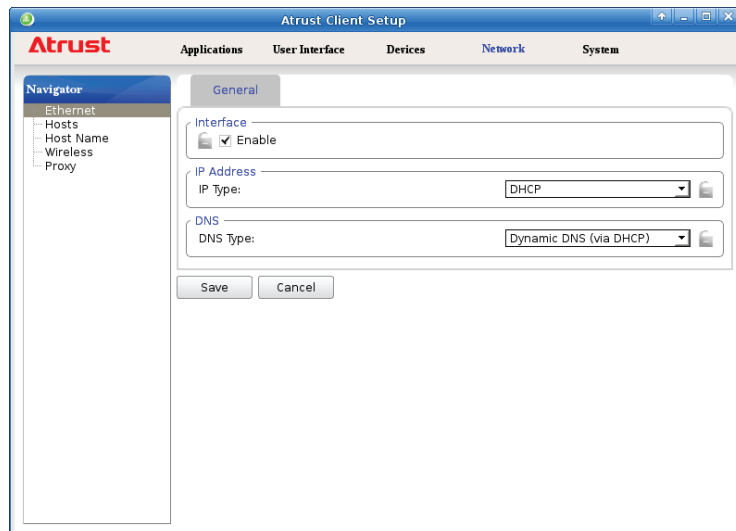

2. Click **Wireless**. The Wireless Network list will be shown under the Connections sub-tab.

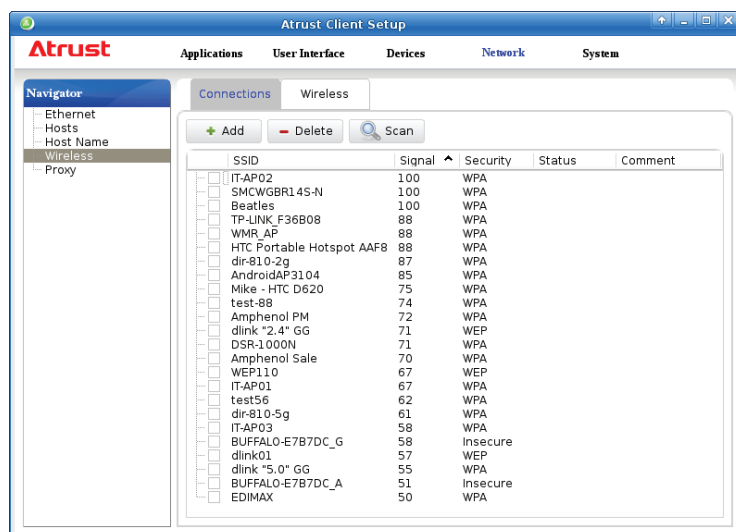


### NOTE

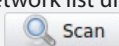- Your mt180L will perform network discovery *once* and specify all available wireless networks in the Wireless Network list under the Connections sub-tab. To refresh this Wireless Network list, click  on the top of the list.

3. Click to check the desired wireless network. The Connect button  then appears on the top of the Wireless Network list.



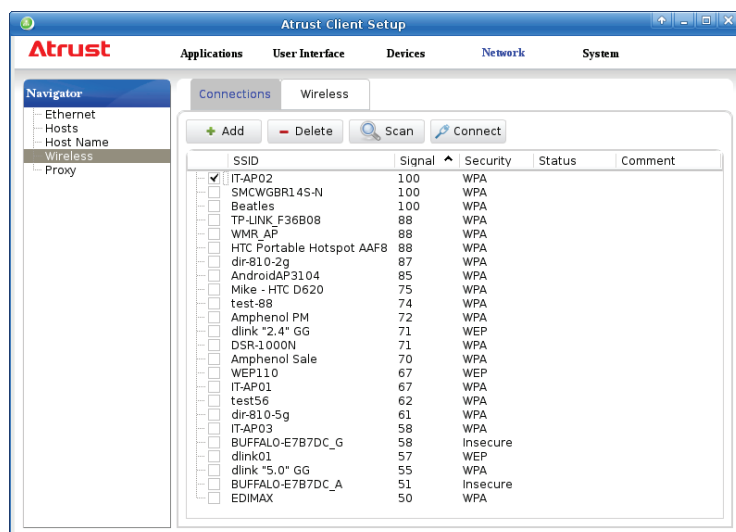


- Click to create a wireless network connection through the selected wireless network.
- A window appears prompting for confirmation or authentication.



#### NOTE

- If you ever accessed this wireless network before, the password will be automatically recorded for future access. In this case, you don't need to provide the password again; you only need to confirm the establishment of a wireless connection.
- Consult your network administrator for required information on authentication.


- Type in the required password, and then click **Connect** to continue. Or, click **OK** to confirm the establishment of a wireless connection.
- Upon completion, the Status column of the wireless network will show **connected**.

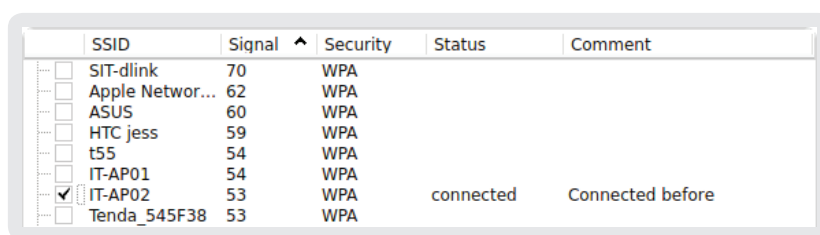


- Close Atrust Client Setup.

### Topic 3: Configuring the Time Zone

To set the time zone for your mt180L, please do the following:

1. Click the **Setup**  icon to launch Atrust Client Setup.


#### Atrust Client Setup

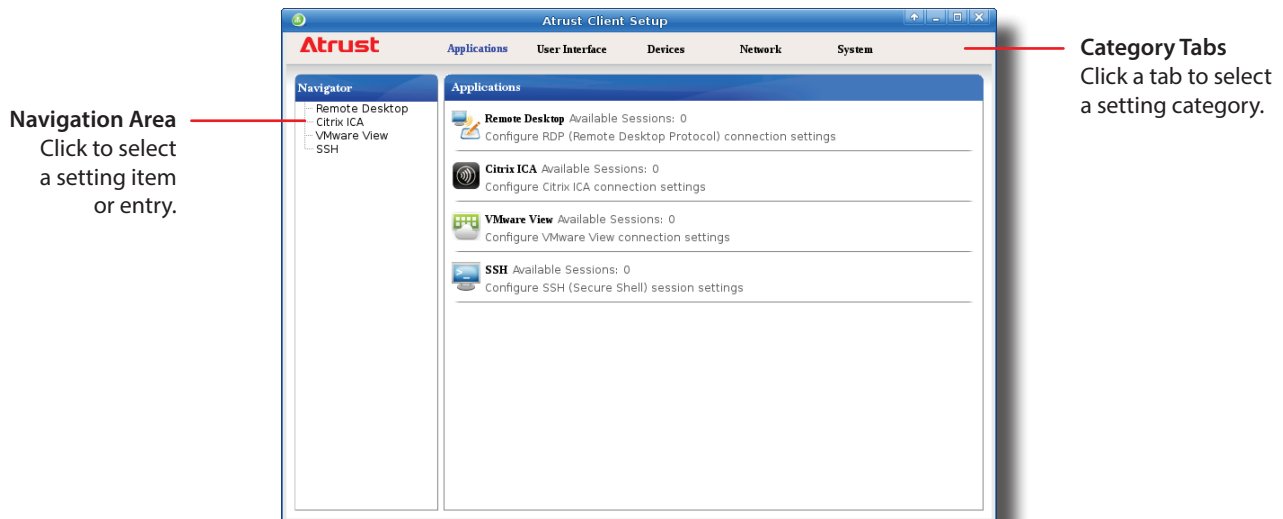

#### NOTE

- For detailed instructions on how to configure client settings and customize your mt180L with Atrust Client Setup, please refer to chapter 4 "Configuring Client Settings" on page 39.

2. On Atrust Client Setup, click **System** > **Time Zone**.

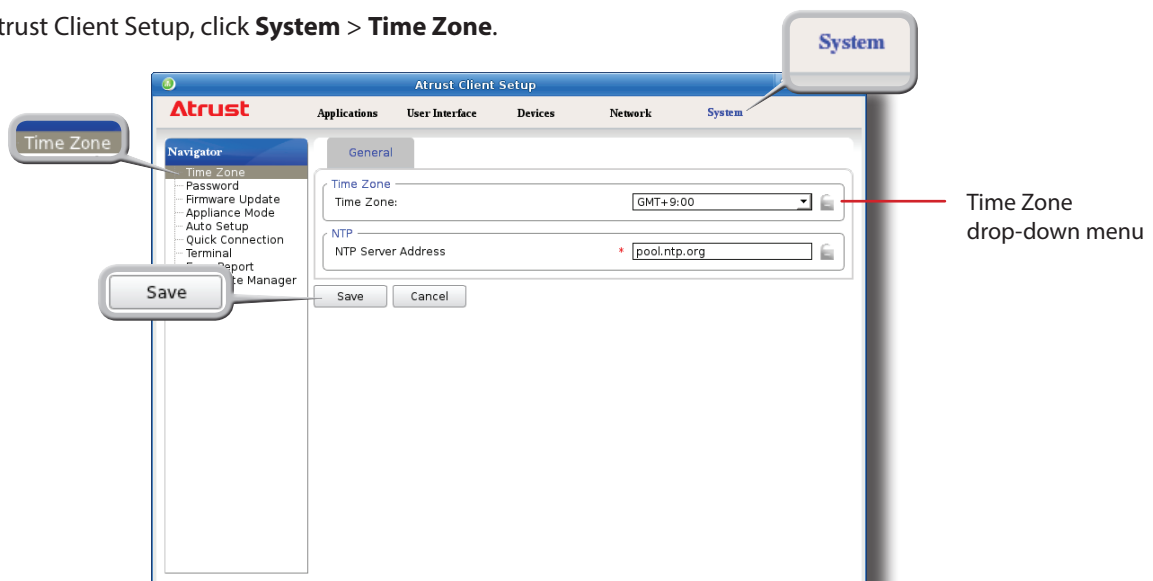

3. Click the Time Zone drop-down menu to select the desired time zone.
4. Click **Save** to apply, and then close Atrust Client Setup.

Topic 4: Accessing Desktops or Applications

Through Atrust Quick Connection screen, you can access three types of desktop virtualization services: **Remote Desktop**, **Citrix**, and **VMware View**.


Atrust Quick Connection Screen




Icon	Description	Page
Remote Desktop	Click to access Microsoft Remote Desktop services.	22
Citrix	Click to access Citrix XenApp, XenDesktop, or VDI-in-a-Box services.	23
VMware View	Click to access VMware View or Horizon View services.	32

## Accessing Microsoft Remote Desktop Services


To access Microsoft Remote Desktop services, please do the following:


1. Click  Remote Desktop on Atrust Quick Connection screen (see the screen in [Topic 4](#)).
2. On the appeared window, type in the computer name or IP address of the server, user name, password, and domain (if any), and then click **Connect**.

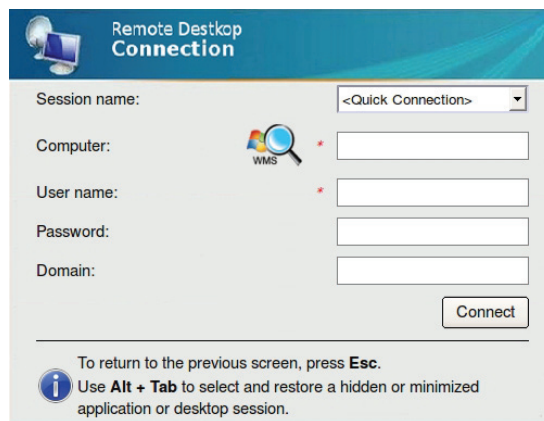

### NOTE

- To discover available Windows MultiPoint Server systems over your network, please do the following:

1. Click  on the left of the Computer field.
2. Upon completion, a window appears with the search result.

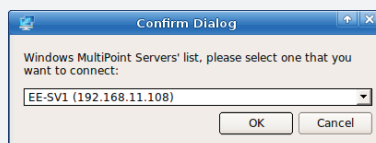


3. Click the drop-down menu to select the desired system, and then click **OK**.
  4. The IP address of the selected system will appear in the Computer field.
- To return to *Atrust Quick Connection screen* (see the screen in [Topic 4](#)), press **Esc**.

3. The remote desktop will be displayed on the screen.


## Accessing Citrix Services

### Connecting to the Server

To connect to the server through which Citrix services are accessible, please do the following:

1. Click  Citrix on Atrust Quick Connection screen (see the screen in [Topic 4](#)).
2. On the appeared **Atrust Citrix Connection screen**, enter the appropriate IP address / URL / FQDN of the server, and then click **Log On**.

### Atrust Citrix Connection Screen

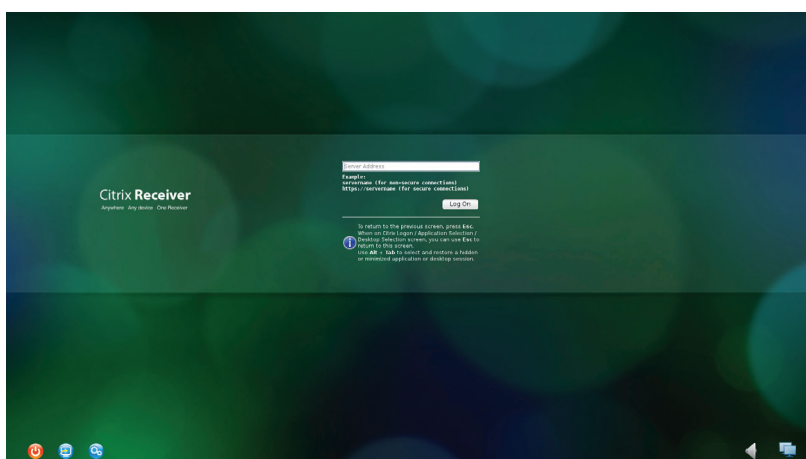

#### NOTE

- For newer versions of XenDesktop and XenApp, you may need to further specify the sub-path of the server. Refer to the following table for details:

Citrix Product	Component to Connect	Connection Address
XenApp 6.5 or earlier	Web Interface	IP / URL / FQDN
XenDesktop 5.6 or earlier	Web Interface	IP / URL / FQDN
XenApp and XenDesktop 7.5	StoreFront	IP / URL / FQDN <b>plus sub-path</b>
		<b>For example —</b> <b>FQDN:</b> X75.CTX.poc <b>Sub-path:</b> /Citrix/StoreWeb (default) <b>Connection Address:</b> X75.CTX.poc/Citrix/StoreWeb

- FQDN is the acronym of Fully Qualified Domain Name.
- To return to **Atrust Quick Connection screen** (see the screen in [Topic 4](#)), press **Esc**.

### Logging On to Citrix Services

When connected to the server, the **Citrix Logon screen** appears. The appeared screen and required credentials for Citrix services may vary with the service type and version.



#### NOTE


- A warning message “This Connection is Untrusted” might appear. Consult the IT administrator for details and ensure the connection is secure **first**. To import a security certificate, please refer to section “4.2.16 Importing Certificates for Remote Computers” on page 69. To bypass, click **I Understand the Risks > Add Exception > Confirm Security Exception**.

The following are some examples of Citrix Logon screens.

#### XenDesktop 5.6 Platinum:

##### Citrix Logon Screen

Type the required user name, password, and then click **Log On** to access virtual desktops.

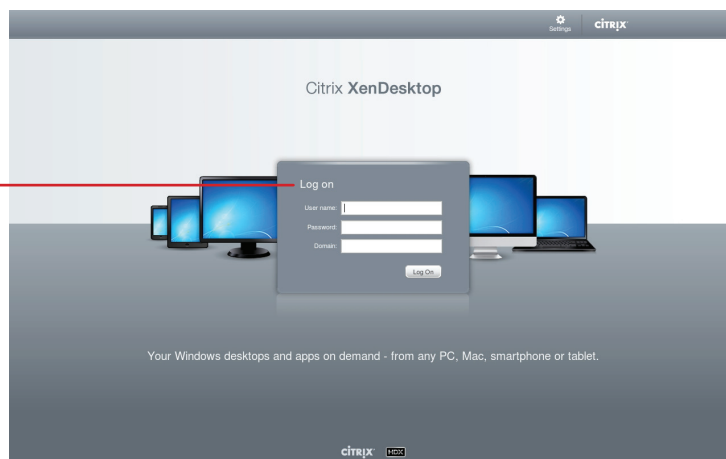


#### NOTE

- To return to Atrust Quick Connection screen, press **Esc**.

## XenApp 6.0 Fundamentals:

### Citrix Logon Screen

Type the required user name, password, domain, and then click **Log On** to access virtual applications.

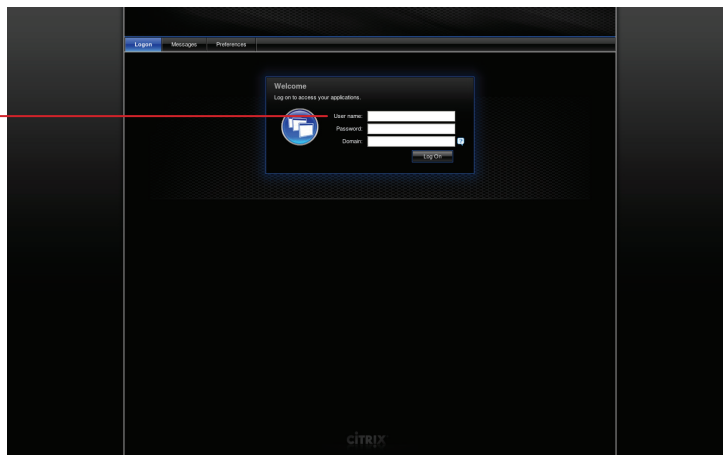


#### NOTE

- To return to Atrust Quick Connection screen, press **Esc**.
- If your XenApp server doesn't belong to any domain, type the computer name of the server in the Domain field.

## XenApp 6.5 Platinum:

### Citrix Logon Screen

Type the required user name, password, domain, and then click **Log On** to access virtual applications.

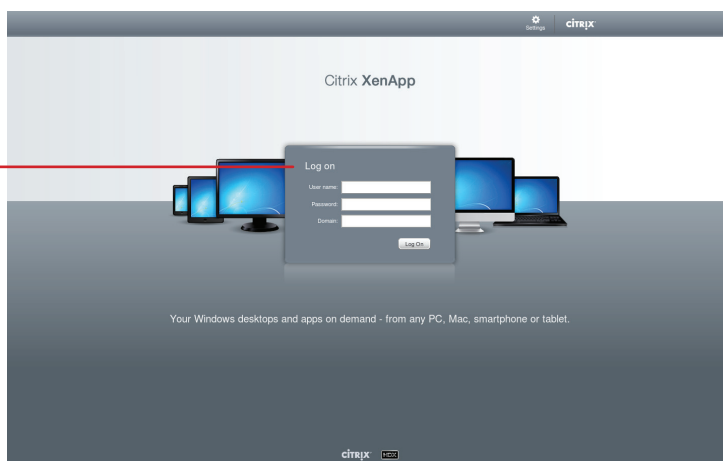


#### NOTE

- To return to Atrust Quick Connection screen, press **Esc**.
- If your XenApp server doesn't belong to any domain, type the computer name of the server in the Domain field.

**VDI-in-a-Box:**

**Citrix Logon Screen**

Type the required user name, password, and then click **Log On** to access virtual desktops.

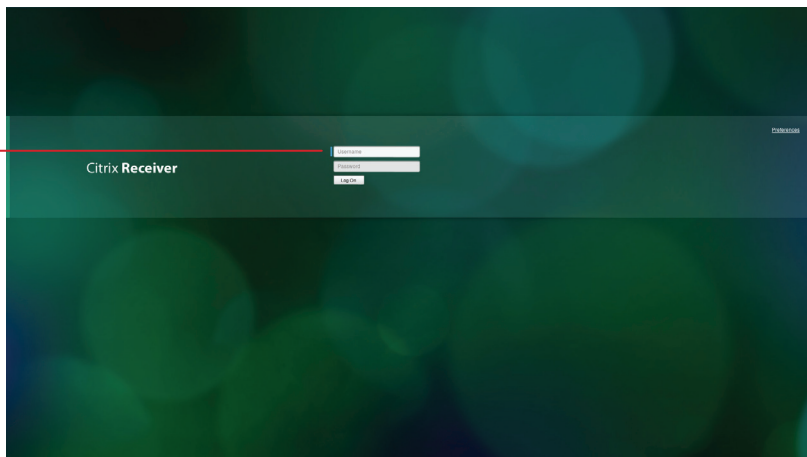


**NOTE**

- To return to Atrust Quick Connection screen, press **Esc**.

**XenApp and XenDesktop 7.5 Platinum:**

**Citrix Logon Screen**

Type the required user name, password, and then click **Log On** to access virtual desktops.

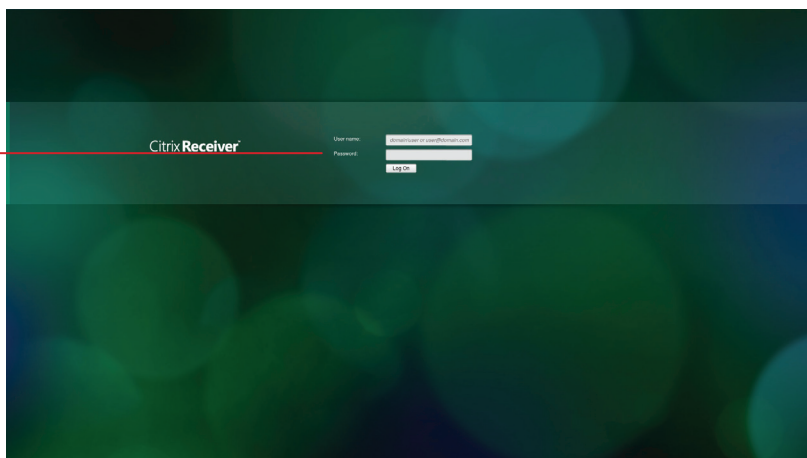

**NOTE**

- To return to Atrust Quick Connection screen, press **Esc**.



### Accessing Virtual Desktops and Applications

You will enter the **Desktop Selection** or **Application Selection screen** after login. On the screen you can click to select the desired desktop or application(s).



#### NOTE

- You might enter the virtual desktop directly if only one type of virtual desktop is assigned to the provided credentials.



#### TIP


- Use **Alt + Tab** to select and restore a hidden or minimized application or desktop.

The following are some examples of Selection screens and delivered desktops and applications.

#### XenDesktop 5.6 Platinum:


1. The **Desktop Selection screen** appears after login.

#### Desktop Selection Screen

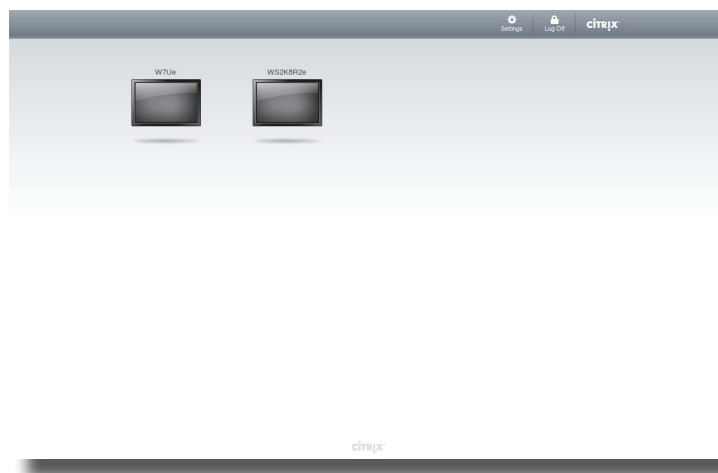

2. Click to select the desired desktop.
3. The selected virtual desktop will be displayed on the screen.


## Virtual Desktop Example: Windows 7 Ultimate

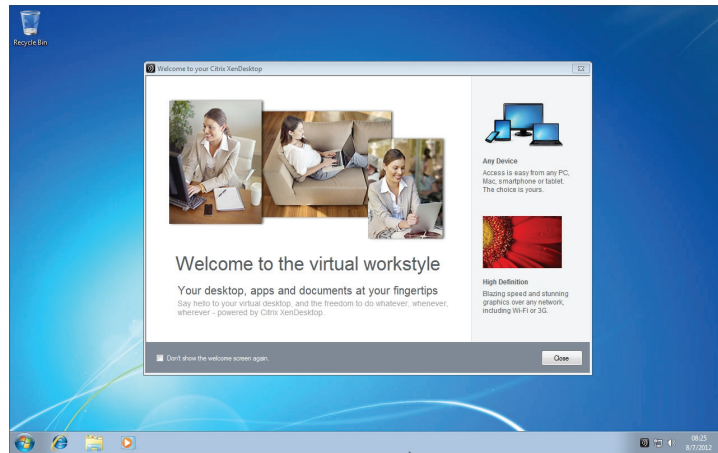

### XenApp 6.5 Platinum:

1. The *Application Selection screen* appears after login.


## Application Selection Screen

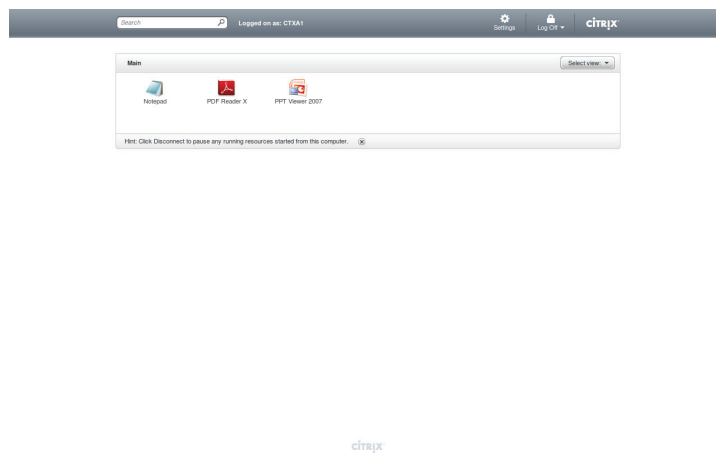

2. Click to select the desired application(s).
3. The selected application(s) will be displayed on the screen.

## Virtual Application Examples

PowerPoint Viewer, Adobe Reader, and Notepad

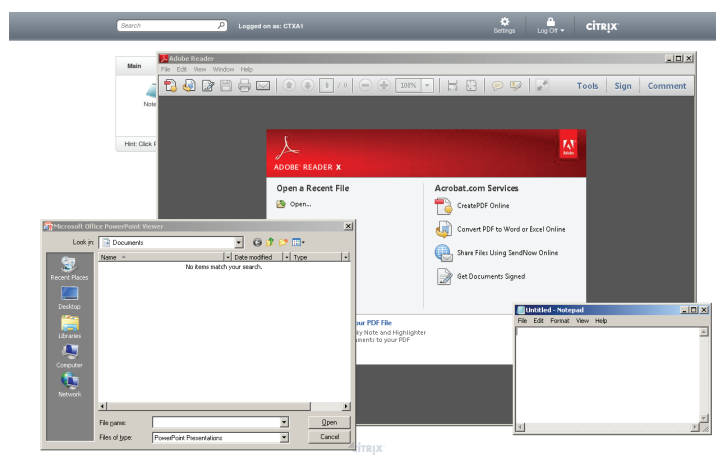


### NOTE

- Clicking on Application Selection screen will bring the screen to the front and leave all launched application windows hidden behind. Use **Alt + Tab** to select and restore a hidden or minimized application window.
- Exiting a virtual desktop or application will return to the **Desktop Selection** or **Application Selection screen**. On the screen, you can:
  - Click to launch another virtual desktop if any or to launch other applications.
  - Click **Log Off** on the top of the screen to return to the **Citrix Logon screen**.
  - Press **Esc** to return to **Atrust Quick Connection screen** directly.

### XenApp and XenDesktop 7.5 Platinum:

- The **Application Selection / Desktop Selection screen** appears after logon.

### Application Selection Screen

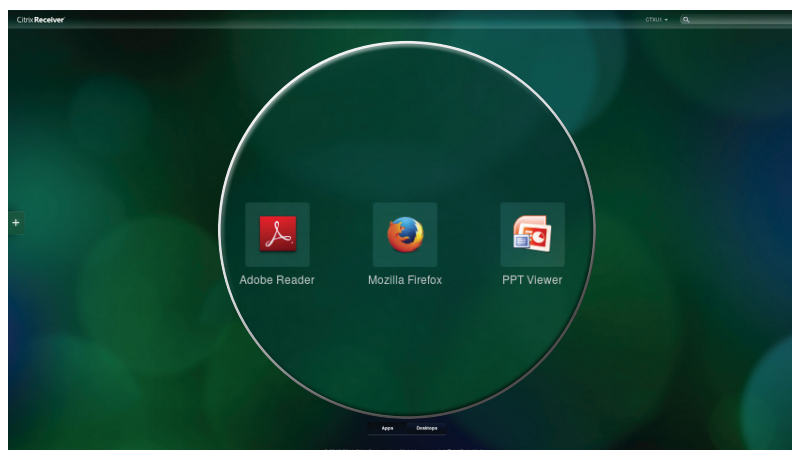


You might see this screen when you log in to XenApp 7.5 for first time. Just click to add your favorite apps from a list.




Two buttons may be available for your to switch between **Application** and **Desktop Selection screen**, depending on your server-side deployment.

### Desktop Selection Screen

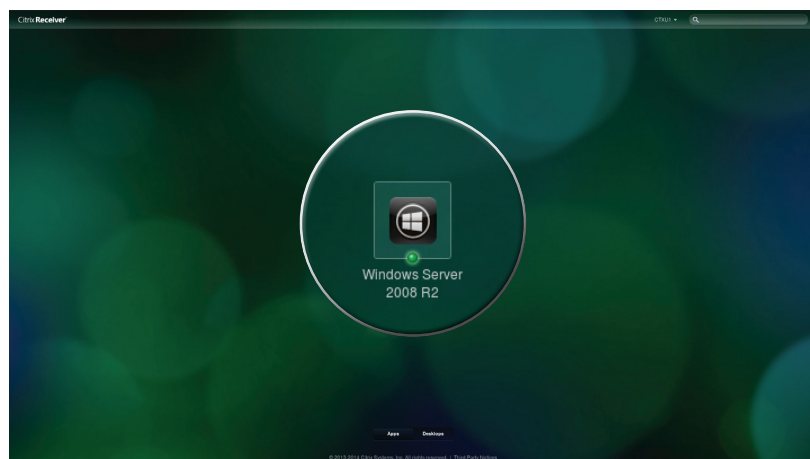


2. Click to select the desired application(s) or desktop.
3. The selected application(s) or desktop will be displayed on the screen.

## Virtual Desktop Example: Windows Server 2008 R2

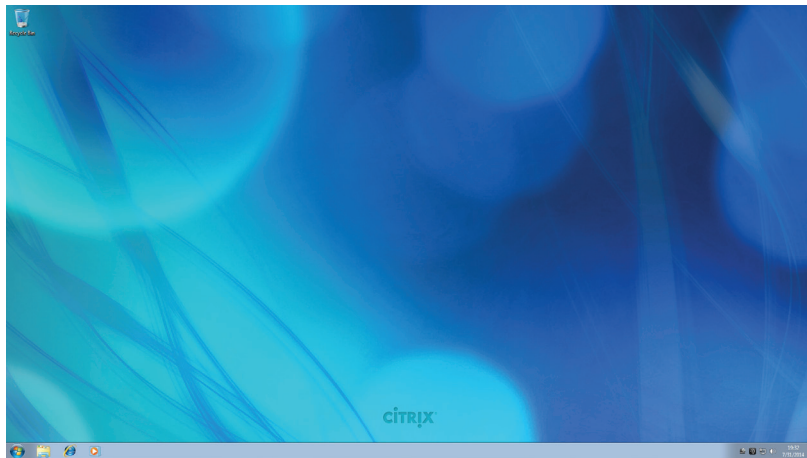

## Virtual Application Examples Adobe Reader, Mozilla Firefox, and PowerPoint Viewer

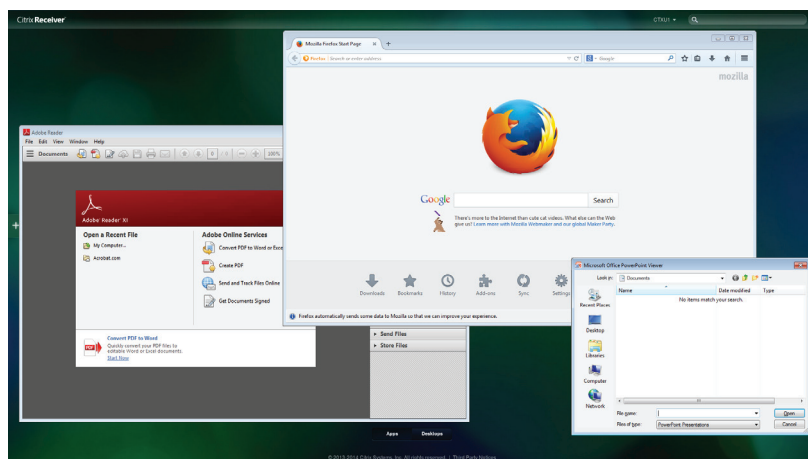


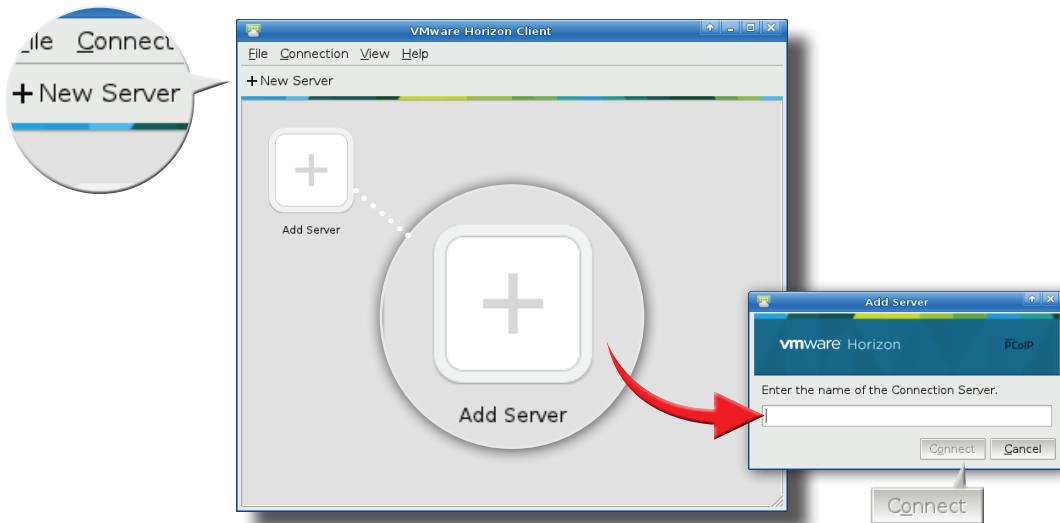
### NOTE

- Clicking on Application Selection screen will bring the screen to the front and leave all launched application windows hidden behind. Use **Alt + Tab** to select and restore a hidden or minimized application window.
- Exiting a virtual desktop or application will return to the **Desktop Selection** or **Application Selection screen**. On the screen, you can:
  - ✧ Click to launch another virtual desktop if any or to launch other applications.
  - ✧ Click **Log Off** on the top of the screen to return to the **Citrix Logon screen**.
  - ✧ Press **Esc** to return to **Atrust Quick Connection screen** directly.

## Accessing VMware View or Horizon View Services

To access VMware View or Horizon View services, please do the following:


1. Click  on Atrust Quick Connection screen (see the screen in [Topic 4](#)).
2. On the opened window, double-click **Add Server** icon or click **New Server** in the top-left corner. A window appears prompting for the name or IP address of the VMware View Connection Server.
3. Enter the required information, and then click **Connect**.



### NOTE

- To return to *Atrust Quick Connection screen* (see the screen in [Topic 4](#)), close the opened window.


4. A Welcome window might appear, click **OK** to continue.
5. A window appears prompting for the credentials. Enter your user name, password, click the Domain drop-down menu to select the domain, and then click **OK**.

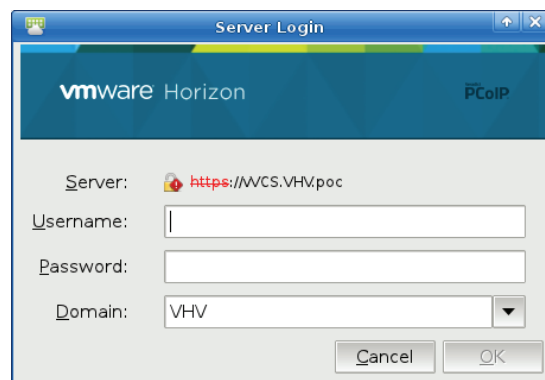


**NOTE**

- A window might appear with a certificate message about the remote server. Consult the IT administrator for details and ensure the connection is secure **first**. To import a security certificate, please refer to section “4.2.16 Importing Certificates for Remote Computers” on page 69. To bypass, click **Connect Insecurely**.


6. The Desktop and Application list appears with available desktops and/or applications for the provided credentials. Double click to select the desired desktop or application.

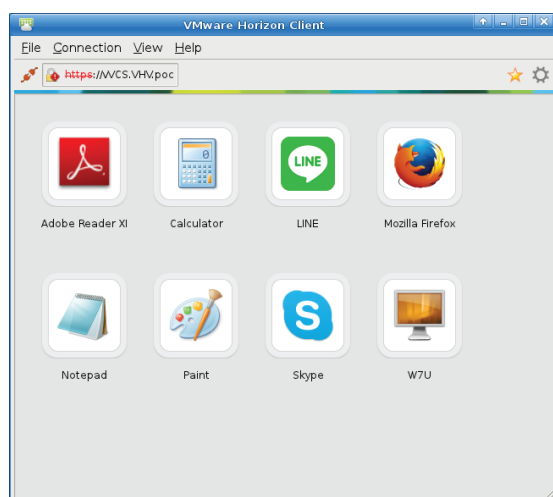

7. The virtual desktop or application will be displayed on the screen.

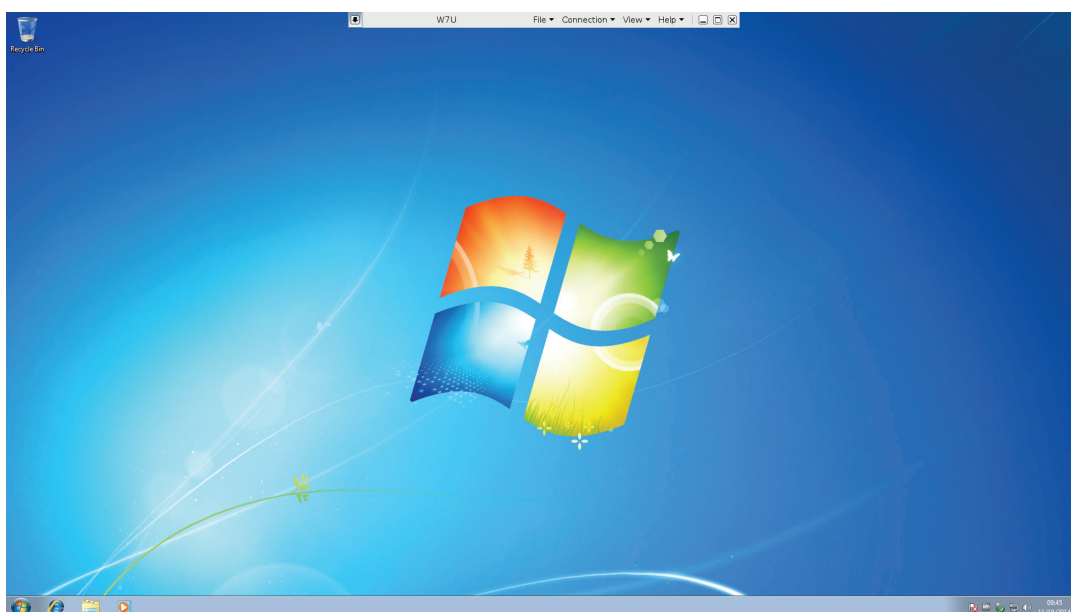
**Virtual Desktop Example**  
Windows 7 Ultimate

## Virtual Application Examples (VMware Horizon 6 with View) LINE, Adobe Reader, Mozilla Firefox, and Calculator

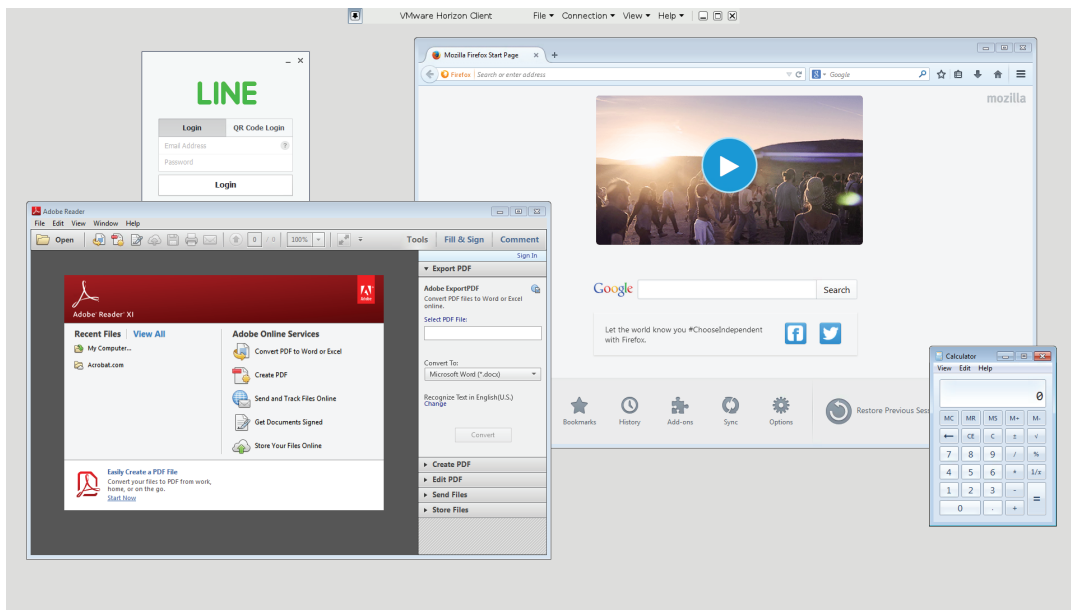


### NOTE

- Your desktop or application will be displayed in full screen. You can:
  - Click **File > Return to Desktop and Application List** on the top tool bar to recall the Desktop and Application list.

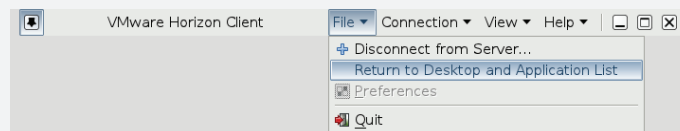

- Click **View** on the top tool bar to switch to a virtual desktop or application.

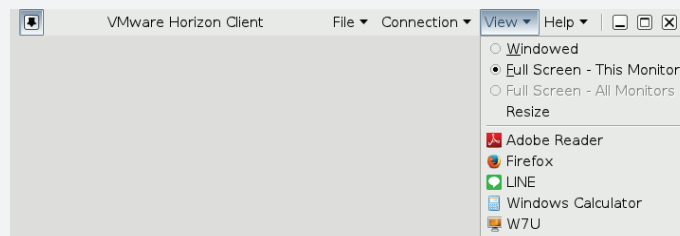



## Topic 5: Using Built-in Applications


To use built-in applications (Web browser, PDF viewer, LibreOffice, etc), please do the following:




### NOTE

- The access shortcuts for built-in applications may be hidden by default. You need to enable the display of those shortcuts on the desktop and START menu *first*.

1. Enable the display of application shortcuts on the local desktop and START menu.
  - 1) On the local desktop, click **START** > **Settings** > **Atrust Client Setup** to launch Atrust Client Setup.
  - 2) On Atrust Client Setup, click **User Interface** > **Desktop**.

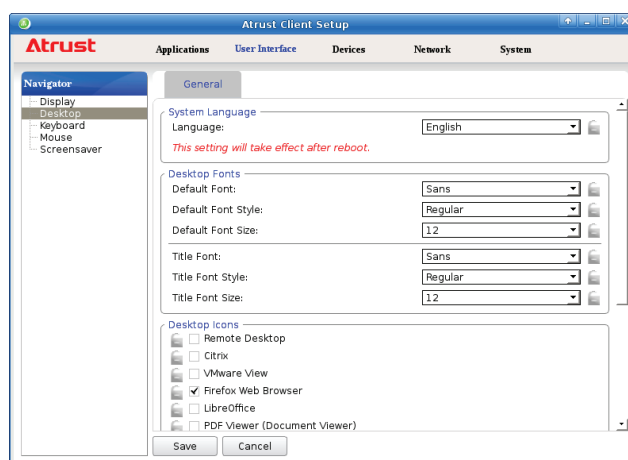

- 3) Click to check **LibreOffice** and **PDF Viewer**, and then click **Save** to apply.

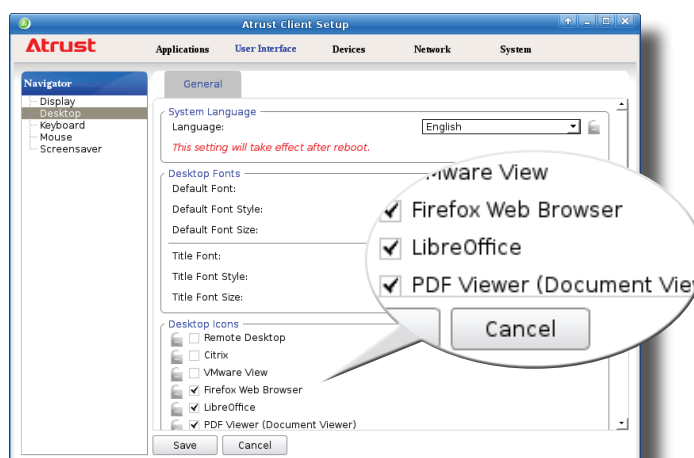

- 4) Close Atrust Client Setup.


2. The shortcuts appear on the local desktop and START menu.




3. Click shortcuts on the desktop or START menu to launch applications.


## Topic 6: Viewing and Managing the Use of Power

To view and manage the use of power for your mt180L, please do the following:

1. On Atrust Quick Connection screen or on the local Linux desktop, click the **Power**  icon in the bottom-right corner to launch Power Management. Here you can view the use and settings of power.

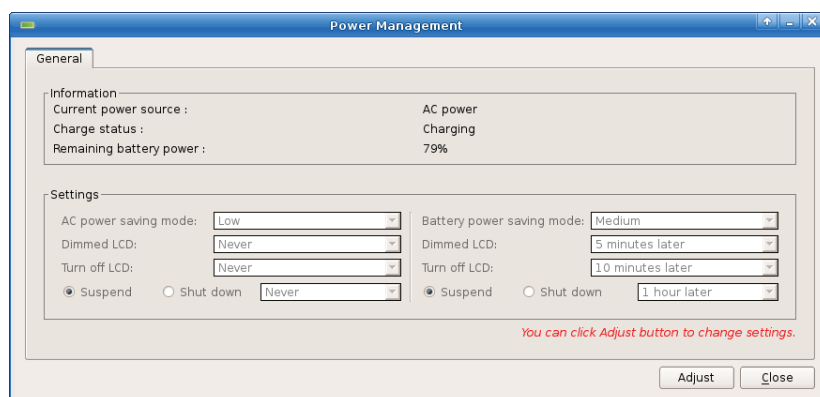


2. If needed, click **Adjust** to launch Atrust Client Setup to configure the settings of power.

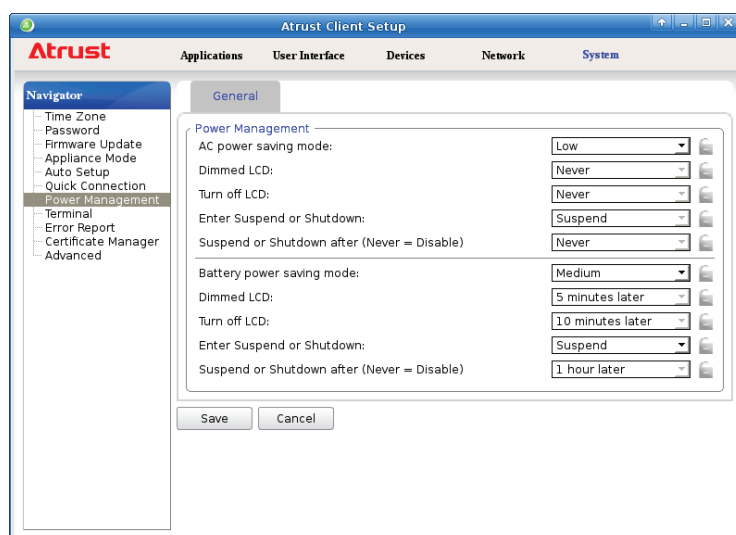

3. Choose the desired power-saving mode for your AC power and battery, or choose **Custom** to customize individual settings, and then click **Save** to apply.



### NOTE

- When your mt180L enters **System Sleep mode** manually (**Fn + F12** or  > **Suspend**) or automatically (configured in Atrust Client Setup through **System** > **Power Management**), it still requires a certain amount of power. You can use **Shut down** option instead to save the power to a greater degree.



### WARNING

- When using only the battery as the power source, ensure that it has enough power to prevent data loss.



# 4

---

## Configuring Client Settings

This chapter provides instructions on how to configure advanced settings and customize your mt180L with Atrust Client Setup.

<b>4.1 Atrust Client Setup</b>	
Interface overview	41
Available settings at glance	42
<b>4.2 Configuring System Settings</b>	
System tab overview	43
Available settings at a glance	44
<b>4.3 Configuring User Interface Settings</b>	
User Interface tab overview	74
Available settings at a glance	75
<b>4.4 Configuring External Device Settings</b>	
Devices tab overview	86
Available settings at a glance	87
<b>4.5 Configuring Network Settings</b>	
Network tab overview	95
Available settings at a glance	96
<b>4.6 Configuring Service Access Settings</b>	
Applications tab overview	118
Available settings at a glance	119




## 4.1 Atrust Client Setup


Your mt180L comes with Atrust Client Setup, the built-in local client management console to help you configure client settings and customize your mt180L.

### 4.1.1 Interface Overview

To access Atrust Client Setup on your mt180L, please do the following:

1. On Atrust Quick Connection screen, click the **Setup**  icon to launch Atrust Client Setup.
2. The Atrust Client Setup window appears.

#### Interface Overview

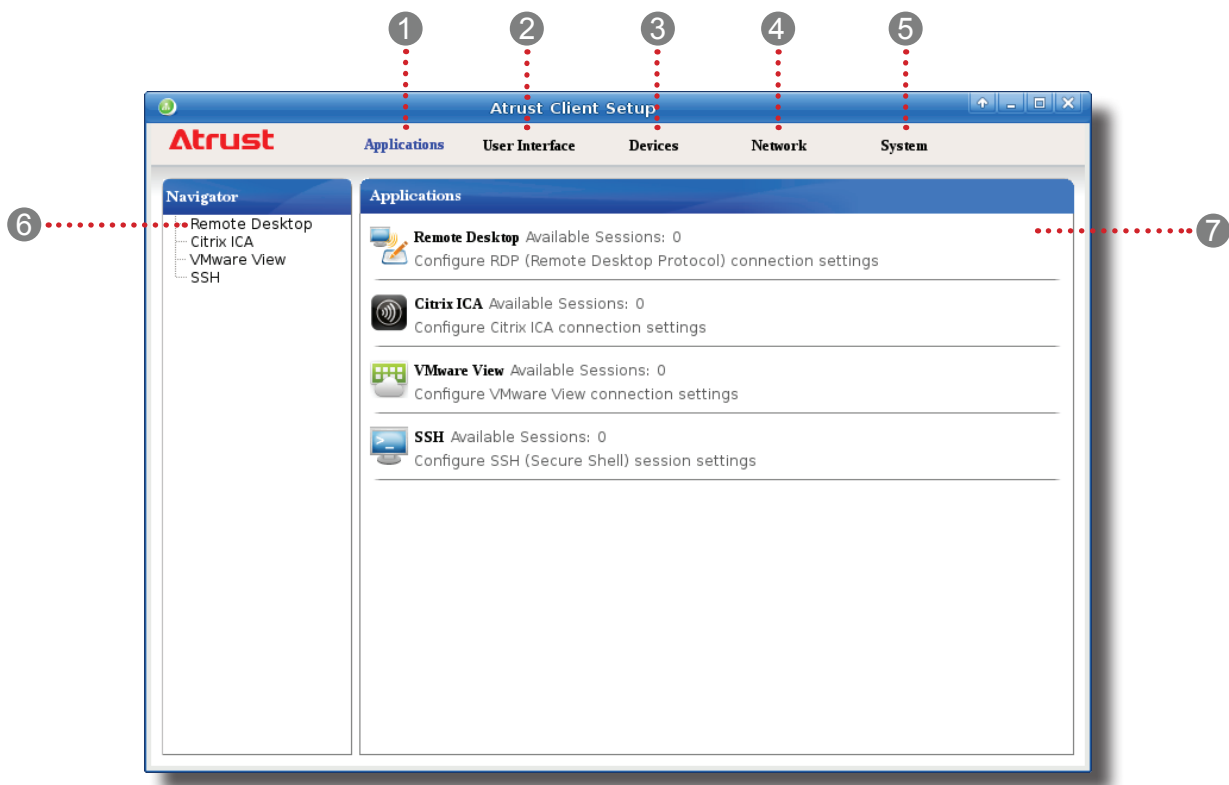

#### Interface Elements

No.	Name	Description
1	Applications tab	Click to configure settings for service access through the client.
2	User Interface tab	Click to configure settings for the user interface of the client.
3	Devices tab	Click to configure settings for external devices of the client.
4	Network tab	Click to configure settings for the connectivity of the client to networks and servers.
5	System tab	Click to configure settings for the operation and maintenance of the client.
6	Navigation area	Click to select a setting item under a selected tab or to select a setting entry under a selected setting item.
7	Configuration area	Configures setting values when a setting item or entry is selected.

### 4.1.2 Client Settings at a Glance

The following table provides a brief description of each setting item under five main setting categories.

Tab	Setting Item	Section	Page
System	<ul style="list-style-type: none"> <li>• Configuring time zone and time server</li> <li>• Configuring passwords</li> <li>• Configuring remote assistance settings</li> <li>• Updating firmware</li> <li>• Enabling/Disabling the Appliance mode</li> <li>• Enabling Auto Setup</li> <li>• Configuring Quick Connection</li> <li>• Managing the use of power</li> <li>• Enabling/Disabling the execution of the text-based (command-line) functions</li> <li>• Collecting event logs, capturing related screens, and upload files for error reporting</li> <li>• Importing certificates for remote computers</li> <li>• Enabling/Disabling Auto Registration</li> </ul>	4.2 Configuring System Settings	43
User Interface	<ul style="list-style-type: none"> <li>• Configuring display settings</li> <li>• Customizing desktop and system language</li> <li>• Hiding/Showing Quick Access shortcuts</li> <li>• Using a custom wallpaper</li> <li>• Adjusting keyboard settings</li> <li>• Adjusting mouse settings</li> <li>• Configuring screensaver settings</li> </ul>	4.3 Configuring User Interface Settings	74
Devices	<ul style="list-style-type: none"> <li>• Configuring settings for USB storage devices</li> <li>• Configuring settings for audio devices</li> <li>• Configuring settings for local/network printers</li> </ul>	4.4 Configuring External Device Settings	86
Network	<ul style="list-style-type: none"> <li>• Configuring wired network settings</li> <li>• Configuring VPN settings</li> <li>• Creating the mapping of IP addresses to the names or aliases of hosts</li> <li>• Creating the Failover Cluster list</li> <li>• Changing the host name of your client</li> <li>• Configuring wireless network settings</li> <li>• Configuring proxy settings for Web-based access to services</li> </ul>	4.5 Configuring Network Settings	95
Applications	<ul style="list-style-type: none"> <li>• Configuring Microsoft RDP connection settings</li> <li>• Configuring Citrix ICA connection settings</li> <li>• Configuring VMware View connection settings</li> <li>• Configuring SSH connection settings</li> </ul>	4.6 Configuring Service Access Settings	118




## 4.2 Configuring System Settings

### 4.2.1 System Tab Overview

**System** tab enables you to configure settings for the operation and maintenance of clients. To access available settings of **System** tab, click the tab on Atrust Client Setup.

System Tab Overview

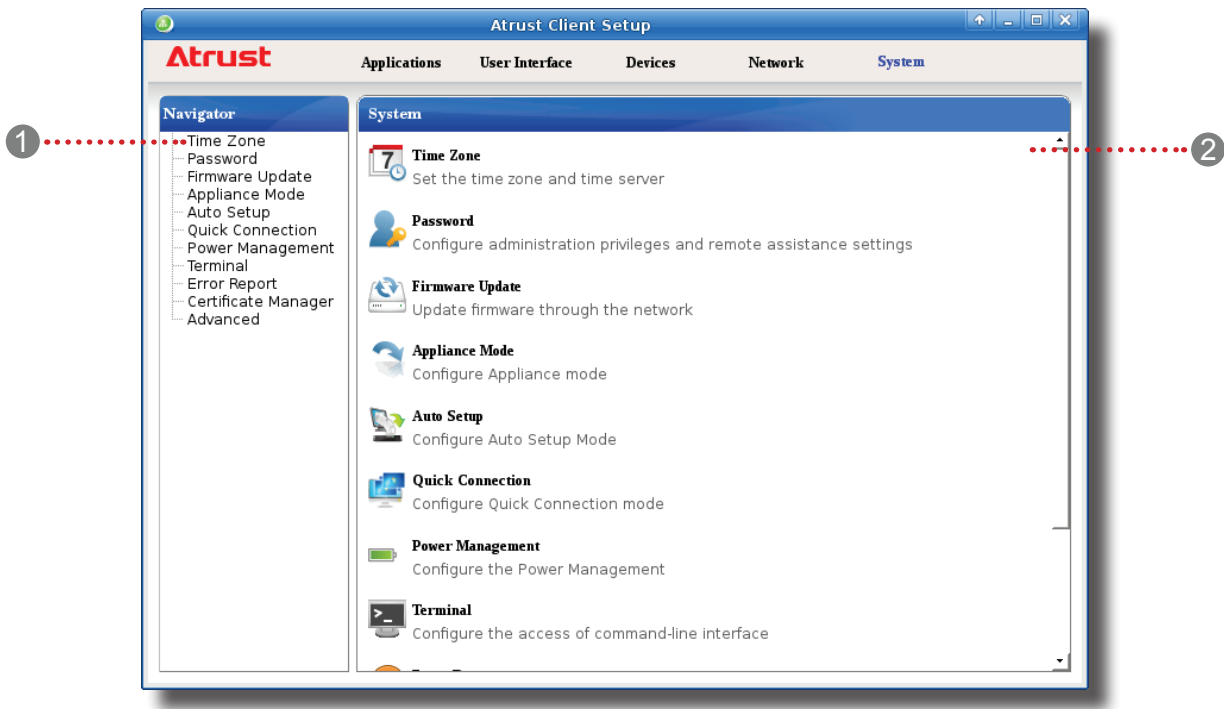

Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>System</b> tab.
2	Configuration area	Configures setting values when a setting item or entry is selected.

## 4.2.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
System	Time Zone		Click to configure the time zone and time server for your mt180L.	4.2.3	45
	Password		Click to configure the access privileges of Atrust Client Setup for mt180L users.	4.2.4	46
			Click to set the login password for the local desktop.	4.2.5	48
			Click to configure settings for remote assistance.	4.2.6	50
	Firmware Update		Click to update firmware through the network. This feature is applicable to the client only when the client is managed by the remote Atrust Device Manager console.	4.2.7	52
	Appliance Mode		Click to enable/disable the Appliance mode to allow/disallow the automatic RDP / ICA / View sessions. In Appliance mode, the client starts up directly with the desired RDP / ICA / View session and performs the configured action after exiting the session.	4.2.8	54
	Auto Setup		Click to enable Auto Setup to allow the client to get its preset configurations on startup and enter the desired user environment automatically.	4.2.9	58
	Quick Connection		Click to configure the Quick Connection mode.	4.2.10 4.2.11	58 60
	Power Management		Click to manage the use of power.	4.2.12	64
	Terminal		Click to enable/disable the execution of the text-based (command-line) functions.	4.2.13	65
	Error Report		Click to collect error log and launch the screen capturing program for error reporting.	4.2.14	66
			Click to upload files to a specified FTP server for error reporting.	4.2.15	68
	Certificate Manager		Click to import or manage certificates for remote computers.	4.2.16	69
	Advanced		Click to configure advanced settings such as Auto Registration.	4.2.17	73



### NOTE


- Atrust Device Manager is a remote and mass client management console, helping you remotely manage a large number of endpoint devices in a desktop virtualization infrastructure. For more information about Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

### 4.2.3 Configuring Time Zone and Time Server

The Time Zone setting allows you to configure the desired time zone and time server to get the accurate system time for your mt180L.

To set the desired time zone and time server, please do the following:

1. On Atrust Client Setup, click **System** > **Time Zone**.

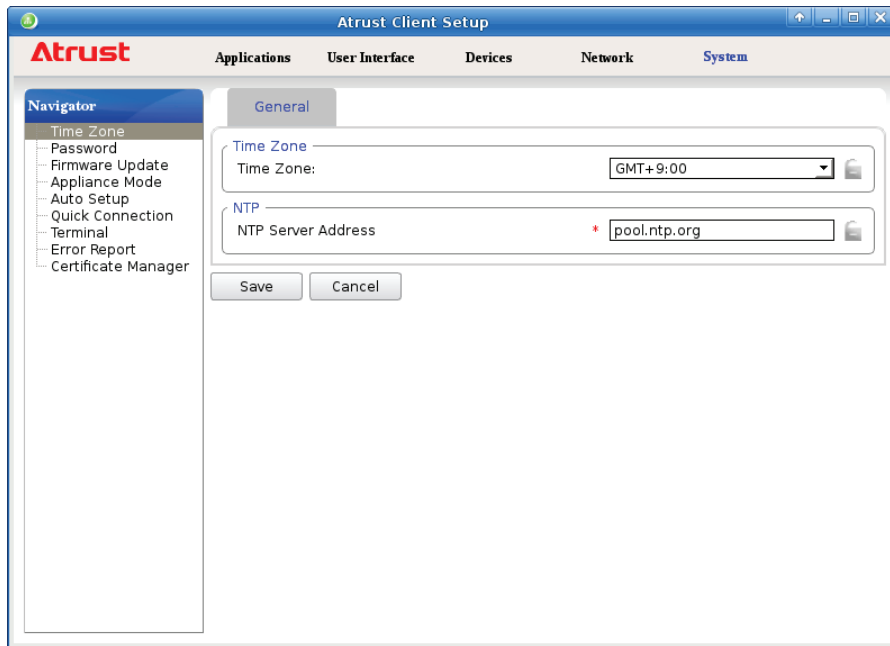

2. Under the Time Zone section, click the drop-down menu to select the desired time zone.
3. Under the NTP (Network Time Protocol) section, use the default or type in the desired time server.



#### NOTE

- The IP address of the default time server is **pool.ntp.org**. For more information on the default, please refer to the website for the NTP Pool Project at [www.pool.ntp.org](http://www.pool.ntp.org).
- Ensure the connectivity of your mt180L to the network or Internet in order to get accurate time from the time server.

4. Click **Save** to apply.

#### 4.2.4 Configuring the Access Privileges and Passwords of Atrust Client Setup

You can configure the access privileges of Atrust Client Setup for mt180L users by the Password setting.




##### NOTE

- All mt180L users are allowed to access Atrust Client Setup by factory default. You can make changes as desired using this setting.


#### Setting Access Privileges and Password Only for Administrators

To set access privileges and password only for administrators, please do the following:

1. On Atrust Client Setup, click **System** > **Password**.

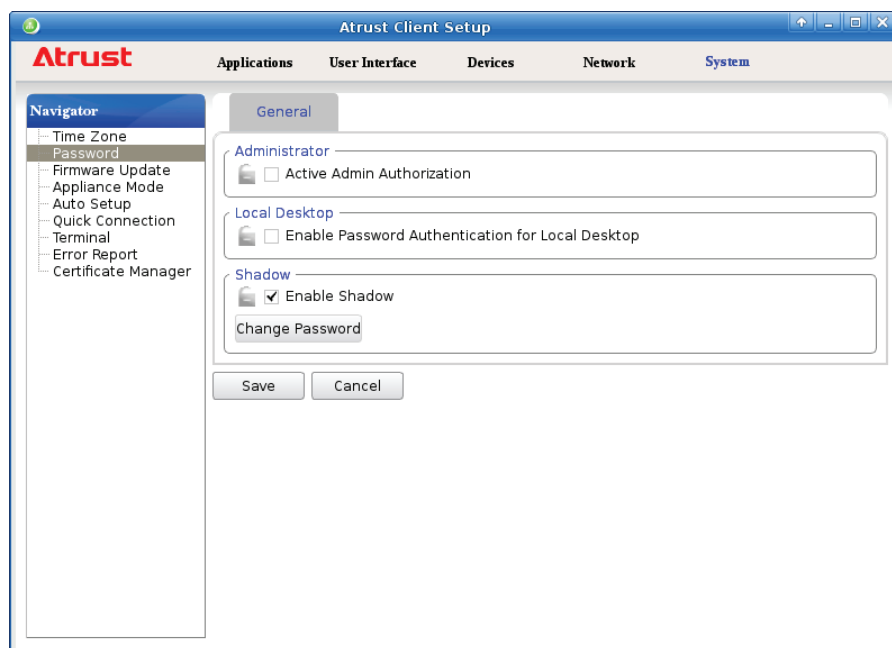

2. Under the Administrator section, click to check **Active Admin Authorization**.
3. The access privileges for administrators are granted and a window appears for you to set the password.

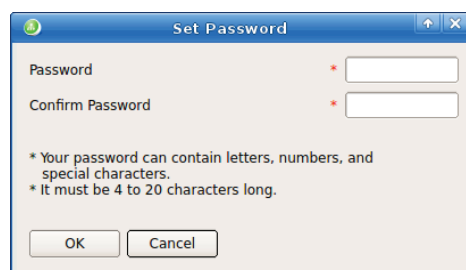


4. Type in the desired password, and then click **OK** to confirm.
5. Click **Save** to save all the changes.

### Setting Access Privileges and Password Also for Standard Users

To set access privileges and password also for standard users, please do the following:


1. On Atrust Client Setup, click **System** > **Password**.
2. Under the User section, click to check **Active User Authorization**.

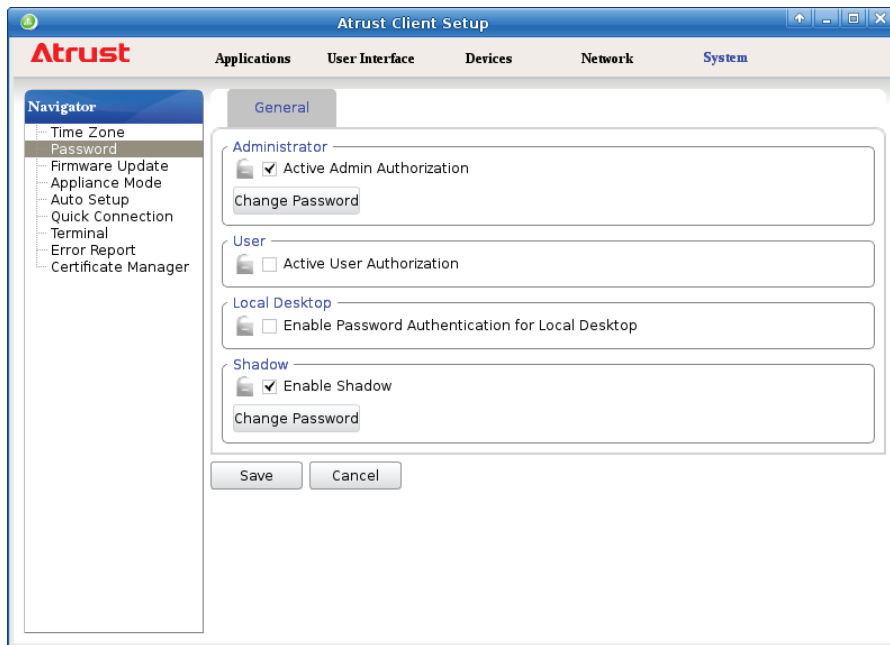

#### NOTE

- The User section appears only when **Active Admin Authorization** is checked.

3. The access privileges for standard users are granted and a window appears for you to set the password.

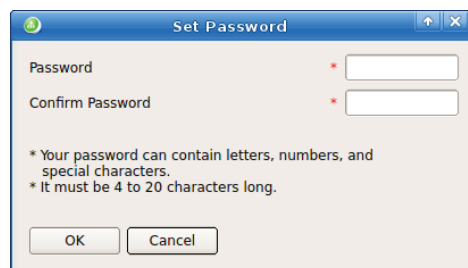

4. Type in the desired password, and then click **OK** to confirm.
5. Click **Save** to save all the changes.

#### 4.2.5 Configuring the Login Password for the Local Desktop


To enable and set the login password for the local desktop, please do the following:




#### NOTE

- The default behavior is to enter the local desktop without any login password.

1. On Atrust Client Setup, click **System** > **Password**.

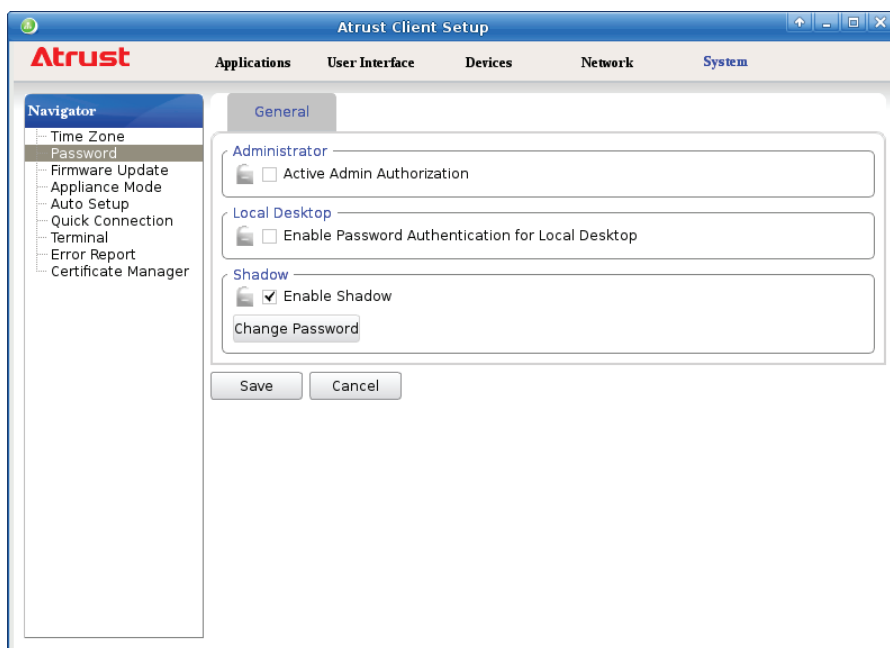


2. Under the Local Desktop section, click to check **Enable Password Authentication for Local Desktop**. A window appears for you to set the password.

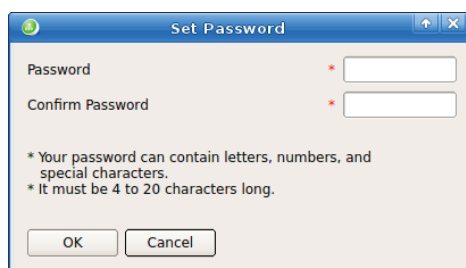

3. Type in the desired password, and then click **OK** to confirm.
4. Click **Save** to apply.

**NOTE**

- When this feature is enabled, each time when you start or restart your mt180L, you will be prompted to provide the Login password for the local desktop. The Login screen is shown as below.

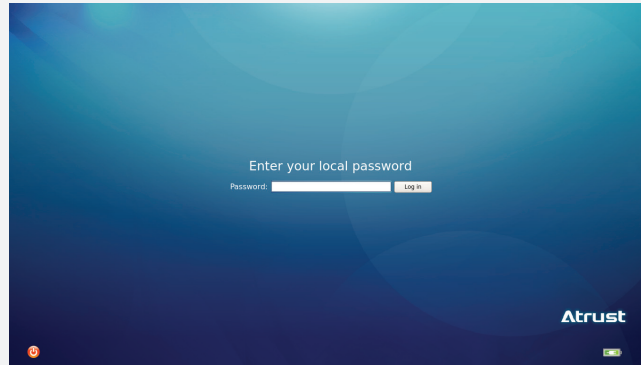**Login Screen of Local Desktop**

#### 4.2.6 Configuring Shadow Settings for Remote Assistance


The Shadow feature allows an administrator to remotely assist client users in resolving problems or configuring local settings. When this feature is enabled, an administrator can monitor and control a client from a remote computer just like a local user.

**NOTE**

- To use the Shadow feature on a remote computer, you need to install the Atrust Device Manager console on that computer, and add your mt180L into a managed group under Atrust Device Manager. For details, please refer to the User's Manual for Atrust Device Manager.

To enable the Shadow feature and set the password for remote assistance, please do the following:

1. On Atrust Client Setup, click **System > Password**.

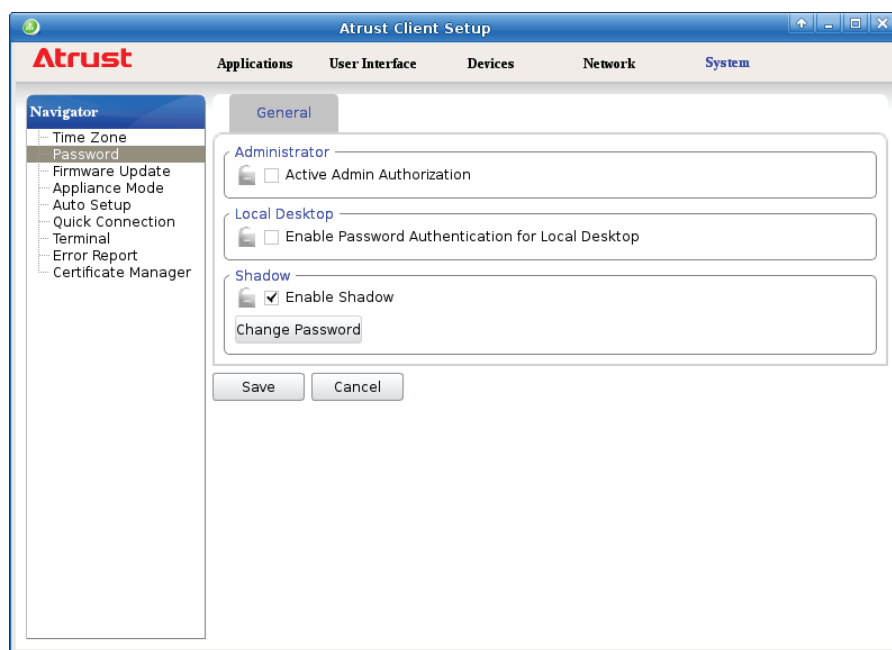


2. Under the Shadow section, click to check **Enable Shadow** if it's not checked.

**NOTE**

- By default, the Shadow feature is enabled. Click **Change Password**, and then follow the next step to set your password.

3. The Shadow feature is enabled and a window appears for you to set the password for remote assistance.



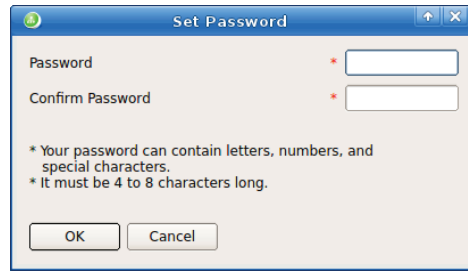


**NOTE**

- On a remote computer, an administrator will need this password to use the Shadow feature (remote assistance) with the Atrust Device Manager console. For more information, please refer to the User's Manual of Atrust Device Manager.

4. Type in the desired password, and then click **OK** to confirm.
5. Click **Save** to save all the changes.



**NOTE**

- When the Shadow feature is performed from a remote Atrust Device Manager, on the target client, an icon  appears on the Taskbar of the local Linux desktop and a notification pops up in the bottom-right corner. If you are under the Quick Connection mode (the default for mt180L thin clients), a notification would pop up in the upper-left corner on Atrust Quick Connection screen.

#### 4.2.7 Updating Firmware from the Management Computer

**Update Firmware** allows client users to update firmware from its management computer.




#### NOTE

- Ensure that your mt180L has been added into a managed group under Atrust Device Manager installed on a remote computer, and that you have imported client firmware files into Atrust Device Manager. These are prerequisites of this feature.
- For more information on firmware update and Atrust Device Manager, please refer to the User Manual for Atrust Device Manager.

To update firmware from the management computer, please do the following:

1. On Atrust Client Setup, click **System > Firmware Update**.

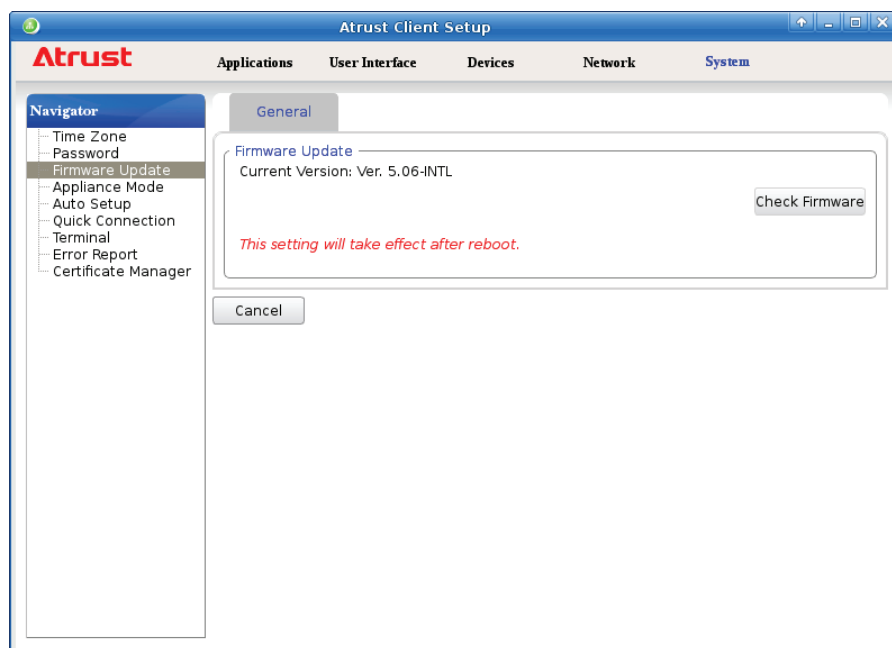


2. Under the Firmware Update section, click **Check Firmware**.
3. Upon completion, a window appears notifying you that the Firmware list has been loaded.



4. Click **Yes** to continue.

5. Click the drop-down menus to select the desired firmware version and other update options.

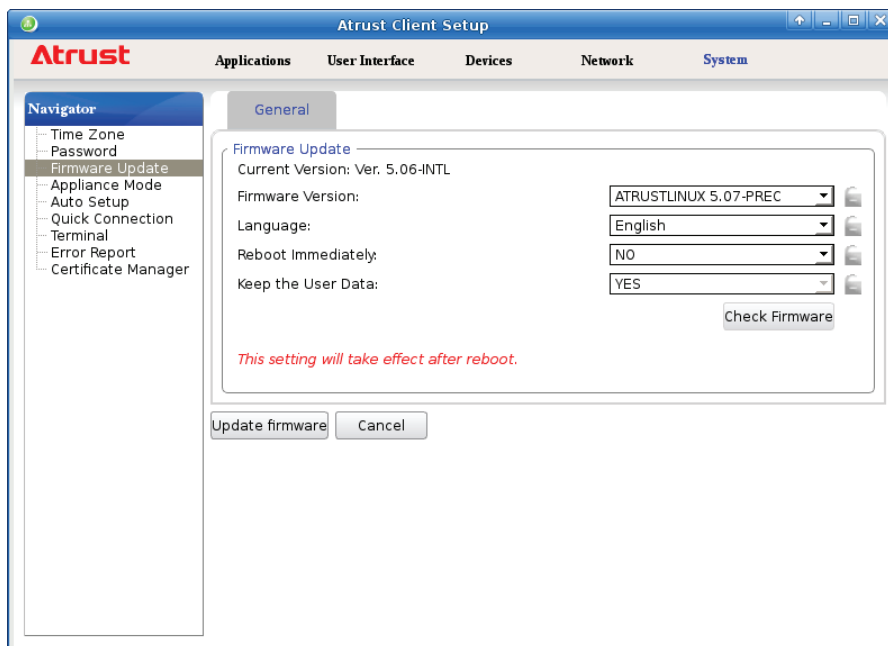

Firmware Update Options	
Item	Description
Firmware Version	Click to select the desired firmware version.
Language	Click to select the interface language of the system, including the Atrust Client Setup console. <b>NOTE:</b> Available languages may vary with the selected firmware version.
Reboot Immediately	Click to choose whether to restart the system immediately for firmware update or manually restart the system later.
Keep the User Data	Click to choose if to keep the setting values under Atrust Client Setup. <b>NOTE:</b> If <b>Yes</b> is selected, all setting values under Atrust Client Setup will remain unchanged after firmware update. If <b>No</b> is selected, all setting values will be restored to the factory default. This option may not be available on your system. <b>NOTE:</b> If the client is managed by Atrust Device Manager and here <b>No</b> is selected, Atrust Device Manager will fail to manage the client after firmware update. For more information on Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

6. Click **Update firmware** to confirm your selections. The system will start updating its firmware after restart.

### 4.2.8 Enabling or Disabling the Appliance Mode

The Appliance mode allows your mt180L to start up directly with the desired Microsoft Remote Desktop, Citrix ICA, VMware View or Horizon View session. Under this mode, users will feel as if they were using a standalone desktop computer; the underlying client operating system, Atrust Linux, is hidden from the very beginning.

**NOTE**

- There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:

No.	Mode	Description
1	Appliance	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
2	Autostart	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
3	Quick Connection	<p>The client will enter Atrust Quick Connection screen after system startup.</p>

- For more information on these modes, please refer to sections:
  - ✧ 4.2.10 on page 58 and 3.1 on page 15 (Quick Connection mode)
  - ✧ 4.2.8 on page 54 (Appliance mode)
  - ✧ 4.6.5 on page 135 (Autostart mode for RDP sessions)
  - ✧ 4.6.11 on page 173 (Autostart mode for ICA sessions)
  - ✧ 4.6.14 on page 206 (Autostart mode for View sessions)

## Enabling the Appliance Mode

To enable the Appliance mode, please do the following:



### NOTE


- Ensure that you have configured the connection settings for the desired Microsoft Remote Desktop, Citrix ICA, VMware View or Horizon View session under **Applications** tab. You need to specify which service type and connection settings entry will be used under the Appliance mode. For detailed instructions, please see sections:
  - ✧ "4.6.3 Configuring Basic RDP Connection Settings" on page 120
  - ✧ "4.6.6 Configuring Basic ICA Connection Settings" on page 150
  - ✧ "4.6.12 Configuring Basic VMware View Connection Settings" on page 202



### NOTE

- Please note that the Autostart mode also enables the client to start up directly with an RDP / ICA / View session and provides more configuration flexibility than the Appliance mode. For detailed information on the Autostart mode, please refer to the following sections:
  - ✧ "4.6.5 Configuring Advanced RDP Connection Settings" on page 135
  - ✧ "4.6.11 Configuring Advanced ICA Connection Settings" on page 173
  - ✧ "4.6.14 Configuring Advanced View Connection Settings" on page 206


1. On Atrust Client Setup, click **System** > **Appliance Mode**.

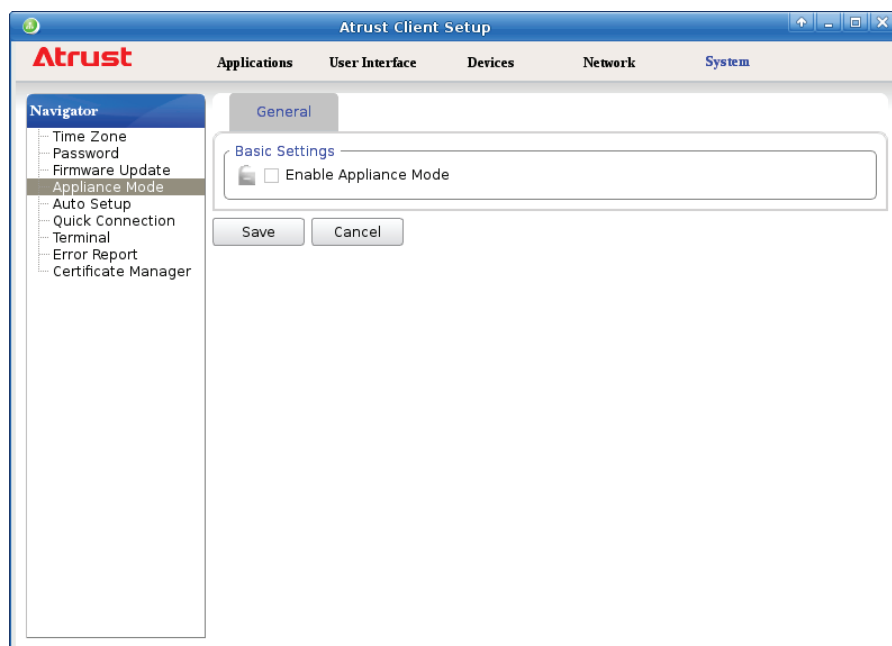



2. Click to check **Enable Appliance Mode**.


3. Other settings of the Appliance mode appear.

Basic Settings

 ☒ Enable Appliance Mode

Application Type: Citrix ICA 

Use Session: XD 


On Application Exit: Shutdown 


*\* To launch Console: Shift+Ctrl+Delete*


*\* To minimize ICA Fullscreen Desktop: Press Left Ctrl+F2 then Alt+F9*


4. Click drop-down menus to select the application (or service) type: **Citrix ICA**, **Remote Desktop**, or **VMware View**, the specific service available in that type, and the desired action after exiting a session.

Basic Settings

 ☒ Enable Appliance Mode

Application Type: Citrix ICA 


Use Session: XD 


On Application Exit: Shutdown 


*\* To launch Console: Shift+Ctrl+Delete*


*\* To minimize ICA Fullscreen Desktop: Press Left Ctrl+F2 then Alt+F9*

Basic Settings

 ☒ Enable Appliance Mode

Application Type: Remote Desktop 


Use Session: WMS 


On Application Exit: Shutdown 


*\* To launch Console: Shift+Ctrl+Delete*


*\* To toggle RDP fullscreen: Ctrl+Alt+Enter*

Basic Settings

 ☒ Enable Appliance Mode

Application Type: VMware View 

Use Session: VHV 

On Application Exit: Shutdown 

*\* To launch Console: Shift+Ctrl+Delete*

*\* To release keyboard and mouse from the virtual desktop, press Ctrl+Alt*



#### NOTE

- No matter which Resolution option you choose for the selected RDP / ICA / View service, RDP / ICA / View sessions under the Appliance mode will always use the Full Screen mode to display the remote/virtual desktop.

5. Click **Save** to confirm your selections.
6. The system will enter the Appliance mode after restart.

**NOTE**

- To disable the Appliance mode or to access Atrust Client Setup under the Appliance mode, please refer to "Disabling the Appliance Mode" on page 57.

**Disabling the Appliance Mode**

To disable the Appliance mode, please do the following:

1. Under the Appliance mode, exit the Full Screen mode of the RDP / ICA session, or release the keyboard and mouse from the View session (virtual desktop):
  - To exit the Full Screen mode of the RDP session, press **Ctrl + Alt + Enter**, and then minimize the session window.
  - To exit the Full Screen mode of the ICA session, press **Ctrl + F2**, and then **Alt + F9**.
  - To release the keyboard and mouse from the View session (virtual desktop), press **Ctrl + Alt**.

**NOTE**

- Please note that the View session (virtual desktop) will remain on the background after you release the keyboard and mouse from the View session (virtual desktop).

2. Click **Ctrl + Shift + Del** to launch Atrust Client Setup.

**NOTE**

- You cannot access the Taskbar of the client operating system (Atrust Linux) under the Appliance mode.

3. On Atrust Client Setup, click **System > Appliance Mode**.
4. Click to uncheck **Enable Appliance Mode**, and then click **Save** to apply the change.
5. Return to the current RDP / ICA / View session:
  - To return to the current RDP / ICA session, use **Alt + Tab** (press and hold **Alt**, and then press **Tab** to switch between different items) to select and restore the current RDP / ICA session.
  - To return to the current View session, click any place of the View session (virtual desktop) on the background.
6. Log off from the current RDP / ICA / View session.
7. The client will shut down then. Restart your client manually.

### 4.2.9 Enabling or Disabling Auto Setup

Auto Setup allows your thin client to get its preset configurations on startup and enter the desired user environment automatically. Its operation requires Auto Setup environment and network connectivity, except for Auto Setup on the client side. For details, please refer to “A.4 Auto Setup Flowchart” on page 227 and User’s Guide for Auto Setup.

**NOTE**

- To disable Auto Setup after your thin client got its preset configurations, reset your client. Please refer to “A.1 Resetting Your mt180L to the Factory Default” on page 217.

### 4.2.10 Configuring the Quick Connection Mode

The Quick Connection mode enables you to enter the Atrust Quick Connection screen after system startup. This setting is disabled by default for mobile thin clients.

**NOTE**

- For detailed instructions on how to use your mt180L under the Quick Connection mode, please refer to section “3.1 Learning the Basics” on page 15.
- There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:

No.	Mode	Description
1	Appliance	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
2	Autostart	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
3	Quick Connection	<p>The client will enter Atrust Quick Connection screen after system startup.</p>






**NOTE**

- To use the Quick Connection mode, ensure that both the Appliance and Autostart modes are disabled. If either of two modes are enabled, the Quick Connection mode will fail to work.
- For more information on the Appliance mode, please refer to section “4.2.8 Enabling or Disabling the Appliance Mode” on page 54.
- For more information on the Autostart mode, please refer to the following sections:
  - ✧ “4.6.5 Configuring Advanced RDP Connection Settings” on page 135
  - ✧ “4.6.11 Configuring Advanced ICA Connection Settings” on page 173
  - ✧ “4.6.14 Configuring Advanced View Connection Settings” on page 206

To enable/disable the Quick Connection mode, please do the following:

1. On Atrust Client Setup, click **System** > **Quick Connection**.

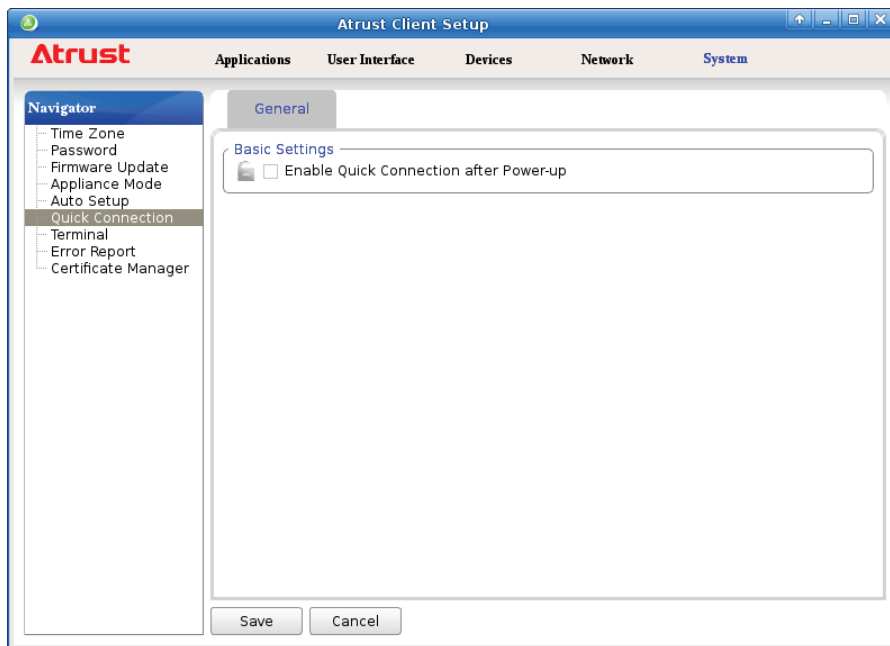

2. Click to check/uncheck **Enable Quick Connection after Power-up** to enable/disable the Quick Connection mode, and then click **Save** to apply the changes.



**NOTE**

- For advanced Quick Connection settings, please refer to the next section (4.2.11).

#### 4.2.11 Configuring Advanced Quick Connection Settings

You are allowed to configure advanced Quick Connection settings for Remote Desktop, Citrix ICA, and VMware View sessions through **System > Quick Connections** on Atrust Client Setup.

##### **Advanced Quick Connection Settings for Remote Desktop Sessions**

To configure advanced Quick Connection settings for Remote Desktop sessions, please refer to the table below:

Remote Desktop Option

 ☒ Multimedia Redirection

Remote Desktop Option	
Item	Description
Multimedia Redirection	<p>Check/Uncheck to enable/disable multimedia redirection.</p> <p>When enabled, the client receives original compressed multimedia streams and decodes locally for display. This feature increases the load on the client, but saves server resources, decreases the bandwidth usage, and improves audio and video playback experiences.</p> <p>It's enabled by default (when Quick Connection mode is enabled).</p>

##### **Advanced Quick Connection Settings for Citrix ICA Sessions**

To configure advanced Quick Connection settings for Citrix ICA sessions, please refer to the tables below:

Citrix ICA Option

 ☒ Client Rendering

 ☒ HDX RealTime WebCam

 ☐ Use H264 Compression

Citrix ICA Option	
Item	Description
Client Rendering	<p>Check/Uncheck to enable/disable client rendering.</p> <p>When <b>Client Rendering</b> is disabled, <b>Server Rendering</b> is used.</p>
HDX RealTime WebCam	<p>This item is available only when <b>Client Rendering</b> is selected.</p> <p>When <b>Yes</b> is selected, a locally attached webcam can be used in an ICA session.</p>
Use H264 Compression	<p>Check to enable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.</p>

 ☐ Redirect Connected USB Devices

*\* All connected USB devices will be redirected unless more specific settings are specified below.*

*\* Enabling USB Redirection on the server side is also required for this feature.*

Citrix ICA Option	
Item	Description
Redirect Connected USB Devices	Check to enable redirection for connected USB devices in Quick Connection mode. All connected USB devices will be redirected unless more specific settings are specified below.

Use of USB Storage Devices: Mapping 

Use of USB Printers: Mapping 

Citrix ICA Option	
Item	Description
Use of USB Storage Devices	Click to select how to use USB storage devices in ICA sessions. Three options are available: <b>Mapping</b> , <b>Redirection</b> , and <b>Disabled</b> .
Use of USB Printers	Click to select how to use USB printers in ICA sessions. Three options are available: <b>Mapping</b> , <b>Redirection</b> , and <b>Disabled</b> .

Plugged USB Devices: 1


(Vendor: 2047 Product: 03df) Texas Instruments

(Vendor: 0bda Product: 0129) Realtek Semiconductor Corp. RTS5129 Card Reader Con

Redirection Rules: 2

*\* Use redirection rules to manage specific USB devices.*

*\* Maximum number of rules: 10*

Allow Vendor ID:  Product ID:  Add 

Citrix ICA Option	
Item	Description
Redirection Rules	Create redirection rules on <span>2</span> to manage specific USB devices with information on <span>1</span> .




#### NOTE

- All attached USB devices will be listed under **Plugged USB Devices** (1) with vender and product information needed for creating rules.

**Advanced Quick Connection Settings for VMware View Sessions**

To configure advanced Quick Connection settings for VMware View sessions, please do the following:

1. On Atrust Client Setup, click **System** > **Quick Connection**.

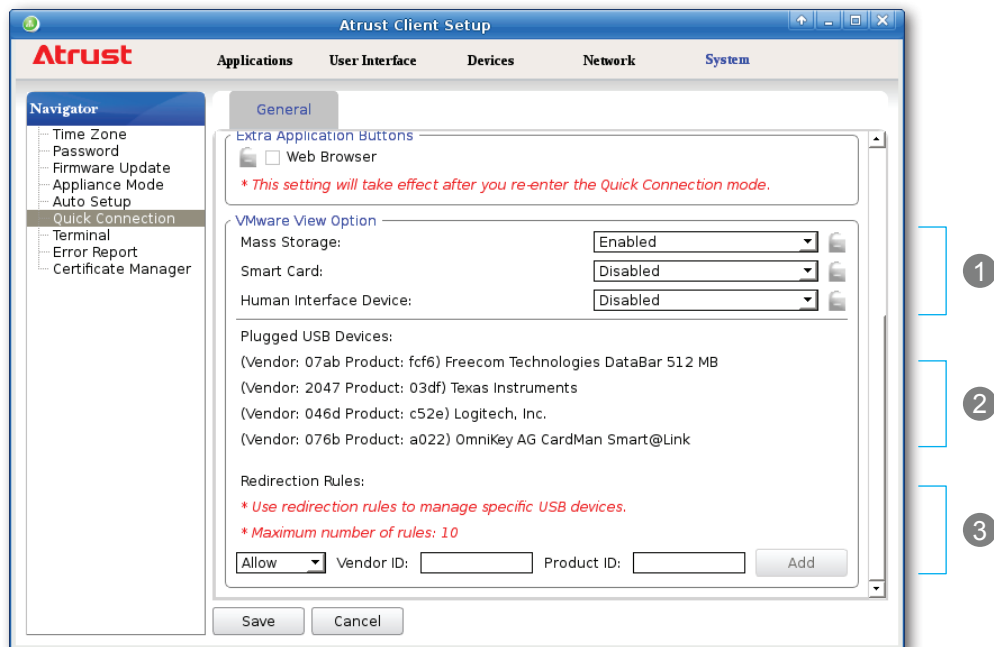

2. Click drop-down menus to configure **Generic Settings** (1) for mass storage devices, smart cards, and human interface devices. Two options are available: **Enabled** or **Disabled**.

Mass Storage:	Enabled	
Smart Card:	Disabled	
Human Interface Device:	Disabled	

3. Use **Redirection Rules** (3) to manage specific USB devices:

Plugged USB Devices:	2		
(Vendor: 046d Product: c52e) Logitech, Inc.			
Redirection Rules:	3		
<i>* Use redirection rules to manage specific USB devices.</i>			
<i>* Maximum number of rules: 10</i>			
Allow	Vendor ID:	Product ID:	Add

- Refer to (2) to fill in the Vendor and Product IDs for a specific device, click the drop-down menu to select **Allow** or **Deny**.
- Click **Add** on the right to add a rule on (3).


**NOTE**

- All attached USB devices will be listed under *Plugged USB Devices* (2) with vender and product information needed for creating rules.
- *Redirection Rules* (3) have priority over *Generic Settings* (1).

4. Click **Save** to apply.

### Accessing the Internet Locally in Quick Connection Mode

To access the Internet locally in Quick Connection mode, you can configure to show the Web Browser button on Atrust Quick Connection screen:

#### Extra Application Buttons

☐ Web Browser

*\* This setting will take effect after you re-enter the Quick Connection mode.*


### Atrust Quick Connection Screen



#### 4.2.12 Managing the Use of Power

To manage the use of power for your mobile thin client, please do the following:


1. On Atrust Client Setup, click **System > Power Management**.

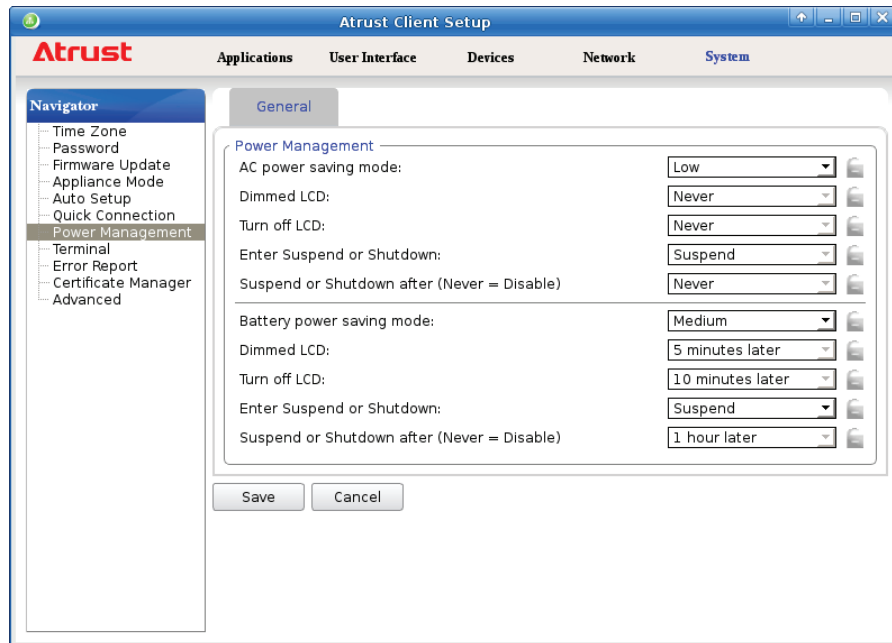

2. Choose the desired power-saving mode for your AC power and battery, or choose **Custom** to customize individual settings, and then click **Save** to apply.



#### NOTE

- When your mt180L enters **System Sleep mode** manually (**Fn + F12** or  > **Suspend**) or automatically (configured in Atrust Client Setup through **System > Power Management**), it still requires a certain amount of power. You can use **Shut down** option instead to save the power to a greater degree.




#### WARNING

- When using only the battery as the power source, ensure that it has enough power to prevent data loss.


### 4.2.13 Enabling or Disabling the Command-line Functions

To enable/disable the execution of the text-based (command-line) functions, please do the following:

1. On Atrust Client Setup, click **System** > **Terminal**.

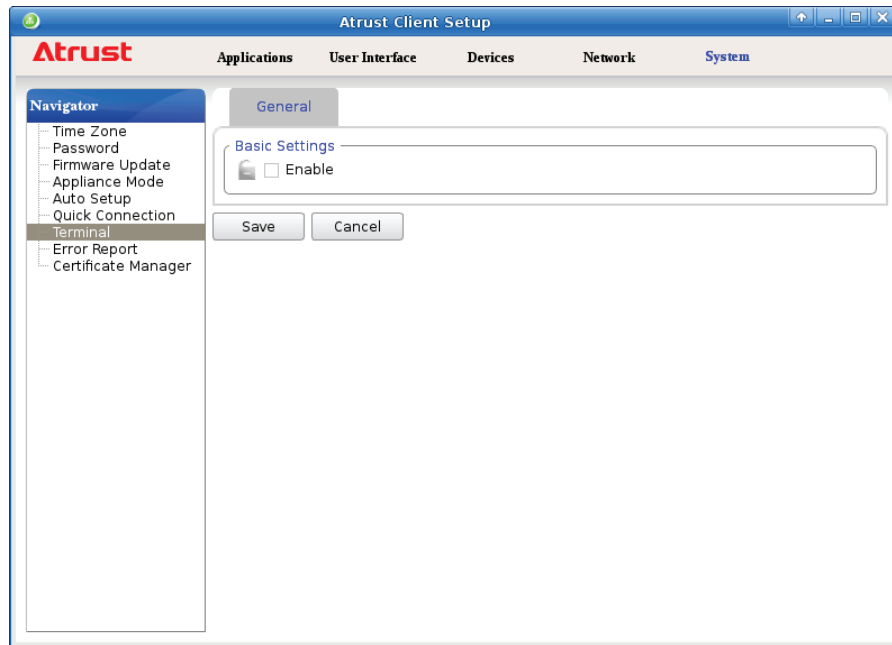

2. Click to check/uncheck **Enable** to allow/disallow the execution of the command-line functions.
3. Click **Save** to confirm your change.
4. The shortcut appears/disappears on the Start menu for access.



#### NOTE

- On the local Linux desktop, click **START** > **Settings** > **Terminal** to open the Terminal window.

#### 4.2.14 Collecting Event Logs and Capturing Related Screens

The **Error Report** feature allows you to collect event logs and capture related screens for error reporting.

##### Collecting Event Logs

To collect event logs of your mt180L, please do the following:

1. Plug a USB flash drive into your mt180L.



##### NOTE


- This USB flash drive will be used for storing the event logs of your mt180L.
- Ensure that you have enabled the access and automount of USB storage devices. For detailed instructions, please refer to section "4.4.3 Configuring Settings for USB Storage Devices" on page 87.



##### NOTE


- Please note that files saved on the local desktop will be deleted after restart.

2. On **Atrust Client Setup**, click **System > Error Report**.

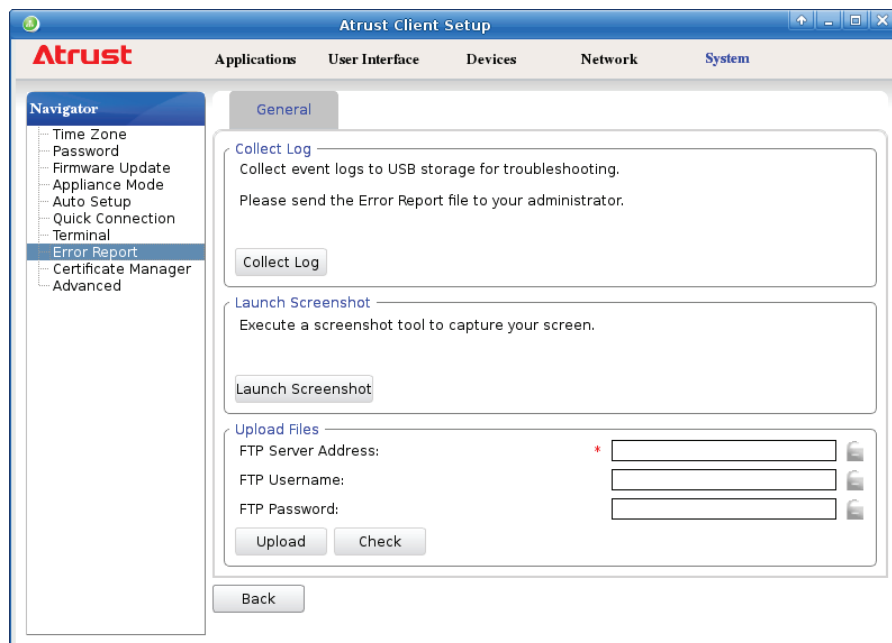




3. Click **Collect Log**. A window appears prompting you to choose where to save the log file set (named **events.tar.gz**). The attached USB flash drive is the default location if attached. Click **Save** to apply.

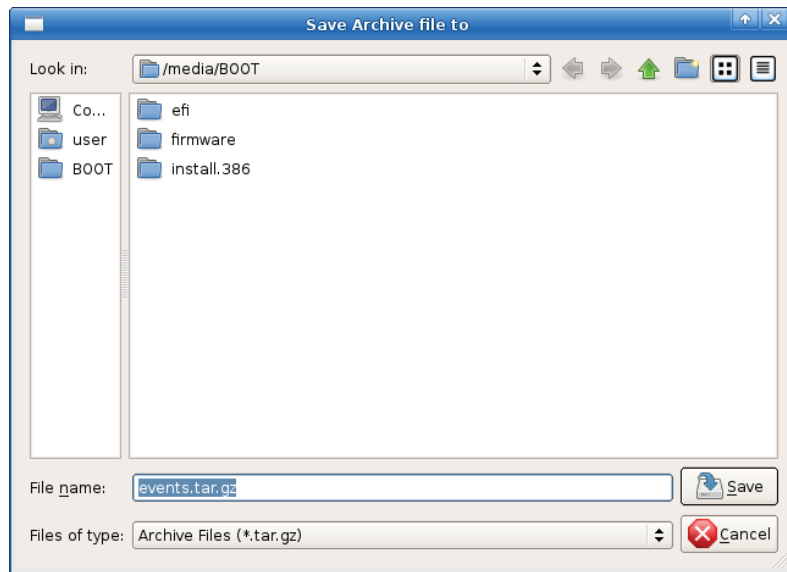

### ***Capturing Error-Related Screens***

To capture error-related screens of your mt180L, please do the following:

1. On Atrust Client Setup, click **System > Error Report**.
2. Click **Launch Snapshot** to open the screen capturing program.

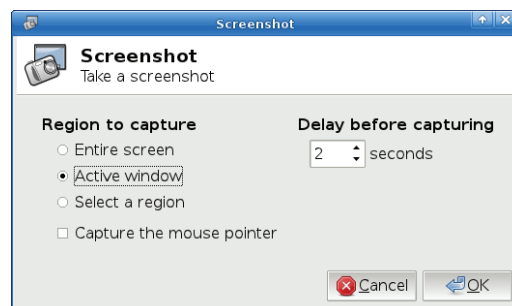

3. Configure screen capturing settings directly on the opened window if needed, and then click **OK** to capture the desired screen.



#### **TIP**


- It's recommended to set the delay time before capturing to at least 2 seconds to reserve time for switching to the desired screen or window.
- It's recommended to save the captured screens in the same USB flash drive where the event logs were saved.
- Please note that files saved on the local desktop will be deleted after restart.

#### 4.2.15 Uploading Files for Error Reporting


You can upload files to a specified FTP server for error reporting.

To upload files to an FTP server, please do the following:

1. On Atrust Client Setup, click **System > Error Report**.

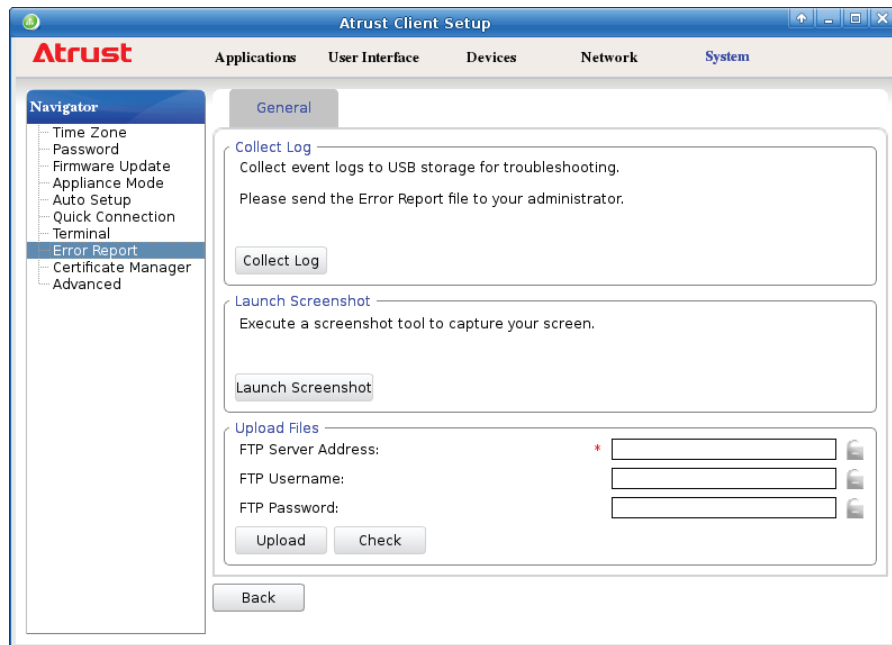

2. Under the Upload Files section, type the IP address of the FTP server and credentials, click **Upload** to select and upload files to that FTP server.

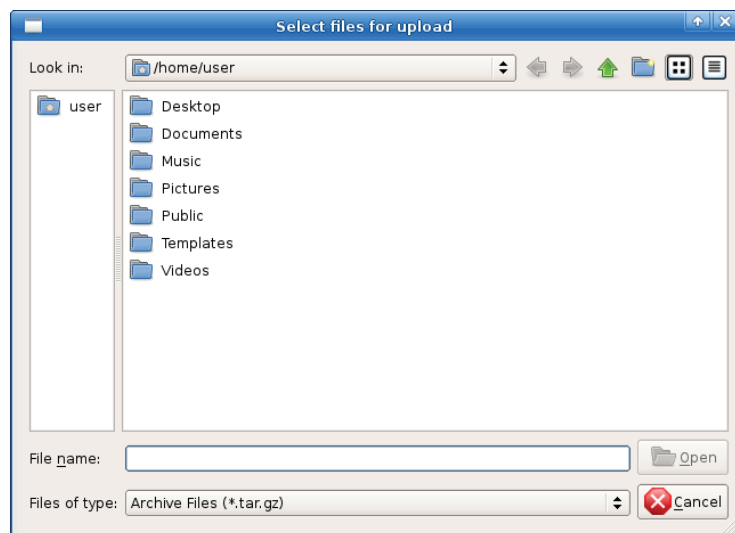

#### TIP

- You can check the validity of the IP address and credentials first through the **Check** button.

#### 4.2.16 Importing Certificates for Remote Computers

You can import certificates for remote computers through:

- A local device (from a USB storage device)
- The network (from a remote computer or the management console)




#### NOTE

- The available management console for mt180L is Atrust Device Manager, a remote and group management console for multiple thin clients. For more information, please refer to the User's Manual for Atrust Device Manager.


#### *Importing certificates through a USB storage device*

To import certificates for remote computers through a USB storage device, please do the following:


1. Copy your certificates to a USB storage device, and then connect this storage device to your mt180L.
2. On Atrust Client Setup, click **System > Certificate Manager**.
3. Click **Add** on the top of the Certificate list.

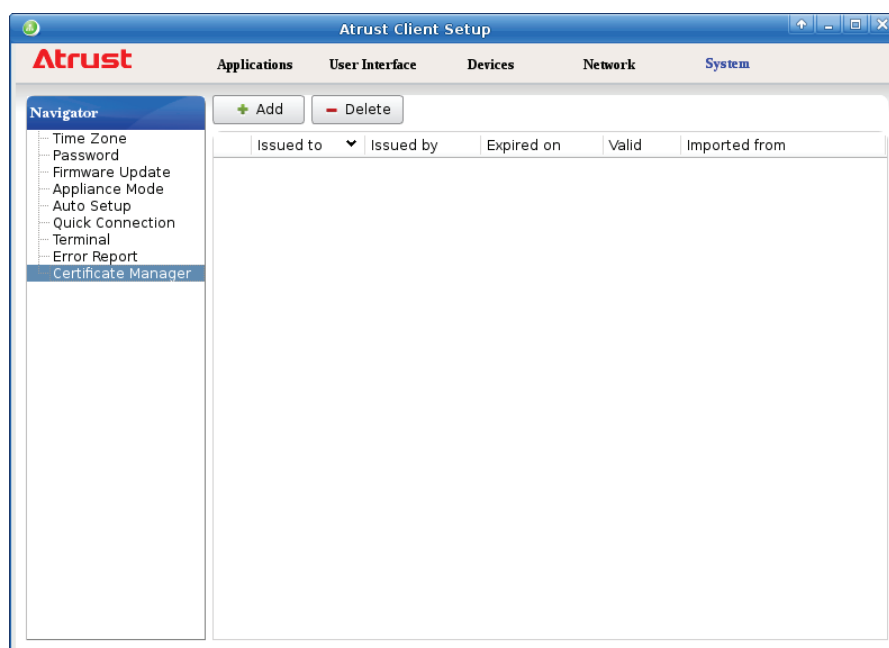

- In the From File section, click **Browse** to locate the desired certificate file, and then click **Open** to confirm.

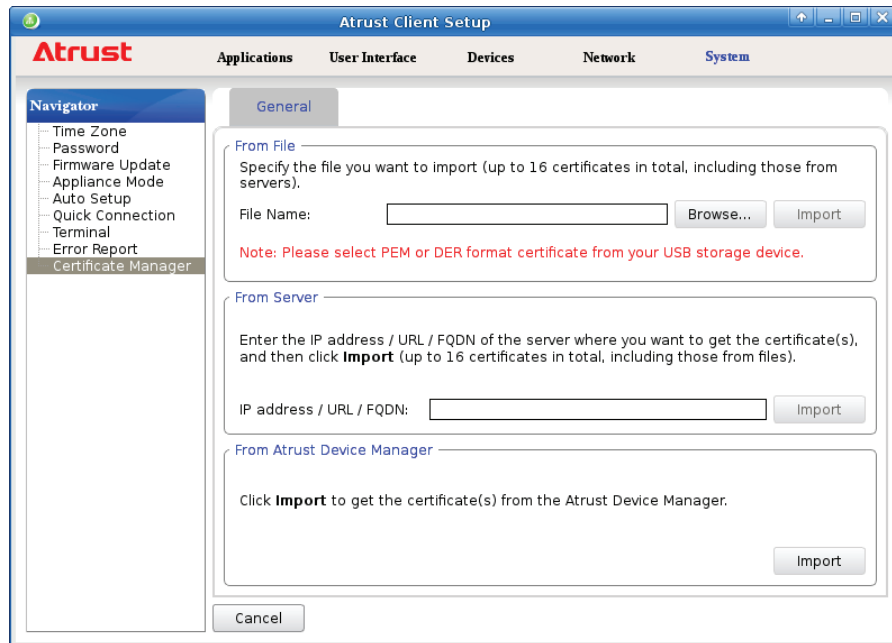


- Click **Import** to start importing the certificate.
- On completion, the certificate is shown in the Certificate list.

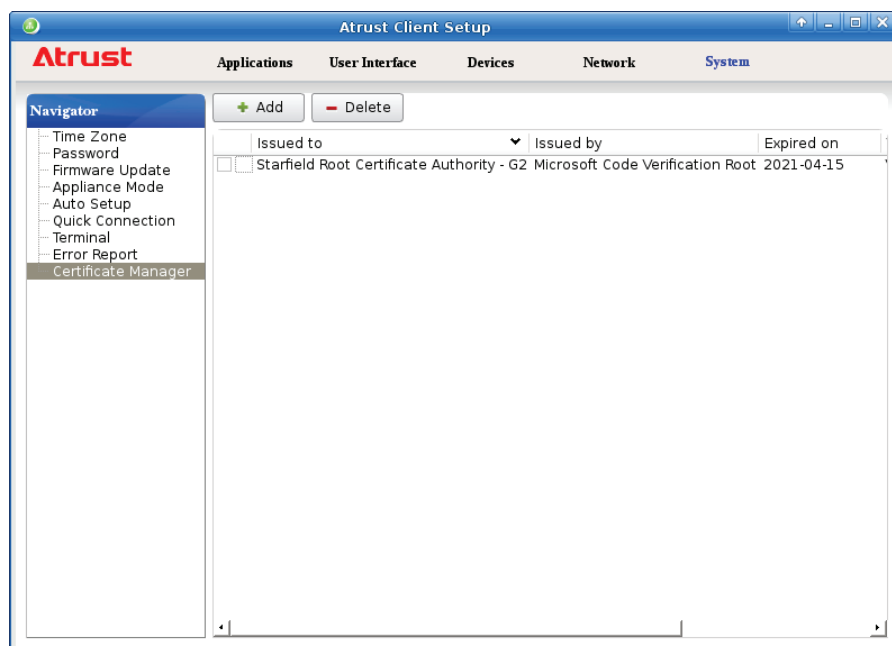


### Importing certificates from remote computers through the network

To import the certificate from a remote computer through the network, please do the following:

1. On Atrust Client Setup, click **System > Certificate Manager**.
2. Click **Add** on the top of the Certificate list.
3. In the From Server section, type the IP address / URL / FQDN of the remote computer, and then click **Import**.

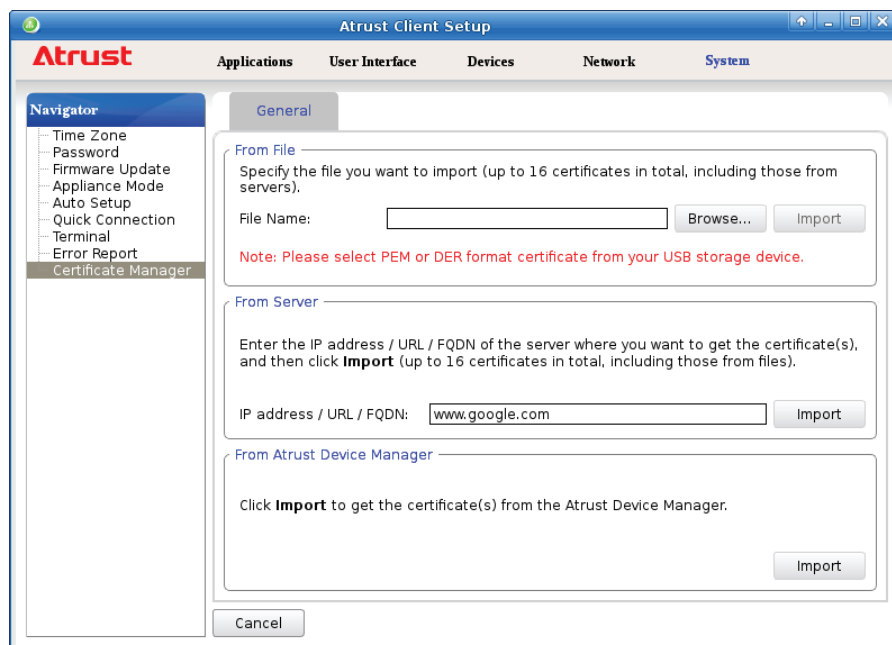

4. On completion, the certificate is shown in the Certificate list.

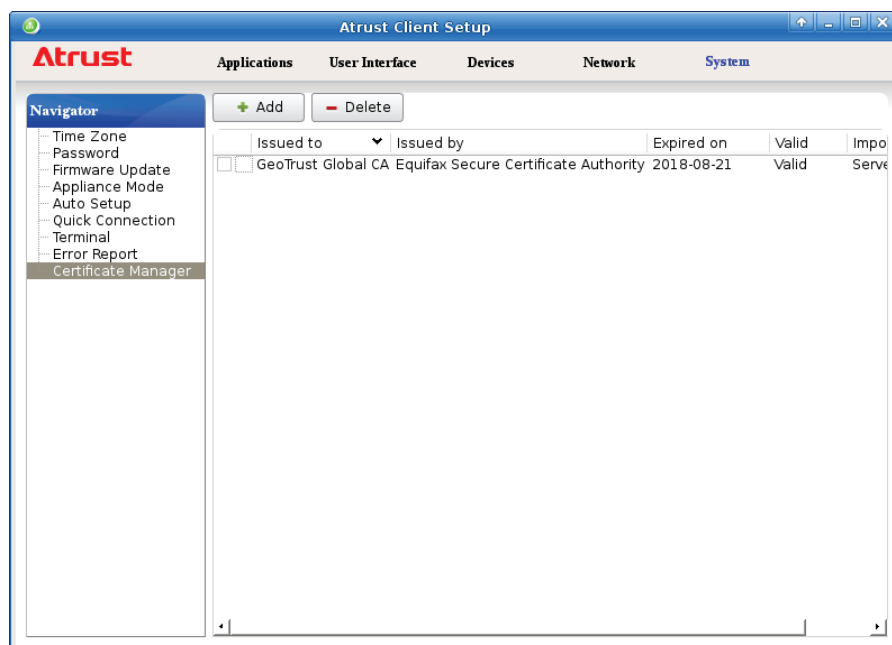


**Importing certificates from Atrust Device Manager through the network**

To import certificates from Atrust Device Manager through the network, please do the following:

**NOTE**

- Before proceeding, ensure that (1) your thin client has been added into a managed group in the management console, that is, Atrust Device Manager, and that (2) you have imported certificates into the management console.

1. On Atrust Client Setup, click **System** > **Certificate Manager**.
2. Click **Add** on the top of the Certificate list.
3. In the From Atrust Device Manager section, click **Import** to start importing all certificates available in Atrust Device Manager.
4. On completion, the certificates are shown in the Certificate list.

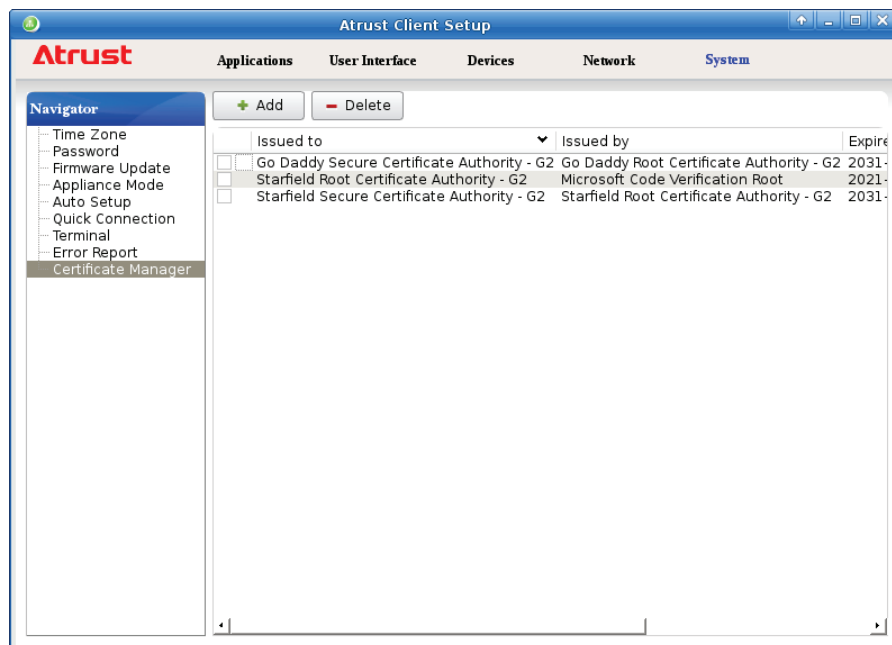

#### 4.2.17 Enabling or Disabling Auto Registration

Auto Registration allows that thin clients automatically register with Atrust Device Manager when they are online and then become managed by Atrust Device Manager.




##### NOTE

- For this feature to work, Auto Registration must be enabled on both sides: thin clients and target Atrust Device Manager. In addition, some configurations on DHCP or DNS server over your network are required. For details, please refer to the User's Manual for Atrust Device Manager.
- By default, Auto Registration is enabled on thin client side, disabled Atrust Device Manager.

To enable or disable Auto Registration on your thin client, please do the following:

1. On Atrust Client Setup, click **System > Advanced**.
2. Check / Uncheck to **Enable Auto Registration** to enable / disable Auto Registration.

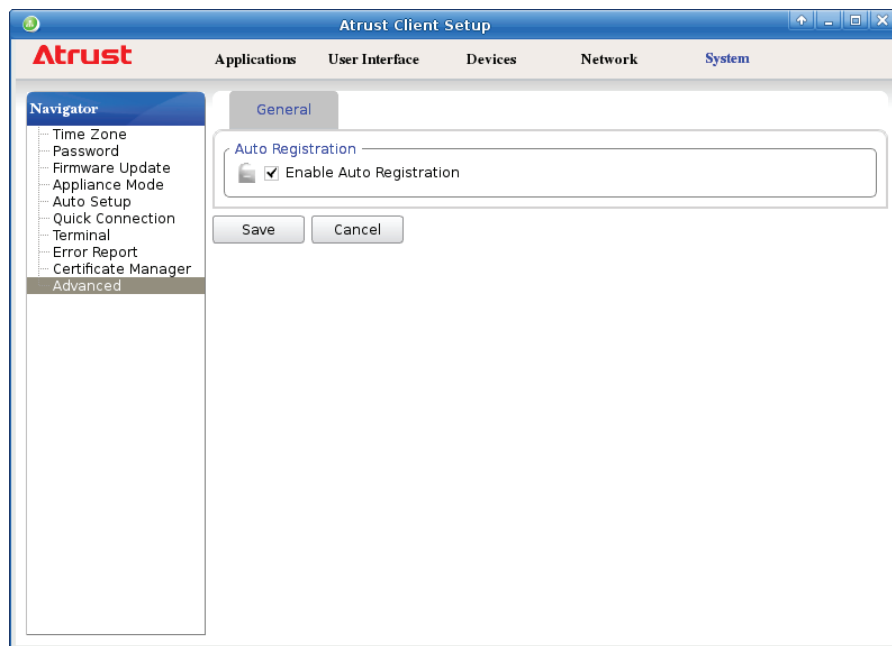


3. Click **Save** to apply.

## 4.3 Configuring User Interface Settings

### 4.3.1 User Interface Tab Overview

**User Interface** tab enables you to configure settings for the user interface of clients. To access available settings of **User Interface** tab, click the tab on Atrust Client Setup.



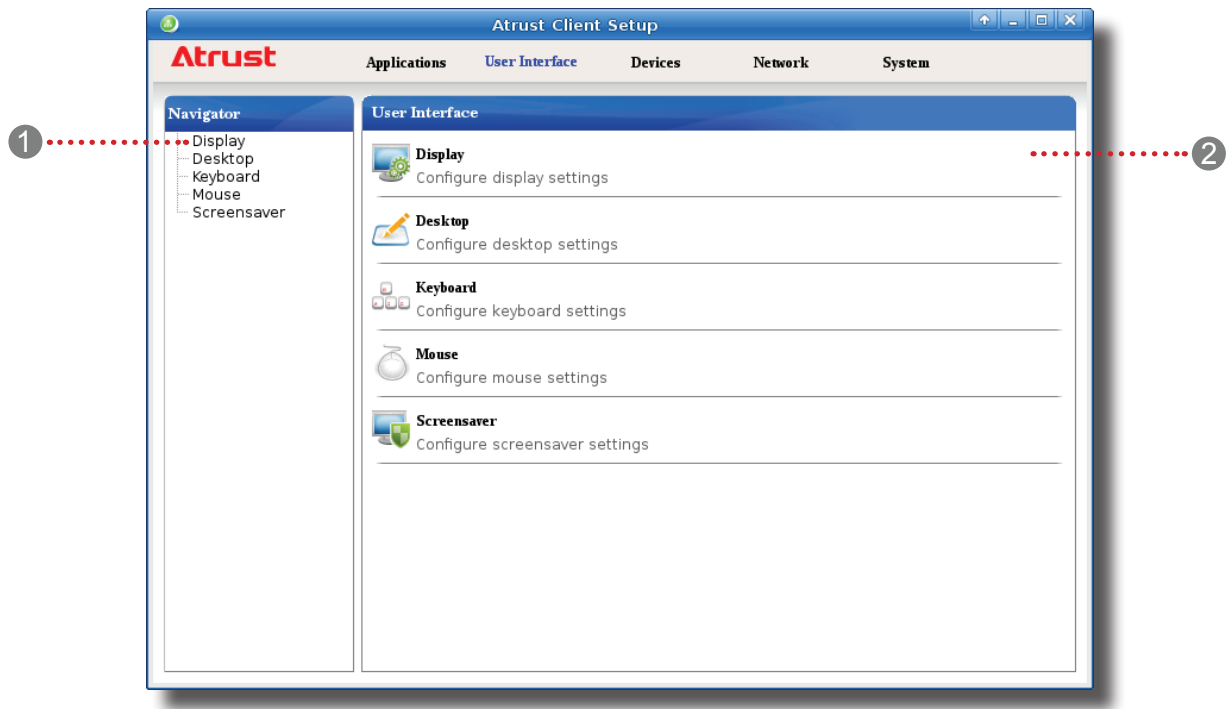


User Interface Tab Overview



Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>User Interface</b> tab.
2	Configuration area	Configures setting values when a setting item or entry is selected.




### 4.3.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
User Interface	Display		Click to configure display settings.	4.3.3	75
	Desktop		Click to customize desktop and system language.	4.3.4 4.3.5 4.3.6	78 80 81
	Keyboard		Click to adjust keyboard settings.	4.3.7	82
	Mouse		Click to adjust mouse settings.	4.3.8	84
	Screensaver		Click to configure screensaver settings.	4.3.9	85

### 4.3.3 Configuring Display Settings

To configure display settings for your mt180L, please do the following:

1. On Atrust Client Setup, click **User Interface** > **Display**.

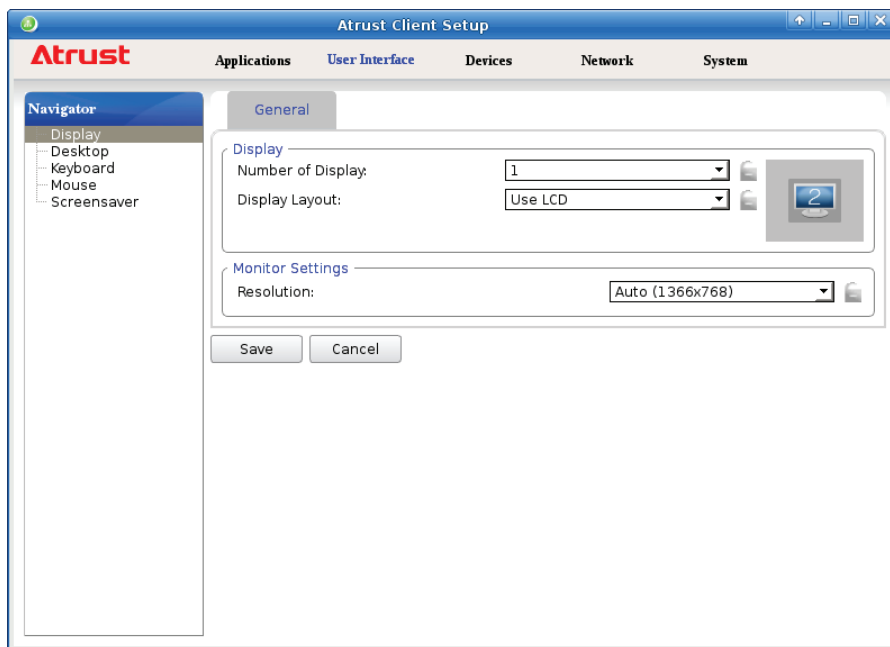

2. Click drop-down menus to select the number of attached display(s), arrangement of displays, resolution, etc. Refer to the following table to select appropriate setting values.



**NOTE**

- The available setting items vary, depending on your model and the selected number of display(s).


Display											
Item	Description										
Number of Display	Click to select the number of used display(s).										
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>1</td><td>One display is used.</td></tr><tr><td>2</td><td>Two displays are used.</td></tr></table>	Option	Description	1	One display is used.	2	Two displays are used.				
	Option	Description									
	1	One display is used.									
2	Two displays are used.										
Display Layout	Click to select the arrangement of displays.										
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Use LCD</td><td>Use the single internal display (LCD panel).</td></tr><tr><td>Use VGA</td><td>Use the single external display attached to the VGA port.</td></tr><tr><td>(LCD - VGA) horizontal</td><td>Use dual displays. Two displays are arranged horizontally: the LCD one is on the left; the VGA the right. The LCD one is the main display for local desktop when <b>Extend</b> is selected.</td></tr><tr><td>(VGA - LCD) horizontal</td><td>Use dual displays. Two displays are arranged horizontally: the VGA one is on the left; the LCD the right. The VGA one is the main display for local desktop when <b>Extend</b> is selected.</td></tr></table>	Option	Description	Use LCD	Use the single internal display (LCD panel).	Use VGA	Use the single external display attached to the VGA port.	(LCD - VGA) horizontal	Use dual displays. Two displays are arranged horizontally: the LCD one is on the left; the VGA the right. The LCD one is the main display for local desktop when <b>Extend</b> is selected.	(VGA - LCD) horizontal	Use dual displays. Two displays are arranged horizontally: the VGA one is on the left; the LCD the right. The VGA one is the main display for local desktop when <b>Extend</b> is selected.
	Option	Description									
	Use LCD	Use the single internal display (LCD panel).									
	Use VGA	Use the single external display attached to the VGA port.									
	(LCD - VGA) horizontal	Use dual displays. Two displays are arranged horizontally: the LCD one is on the left; the VGA the right. The LCD one is the main display for local desktop when <b>Extend</b> is selected.									
(VGA - LCD) horizontal	Use dual displays. Two displays are arranged horizontally: the VGA one is on the left; the LCD the right. The VGA one is the main display for local desktop when <b>Extend</b> is selected.										
Display Mode	This item is available only when <b>2</b> is selected in the Number of Display drop-down menu:										
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Extend</td><td>One display is used as the extended display of the other.</td></tr><tr><td>Clone</td><td>Two displays have the same display content.</td></tr></table>	Option	Description	Extend	One display is used as the extended display of the other.	Clone	Two displays have the same display content.				
	Option	Description									
	Extend	One display is used as the extended display of the other.									
Clone	Two displays have the same display content.										

Monitor Settings							
Item	Description						
Enable Auto-Detection at Power-up	Check/Uncheck to enable/disable the automatic detection of the used monitor(s) when the client is powered on.						
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Enabled</td><td>Automatic detection of the used monitor(s) is enabled. The system would set an appropriate resolution for the used monitor(s) when the client is powered on.</td></tr><tr><td>Disabled</td><td>Automatic detection of the used monitor(s) is disabled. All resolutions supported by the client will be listed in the Resolution drop-down menu when <b>Auto-Detection at Power-up</b> is disabled. Please note that some resolutions may not be applicable to your monitor(s).</td></tr></table>	Option	Description	Enabled	Automatic detection of the used monitor(s) is enabled. The system would set an appropriate resolution for the used monitor(s) when the client is powered on.	Disabled	Automatic detection of the used monitor(s) is disabled. All resolutions supported by the client will be listed in the Resolution drop-down menu when <b>Auto-Detection at Power-up</b> is disabled. Please note that some resolutions may not be applicable to your monitor(s).
	Option	Description					
	Enabled	Automatic detection of the used monitor(s) is enabled. The system would set an appropriate resolution for the used monitor(s) when the client is powered on.					
Disabled	Automatic detection of the used monitor(s) is disabled. All resolutions supported by the client will be listed in the Resolution drop-down menu when <b>Auto-Detection at Power-up</b> is disabled. Please note that some resolutions may not be applicable to your monitor(s).						
Monitor Resolution	Use this item to set an appropriate resolution for the used display.						
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Auto</td><td>This option is available only when <b>Enable Auto-Detection at Power-up</b> is selected.</td></tr><tr><td>Other options</td><td>Select the desired resolution from the Resolution drop-down menu for the used display.</td></tr></table>	Option	Description	Auto	This option is available only when <b>Enable Auto-Detection at Power-up</b> is selected.	Other options	Select the desired resolution from the Resolution drop-down menu for the used display.
	Option	Description					
	Auto	This option is available only when <b>Enable Auto-Detection at Power-up</b> is selected.					
Other options	Select the desired resolution from the Resolution drop-down menu for the used display.						
<b>NOTE:</b> All resolutions supported by the client will be listed in the Resolution drop-down menu when <b>Auto-Detection at Power-up</b> is disabled. Please note that some resolutions may not be applicable to your monitor(s).							

#### 4.3.4 Customizing Desktop and System Language Settings




To customize desktop and system language settings for your mt180L, please do the following:

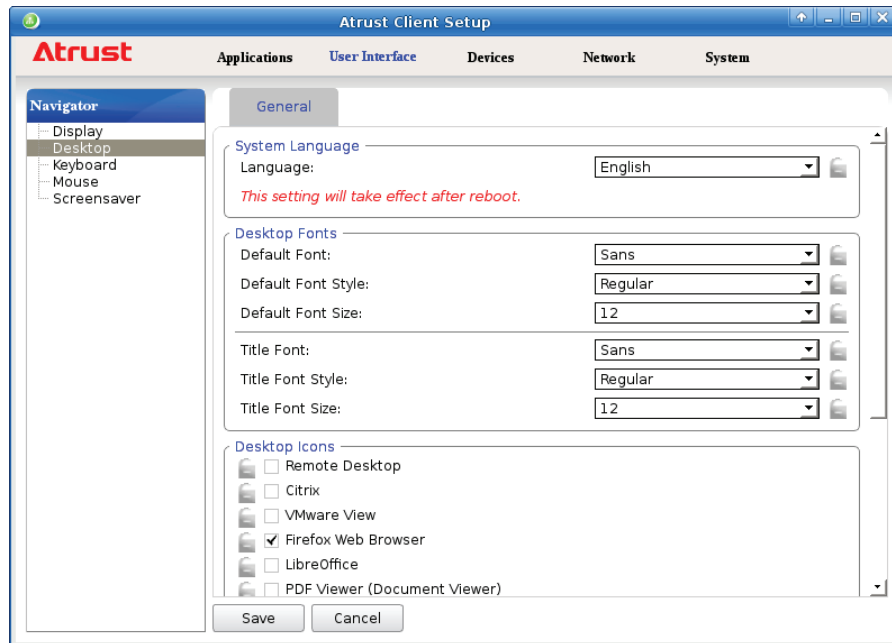1. On Atrust Client Setup, click **User Interface > Desktop**.



2. Click drop-down menus or tick/untick checkboxes to choose desired settings. Refer to the following table for a description of each setting item.

System Language	
Item	Description
Language	<p>Click the drop-down menu to select the system language.</p> <p><b>NOTE:</b> Available languages may vary with the firmware version of your device.</p> <p><b>NOTE:</b> You need to restart the system for the change to take effect.</p>
Desktop Fonts	
Item	Description
Default Font	<p>Click the drop-down menus to select the desired font, its style and size used for the user interface of the operating system, such as menus, options on menus, text labels for desktop shortcuts, tabs on program windows etc.</p> <p><b>NOTE:</b> Your changes will not apply to the titles of opened windows, the Atrust Client Setup console, and the System Information window (<b>START &gt; System Settings &gt; System Information</b>).</p>
Default Font Style	
Default Font Size	
Title Font	<p>Click the drop-down menus to select the desired font, its style and size used for the titles of the opened windows.</p>
Title Font Style	
Title Font Size	

Desktop Icons													
Item	Description												
Remote Desktop	<p>Check/Uncheck to show/hide shortcuts <b>Remote Desktop</b>  on the START menu and local Linux desktop for service quick access.</p> <p>For more information, please refer to section "4.3.5 Hiding or Showing Quick Access Shortcuts" on page 80.</p>												
Citrix	<p>Check/Uncheck to show/hide shortcuts <b>Citrix</b>  on the START menu and local Linux desktop for service quick access.</p> <p>For more information, please refer to section "4.3.5 Hiding or Showing Quick Access Shortcuts" on page 80.</p>												
VMware View	<p>Check/Uncheck to show/hide desktop shortcuts <b>VMware View</b>  on the START menu and local Linux desktop for service quick access.</p> <p>For more information, please refer to section "4.3.5 Hiding or Showing Quick Access Shortcuts" on page 80.</p>												
Icon Size	Click the drop-down menu to select the desired size of desktop icons/shortcuts.												
Icon Font Size	Click the drop-down menu to select the desired text label size of desktop icons/shortcuts.												
Desktop Background													
Item	Description												
Enable Desktop Wallpaper	<p>Check/Uncheck to enable/disable the use of Atrust wallpaper.</p> <p><b>NOTE:</b> If disabled, the solid color background (dark blue) will be used.</p>												
Enable Custom Wallpaper	<p>Check/Uncheck to enable/disable the use of a custom wallpaper. More settings appear when checked.</p> <p>For details, please refer to "4.3.6 Using a Custom Wallpaper" on page 81.</p>												
Download From													
Custom Wallpaper File													
Wallpaper Style	<p>Click the drop-down menu to select the way to apply the wallpaper. Five options are available: <b>Centered</b>, <b>Tiled</b>, <b>Stretched</b>, <b>Scaled</b>, and <b>Zoomed</b>.</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Centered</td><td>Centers the original image on the screen.</td></tr> <tr> <td>Tiled</td><td>Tiles the screen with the original image.</td></tr> <tr> <td>Stretched</td><td>Centers and extends/shrinks the image to fit the screen.</td></tr> <tr> <td>Scaled</td><td>Centers and sizes the image proportionally to fit the screen until the top-bottom or left-right sides fit the screen.</td></tr> <tr> <td>Zoomed</td><td>Centers and sizes the image proportionally to fill the screen.</td></tr> </tbody> </table> <p><b>NOTE:</b> Depending on the size of the connected display, two options might have the same effect.</p>	Option	Description	Centered	Centers the original image on the screen.	Tiled	Tiles the screen with the original image.	Stretched	Centers and extends/shrinks the image to fit the screen.	Scaled	Centers and sizes the image proportionally to fit the screen until the top-bottom or left-right sides fit the screen.	Zoomed	Centers and sizes the image proportionally to fill the screen.
Option	Description												
Centered	Centers the original image on the screen.												
Tiled	Tiles the screen with the original image.												
Stretched	Centers and extends/shrinks the image to fit the screen.												
Scaled	Centers and sizes the image proportionally to fit the screen until the top-bottom or left-right sides fit the screen.												
Zoomed	Centers and sizes the image proportionally to fill the screen.												
Wallpaper	Click the drop-down menu to select the color of Atrust wallpaper. Four colors are available: <b>Green</b> , <b>Blue</b> , <b>Orange</b> , and <b>Cyan</b> .												

3. Click **Save** to apply.

### 4.3.5 Hiding or Showing Quick Access Shortcuts

In case you want to access services quickly right on the local desktop, you can choose to show Quick Access shortcuts **Remote Desktop** / **Citrix** / **VMware View** on the START menu and local Linux desktop. These shortcuts enable you to access services quickly by clicking.




#### NOTE

- They're hidden by default.


To show/hide shortcuts **Remote Desktop** / **Citrix** / **VMware View** on the START menu and local Linux desktop, please do the following:

1. On Atrust Client Setup, click **User Interface** > **Desktop**.

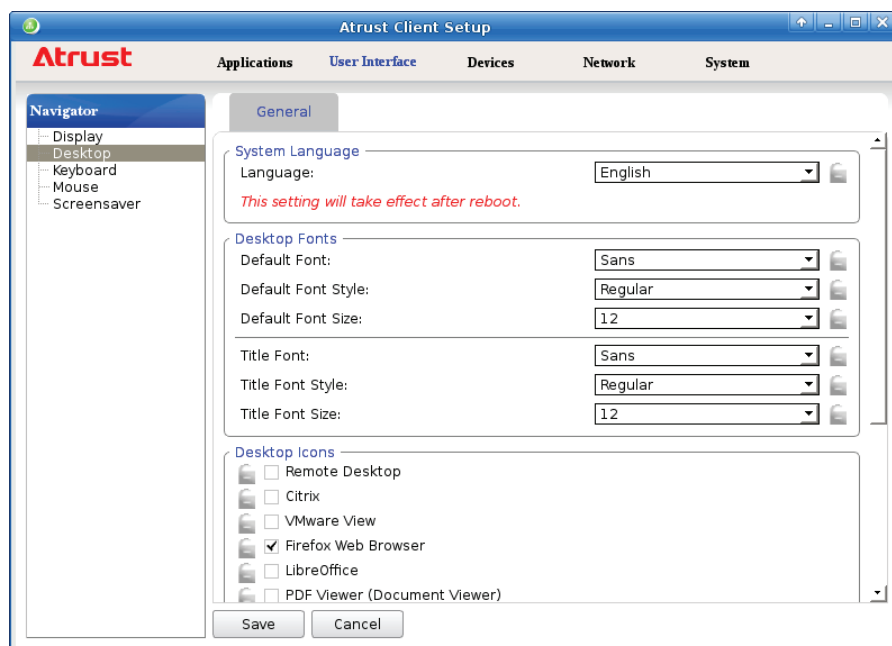

2. Click to check/uncheck **Remote Desktop** / **Citrix** / **VMware View** in the Desktop Icons section to show/hide the quick access shortcuts **Remote Desktop** / **Citrix** / **VMware View** on the START menu and local Linux desktop.
3. Click **Save** to apply the change.


- The selected shortcuts will be shown/hidden.

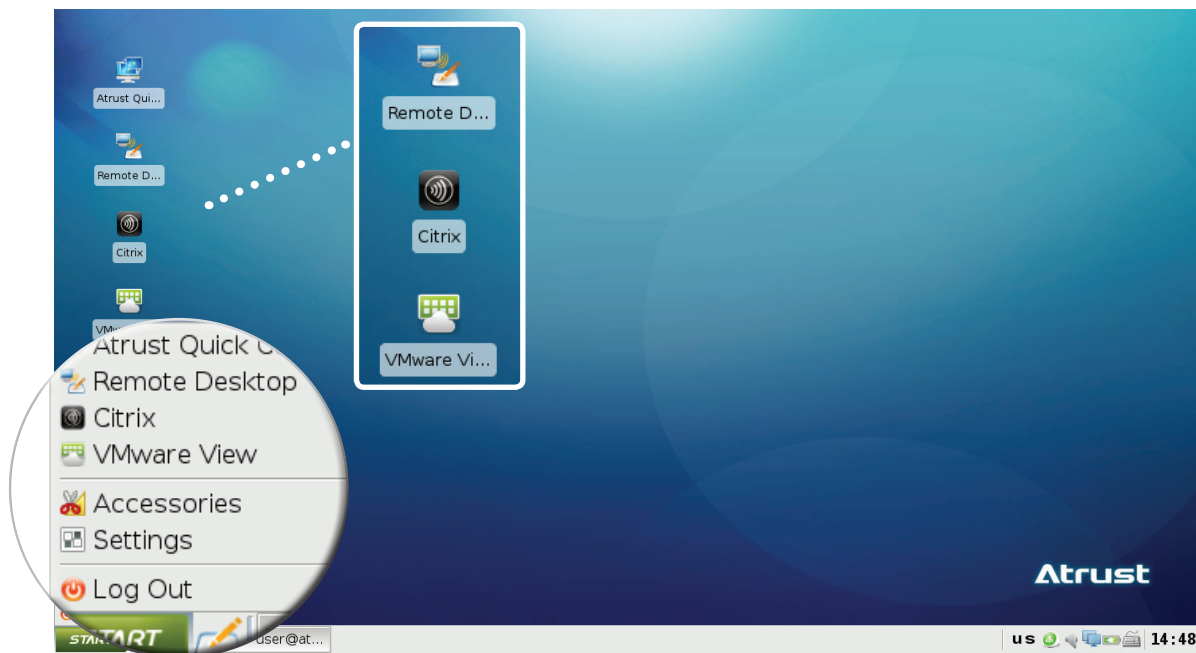

### 4.3.6 Using a Custom Wallpaper

To use a custom wallpaper, please do the following:

- On Atrust Client Setup, click **User Interface > Desktop**.

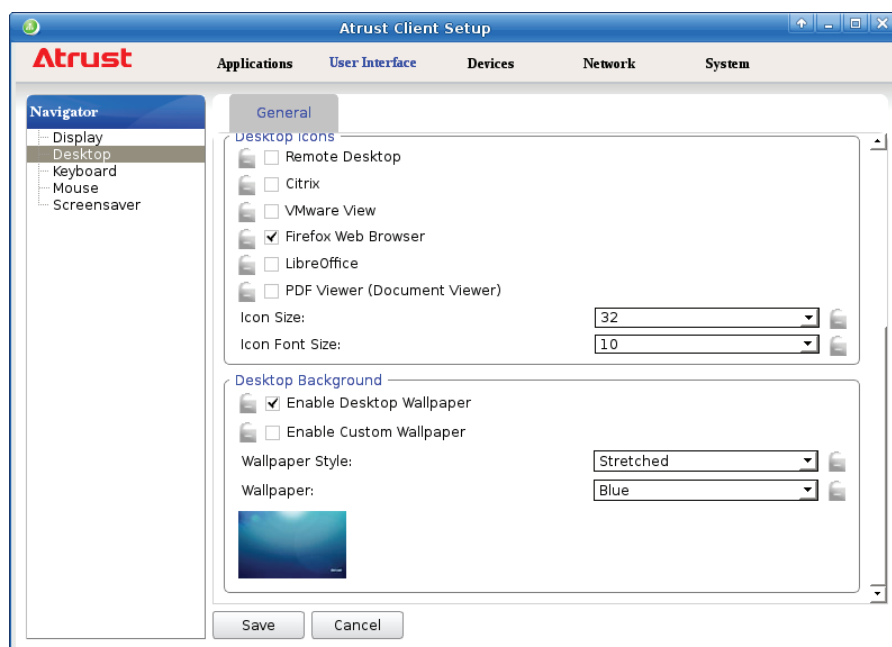

- Check or Uncheck **Enable Custom Wallpaper** to enable or disable the use of a custom wallpaper.

3. Select the way to apply the wallpaper and where to download or get the image file. Three options are available to get the wallpaper: **Auto Setup**, **Atrust Device Manager**, and **File**.



#### NOTE

- If **Auto Setup** is selected, your thin client must be in Auto Setup environment and be well-configured for that environment. Please see “4.2.9 Enabling or Disabling Auto Setup” on page 58 for more information.
- If **Atrust Device Manager** is selected, your thin client must be managed by Atrust Device Manager. For details, please see the User’s Manual for Atrust Device Manager.

4. Provide other information if required.



#### NOTE


- If **File** is selected, you need to specify where to get the image file locally, for example, a locally attached USB flash drive.
- The maximum allowed size of a custom wallpaper file is **5 MB**.

5. Click **Save** to confirm.

### 4.3.7 Adjusting Keyboard Settings

To adjust keyboard settings for your mt180L, please do the following:

1. On Atrust Client Setup, click **User Interface > Keyboard**.

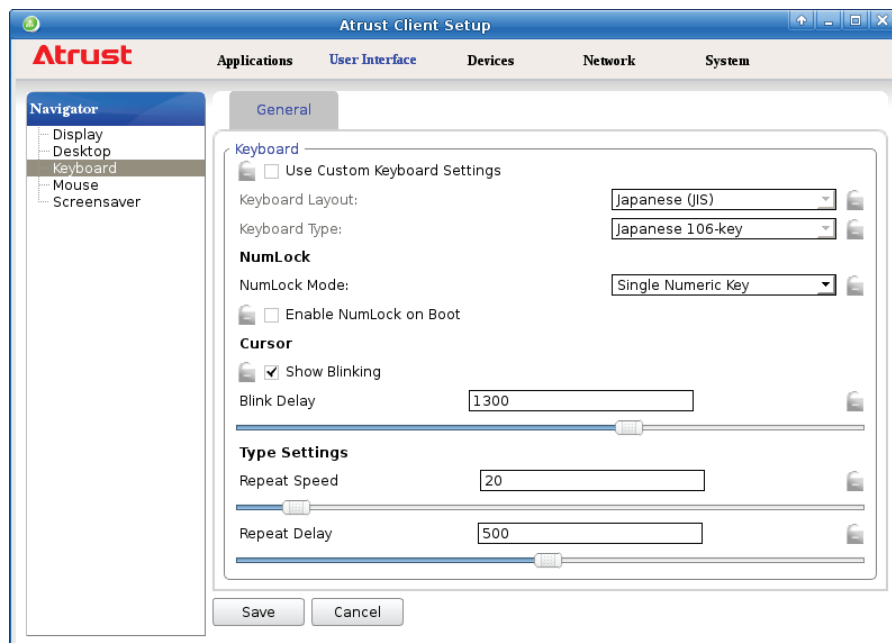

2. Click drop-down menus, tick/untick checkboxes, or move sliders to choose desired settings. Refer to the following table for a description of each setting item.




Keyboard		
Item		Description
Use Custom Keyboard Settings		Check/Uncheck to enable/disable the use of custom keyboard settings. <b>NOTE:</b> You are allowed to set the keyboard layout and type only when this setting is enabled.
Keyboard Layout		Click the drop-down menu to select the desired keyboard layout.
Keyboard Type		Click the drop-down menu to select the desired keyboard type.
NumLock Mode	Single Numeric Key	In NumLock mode, single numeric key is sufficient to enter a number.
	Fn + Numeric Key	In NumLock mode, Fn plus numeric key is required to enter a number.
Enable NumLock on Boot		Check/Uncheck to enable/disable the NumLock key after system startup.
Cursor	Show Blinking	Check/Uncheck to enable/disable the cursor blinking (local desktop only).
	Blink Delay	Move the slider to select the blink delay between each occurrence of cursor.
Type Settings	Repeat Speed	Move the slider to select the character repeat rate when a key is held down.
	Repeat Delay	Move the slider to select the character repeat delay between its each occurrence.



#### TIP

- Hang your mouse over the Up/Down arrow to quickly scroll up/down the Keyboard Layout list.

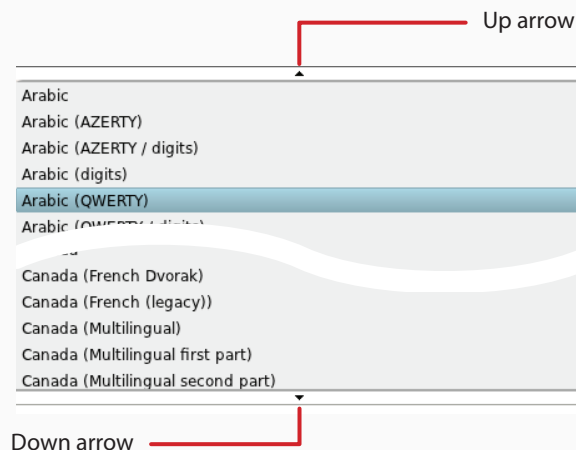


- To fine-tune a setting value, click its slider, and then use the Right/Left key to increase/decrease the value by 1 or the Page Up/Page Down key to increase/decrease by 10.

3. Click **Save** to apply.

4.3.8 Adjusting Mouse Settings

To adjust mouse settings for your mt180L, please do the following:

- 1. On Atrust Client Setup, click **User Interface > Mouse**.

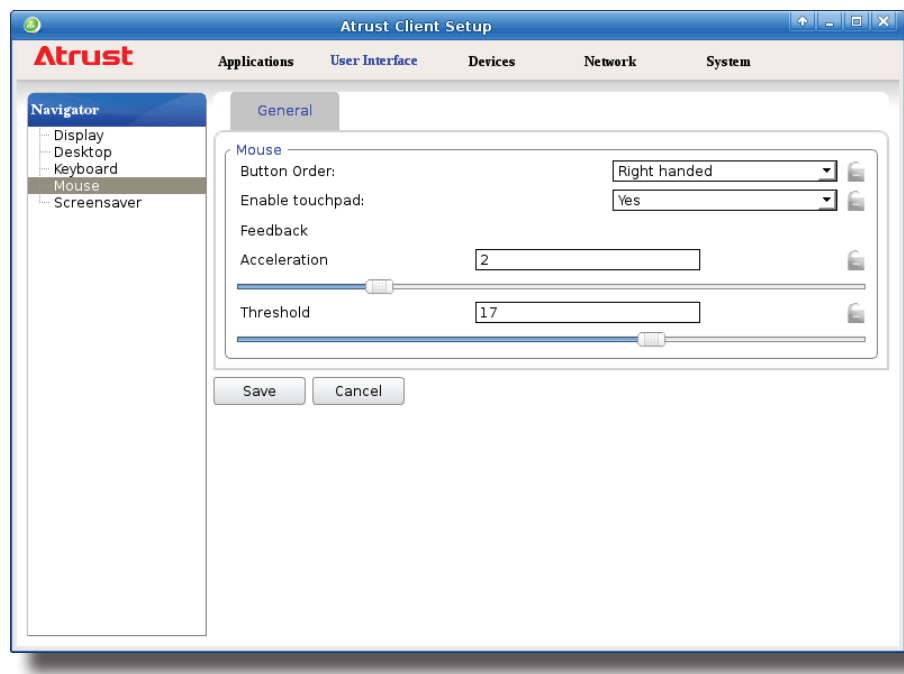


- 2. Click the drop-down menu or move sliders to choose desired setting values. Refer to the following table for a description of each setting item.

Mouse		
Item		Description
Button Order		Click the drop-down menu to switch mouse buttons for right-hand/left-hand use.
Enable Touchpad		Click the drop-down menu to enable or disable the touchpad.
Feedback	Acceleration	Move the slider to select the rate at which the mouse increases speed while moving.
	Threshold	Move the slider to select the moved distance (pixels) after which the mouse starts to accelerate.

### 4.3.9 Configuring Screensaver Settings

To configure screensaver settings for your mt180L, please do the following:

1. On Atrust Client Setup, click **User Interface > Screensaver**.

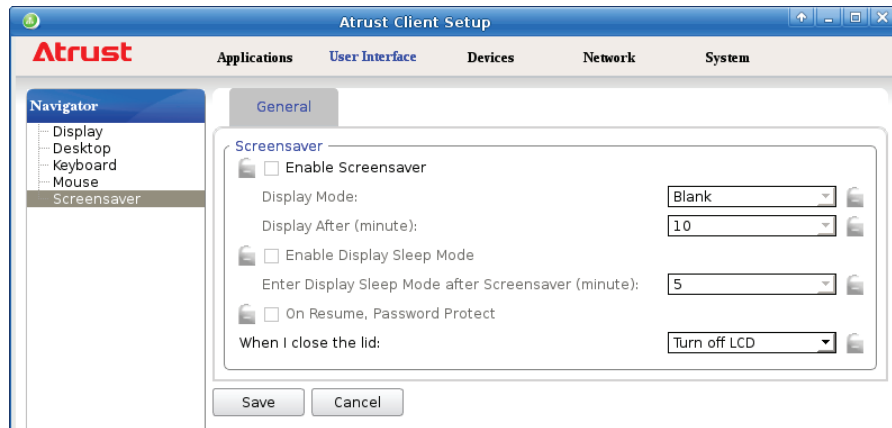

2. Click drop-down menus or tick/untick checkboxes to choose desired settings.

Screensaver							
Item	Description						
Enable Screensaver	Check/Uncheck to enable/disable Screensaver.						
Display Mode	Click to select the display mode of the screensaver. Two options are available: <b>Blank</b> and <b>Logo</b> .						
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Blank</td><td>Displays a black screen.</td></tr><tr><td>Logo</td><td>Displays the Atrust floating logo.</td></tr></table>	Option	Description	Blank	Displays a black screen.	Logo	Displays the Atrust floating logo.
	Option	Description					
	Blank	Displays a black screen.					
Logo	Displays the Atrust floating logo.						
Display After (minute)	Click to select the wait time for screensaver.						
Enable Display Sleep Mode	Check to turn off (i.e. stop sending signals to) the display to maximize the energy savings.						
Enter Display Sleep Mode after Screensaver (minute)	Click to select when to turn off (i.e. stop sending signals to) the display after Screensaver starts.						
On Resume, Password Protect	Check/Uncheck to resume with/without a password.						
When I close the lid	Click to select what to do when closing the lid.						



#### TIP

- While setting wait time for screensaver, you can hang your mouse over the Up/ Down arrow to quickly scroll up/down the Minute list.


3. Click **Save** to apply.

## 4.4 Configuring External Device Settings

### 4.4.1 Devices Tab Overview




**Devices** tab enables you to configure settings for external devices of clients. To access available settings of **Devices** tab, click the tab on Atrust Client Setup.

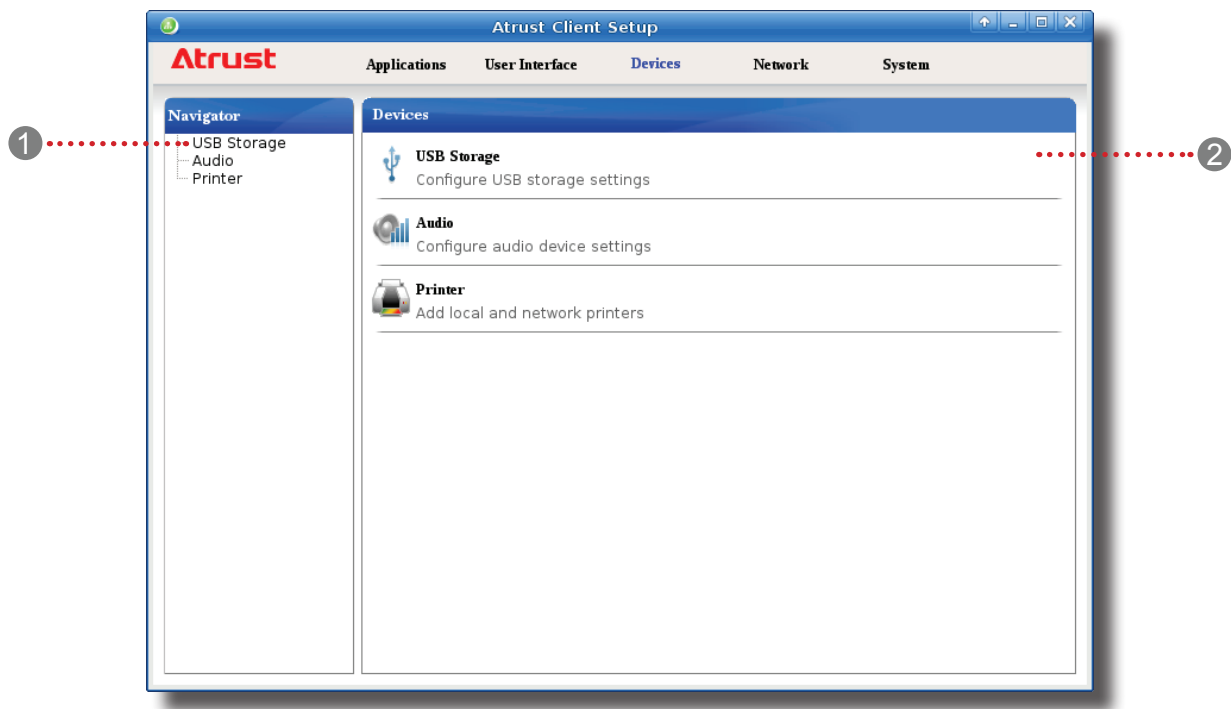Devices Tab Overview



Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>Devices</b> tab or to select a setting entry under a selected setting item.
2	Configuration area	Configures setting values when a setting item or entry is selected.

#### 4.4.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Devices	USB Storage		Click to configure settings for USB storage devices.	4.4.3 4.4.4	87 88
	Audio		Click to configure settings for audio devices.	4.4.5 4.4.6	89 90
	Printer		Click to add local or network printers.	4.4.7 4.4.8	91 94

#### 4.4.3 Configuring Settings for USB Storage Devices


To configure settings for USB storage devices, please do the following:



##### NOTE

- To access locally attached USB storage devices in a local or virtual session, you need to configure appropriate settings under this setting item.

1. On Atrust Client Setup, click **Devices** > **USB Storage**.

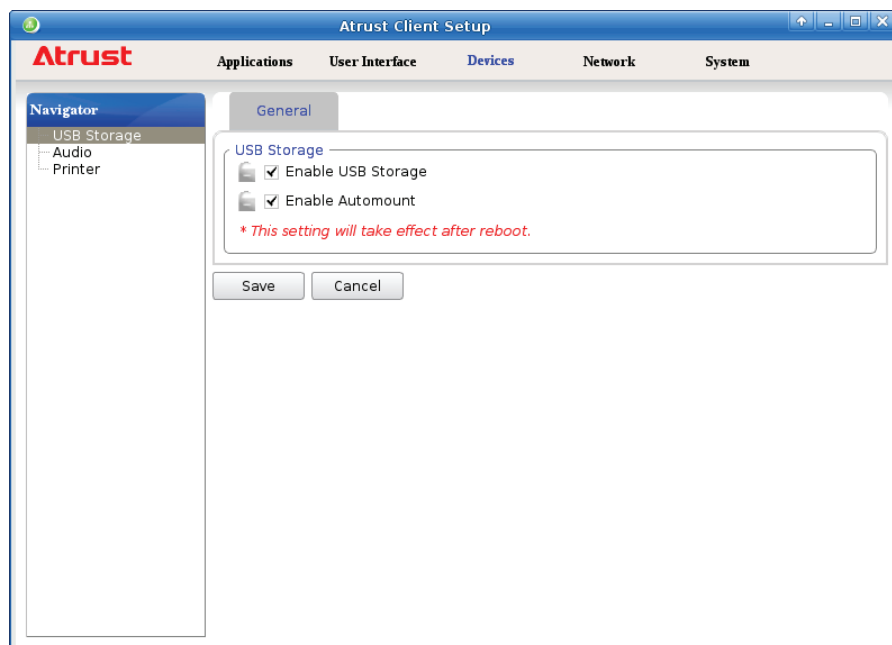

2. Tick/untick the checkboxes to choose the desired settings.

Settings for USB Storage Devices	
Item	Description
Enable USB Storage	<p>Tick/Untick this checkbox to allow/disallow the access of USB storage devices.</p> <p><b>NOTE:</b> To use the locally attached USB storage devices in an RDP / ICA / View session, the mapping of local USB storage devices must be enabled in this session's RDP / ICA / View connection settings. For detailed instructions and more related settings, please refer to sections:</p> <p>"4.6.5 Configuring Advanced RDP Connection Settings" on page 135  "4.6.11 Configuring Advanced ICA Connection Settings" on page 173  "4.6.14 Configuring Advanced View Connection Settings" on page 206</p>
Enable Automount	<p>Tick/Untick this checkbox to enable/disable the automount of USB storage devices.</p> <p><b>NOTE:</b> If this setting is disabled, users need to manually mount the attached USB storage devices. For detailed instructions, please refer to section "4.4.4 Manually Mount and Eject Attached USB Storage Devices" on page 88.</p>

3. Click **Save** to save your change.



**NOTE**

- For your changes to take effect, you need to restart your system.

#### 4.4.4 Manually Mount and Eject Attached USB Storage Devices



To mount/eject an attached USB storage device, please do the following:



**NOTE**

- If **Enable Automount** is checked (see section "4.4.3 Configuring Settings for USB Storage Devices" on page 87), then an attached USB storage device will be mounted automatically.

1. Right click the desktop icon of the attached USB storage device.
2. A popup menu appears.

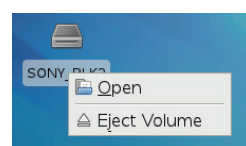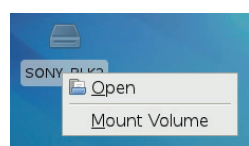

3. Click to select **Mount Volume/Eject Volume** to mount\ eject the attached USB storage device.

#### 4.4.5 Disabling or Enabling Attached Audio Devices


To disable/enable attached audio devices, please do the following:



##### NOTE

- If you disable locally attached audio devices, client users are not allowed to perform audio playback or recording with these devices in an RDP / ICA / View session.
- To perform audio playback or recording with local audio devices in an RDP / ICA / View session, you need to enable locally attached audio devices here (the **Audio** setting item under **Devices** tab) and configure audio related settings in the RDP / ICA / View connection settings. For detailed instructions, please refer to sections:
  - ✧ "4.6.5 Configuring Advanced RDP Connection Settings" on page 135
  - ✧ "4.6.11 Configuring Advanced ICA Connection Settings" on page 173
  - ✧ "4.6.14 Configuring Advanced View Connection Settings" on page 206

1. On Atrust Client Setup, click **Devices** > **Audio**.

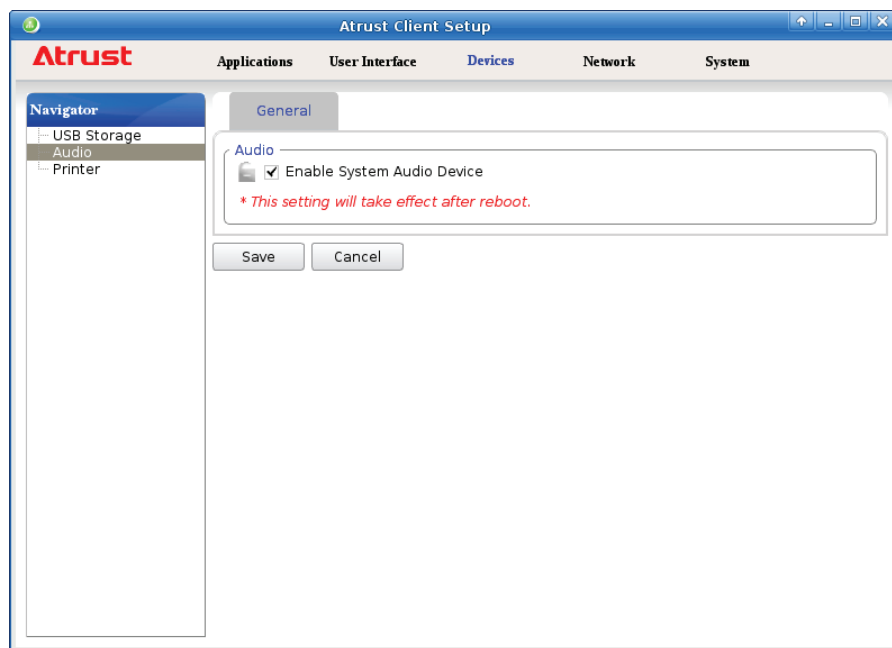

2. Click to check/uncheck **Enable System Audio Device**.
3. Click **Save** to confirm your selection.




##### NOTE


- The change will not take effect until mt180L has been restarted.

#### 4.4.6 Using USB Audio Devices


By default, your mobile thin client would use built-in speakers and/or audio devices attached to 3.5 mm audio ports. In case that you want to use a USB audio device, you need to change the default.

To configure default audio devices, please do the following:

1. Connect the desired USB audio device to your thin client.
2. On **Quick Connection** screen or **local** desktop, click  icon in the bottom-right corner to open the Mixer window.

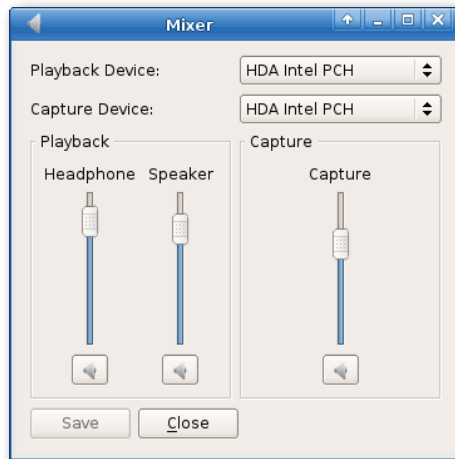

3. On the opened window, click the drop-down menu to select the USB PnP device.

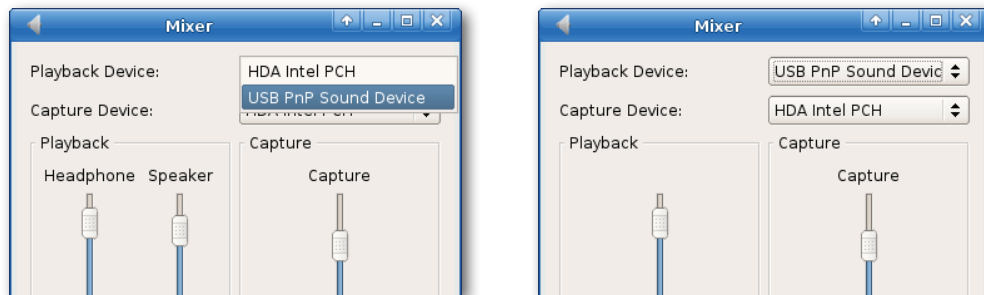

#### NOTE

- The default for Playback and Capture devices is **HDA Intel PCH**. Available options may vary with your thin client model.


4. Click **Save** to confirm.




#### 4.4.7 Adding a Local Printer

To add a local printer for your mt180L, please do the following:

1. Connect the desired printer to your mt180L and turn on the printer.
2. On Atrust Client Setup, click **Devices** > **Printer**.

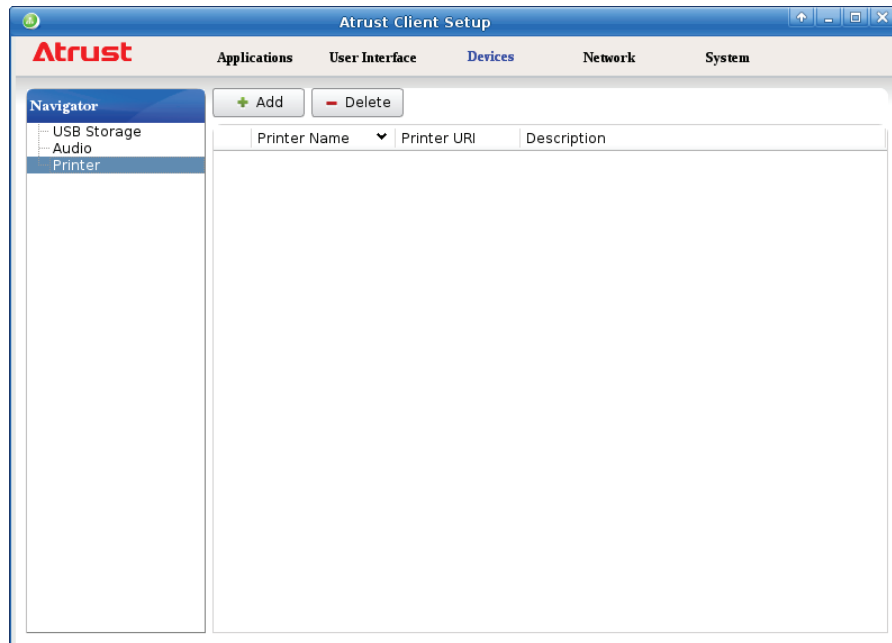


3. Click **Add** on the top of the Printer list.
4. The system automatically start searching for available local printers.
5. Upon completion, the discovered local printers will be listed on the Printer Port drop-down menu.
6. Click the Printer Port drop-down menu to select the desired local printer.



7. Fields in the Add Printer section will automatically change to fit the type of the selected printer.

- A field for the selected printer appears and the printer URI (Uniform Resource Identifier) data is automatically filled out in the field.

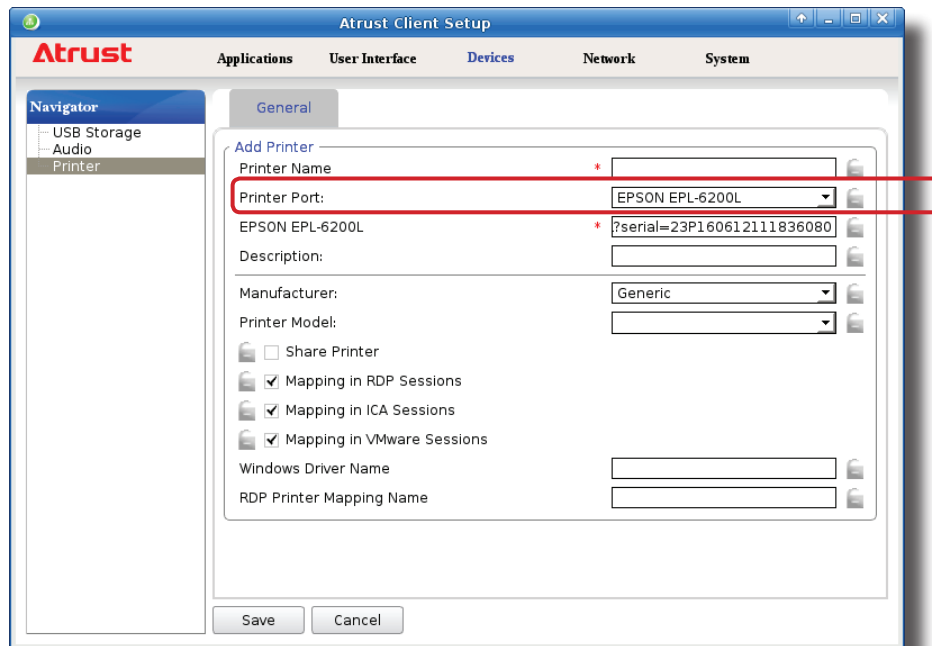

#### NOTE

- A URI (Uniform Resource Identifier) is a sequence of characters that is used to identify a resource on the Internet.

- Click the Manufacturer and Printer Model drop-down menus to select the manufacturer and model for the attached local printer.



#### NOTE

- For the printer to operate normally, you need to specify the correct information in these two fields. Otherwise, the printer would fail to work.


- Refer to the following table to configure desired settings.



#### NOTE

- You may need to provide the Windows driver name for your printer. For details, please refer to descriptions in the table.


- Type the desired printer name, and then click **Save** to apply.

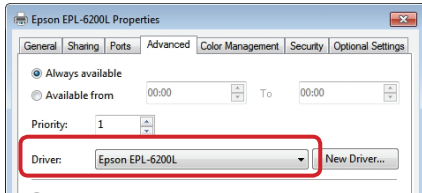Settings for Printers	
Item	Description
Share Printer	<p>Check/Uncheck to share the printer.</p> <p>Once <b>Share Printer</b> is checked, other computers in the same network segment will be allowed to use the printer.</p> <p>To add this shared printer for use on other computers, please do the following:</p> <ol style="list-style-type: none"> <li>1. For computers running a Windows Server operating system, such as Windows Server 2008 R2, please add the <b>Internet Printing Client</b> feature first (Click <b>Start</b> &gt; <b>All Programs</b> &gt; <b>Administrative Tools</b> &gt; <b>Server Manager</b> &gt; <b>Action</b> &gt; <b>Add Features</b> &gt; <b>Internet Printing Client</b>, follow the wizard to complete the task, and then restart your system).</li> <li>2. Click <b>Start</b> &gt; <b>Devices and Printers</b> &gt; <b>Add a printer</b> &gt; <b>Add a network, wireless or Bluetooth printer</b>.</li> <li>3. Click <b>Stop</b> to cancel the automatic printer search, and then click <b>The printer that I want isn't listed</b>.</li> <li>4. Under <b>Select a shared printer by name</b>, enter <code>http://IP address of your thin client:631/printers/Printer Name</code>.</li> </ol> <p><b>NOTE:</b> For example, if a printer is locally attached to your thin client and is added as a local printer through Atrust Client Setup with the printer name <b>EPS</b>, and the IP address of your thin client is 192.168.50.146. Here you should enter: <b><code>http://192.168.50.146:631/printers/EPS</code></b></p> <ol style="list-style-type: none"> <li>5. Click <b>Next</b> to continue.</li> <li>6. Select the manufacturer and model of the printer, and then click <b>OK</b> to install the correct driver.</li> <li>7. Upon completion, a success message appears. Click <b>Next</b> to continue.</li> <li>8. On the appeared page, click <b>Print a test page</b> to test the printer.</li> <li>9. Click <b>Finish</b> to apply. The printer is added to the Printers and Faxes list.</li> </ol>
Mapping in RDP Sessions	Check/Uncheck to enable/disable the locally connected printer in an RDP session.
Mapping in ICA Sessions	Check/Uncheck to enable/disable the locally connected printer in an ICA session.
Mapping in VMware Sessions	Check/Uncheck to enable/disable the locally connected printer in a View session.
Windows Driver Name	<p>Keep this field blank, if the printer works well in a session. In case that the printer fails to work, filling in this field may solve the problem.</p> <p>To find out the required information, please do the following:</p> <ol style="list-style-type: none"> <li>1. Attach the printer to a computer running a Windows OS, complete the required installation, and ensure the printer works well.</li> <li>2. Click <b>Start</b> &gt; <b>Devices and Printers</b>, and then, in the opened window, right click the printer to open a popup menu.</li> <li>3. On the popup menu, click to select <b>Printer properties</b>.</li> <li>4. In the opened window, click <b>Advanced</b>. The driver name is shown.</li> </ol> 
RDP Printer Mapping Name (for RDP sessions only)	Type in the desired printer name in a session (Windows desktop). If this field remains blank, the name you typed in the Printer Name field will be used.

#### 4.4.8 Adding a Network Printer

To add a network printer for your mt180L, please do the following:

1. Ensure that your mt180L is connected to the network and the desired network printer is turned on.
2. On Atrust Client Setup, click **Devices > Printer**.
3. Click **Add** on the top of the Printer list.
4. The system automatically starts searching for available local printers. Upon completion, the discovered local printers will be listed on the Printer Port drop-down menu.
5. Click the Printer Port drop-down menu to select the desired network printer. Three types of network printers are available: **TCP Network Printer**, **LPD Network Printer**, and **IPP Network Printer**.



6. Fields in the Add Printer section will automatically change to fit the type of the selected printer.
7. Type in the IP address of the network printer in the TCP Printer Server, LPD Printer Server, or IPP URI field.

**Add Printer**

Printer Name \*

Printer Port: TCP Network Printer

TCP Print Server \*

TCP Port 9100

Description:

**Add Printer**

Printer Name \*

Printer Port: LPD Network Printer

LPD Print Server \*

LPD Queue Name

Description:

**Add Printer**

Printer Name \*

Printer Port: IPP Network Printer

IPP URI \*

Description:


8. Click the Manufacturer and Printer Model drop-down menus to select the manufacturer and model for the desired network printer.
9. Refer to the table on page 93 to configure other printer settings, and then click **Save** to apply.

## 4.5 Configuring Network Settings

### 4.5.1 Network Tab Overview





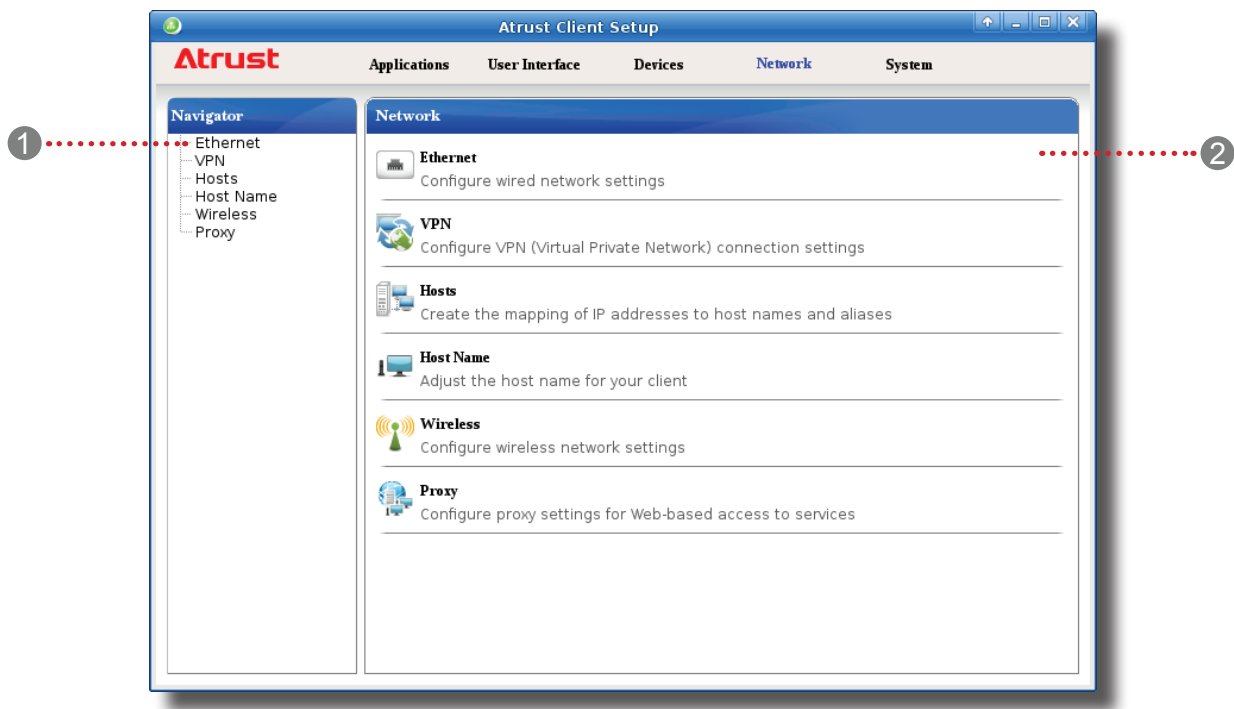

**Network** tab enables you to configure network settings for clients. To access available settings of **Network** tab, click the tab on Atrust Client Setup.

Network Tab Overview



Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>Network</b> tab or to select a setting entry under a selected setting item.
2	Configuration area	Configures setting values when a setting item or entry is selected.

## 4.5.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Network	Ethernet		Click to configure wired network settings.	4.5.3	97
	VPN		Click to configure VPN (Virtual Private Network) connection settings and create a VPN connection.	4.5.4 4.5.5	100 104
	Hosts		Click to create the mapping of IP addresses to names or aliases of hosts and create the Failover Cluster list.	4.5.6 4.5.7	105 107
	Host Name		Click to change the host name of your thin client.	4.5.8	109
	Wireless		Click to configure wireless network settings and create a wireless connection.	4.5.9 4.5.11 4.5.12	110 112 115
	Proxy		Click to configure proxy settings for Web-based access to services.	4.5.13	116

### 4.5.3 Configuring Wired Network Settings

The **Ethernet** setting enables you to configure the wired network settings for your mt180L thin client.

#### **Enabling or Disabling the Ethernet Network Interface**

To enable/disable the Ethernet network interface, please do the following:

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under Interface section, check/uncheck **Enable** to enable/disable the Ethernet network interface.

The screenshot shows the 'Ethernet' configuration window. The 'Interface' section has a checkbox labeled 'Enable' which is checked. The 'IP Address' section has a label 'IP Type:' followed by a dropdown menu currently showing 'DHCP'. The 'DNS' section has a label 'DNS Type:' followed by a dropdown menu currently showing 'Dynamic DNS (via DHCP)'. Each section has a small gear icon to its right.

3. Click **Save** to apply.

#### **Using a Dynamic IP Address**

To use a dynamic IP address, please do the following:

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under the IP address section, click the drop-down menu to select **DHCP** for the IP type field.



#### **NOTE**

- If **DHCP** is selected, the DHCP server over the network will automatically assign an IP address to your mt180L thin client. This is the default setting.

3. Click **Save** to apply.

#### **Using a Static IP Address**


To use a static IP address, please do the following:




#### **NOTE**

- It's recommended to use a dynamic IP address for your mt180L thin client in a corporate network environment.

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under the IP address section, click the drop-down menu to select **Static IP** for the IP type field.
3. The IP address, Subnet mask, and Gateway fields appear in the IP address section.

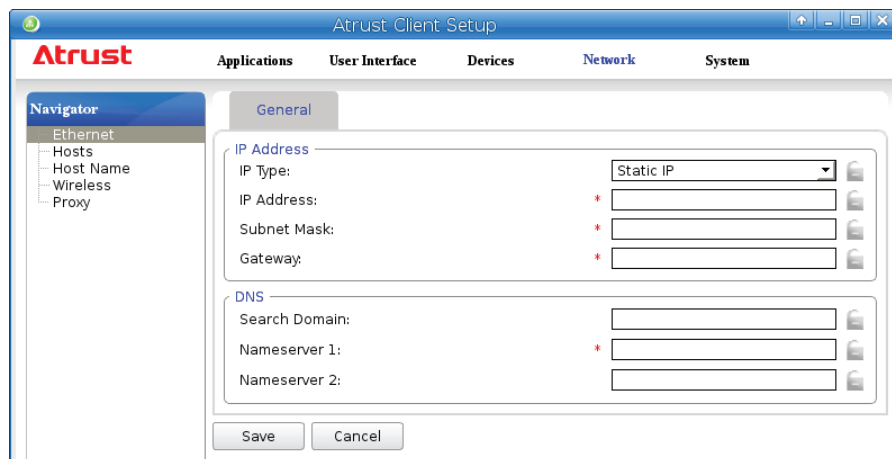

4. Type in the IP address, subnet mask, and gateway for your mt180L thin client.

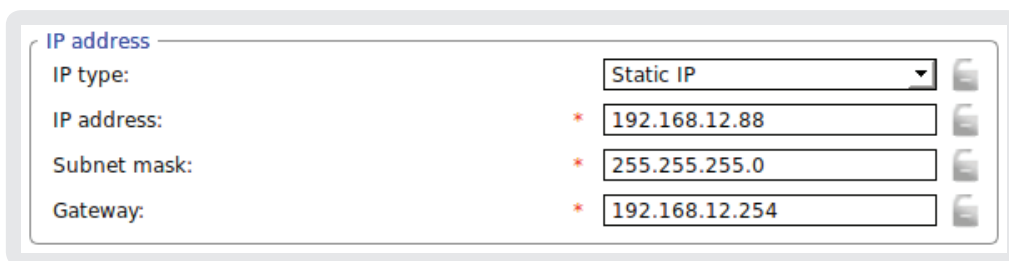

#### NOTE

- Consult your network administrator for a free IP address and other required data about the network to which your mt180L connects.
- The red asterisks indicate the required fields.

5. Click **Save** to apply.



#### NOTE

- You need to further specify DNS server addresses manually if you choose to use a static IP address.

### Obtaining DNS Server Addresses Automatically

To obtain DNS Server addresses automatically, please do the following:



#### NOTE

- You cannot obtain DNS server addresses automatically through the DHCP server if you choose not to get the IP address via the DHCP server.



1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under the DNS section, click the drop-down menu to select **Dynamic DNS (via DHCP)** for the DNS type field.
3. Click **Save** to apply.

### **Specifying DNS Server Addresses Manually**


To specify DNS Server addresses manually, please do the following:

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under the DNS section, click the drop-down menu to select **Manual setting**.
3. The **Search domain**, **Nameserver 1**, and **Nameserver 2** fields appear in the DNS section.



#### **NOTE**

- If you choose to use a static IP address for your mt180L thin client, then you need to specify DNS server addresses manually. In this case, the DNS type field will not appear for you to select **Manual setting** or **Dynamic DNS (via DHCP)**.

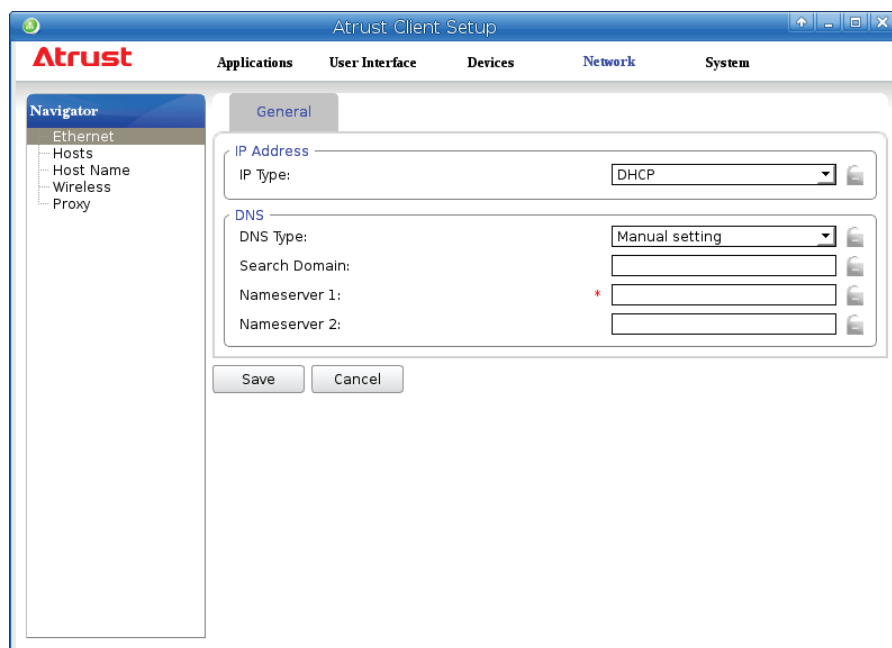

4. Type in the preferred DNS server address in the Nameserver 1 field and the alternate DNS server address in the Nameserver 2 field if any.



#### **NOTE**

- Specifying a domain name in the Search Domain field will enable your system to discover a computer in that domain simply with its computer name rather than its FQDN (Fully Qualified Domain Name).

5. Click **Save** to apply.

#### 4.5.4 Establishing and Stopping a VPN connection

The **VPN** setting enables you to establish/stop a virtual private network connection for your t180L/t180LB.




#### NOTE

- The **VPN** setting also allows you to configure and manage virtual private network settings. For instructions on how to configure and manage virtual private network settings, please refer to section “4.5.5 Configuring Virtual Private Network Settings” on page 104.

#### Adding a Virtual Private Network

To add a virtual private network, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.

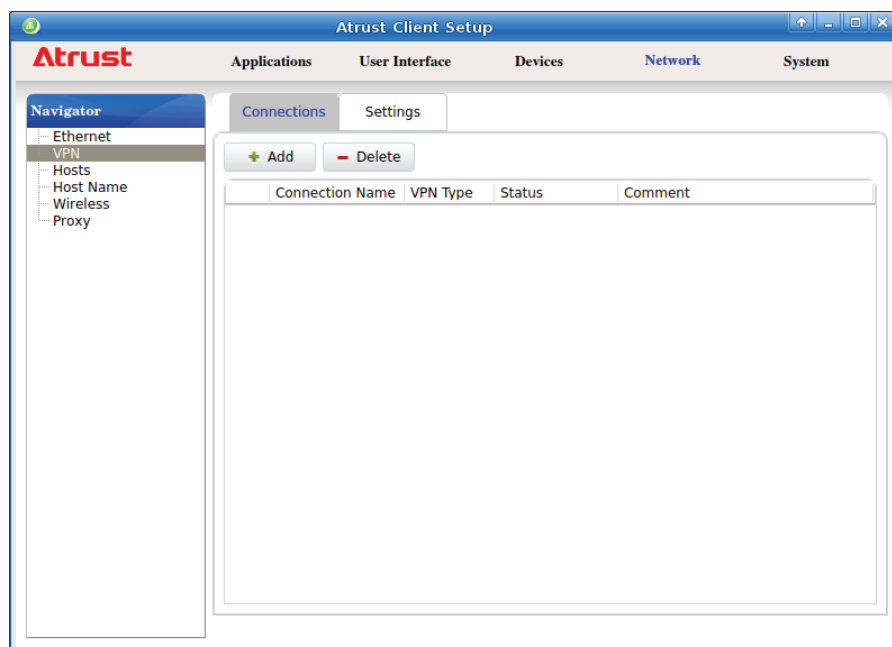


#### NOTE

- If you haven't created any entry, the Virtual Private Network list will be empty.

2. Click **Add** on the top of the Virtual Private Network list.

- On **General** tab, click the drop-down menu to select the desired VPN type. Three types are available: **PPTP**, **L2TP**, and **Cisco AnyConnect**.

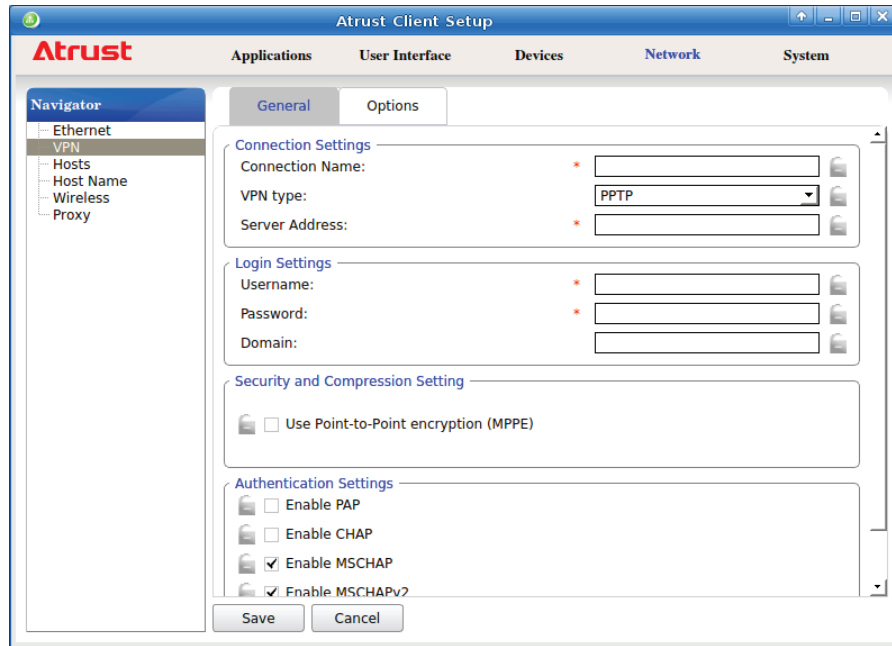

**NOTE**

- The setting items will vary with the selected VPN type.

- Type in or click drop-down menus to provide information about configuration and authentication.



**NOTE**


- Consult your network administrator for required information on configuration and authentication.

- On **Options** tab, configure the DNS-related settings if needed.
- Click **Save** to add the virtual private network.

### ***Establishing a Virtual Private Network Connection***

To establish a virtual private network connection for your t180L/t180LB, please do the following:


- On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.

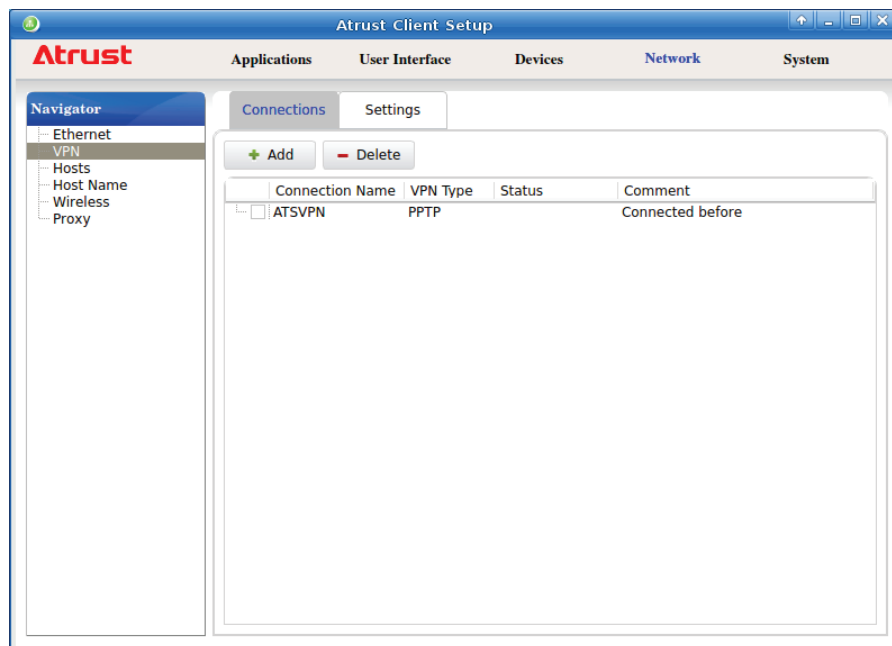

#### NOTE


- If you haven't created any entry, the Virtual Private Network list will be empty. For instructions on adding a virtual private network, please see the preceding topic.

2. Click to check the desired virtual private network. The **Connect** button then appears on the top of the Virtual Private Network list.

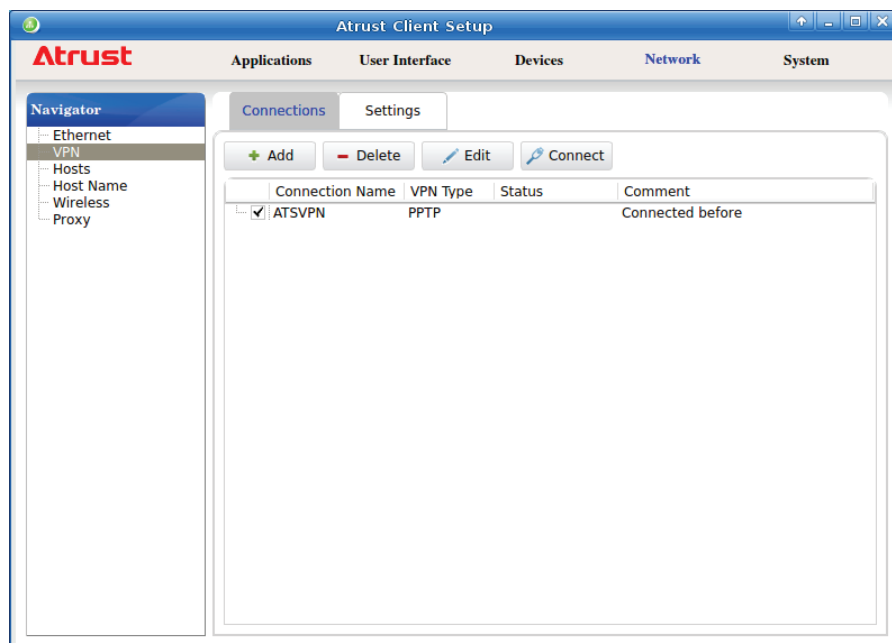


3. Click **Connect** to create a virtual private network connection through the selected network entry.

4. Upon completion, the Status column of the virtual private network will show **connected**.

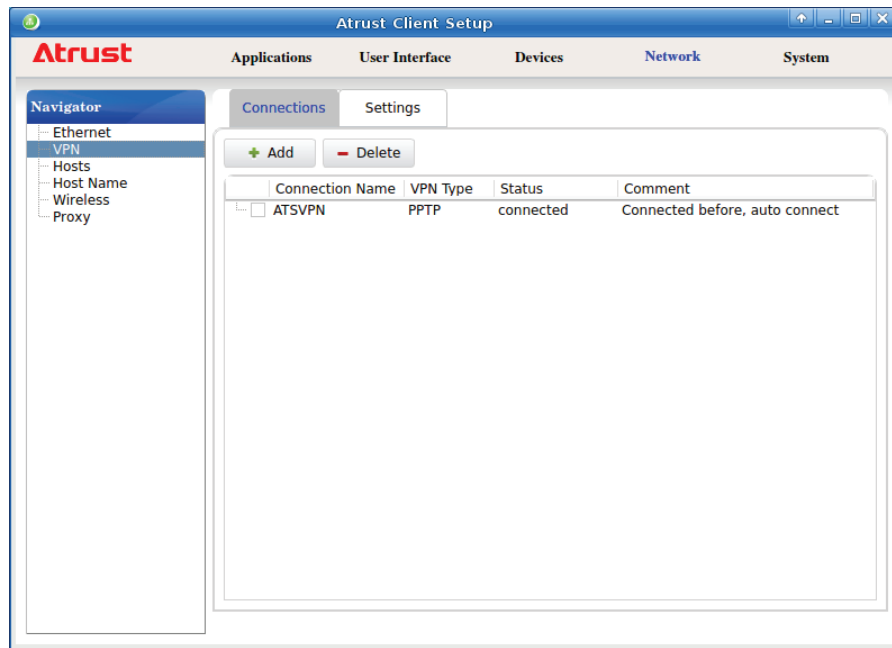

### **Stopping a Virtual Private Network Connection**

To stop a virtual private network connection, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.
2. Click to check the desired virtual private network. The Disconnect  Disconnect button appears on the top of the Virtual Private Network list.
3. Click **Disconnect** to stop the virtual private network connection.

### **Deleting a Virtual Private Network**


To delete a virtual private network, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.
2. Click to check the desired virtual private network.
3. Click **Delete** to remove the selected virtual private network.

#### 4.5.5 Configuring Virtual Private Network Settings

##### *Adjusting Connection settings for a Virtual Private Network*


To adjust connection settings for a virtual private network, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.
2. Click to check the desired virtual private network. The Edit  button appears on the top of the Virtual Private Network list.
3. Click **Edit** to adjust the settings, and then click **Save** to apply.

##### *Configuring General Settings for Virtual Private Network Connections*

To configure general settings for virtual private network connections, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN**, and then click **Settings** sub-tab.

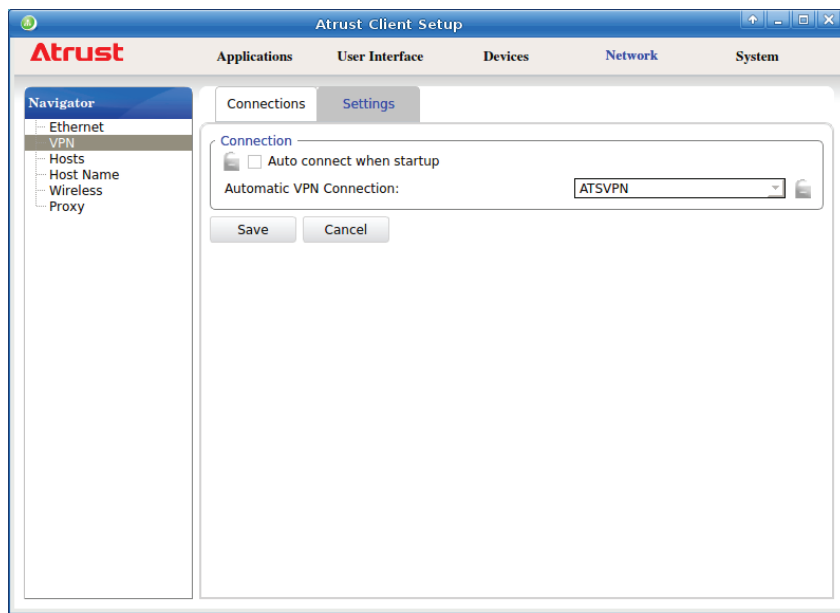

2. Under the Connection section, click to check/uncheck **Auto connect when startup** to allow/disallow automatic virtual private network connection after system startup. When this feature is enabled, select the desired virtual private network through the drop-down menu.


### 4.5.6 Creating the Mapping of IP Addresses to Names of Hosts

Atrust Client Setup allows you to use the name or alias of a host instead of its IP address wherever you need to specify an IP address while configuring client settings. To use this feature, first you need to create the mapping of IP addresses to names or aliases of hosts.

#### **Creating the Mapping List**

To create the mapping of IP addresses to names or aliases, please do the following:

1. On Atrust Client Setup, click **Network** > **Hosts** to open the Host list.

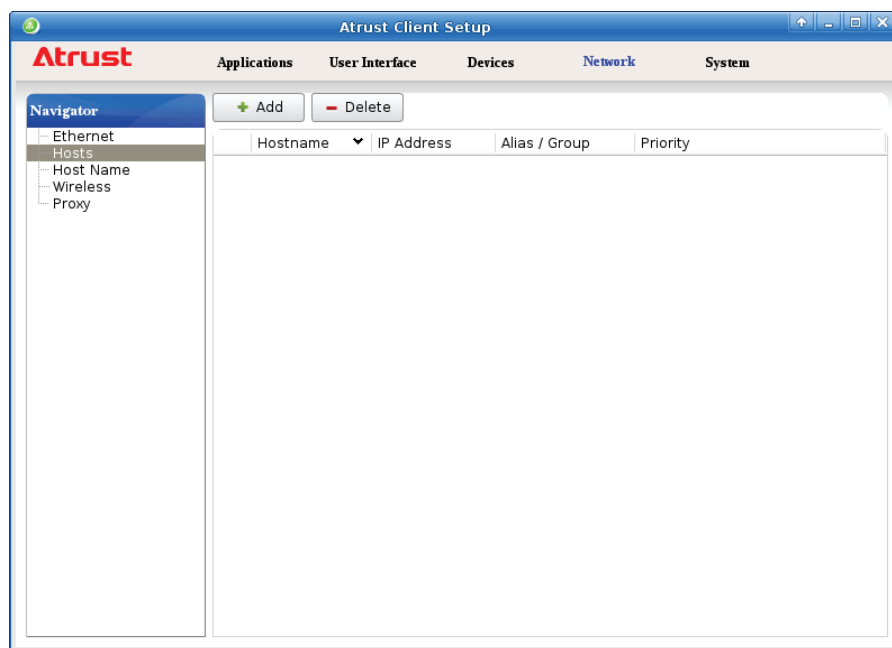

2. Click **Add** to start adding a new host entry.
3. Type in the name, IP address, alias of a host, leave the Priority field blank, and then click **Save** to apply.

**Hosts Table Settings**


Hostname:	*	WS2012R2RDSH	
IP Address:	*	192.168.7.12	
Alias / Group:		WS12	
Priority:			



#### **NOTE**

- If your host belongs to a domain, please don't enter the FQDN (Fully Qualified Domain Name) or **full** computer name in the Hostname field. Enter **only** the computer name of the host in this required field.
- You need to type a number in the Priority field **only when** creating a Failover Cluster list to allow host failover feature. For details, please refer to "4.5.7 Configuring the Failover Cluster List" on page 107.

- The newly added entry appears in the Host list.

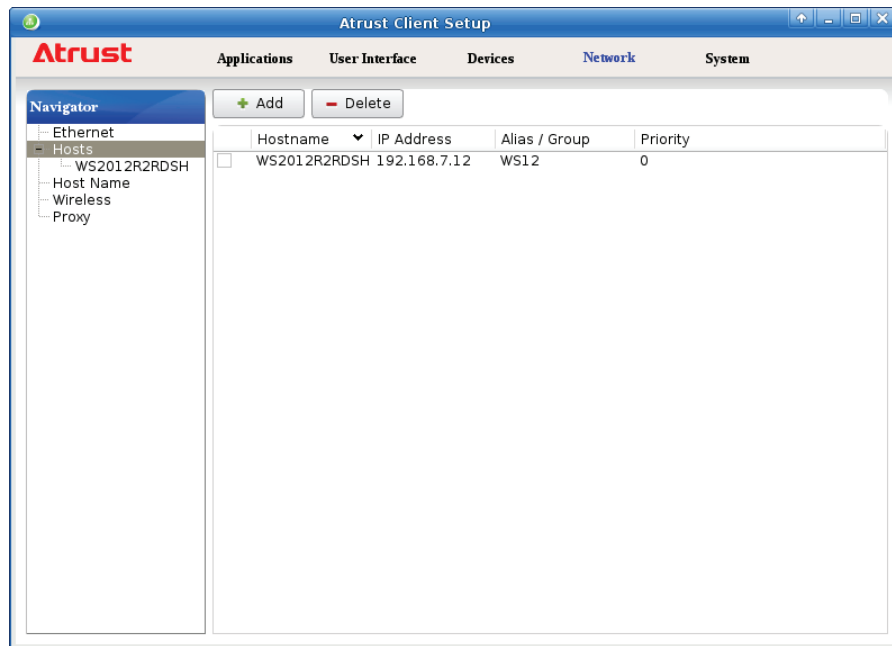

- Repeat steps 2 through 3 to add another new entry.
- Now you can use the name or alias of a host instead of its IP address wherever you need to specify an IP address on Atrust Client Setup while configuring client settings.

### Managing the Mapping List

To manage the Mapping list, please do the following:

- On Atrust Client Setup, click **Network** > **Hosts** to open the Host list.
- Select to manage entries on the Host list.
  - To adjust the settings of an entry, double click the entry, or check off an entry, and then click the **Edit** button on the top of the Mapping list.
  - To delete an entry, check off the entry, and then click **Delete** on the top of the Mapping list.
  - To delete multiple entries, check off all the desired entries, and then click **Delete**. A window appears prompting for confirmation. Click **Yes** to confirm.




### 4.5.7 Configuring the Failover Cluster List

Atrust Client Setup allows you to create the Failover Cluster list, maintaining the high availability of services from that group of servers (failover cluster).

#### **Creating the Failover Cluster List**

To create a Failover Cluster list, please do the following:

1. On Atrust Client Setup, click **Network** > **Hosts** to open the Host list.

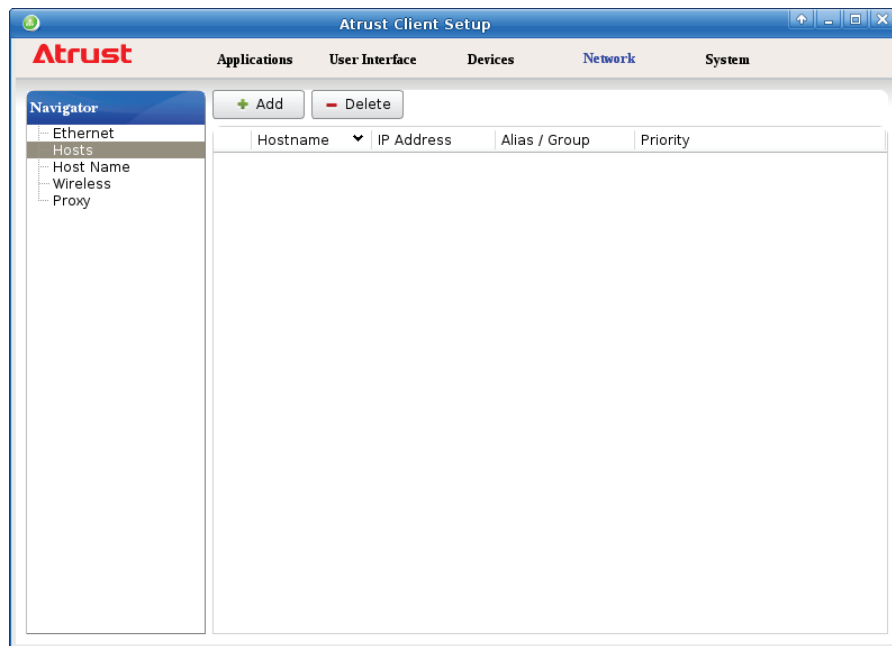

2. Click **Add** to start adding a new host entry.
3. Type in the name, IP address, alias and also cluster (group) name, priority order in the cluster (group), and then click **Save** to apply.

**Hosts Table Settings**


Hostname:	*	<input type="text" value="ADM1"/>	
IP Address:	*	<input type="text" value="192.168.7.21"/>	
Alias / Group:		<input type="text" value="ADM"/>	
Priority:		<input type="text" value="1"/>	



#### **NOTE**

- If your host belongs to a domain, please don't enter the FQDN (Fully Qualified Domain Name) or **full** computer name in the Hostname field. Enter *only* the computer name of the host in this required field.

4. Repeat steps 2 though 3 to add another new entry.
5. All added entries appear on the Host list.

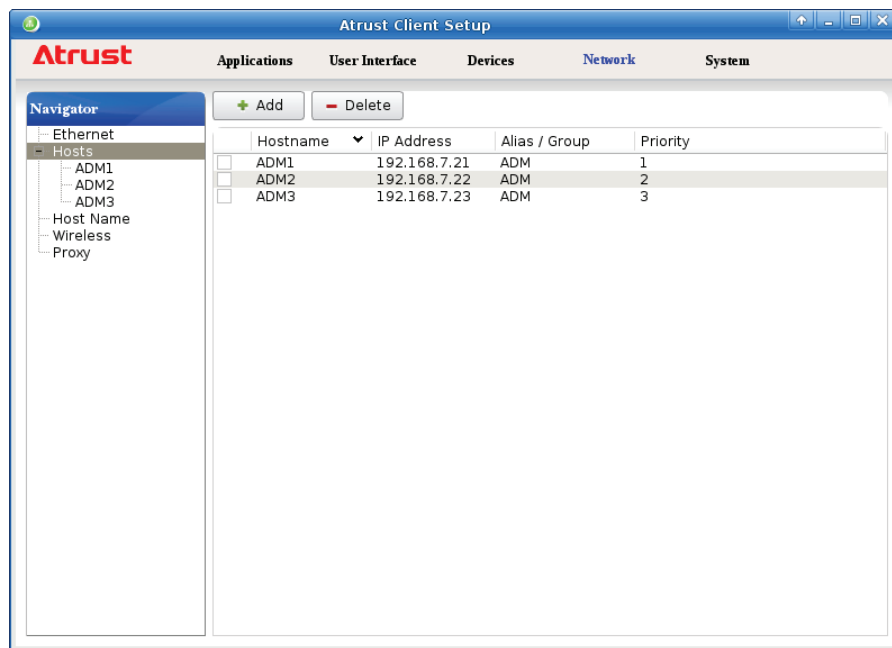

6. Your mt180L will follow the given priority order while connecting to this failover cluster (group).

	Hostname	IP Address	Alias / Group	Priority
<input type="checkbox"/>	ADM1	192.168.7.21	ADM	1
<input type="checkbox"/>	ADM2	192.168.7.22	ADM	2
<input type="checkbox"/>	ADM3	192.168.7.23	ADM	3

### Managing the Failover Cluster List


To manage the Host list, please do the following:

1. On Atrust Client Setup, click **Network** > **Hosts** to open the Host list.
2. Select to manage entries on the Host list.
  - To adjust the settings of an entry, double click the entry, or check off an entry, and then click the **Edit** button on the top of the Host list.
  - To delete an entry, check off the entry, and then click **Delete** on the top of the Host list.
  - To delete multiple entries, check off all the desired entries, and then click **Delete**. A window appears prompting for confirmation. Click **Yes** to confirm.

#### 4.5.8 Changing the Host Name of Your Thin Client

To change the host name of your thin client, please do the following:

1. On Atrust Client Setup, click **Network** > **Host Name**.
2. Change the default host name of your thin client.

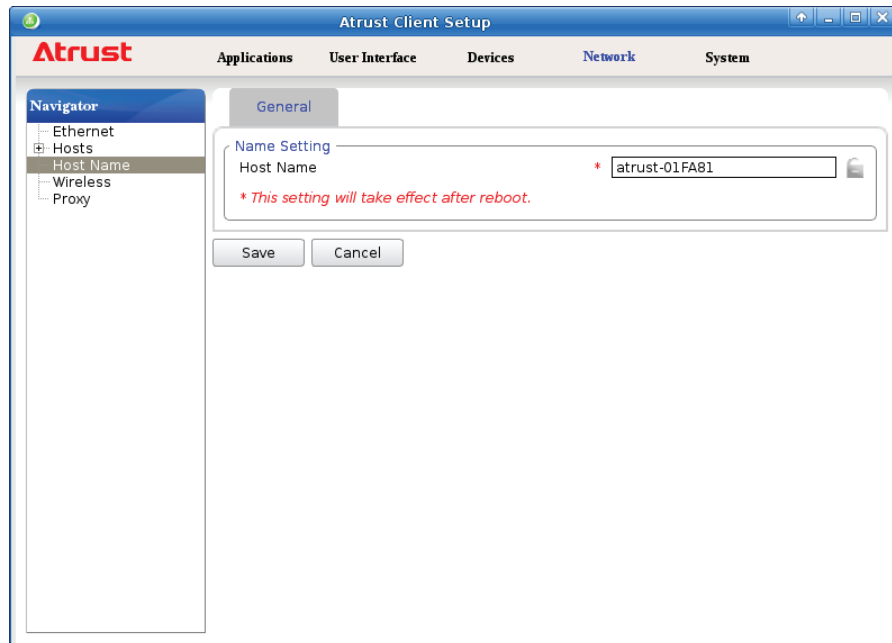

3. Click **Save** to confirm.
4. A restart is required for the change to take effect.

#### 4.5.9 Enabling or Disabling the Wireless Interface


To enable or disable the wireless interface, please do the following:



#### NOTE

- By default, the wireless interface is *enabled*.

1. On Atrust Client Setup, click **Network** > **Wireless**, and then click **Wireless** sub-tab.

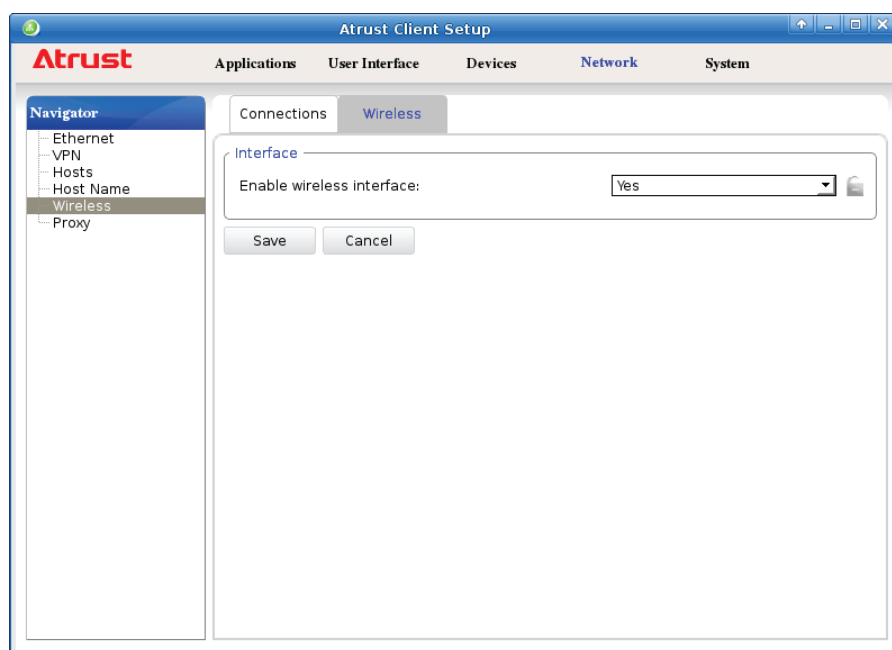


2. Under the Interface section, click the drop-down menu to enable / disable the wireless network interface.
3. Click **Save** to apply.

#### 4.5.10 Configuring the Trigger Threshold for Roaming

To configure the roaming trigger threshold for your wireless connection, please do the following:

1. On Atrust Client Setup, click **Network** > **Wireless**, and then click **Wireless** sub-tab.

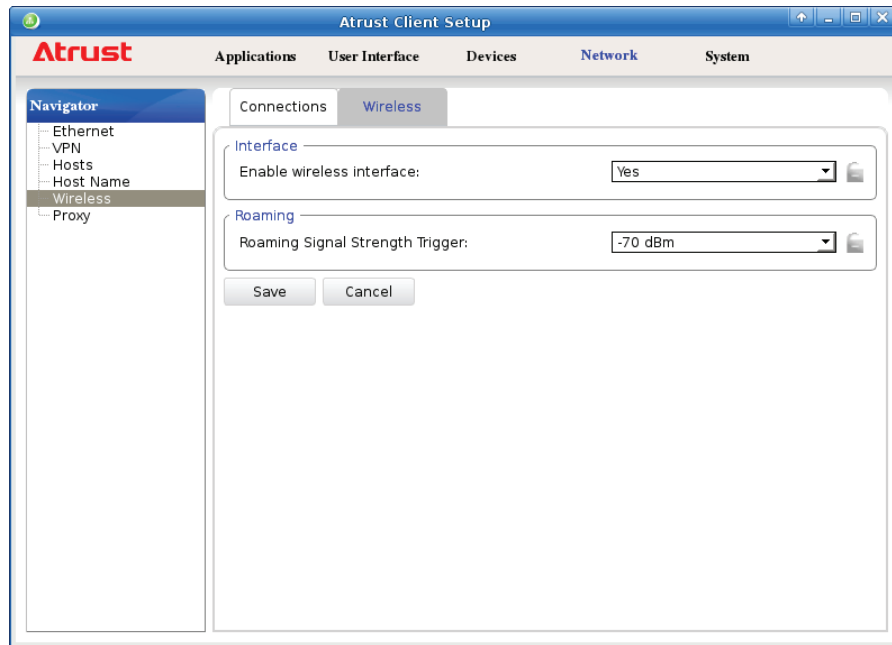

2. Under the Roaming section, click the drop-down menu to choose the desired trigger threshold.



#### NOTE

- To disable wireless roaming, you can choose **No roaming** here.

3. Click **Save** to apply.

#### 4.5.11 Establishing and Stopping a Wireless Connection


**NOTE**

- Ensure that the wireless interface is **enabled**. Please refer to “Enabling or Disabling the Wireless Interface” on page 110.


##### **Establishing a Wireless Network Connection**


To establish a wireless network connection for your mt180L thin client, please do the following:

1. On Atrust Client Setup, click **Network > Wireless** to open the Wireless Network list.

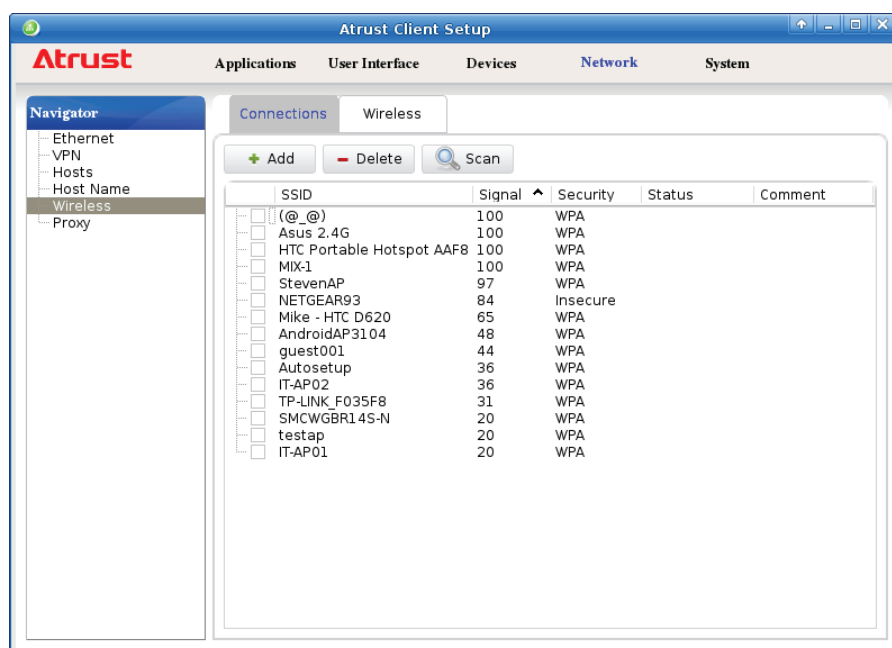**NOTE**

- Your mt180L will perform network discovery **once** and specify all available wireless networks. To refresh, click **Scan** on the top of the Wireless Network list.

2. Click to check the desired wireless network. The Connect  button then appears on the top of the Wireless Network list.

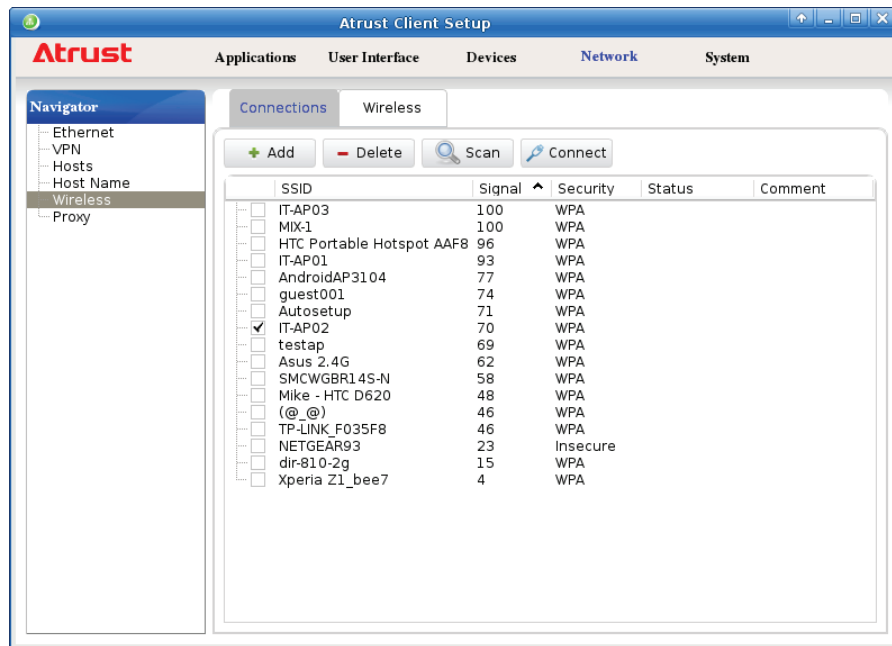

3. Click **Connect** to create a wireless network connection through the selected wireless network.
4. A window appears prompting for confirmation or authentication.



#### NOTE


- If you ever accessed this wireless network before, the password will be automatically recorded for future access. In this case, you don't need to provide the password again; you only need to confirm the establishment of a wireless connection.
- Consult your network administrator for required information on authentication.

5. Type in the required password, and then click **Connect** to continue. Or, click **OK** to confirm the establishment of a wireless connection.
6. Upon completion, the Status column of the wireless network will show **connected**.

	SSID	Signal	Security	Status	Comment
<input type="checkbox"/>	(@_@)	100	WPA		
<input type="checkbox"/>	IT-AP03	100	WPA		
<input type="checkbox"/>	IT-AP02	97	WPA	connected	Connected before
<input type="checkbox"/>	Mike - HTC D620	97	WPA		
<input type="checkbox"/>	testap	80	WPA		
<input type="checkbox"/>	HTC Portable Hotspot AAF8	78	WPA		
<input type="checkbox"/>	Xperia Z1_bee7	72	WPA		
<input type="checkbox"/>	AndroidAP3104	71	WPA		
<input type="checkbox"/>	TP-LINK_F035F8	70	WPA		

### Stopping a Wireless Network Connection

To stop a wireless network connection, please do the following:

1. On Atrust Client Setup, click **Network > Wireless** to open the Wireless Network list.
2. Click to check the desired wireless network. The Disconnect  button appears on the top of the Wireless Network list.
3. Click **Disconnect** to stop the wireless network connection.

### Adding a Wireless Network

In case that you cannot find the desired wireless network in the Wireless Network list, you can manually add it.

To add a wireless network to the Wireless Network list, please do the following:

1. On Atrust Client Setup, click **Network > Wireless** to open the Wireless Network list.
2. Click **Add** on the top of the Wireless Network list.
3. On the opened window, type the wireless network name (SSID), select the used wireless security method, and then provide the required information.



4. Click **Connect** to create a wireless connection.



#### NOTE

- For instructions on how to configure the IP address settings, please refer to section "4.5.3 Configuring Wired Network Settings" on page 97.
- The default is to use a dynamic IP address assigned by the DHCP server.

5. Upon completion, the added wireless network will be shown on the Wireless Network list and **connected** will be shown on its Status column.

### Deleting a Wireless Network

To delete a wireless network, please do the following:

1. On Atrust Client Setup, click **Network > Wireless** to open the Wireless Network list.
2. Click to check the desired wireless network, and then click **Delete** to remove the selected wireless network.



#### NOTE


- Your mt180L detects available wireless networks automatically and put the discovered networks on the Wireless Network list. A deleted wireless network may therefore appear again on the list, but the connection settings, including the stored authentication data, will be removed.




#### 4.5.12 Configuring Wireless Connection Settings

##### *Adjusting Connection settings for a Wireless Network*

To adjust connection settings for a wireless network, please do the following:

1. On Atrust Client Setup, click **Network > Wireless** to open the Wireless Network list.
2. Click to check the desired wireless network which is currently connected. The Edit  button appears on the top of the Wireless Network list.
3. Click **Edit** to adjust the settings:

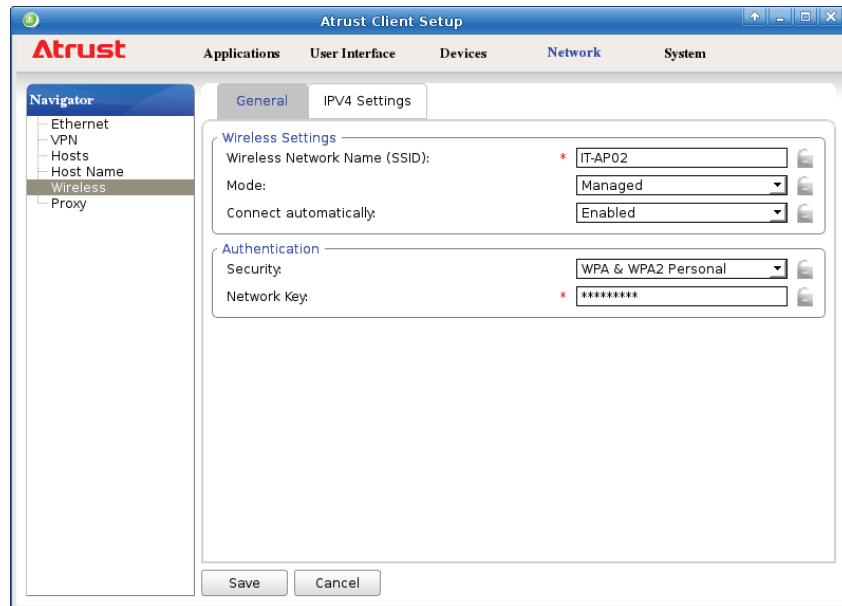

- On the General tab, click the drop-down menu to configure the automatic connection when this wireless network is in range and other connection settings.



##### **NOTE**

- By default, your client will connect to a wireless network automatically if it ever connected to that network successfully.

- On the IPV4 Settings tab, click the drop-down menu or type values in fields to configure IP settings.



##### **NOTE**

- For instructions on how to configure connection settings on the General tab, please see section “4.5.11 Establishing and Stopping a Wireless Connection” on page 112. For instructions on how to configure IP address settings on the IPV4 Settings tab, please see section “4.5.3 Configuring Wired Network Settings” on page 97.

4. Click **Save** to apply.

### 4.5.13 Configuring Proxy Settings for Web-based Access to Services

To configure proxy settings for Web-based access to services, please do the following:



#### NOTE


- Settings available here are only applicable to services that use Web-based access, such as (Microsoft) Remote Web Access and (Citrix) Web Logon connection types.

1. On Atrust Client Setup, click **Network > Proxy**.
2. Click the Mode drop-down menu to select the desired configuration mode. Four modes are available: **No Proxy**, **Auto-detect proxy settings**, **Manual proxy configuration**, and **Auto proxy configuration**.



#### NOTE

- The setting items will vary with the selected mode.

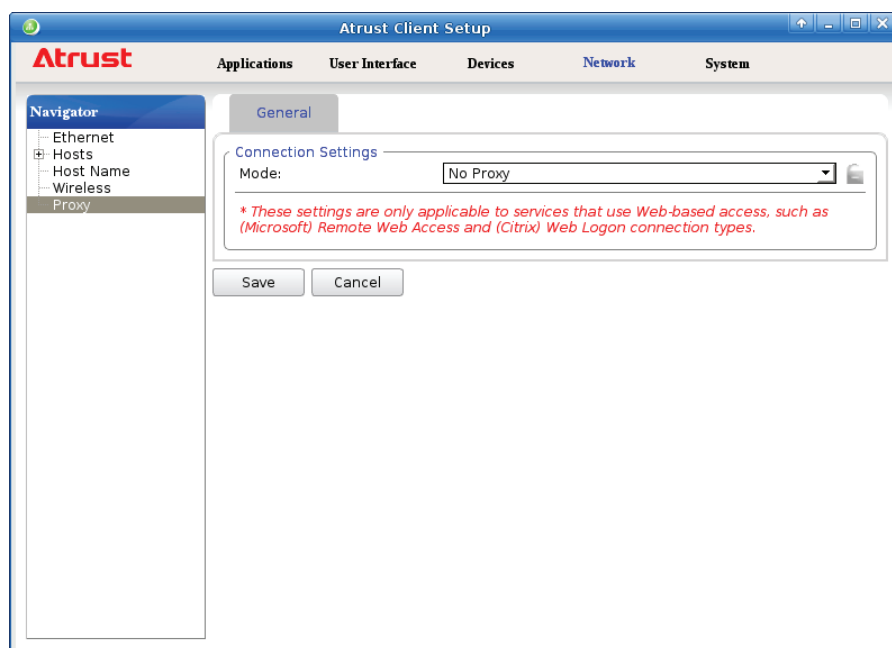

3. Provide the data as required. Please refer to the following table for a description of each setting item.


Connection Settings		
Item	Description	
Mode	Click to select the desired proxy configuration mode.	
	Mode	Description
	No Proxy	Don't use any proxy server.
	Auto-detect proxy settings	Detects the proxy settings for your network automatically.
	Manual proxy configuration	Configures the proxy settings manually.
	Auto proxy configuration	Loads proxy settings automatically through the connection to a proxy configuration file.
Mode: Manual proxy configuration		
HTTP Proxy	Provides the IP address of your HTTP proxy server.	
Port	Provides the port number which your HTTP proxy server uses.	
No Proxy for	Provides No Proxy list. Don't use any proxy server while connecting to the specified URLs.	
Mode: Auto proxy configuration		
URL	Provides the URL of a proxy configuration file where proxy settings can be loaded through the network.	

## 4.6 Configuring Service Access Settings

### 4.6.1 Applications Tab Overview



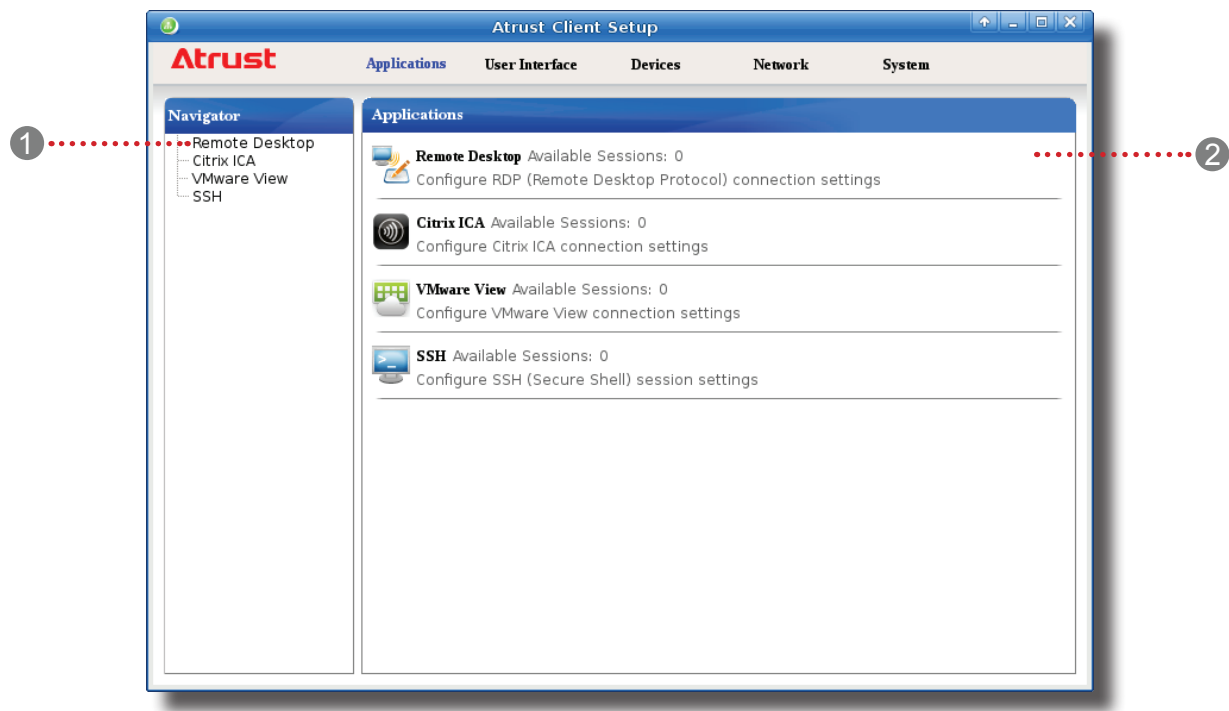

**Applications** tab enables you to configure settings for service access on clients. To access available settings of **Applications** tab, click the tab on Atrust Client Setup.

Applications Tab Overview



Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>Applications</b> tab or to select a setting entry under a selected setting item.
2	Configuration area	Configures setting values when a setting item or entry is selected.

## 4.6.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Applications	Remote Desktop		Click to configure RDP (Remote Desktop Protocol) connection settings and create shortcuts on the local desktop and START menu for Remote Desktop sessions.	4.6.3 4.6.4 4.6.5	120 129 135
	Citrix ICA		Click to configure ICA (Independent Computing Architecture) connection settings and create shortcuts on the local desktop and START menu for ICA sessions.	4.6.6 4.6.7 4.6.8 4.6.9 4.6.10 4.6.11	150 163 164 165 166 173
	VMware View		Click to configure VMware View connection settings and create shortcuts on the local desktop and START menu for View sessions.	4.6.12 4.6.13 4.6.14	202 204 206
	SSH		Click to configure SSH (Secure SHell) connection settings and create shortcuts on the local desktop and START menu for SSH sessions.	4.6.15 4.6.16	211 213

4.6.3    Configuring Basic RDP Connection Settings

The **Remote Desktop** setting allows you to configure RDP (Remote Desktop Protocol) connection settings and create shortcuts on the local desktop and START menu for service access. You can access remote desktops or applications for work simply through these shortcuts.



NOTE

- For more information on Mirosoft Remote Desktop services, please visit Microsoft website at [www.microsoft.com](http://www.microsoft.com).


Three connection types are available:

Connection Type	Description	Page
Remote Desktop	Select to access remote desktop/application services.	121
Remote Web Access	Select to access remote application services through a Web browser.	123
Web Feed	Select to access remote application services through published desktop shortcuts.	125

### Connection Type: Remote Desktop

To quickly configure RDP connection settings for the Remote Desktop connection type, please do the following:


1. On Atrust Client Setup, Click **Applications > Remote Desktop**.
2. The RDP Connection list appears in the Configuration area.

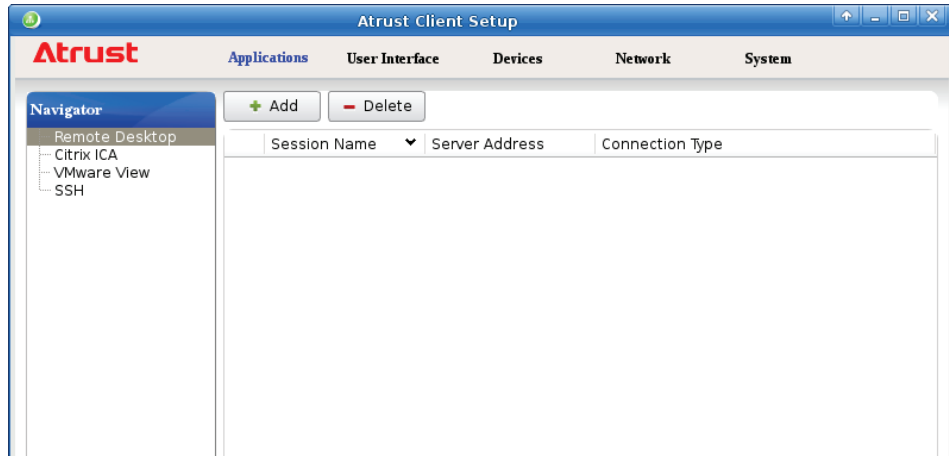

#### NOTE

- If you haven't created any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

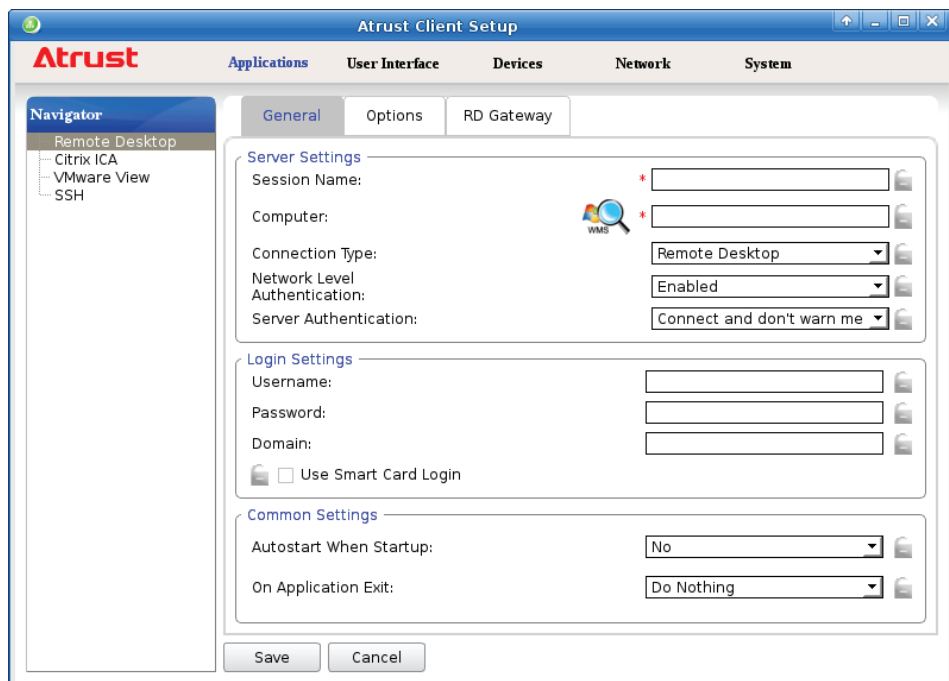

4. On **General** sub-tab, type in the session name and the server/virtual machine address under the Server Settings section.




**NOTE**

- The red asterisks indicate the required fields.
- The remote service-hosted computer can be a physical server or a virtual machine. Please visit Microsoft's websites at [www.microsoft.com](http://www.microsoft.com) or [support.microsoft.com](http://support.microsoft.com) for more information.
- mt180L supports up to two Remote Desktop sessions at the same time.
- Windows® RemoteFX™ is the technology that offers a rich user experience over a network for remote desktop users.



**NOTE**

- To create an entry of RDP connection settings for MultiPoint™ Remote Desktop sessions, please do the following:
  1. In the Server Settings section, click  to start discovering MultiPoint™ Server systems over your network.
  2. In the opened window, click the drop-down menu to select the desired server, and then click **OK** to confirm.
  3. The name and IP address of the selected server will be filled out in the corresponding fields automatically.
- The default session name will be the name of the selected MultiPoint host server, but you still can change the default.
- Windows® MultiPoint™ Server is a shared resource technology. This Windows-based operating system enables a host server to power multiple and independent stations, allowing users to share the computing power of one single server. Based on this operating system, Atrust offers a complete solution including both servers and clients. For more information, please visit our website at [www.atrustcorp.com](http://www.atrustcorp.com).

5. Click **Save** to add this RDP connection entry.

6. The shortcuts for Remote Desktop services are automatically created on the local desktop and START menu.



**NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced RDP connection settings for service access. For more information on other available settings, please refer to section "4.6.5 Configuring Advanced RDP Connection Settings" on page 135.



### Connection Type: Remote Web Access


To quickly configure RDP connection settings for the Remote Web Access connection type, please do the following:



#### NOTE

- Atrust mt180L supports only RD Web Access based on Windows Sever 2012 R2; Windows Server 2008 R2 based is not supported.


1. On Atrust Client Setup, Click **Applications** > **Remote Desktop**.
2. The RDP Connection list appears in the Configuration area.

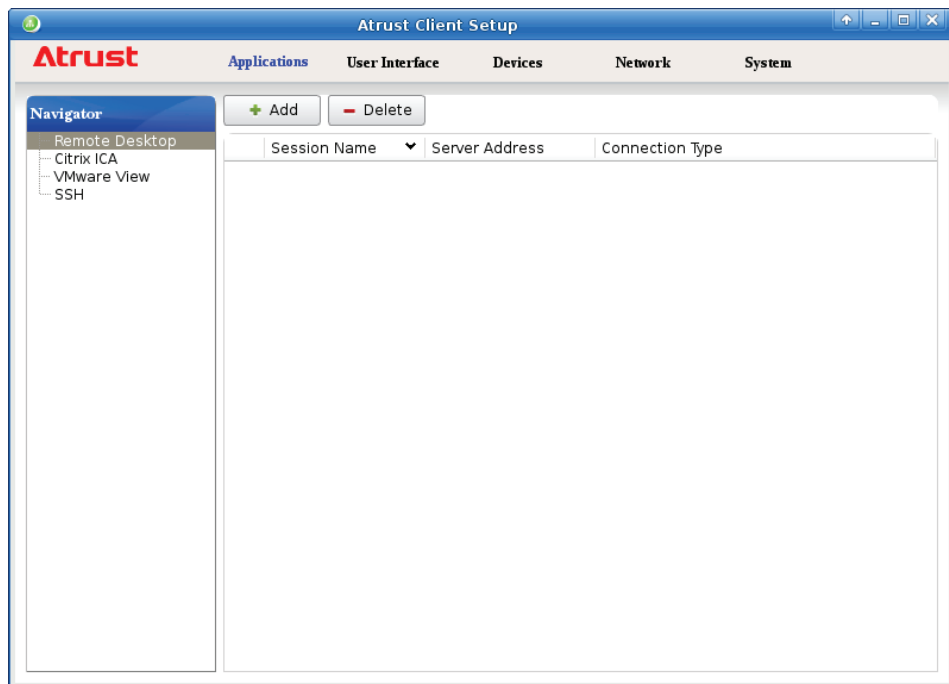


#### NOTE

- If you haven't created any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

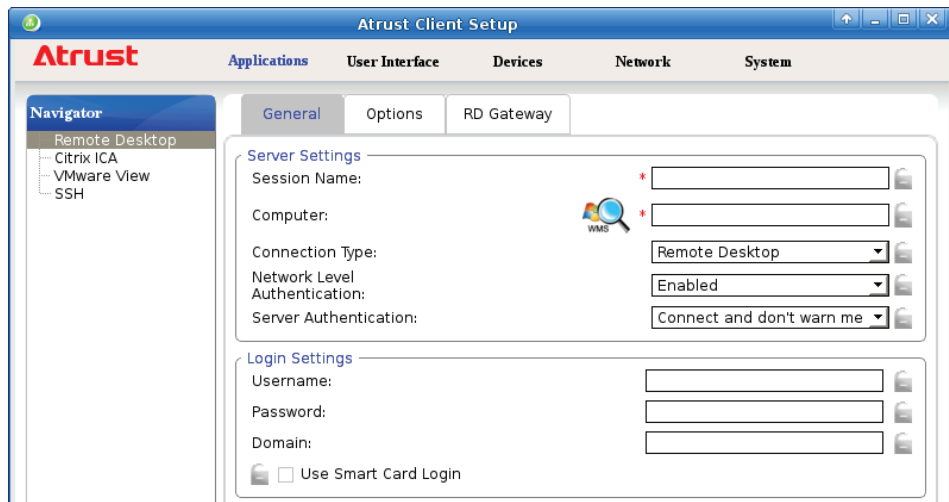

4. On **General** sub-tab, click the Connection Type drop-down menu to select **Remote Web Access**.

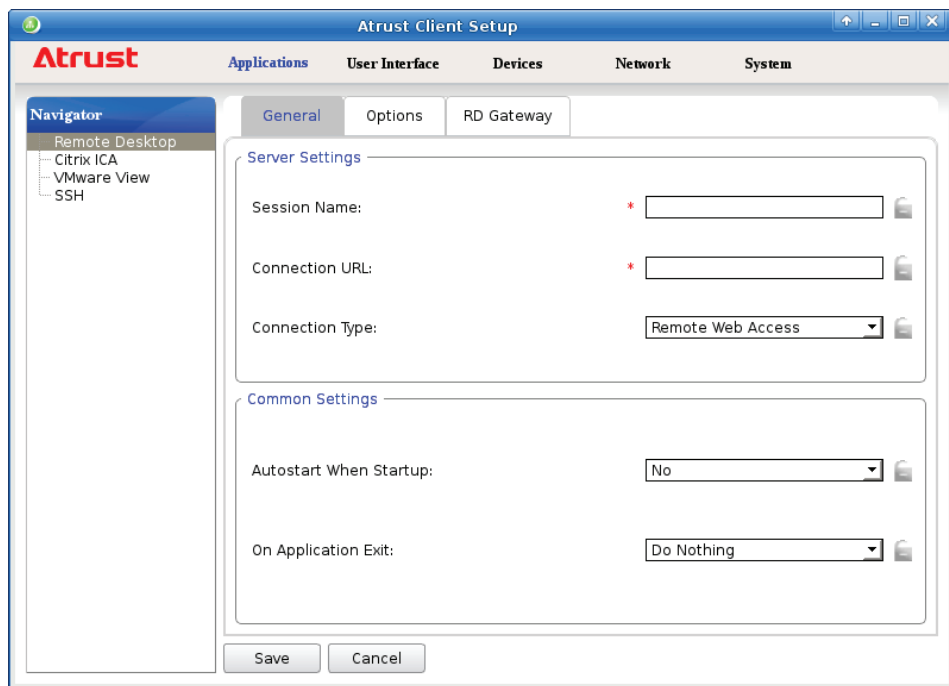

5. Type in the session name and connection URL through which Web-based remote applications is accessible.



**NOTE**

- The red asterisks indicate the required fields.
- Consult your IT administrator about the appropriate connection URL.

6. Click **Save** to add this RDP connection entry.
7. The shortcuts for Remote Web Access are automatically created on the local desktop and START menu.

### Connection Type: Web Feed


To quickly configure RDP connection settings for the Web Feed connection type, please do the following:



#### NOTE

- Atrust mt180L supports only RD Web Feed based on Windows Sever 2012 R2; Windows Server 2008 R2 based is not supported.


1. On Atrust Client Setup, Click **Applications** > **Remote Desktop**.
2. The RDP Connection list appears in the Configuration area.

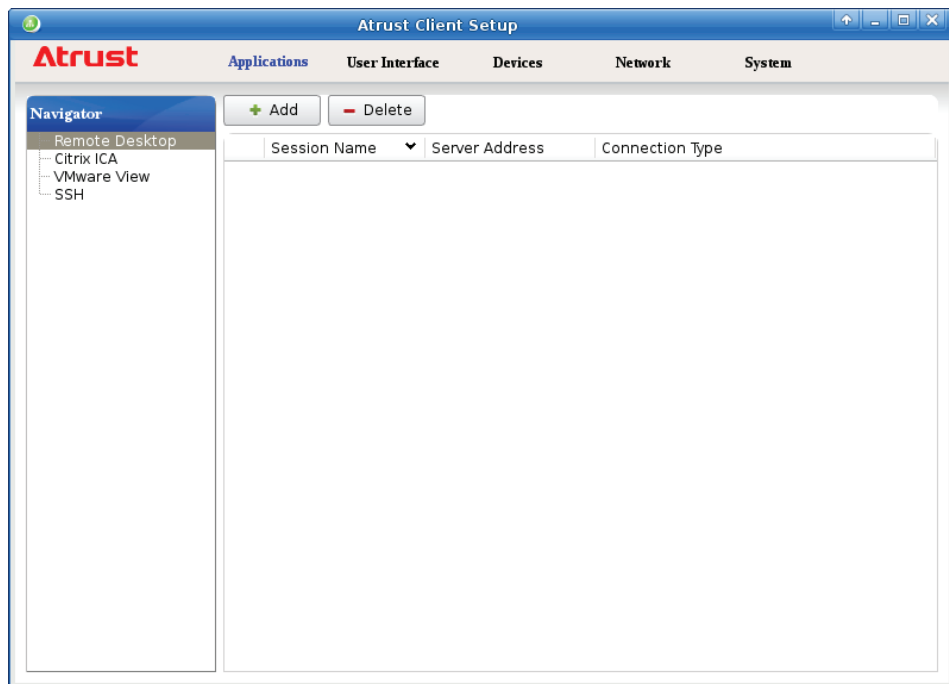


#### NOTE

- If you haven't created any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

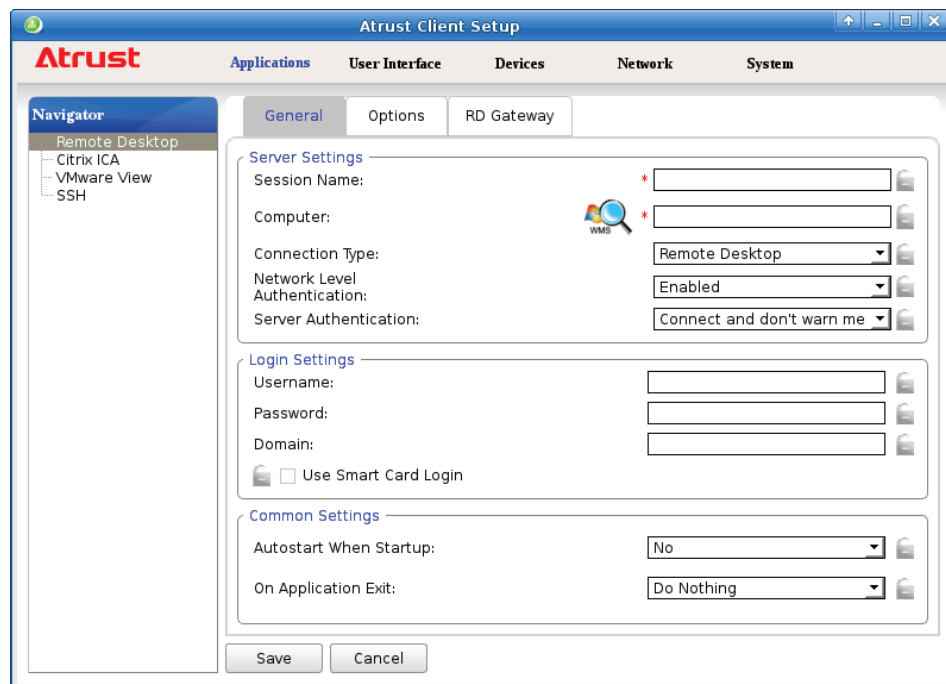

- On **General** sub-tab, click the Connection Type drop-down menu to select **Web Feed**.

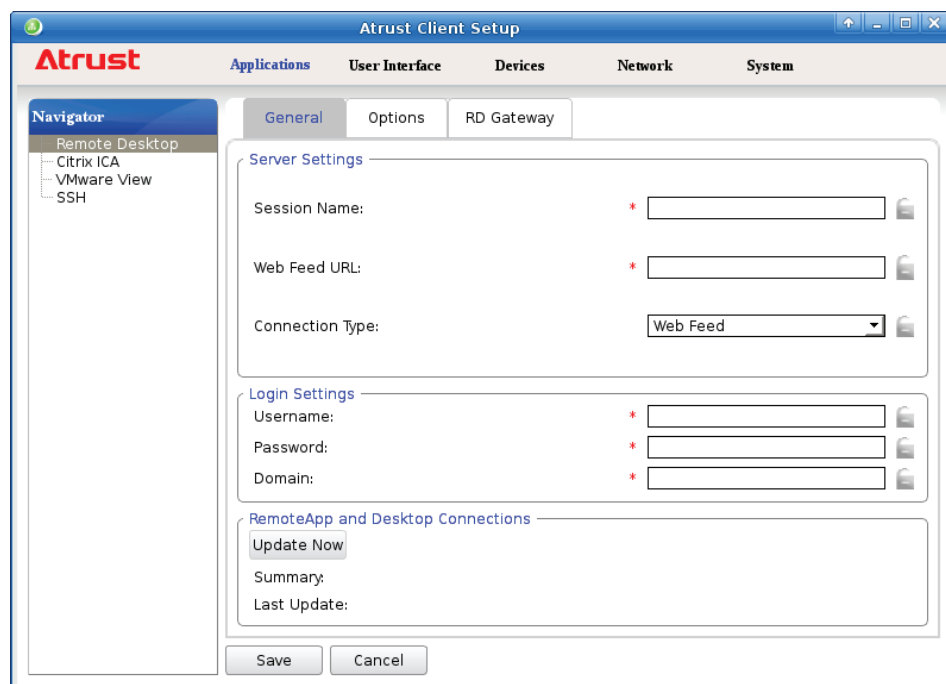

- Type in the session name, Web Feed URL through which remote applications is accessible, and your credentials for Web Feed.



#### NOTE

- The red asterisks indicate the required fields.
- Consult your IT administrator about the appropriate Web Feed URL.

- Click **Update Now** in the RemoteApp and Desktop Connections section. After completion, the result will be shown as below in that section.

RemoteApp and Desktop Connections

Update Now


Summary: 3 applications, 0 desktops  
Last Update: Mon Jun 30 2014 10:13:16




#### NOTE

- You can and need to use **Update Now** to refresh the Web Feed summary if there are newly published applications. Otherwise, new applications will not be accessible.

- Click **Save** to add this RDP connection entry.
- A folder named **Work Resources** with access shortcuts will be automatically created on the local desktop.

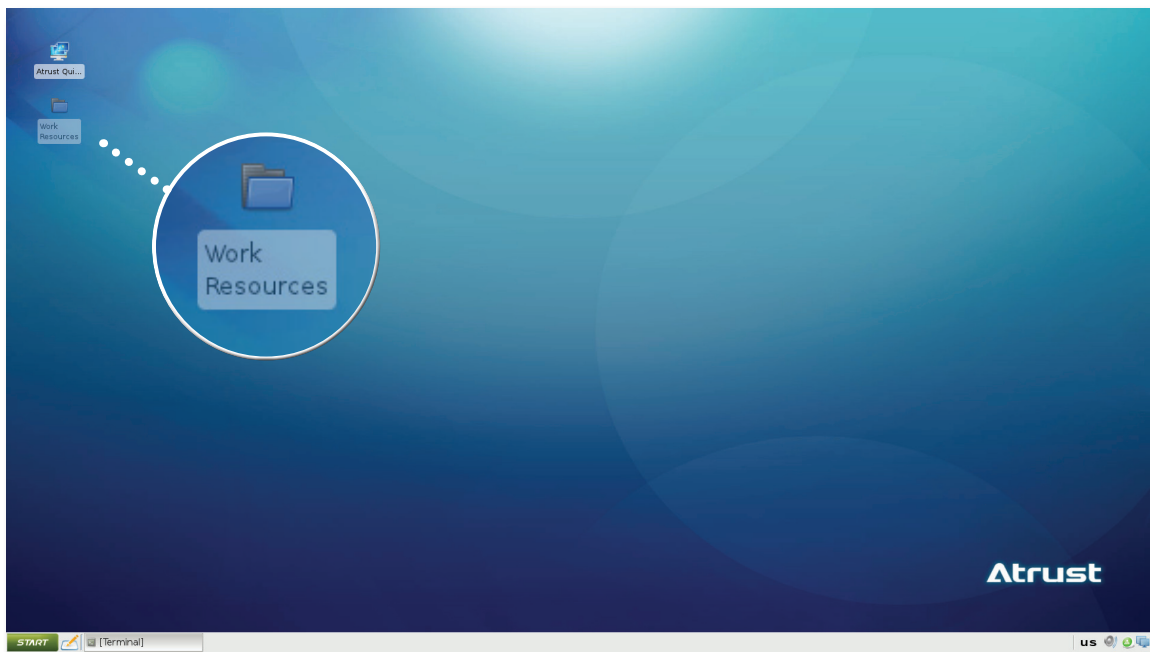

9. Access shortcuts for available applications can be found in that folder.

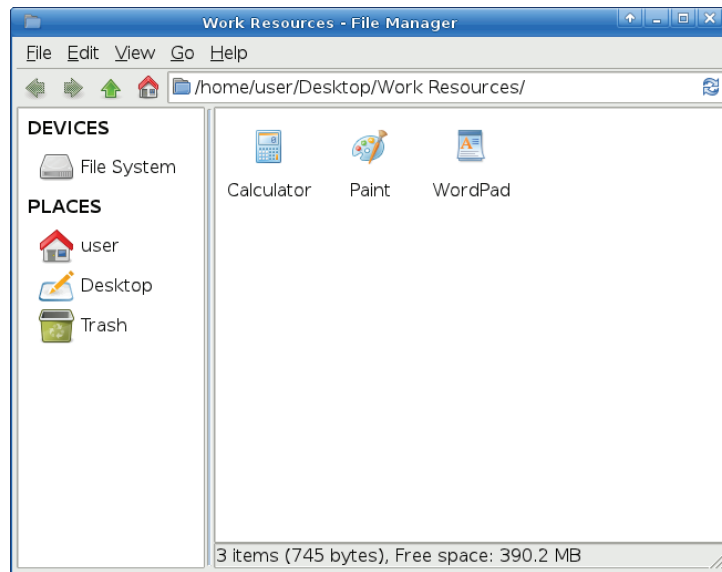

**NOTE**

- You need to use **Update Now** described in Step 6 to refresh the Web Feed if there are newly published applications. Otherwise, new applications will not be shown.


#### 4.6.4 Accessing Remote Desktop Services

##### **Connection Type: Remote Desktop**


To access remote desktops, please do the following:

1. Double click the created shortcut on the desktop.
2. Follow the on-screen instructions and provide required credentials if needed.
3. The remote desktop will be displayed on the screen.


##### **Example: Windows MultiPoint Server 2012**

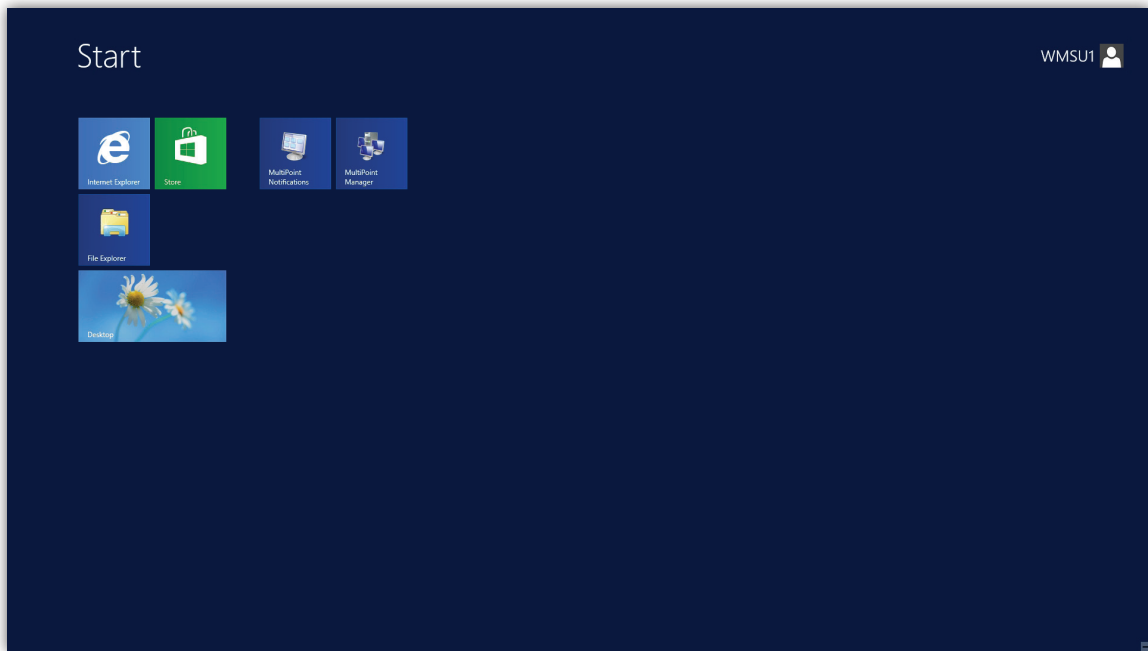

##### **Example: Windows Server 2012**

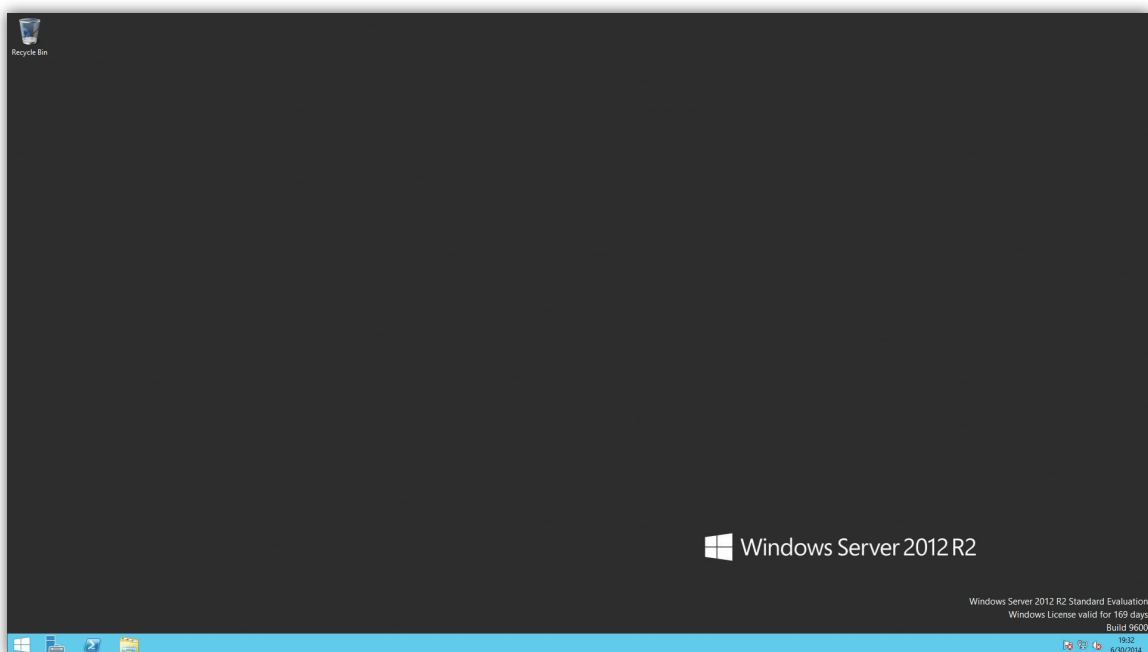

### Example: Windows 8 Enterprise

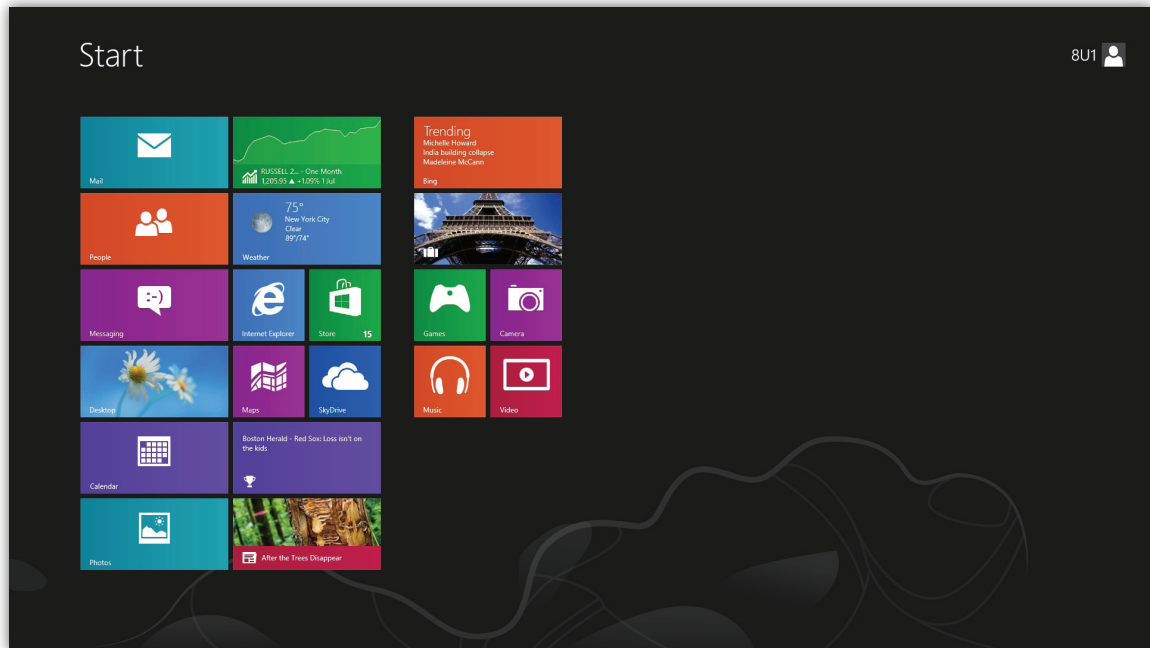

#### NOTE


- The connection type of Remote Desktop also allow you to launch **application-only** sessions; only a specific application is launched rather than a full desktop. For details, please refer to section "4.6.5 Configuring Advanced RDP Connection Settings" on page 135.



### Connection Type: Remote Web Access

To access remote applications, please do the following:

1. Double click the created shortcut on the desktop.
2. A window appears prompting for credentials.

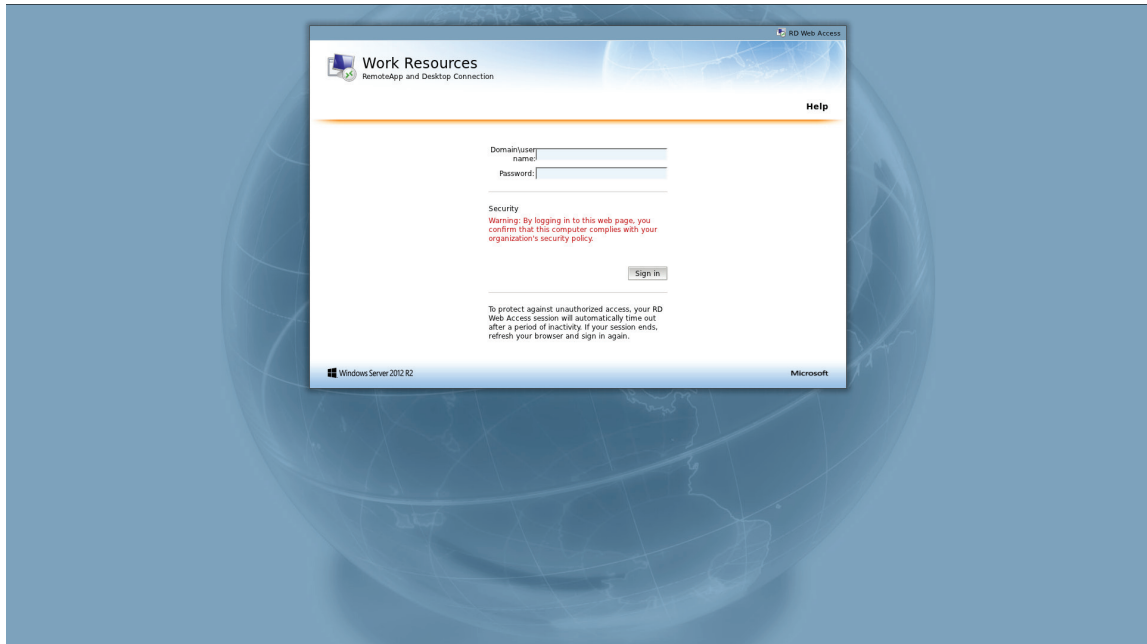

#### NOTE

- A warning message “This Connection is Untrusted” might appear. Consult the IT administrator for details and ensure the connection is secure **first**. To import a security certificate, please refer to section “4.2.16 Importing Certificates for Remote Computers” on page 69. To bypass, click **I Understand the Risks > Add Exception > Confirm Security Exception**.




#### TIP

- To **exit** this Logon screen or other screens and return to the local desktop, please press **Alt + F4**.

3. Provide your credentials, and then click **Sign in**.

- Access shortcuts will be shown on the screen.

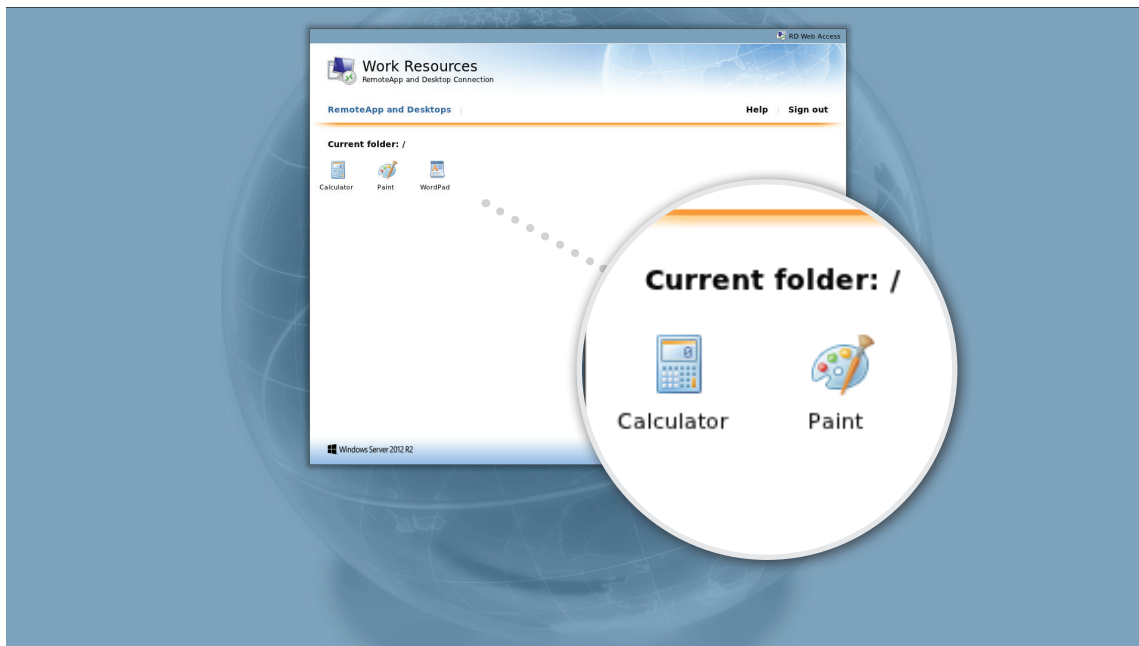

- Click or Double-click to select the desired application.
- A window appears prompting for credentials.



- Provide your credentials, and then click **OK** to launch the selected application.




**TIP**


- Use **Alt + Tab** to select and restore a hidden or minimized application or desktop.

### Connection Type: Web Feed

1. Double click **Work Resources** folder on the local desktop.

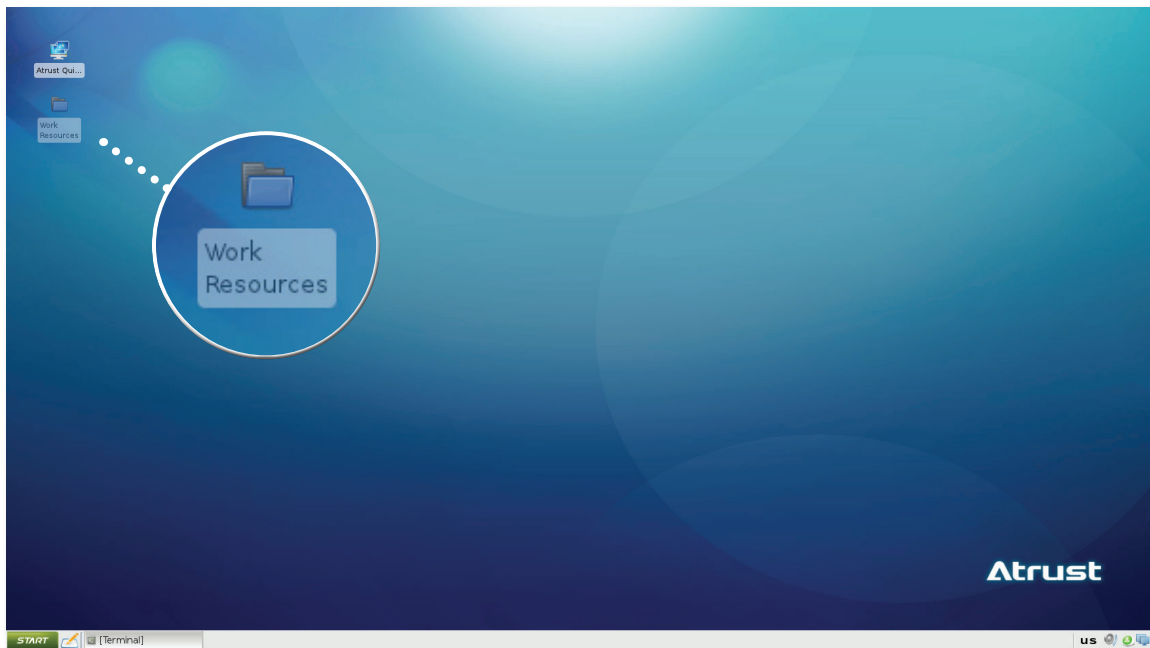

2. Access shortcuts for available applications can be found in that folder.

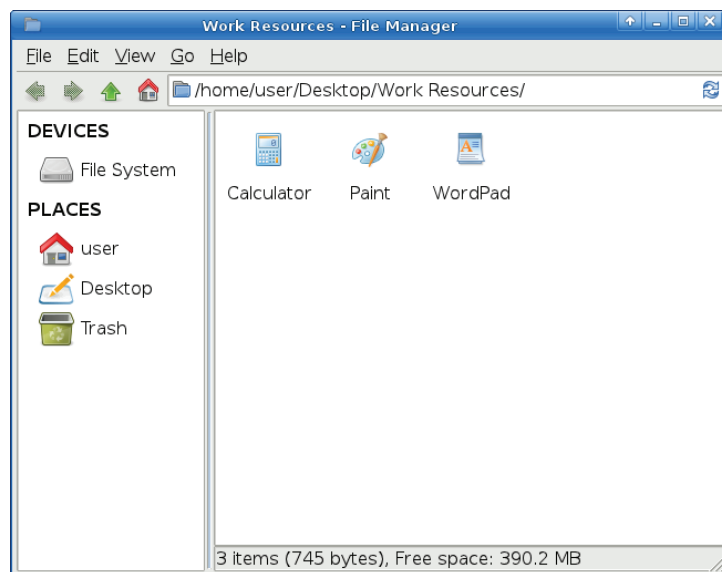


3. Double-click to select the desired application.

4. A window appears prompting for credentials.



5. Provide your credentials, and then click **OK** to launch the selected application.

### Remote Application Examples Mozilla Firefox and Calculator

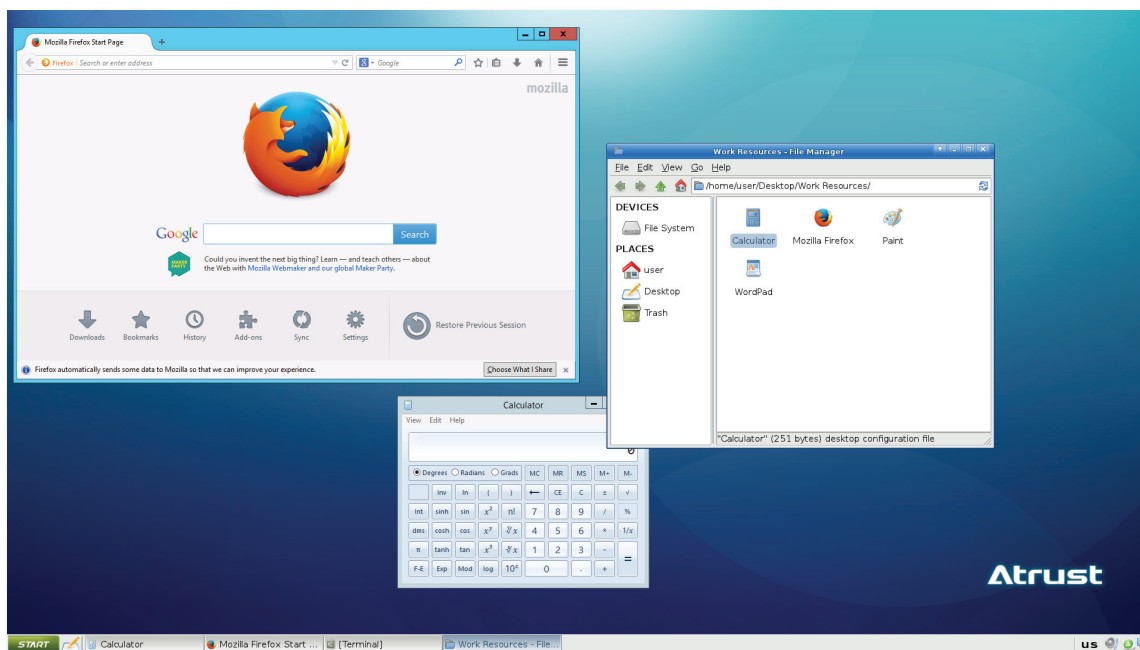

### 4.6.5 Configuring Advanced RDP Connection Settings

The tables below provide a description of each setting item for RDP connections. Please refer to these tables to configure advanced settings and customize shortcuts on local desktop and START menu for service access.



#### NOTE

- Please note that available settings vary with the selected connection type.

#### Settings for the Connection Type of Remote Desktop



#### NOTE

- For descriptions of settings for the connection type of Remote Web Access, please refer to “Settings for the Connection Type of Remote Web Access” on page 143.
- For descriptions of settings for the connection type of Web Feed, please refer to “Settings for the Connection Type of Web Feed” on page 146.

#### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for Remote Desktop sessions.								
Computer	Type in the computer name or IP address of the server where to deliver a Remote Desktop session.								
Connection Type	<p>This table only provides descriptions for available settings when <b>Remote Desktop</b> is selected.</p> <p>Three connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Remote Desktop</td><td>Select to access remote desktop/application services.</td></tr> <tr> <td>Remote Web Access</td><td>Select to access remote application services through a Web browser (Mozilla Firefox).</td></tr> <tr> <td>Web Feed</td><td>Select to access remote application services through published desktop shortcuts.</td></tr> </table>	Option	Description	Remote Desktop	Select to access remote desktop/application services.	Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).	Web Feed	Select to access remote application services through published desktop shortcuts.
Option	Description								
Remote Desktop	Select to access remote desktop/application services.								
Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).								
Web Feed	Select to access remote application services through published desktop shortcuts.								
Network Level Authentication	<p>Select to enable/disable Network Level Authentication.</p> <p><b>NOTE:</b> Network Level Authentication is the authentication method used to enhance the server security by requiring that the user be authenticated before the logon screen is displayed and a session is created. This is a more secure authentication method that can help protect the remote computer from malicious users and software.</p>								


Server Authentication	<p>Select what to do next if the client cannot verify the identity of the remote computer. Three options are available: <b>Connect and don't warn me</b>, <b>Warn me</b>, and <b>Do not connect</b>.</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Connect and don't warn me</td><td>Connects anyway without any warning.</td></tr> <tr> <td>Warn me</td><td>Warns and allows users to choose whether to connect or not.</td></tr> <tr> <td>Do not connect</td><td>Disallows the connection.</td></tr> </tbody> </table> <p><b>NOTE:</b> To import certificates for remote computers, please refer to section "4.2.16 Importing Certificates for Remote Computers" on page 69.</p>	Option	Description	Connect and don't warn me	Connects anyway without any warning.	Warn me	Warns and allows users to choose whether to connect or not.	Do not connect	Disallows the connection.
Option	Description								
Connect and don't warn me	Connects anyway without any warning.								
Warn me	Warns and allows users to choose whether to connect or not.								
Do not connect	Disallows the connection.								
<b>Login Settings</b>									
<b>Item</b>	<b>Description</b>								
Username	Type in the user/account name used for authentication.								
Password	Type in the password of the user account used for authentication.								
Domain	<p>Type in the domain of the server.</p> <p><b>NOTE:</b> Domain is a collection of computers on a network that share a common database and security policy. Leave this field blank if the server doesn't belong to any domain.</p>								
Use Smart Card Login	Check to enable logon with a smart card.								

Common Settings														
Item	Description													
Autostart When Startup	Select whether to open a Remote Desktop session automatically or not when mt180L is started up (Autostart mode).													
	<b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:													
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td>1</td><td>Appliance</td><td><p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p><p>Available actions include:</p><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr></table>		No.	Mode	Description	1	Appliance	<p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>						
	No.	Mode	Description											
	1	Appliance	<p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>											
<table><tr><td>2</td><td>Autostart</td><td><p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p><p>Available actions include:</p><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr></table>		2	Autostart	<p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>										
2	Autostart	<p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>												
<table><tr><td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>		3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.										
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.												
<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.														
On Application Exit	Select what to do when a Remote Desktop session is ended. Five options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Force-Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .													
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Do Nothing</td><td>Returns to the mt180L local Linux desktop.</td></tr><tr><td>Restart Application</td><td>Opens a Remote Desktop session again.</td></tr><tr><td>Force-Restart Application</td><td>Opens a Remote Desktop session again and skips any messages in-between.</td></tr><tr><td>Reboot</td><td>Restarts your mt180L.</td></tr><tr><td>Shutdown</td><td>Turns off your mt180L.</td></tr></table>		Option	Description	Do Nothing	Returns to the mt180L local Linux desktop.	Restart Application	Opens a Remote Desktop session again.	Force-Restart Application	Opens a Remote Desktop session again and skips any messages in-between.	Reboot	Restarts your mt180L.	Shutdown	Turns off your mt180L.
	Option	Description												
	Do Nothing	Returns to the mt180L local Linux desktop.												
	Restart Application	Opens a Remote Desktop session again.												
	Force-Restart Application	Opens a Remote Desktop session again and skips any messages in-between.												
	Reboot	Restarts your mt180L.												
Shutdown	Turns off your mt180L.													

## Options Sub-tab

Programs									
Item	Description								
Start the following program on connection	<p>Click the drop-down menu to enable or disable the Application mode. Use this option to select the session type. Two remote session types are available:</p> <ul style="list-style-type: none"> <li>Remote Desktop (when the Application mode is disabled)</li> <li>Remote Application (when the Application mode is enabled)</li> </ul> <p><b>NOTE:</b> Remote Application sessions are Remote sessions used to access only specific applications rather than full desktops.</p> <p><b>NOTE:</b> Before you can open a Remote Application session, you need to add the desired application to the RemoteApp Programs list with RemoteApp Manager on the host server. For detailed instructions on how to add a desired application to the RemoteApp Programs list on the server, please visit Microsoft's website at <a href="http://www.microsoft.com">www.microsoft.com</a>.</p>								
Start in the following folder	<p>Type in the location of the desired application (on the host server) if <b>Start the following program on connection</b> is enabled.</p> <p><b>NOTE:</b> You can type in the location/path of the desired application in this field, and specify only the name of the application in <b>Program path and file name</b> (the next field). Or, you can type in the full path and name of the application in Program path and file name, and leave this field empty.</p>								
Program path and file name	<p>Type in the name of the desired application if <b>Start the following program on connection</b> is enabled.</p> <table border="1"> <thead> <tr> <th>Remote APP</th><th>Format Example</th></tr> </thead> <tbody> <tr> <td>Windows Media Player</td><td>C:\Programs Files (x86)\Windows Media Player\wmplayer.exe</td></tr> <tr> <td>Adobe Reader X</td><td>C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32.exe</td></tr> <tr> <td>Adobe Reader X</td><td>C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32</td></tr> </tbody> </table> <p><b>NOTE:</b> the file extension can be omitted.</p>	Remote APP	Format Example	Windows Media Player	C:\Programs Files (x86)\Windows Media Player\wmplayer.exe	Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32.exe	Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32
Remote APP	Format Example								
Windows Media Player	C:\Programs Files (x86)\Windows Media Player\wmplayer.exe								
Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32.exe								
Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32								
Window Settings									
Item	Description								
Color Depth	<p>Click the drop-down menu to select the desired color depth for a Remote Desktop session. Five options are available: <b>Automatic</b>, <b>15 Bit</b>, <b>16 Bit</b>, <b>24 Bit</b>, and <b>32 Bit</b>.</p> <p><b>NOTE:</b> If RemoteFX is enabled, then no matter which color depth you choose here, 32 bit per pixel will be applied.</p> <p><b>NOTE:</b> The <b>Automatic</b> option uses the setting defined by the host server.</p> <p><b>NOTE:</b> You can configure the upper limit of the color depth for a Remote Desktop session on the host server. In this case, no matter which color depth you choose here, the value cannot exceed the defined limit.</p>								



Resolution	<p>Click the drop-down menu to select the desired display resolution on a Remote Desktop session. Four options are available: <b>Fullscreen</b>, <b>Large Window</b>, <b>Medium Window</b>, and <b>Small Window</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Fullscreen</td><td>Opens a Remote Desktop session in full screen with the same display resolution as the local desktop.</td></tr> <tr> <td>Large Window</td><td>Opens a Remote Desktop session in a large display resolution.</td></tr> <tr> <td>Medium Window</td><td>Opens a Remote Desktop session in a medium display resolution.</td></tr> <tr> <td>Small Window</td><td>Opens a Remote Desktop session in a small display resolution.</td></tr> </table> <p><b>NOTE:</b> To configure the display resolution of the local desktop, please refer to section "4.3.3 Configuring Display Settings" on page 75.</p>	Option	Description	Fullscreen	Opens a Remote Desktop session in full screen with the same display resolution as the local desktop.	Large Window	Opens a Remote Desktop session in a large display resolution.	Medium Window	Opens a Remote Desktop session in a medium display resolution.	Small Window	Opens a Remote Desktop session in a small display resolution.
Option	Description										
Fullscreen	Opens a Remote Desktop session in full screen with the same display resolution as the local desktop.										
Large Window	Opens a Remote Desktop session in a large display resolution.										
Medium Window	Opens a Remote Desktop session in a medium display resolution.										
Small Window	Opens a Remote Desktop session in a small display resolution.										
Use Toolbar	<p>Click the drop-down menu to select whether to use the Atrust Toolbar on a Remote Desktop session. The tool bar allows you to adjust a session window size or suspend a session.</p> 										
Cursor Auto-hide	<p>Click the drop-down menu to enable/disable the auto-hiding of the mouse cursor or pointer on inactivity in Remote Desktop sessions.</p>										
Use RemoteFX	<p>Click the drop-down menu to disable/enable RemoteFX.</p> <p><b>NOTE:</b> Windows® RemoteFX™ is a technology that offers a rich user experience over a network for remote desktop users.</p> <p><b>NOTE:</b> To enable the RemoteFX feature for Remote Desktop sessions on your mt180L thin client, you still need to configure the host server. For detailed instructions on how to enable RemoteFX on a host server, please visit Microsoft Support website at <a href="http://support.microsoft.com">support.microsoft.com</a>.</p>										
Progressive Rendering	<p>Click the drop-down menu to disable/enable progressive rendering.</p> <p>When enabled, images and videos will be encoded and sent over progressively when the network bandwidth is limited. This new RemoteFX feature is supported by Windows Server 2012 and Windows 8.</p> <p><b>NOTE:</b> This option is shown only when <b>Use RemoteFX</b> is enabled.</p>										
Use Bulk Compression	<p>Click to enable/disable the bulk compression for the data traffic between the server and client.</p>										

Optimization Settings	
Item	Description
Connection Quality	<p>Select the option that best describes the quality of your network connection. Three options are available: <b>LAN (Very Fast)</b>, <b>Broadband (Fast)</b>, and <b>Modem (Slow)</b>.</p> <p><b>NOTE:</b> Selection here will determine the defaults of items in this section as listed below.</p>
Desktop background	Check to use the desktop background.
Font smoothing	Check to use ClearType® technology to make fonts clear and smooth.
Show window contents while dragging	Check to show window contents while dragging a window.
Menu and window animation	Check to show menu and window animation.
Visual styles	Check to allow non-classic themes.
Persistent bitmap caching	Check to allow client-side cache of bitmaps for a session.
Connection Settings	
Item	Description
Multimedia Redirection	<p>Click the drop-down menu to disable/enable multimedia redirection.</p> <p>When enabled, the client receives original compressed multimedia streams and decodes locally for display. This feature increases the load on the client, but saves server resources, decreases the bandwidth usage, and improves audio and video playback experiences.</p>
USB Storage Mapping	<p>Click the drop-down menu to enable/disable USB storage mapping.</p> <p>When <b>Enable</b> is selected, users can access the local USB storage devices, such as a USB flash drive and memory card reader, in a Remote Desktop session.</p> <p><b>NOTE:</b> Atrust Client Setup also allows you to enable or disable the use of locally attached USB storage devices. You need to enable locally attached USB storage devices first in order to use them in a Remote Desktop session. The default is enabled.</p> <p><b>NOTE:</b> To configure the use of USB storage devices, please refer to section "4.4.3 Configuring Settings for USB Storage Devices" on page 87.</p>
Printer Mapping	<p>Click the drop-down menu to enable/disable printer mapping.</p> <p>When <b>Enable</b> is selected, users can access a local or network printer in a Remote Desktop session.</p> <p><b>NOTE:</b> You need to add a local or network printer for your mt180L first, and then enable this feature here to use that printer in a Remote Desktop session.</p> <p><b>NOTE:</b> For detailed instructions on how to add a local or network printer for your mt180L, please refer to section "4.4.7 Adding a Local Printer" on page 91 or "4.4.8 Adding a Network Printer" on page 94.</p>
Serial Port Mapping	<p>Click the drop-down menu to enable/disable serial port mapping.</p> <p>When <b>Enable</b> is selected, users can access a serial device, such as a barcode scanner, in a Remote Desktop session.</p>

Parallel Port Mapping	<p>Click the drop-down menu to enable/disable parallel port mapping.</p> <p>When <b>Enable</b> is selected, users can access a parallel device, such as a printer or scanner, in a Remote Desktop session.</p>								
Smart Card Mapping	<p>Click the drop-down menu to enable/disable smart card mapping.</p> <p>When <b>Enable</b> is selected, users can access smart cards through a smart card reader in a Remote Desktop session.</p>								
<b>Local Resources Settings</b>									
<b>Item</b>	<b>Description</b>								
Remote Audio Playback	<p>Click the drop-down menu to configure the audio playback setting in a Remote Desktop session. Three options are available: <b>Play on this computer</b>, <b>Play on remote computer</b>, and <b>Do not play</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Play on this computer</td><td>Allows audio playback in a Remote Desktop session using locally attached audio devices.</td></tr> <tr> <td>Play on remote computer</td><td>Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.</td></tr> <tr> <td>Do not play</td><td>Disables audio playback in a Remote Desktop session using locally attached audio devices.</td></tr> </table>	Option	Description	Play on this computer	Allows audio playback in a Remote Desktop session using locally attached audio devices.	Play on remote computer	Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.	Do not play	Disables audio playback in a Remote Desktop session using locally attached audio devices.
Option	Description								
Play on this computer	Allows audio playback in a Remote Desktop session using locally attached audio devices.								
Play on remote computer	Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.								
Do not play	Disables audio playback in a Remote Desktop session using locally attached audio devices.								
Remote Audio Recording	<p>Click the drop-down menu to configure the audio playback setting in a Remote Desktop session. Two options are available: <b>Recording from this computer</b> and <b>Do not record</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Recording from this computer</td><td>Allows audio recording in a Remote Desktop session using locally attached audio devices.</td></tr> <tr> <td>Do not record</td><td>Disables audio recording in a Remote Desktop session using locally attached audio devices.</td></tr> </table>	Option	Description	Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.	Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.		
Option	Description								
Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.								
Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.								

RemoteFX USB Redirection Settings	
Item	Description
Use RemoteFX USB Redirection	<p>Check/Uncheck to enable/disable locally attached USB devices in a Remote Desktop session (virtual machine based only).</p> <p><b>NOTE:</b> RemoteFX USB Redirection allows the redirection of USB devices into server-hosted virtual machines (with guest operating systems).</p> <p><b>NOTE:</b> RemoteFX USB Redirection is only applicable to the virtual machine based Remote Desktop service not to session based one. For more information, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p> <p>On the client side, please do the following to enable locally attached USB devices in a virtual machine based desktop:</p> <ol style="list-style-type: none"> <li>1. Ensure that the desired USB device has been connected to your client.</li> <li>2. Ensure that RemoteFX is enabled on your mt180L (see "Use RemoteFX" on page 139).</li> <li>3. Click to check <b>Use RemoteFX USB Redirection</b>.</li> <li>4. A new checkbox appears with the required device driver. Check to enable the driver.</li> <li>5. Click <b>Save</b> to apply.</li> </ol> <p><b>NOTE:</b> You also need to configure the host server and its guest OSs to enable RemoteFX USB Redirection in a Remote Desktop session. For instructions on server-side configuration, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p>

#### RD Gateway Sub-tab

Connection Settings	
Item	Description
Use RD Gateway server	Check/Uncheck to enable/disable the use of an RD Gateway server. When checked, the following two items in this table appear.
Server Name	Type the name of the RD Gateway server. Ask the network administrator for this information.
Use my Remote Desktop credentials for the RD Gateway	Check to use the same set of credentials for authenticating to both the Remote Desktop computer and the RD Gateway server.
Bypass RD Gateway for local address	Check to prevent traffic to and from local network addresses from being routed through the RD Gateway server. This could make your RDP connection faster.

## Settings for the Connection Type of Remote Web Access



### NOTE

- For descriptions of settings for the connection type of Remote Desktop, please refer to “Settings for the Connection Type of Remote Desktop” on page 135.
- For descriptions of settings for the connection type of Web Feed, please refer to “Settings for the Connection Type of Web Feed” on page 146.

### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for Remote Web Access sessions.								
Connection URL	Type in the URL of the server where to deliver Remote Web Access sessions.								
Connection Type	<p>This table only provides descriptions for available settings when <b>Remote Web Access</b> is selected.</p> <p>Three connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Remote Desktop</td><td>Select to access remote desktop/application services.</td></tr> <tr> <td>Remote Web Access</td><td>Select to access remote application services through a Web browser (Mozilla Firefox).</td></tr> <tr> <td>Web Feed</td><td>Select to access remote application services through published desktop shortcuts.</td></tr> </table>	Option	Description	Remote Desktop	Select to access remote desktop/application services.	Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).	Web Feed	Select to access remote application services through published desktop shortcuts.
Option	Description								
Remote Desktop	Select to access remote desktop/application services.								
Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).								
Web Feed	Select to access remote application services through published desktop shortcuts.								

Common Settings														
Item	Description													
Autostart When Startup	Select whether to open a Remote Web Access session automatically or not when mt180L is started up (Autostart mode).													
	<b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:													
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="4">1</td><td rowspan="4">Appliance</td><td>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>		No.	Mode	Description	1	Appliance	The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>				
	No.	Mode	Description											
	1	Appliance	The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.											
Available actions include:														
<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>														
<table><tr><td rowspan="4">2</td><td rowspan="4">Autostart</td><td>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>		2	Autostart	The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>								
2	Autostart			The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.										
				Available actions include:										
				<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>										
<table><tr><td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>		3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.										
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.												
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.													
On Application Exit	Select what to do when a Remote Web Access session is ended. Five options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Force-Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .													
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Do Nothing</td><td>Returns to the mt180L local Linux desktop.</td></tr><tr><td>Restart Application</td><td>Opens a Remote Web Access session again.</td></tr><tr><td>Force-Restart Application</td><td>Opens a Remote Web Access session again and skips any messages in-between.</td></tr><tr><td>Reboot</td><td>Restarts your mt180L.</td></tr><tr><td>Shutdown</td><td>Turns off your mt180L.</td></tr></table>		Option	Description	Do Nothing	Returns to the mt180L local Linux desktop.	Restart Application	Opens a Remote Web Access session again.	Force-Restart Application	Opens a Remote Web Access session again and skips any messages in-between.	Reboot	Restarts your mt180L.	Shutdown	Turns off your mt180L.
	Option	Description												
	Do Nothing	Returns to the mt180L local Linux desktop.												
	Restart Application	Opens a Remote Web Access session again.												
	Force-Restart Application	Opens a Remote Web Access session again and skips any messages in-between.												
	Reboot	Restarts your mt180L.												
Shutdown	Turns off your mt180L.													

### Options Sub-tab



#### NOTE

- No options are available under the **Options** sub-tab in the connection type of Remote Web Access.

### RD Gateway Sub-tab



#### NOTE

- No options are available under the **RD Gateway** sub-tab in the connection type of Remote Web Access.

### Settings for the Connection Type of Web Feed



#### NOTE

- For descriptions of settings for the connection type of Remote Desktop, please refer to “Settings for the Connection Type of Remote Desktop” on page 135.
- For descriptions of settings for the connection type of Remote Web Access, please refer to “Settings for the Connection Type of Remote Web Access” on page 143.

#### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for Web Feed sessions.								
Web Feed URL	Type in the URL of the server where to deliver Web Feed sessions.								
Connection Type	<p>This table only provides descriptions for available settings when <b>Web Feed</b> is selected.</p> <p>Three connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Remote Desktop</td><td>Select to access remote desktop/application services.</td></tr> <tr> <td>Remote Web Access</td><td>Select to access remote application services through a Web browser (Mozilla Firefox).</td></tr> <tr> <td>Web Feed</td><td>Select to access remote application services through published desktop shortcuts.</td></tr> </table>	Option	Description	Remote Desktop	Select to access remote desktop/application services.	Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).	Web Feed	Select to access remote application services through published desktop shortcuts.
Option	Description								
Remote Desktop	Select to access remote desktop/application services.								
Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).								
Web Feed	Select to access remote application services through published desktop shortcuts.								
Login Settings									
Item	Description								
Username	Type in the user/account name used for authentication.								
Password	Type in the password of the user account used for authentication.								
Domain	Type in the domain of the server.								
RemoteApp and Desktop Connections									
Item	Description								
Update Now	Click to fetch and update the published applications list from the server.								



## Options Sub-tab

Window Settings	
Item	Description
Color Depth	<p>Click the drop-down menu to select the desired color depth for a Remote Desktop session. Five options are available: <b>Automatic</b>, <b>15 Bit</b>, <b>16 Bit</b>, <b>24 Bit</b>, and <b>32 Bit</b>.</p> <p><b>NOTE:</b> If RemoteFX is enabled, then no matter which color depth you choose here, 32 bit per pixel will be applied.</p> <p><b>NOTE:</b> The <b>Automatic</b> option uses the setting defined by the host server.</p> <p><b>NOTE:</b> You can configure the upper limit of the color depth for a Remote Desktop session on the host server. In this case, no matter which color depth you choose here, the value cannot exceed the defined limit.</p>
Cursor Auto-hide	Click the drop-down menu to enable/disable the auto-hiding of the mouse cursor or pointer on inactivity in Remote Desktop sessions.
Use RemoteFX	<p>Click the drop-down menu to disable/enable RemoteFX.</p> <p><b>NOTE:</b> Windows® RemoteFX™ is a technology that offers a rich user experience over a network for remote desktop users.</p> <p><b>NOTE:</b> To enable the RemoteFX feature for Remote Desktop sessions on your mt180L thin client, you still need to configure the host server. For detailed instructions on how to enable RemoteFX on a host server, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p>
Use Bulk Compression	Click to enable/disable the bulk compression for the data traffic between the server and client.
Optimization Settings	
Item	Description
Desktop background	Check to use the desktop background.
Font smoothing	Check to use ClearType® technology to make fonts clear and smooth.
Show window contents while dragging	Check to show window contents while dragging a window.
Menu and window animation	Check to show menu and window animation.
Visual styles	Check to allow non-classic themes.
Persistent bitmap caching	Check to allow client-side cache of bitmaps for a session.

Connection Settings									
Item	Description								
USB Storage Mapping	<p>Click the drop-down menu to enable/disable USB storage mapping.</p> <p>When <b>Enable</b> is selected, users can access the local USB storage devices, such as a USB flash drive and memory card reader, in a Remote Desktop session.</p> <p><b>NOTE:</b> Atrust Client Setup also allows you to enable or disable the use of locally attached USB storage devices. You need to enable locally attached USB storage devices first in order to use them in a Remote Desktop session. The default is enabled.</p> <p><b>NOTE:</b> To configure the use of USB storage devices, please refer to section "4.4.3 Configuring Settings for USB Storage Devices" on page 87.</p>								
Printer Mapping	<p>Click the drop-down menu to enable/disable printer mapping.</p> <p>When <b>Enable</b> is selected, users can access a local or network printer in a Remote Desktop session.</p> <p><b>NOTE:</b> You need to add a local or network printer for your mt180L first, and then enable this feature here to use that printer in a Remote Desktop session.</p> <p><b>NOTE:</b> For detailed instructions on how to add a local or network printer for your mt180L, please refer to section "4.4.7 Adding a Local Printer" on page 91 or "4.4.8 Adding a Network Printer" on page 94.</p>								
Serial Port Mapping	<p>Click the drop-down menu to enable/disable serial port mapping.</p> <p>When <b>Enable</b> is selected, users can access a serial device, such as a barcode scanner, in a Remote Desktop session.</p>								
Parallel Port Mapping	<p>Click the drop-down menu to enable/disable parallel port mapping.</p> <p>When <b>Enable</b> is selected, users can access a parallel device, such as a printer or scanner, in a Remote Desktop session.</p>								
Smart Card Mapping	<p>Click the drop-down menu to enable/disable smart card mapping.</p> <p>When <b>Enable</b> is selected, users can access smart cards through a smart card reader in a Remote Desktop session.</p>								
Local Resources Settings									
Item	Description								
Remote Audio Playback	<p>Click the drop-down menu to configure the audio playback setting in a Remote Desktop session. Three options are available: <b>Play on this computer</b>, <b>Play on remote computer</b>, and <b>Do not play</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Play on this computer</td><td>Allows audio playback in a Remote Desktop session using locally attached audio devices.</td></tr> <tr> <td>Play on remote computer</td><td>Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.</td></tr> <tr> <td>Do not play</td><td>Disables audio playback in a Remote Desktop session using locally attached audio devices.</td></tr> </table>	Option	Description	Play on this computer	Allows audio playback in a Remote Desktop session using locally attached audio devices.	Play on remote computer	Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.	Do not play	Disables audio playback in a Remote Desktop session using locally attached audio devices.
Option	Description								
Play on this computer	Allows audio playback in a Remote Desktop session using locally attached audio devices.								
Play on remote computer	Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.								
Do not play	Disables audio playback in a Remote Desktop session using locally attached audio devices.								

Remote Audio Recording	<p>Click the drop-down menu to configure the audio playback setting in a Remote Desktop session. Two options are available: <b>Recording from this computer</b> and <b>Do not record</b>.</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Recording from this computer</td><td>Allows audio recording in a Remote Desktop session using locally attached audio devices.</td></tr> <tr> <td>Do not record</td><td>Disables audio recording in a Remote Desktop session using locally attached audio devices.</td></tr> </tbody> </table>	Option	Description	Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.	Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.
Option	Description						
Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.						
Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.						
RemoteFX USB Redirection Settings							
Item	Description						
Use RemoteFX USB Redirection	<p>Check/Uncheck to enable/disable locally attached USB devices in a Remote Desktop session (virtual machine based only).</p> <p><b>NOTE:</b> RemoteFX USB Redirection allows the redirection of USB devices into server-hosted virtual machines (with guest operating systems).</p> <p><b>NOTE:</b> RemoteFX USB Redirection is only applicable to the virtual machine based Remote Desktop service not to session based one. For more information, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p> <p>On the client side, please do the following to enable locally attached USB devices in a virtual machine based desktop:</p> <ol style="list-style-type: none"> <li>1. Ensure that the desired USB device has been connected to your mt180L.</li> <li>2. Ensure that RemoteFX is enabled on your mt180L (see "Use RemoteFX" on page 139).</li> <li>3. Click to check <b>Use RemoteFX USB Redirection</b>.</li> <li>4. A new checkbox appears with the required device driver. Check to enable the driver.</li> <li>5. Click <b>Save</b> to apply.</li> </ol> <p><b>NOTE:</b> You also need to configure the host server and its guest OSs to enable RemoteFX USB Redirection in a Remote Desktop session. For instructions on server-side configuration, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p>						

#### RD Gateway Sub-tab



#### NOTE

- No options are available under the **Options sub-tab** in the connection type of Web Logon.

#### 4.6.6 Configuring Basic ICA Connection Settings

The **Citrix ICA** setting allows you to configure ICA connections for Citrix services and create shortcuts on the local desktop and START menu for service access. You can access virtual desktops and applications for work simply through these shortcuts.

**NOTE**

- For more information on Citrix desktop virtualization solutions, please visit Citrix website at [www.citrix.com](http://www.citrix.com) or Citrix Knowledge Center at [support.citrix.com](http://support.citrix.com).

Six connection types are available:

Connection Type	Description	Page
Web Logon	Select to access desktop/application services through a Web browser.	151
StoreFront	Select to access desktop/application services through a StoreFront.	153
VDI-in-a-Box	Select to access desktop services through VDI-in-a-Box.	155
XenDesktop	Select to access desktop services through an earlier version of XenDesktop.	157
XenApp	Select to access application services through an earlier version of XenApp.	159
Server Connection	Select to access service delivery servers (XenApp servers only).	161

**NOTE**


- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

### Connection Type: Web Logon

To quickly configure ICA connection settings for the Web Logon connection type, please do the following:

1. On Atrust Client Setup, click **Applications > Citrix ICA**.
2. The available ICA Connection list appears in the Configuration area.

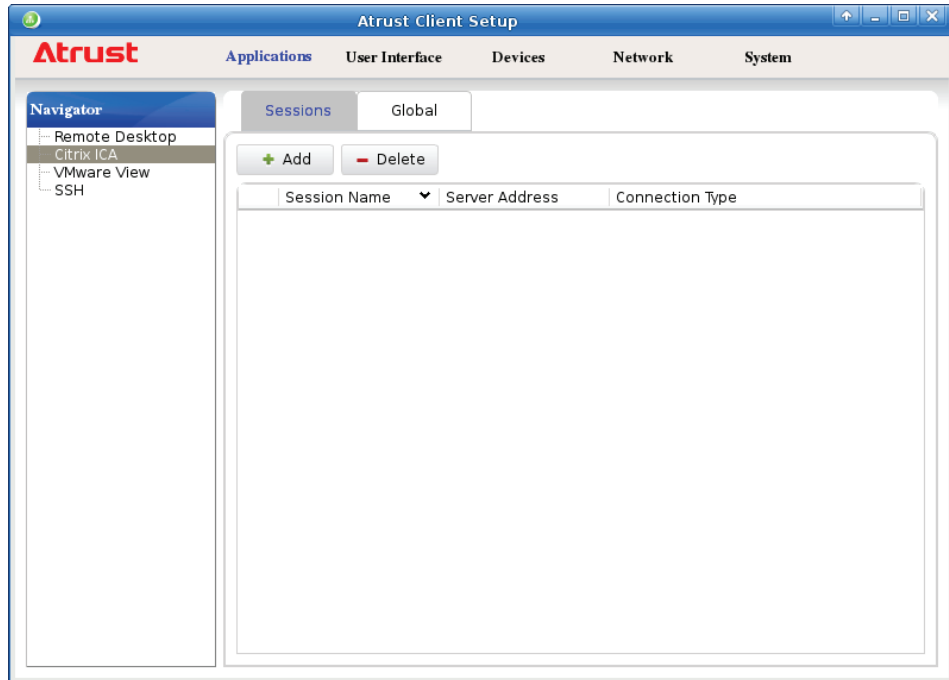


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.

4.
- On **General** sub-tab, leave the connection type as **Web Logon** as default, and then type in the desired session name and the IP address / URL / FQDN of the server through which Citrix services are accessible.

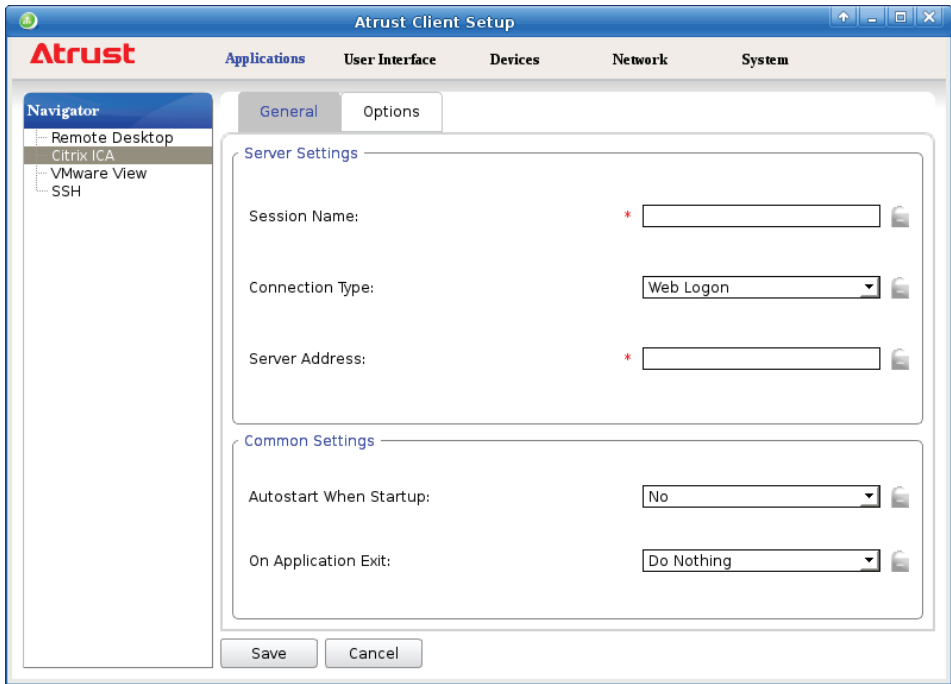

NOTE

- For newer versions of XenDesktop and XenApp, you may need to further specify the *sub-path* of the server. Refer to the following table for details:

Citrix Product	Component to Connect	Connection Address
XenApp 6.5 or earlier	Web Interface	IP / URL / FQDN
XenDesktop 5.6 or earlier	Web Interface	IP / URL / FQDN
XenApp and XenDesktop 7.5	StoreFront	IP / URL / FQDN <b>plus sub-path</b>
		<b>For example –</b> <b>FQDN:</b> X75.CTX.poc <b>Sub-path:</b> /Citrix/StoreWeb (default) <b>Connection Address:</b> X75.CTX.poc/Citrix/StoreWeb

- FQDN is the acronym of Fully Qualified Domain Name.

5.
- Click **Save** to add this ICA connection entry. The access shortcuts are automatically created on the local desktop and START menu.



NOTE

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section “4.6.11 Configuring Advanced ICA Connection Settings” on page 173.

### Connection Type: StoreFront

To quickly configure ICA connection settings for the connection type of StoreFront, please do the following:




#### NOTE

- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

- On Atrust Client Setup, Click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.

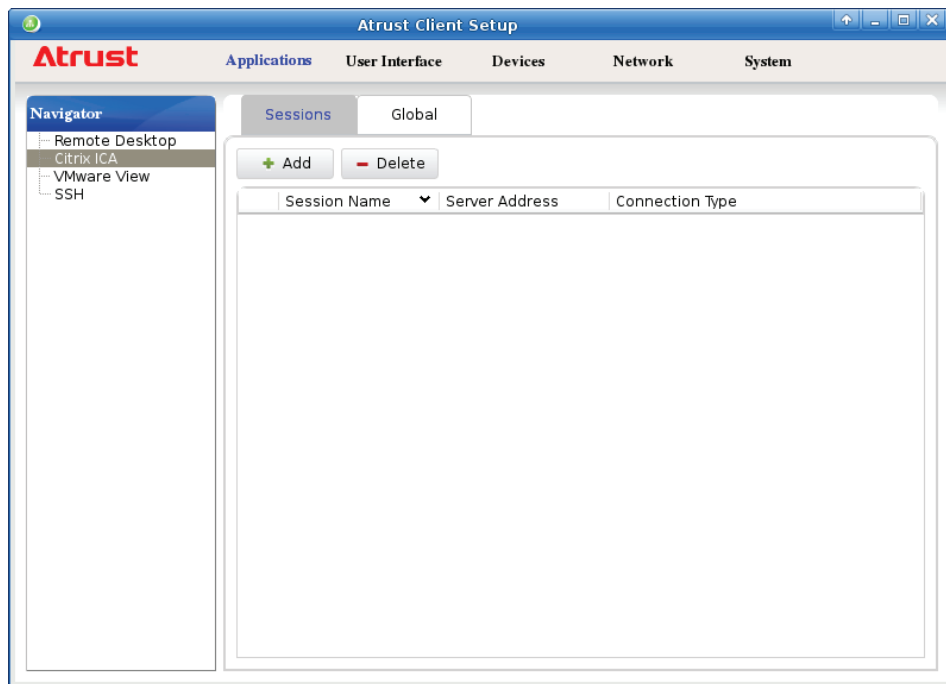


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.


- On **General** sub-tab, click the Connection Type drop-down menu to select **StoreFront**.

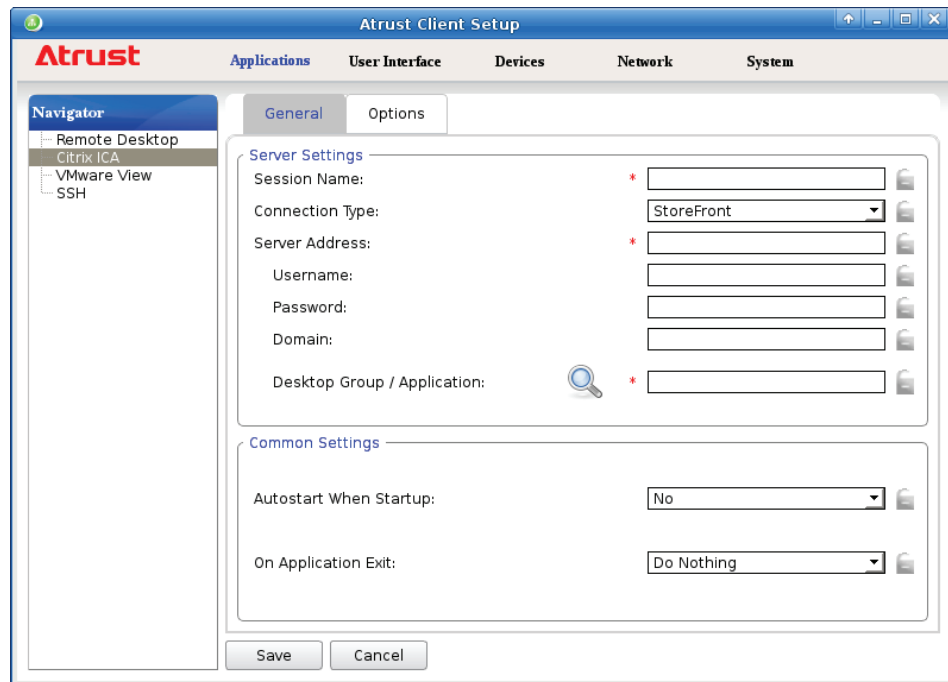

- Type the session name, the IP address / URL / FQDN of the server through which virtual applications/ desktops are accessible, and the name of desktop group or application.



**NOTE**

- You can use the Search icon  to help you discover available desktop groups or applications for a given set of credentials.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



**NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 173.



### Connection Type: VDI-in-a-Box

To quickly configure ICA connection settings for the connection type of VDI-in-a-Box, please do the following:




#### NOTE

- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

- On Atrust Client Setup, Click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.

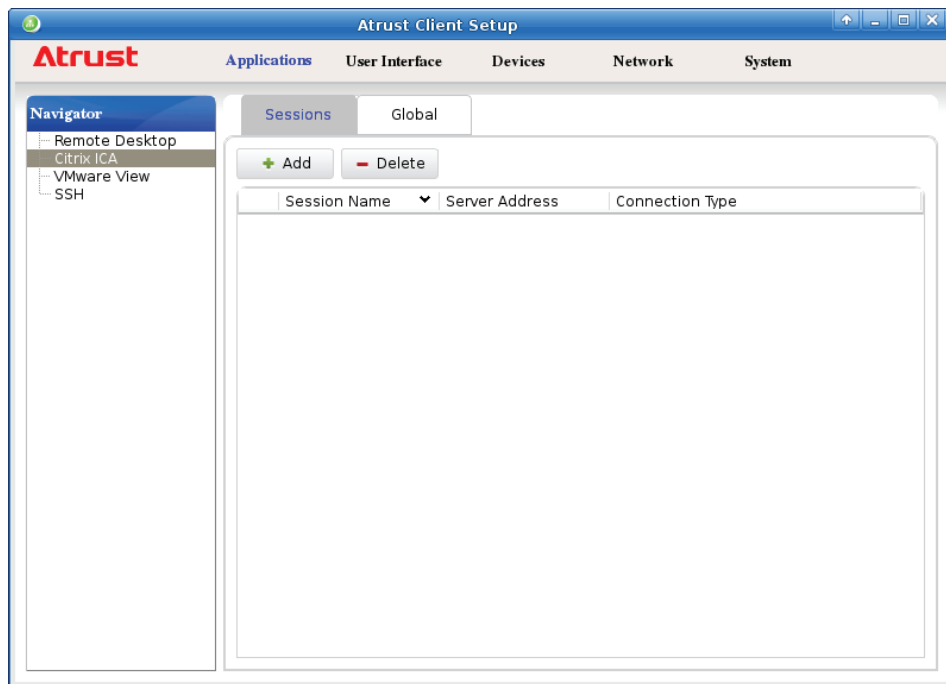


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.


- On **General** sub-tab, click the Connection Type drop-down menu to select **VDI-in-a-Box**.

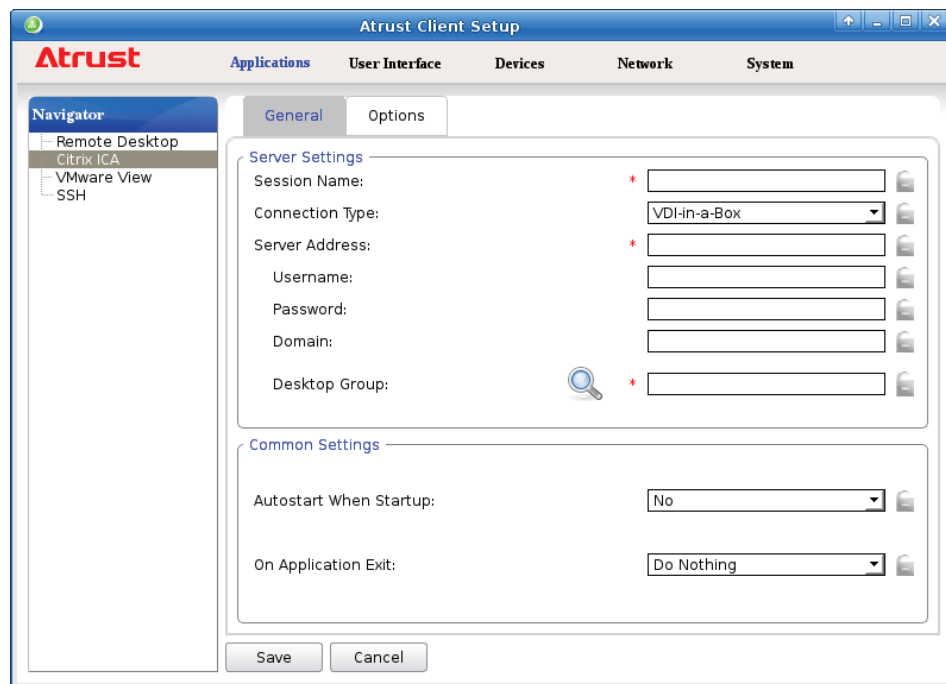

- Type the session name, the IP address / URL / FQDN of the server through which virtual desktops are accessible, and the name of the desktop group.



#### NOTE

- You can use the Search icon  to help you discover available desktop groups for a given set of credentials.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



#### NOTE

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 173.

### Connection Type: XenDesktop

To quickly configure ICA connection settings for the connection type of XenDesktop, please do the following:




#### NOTE

- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

- On Atrust Client Setup, click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.

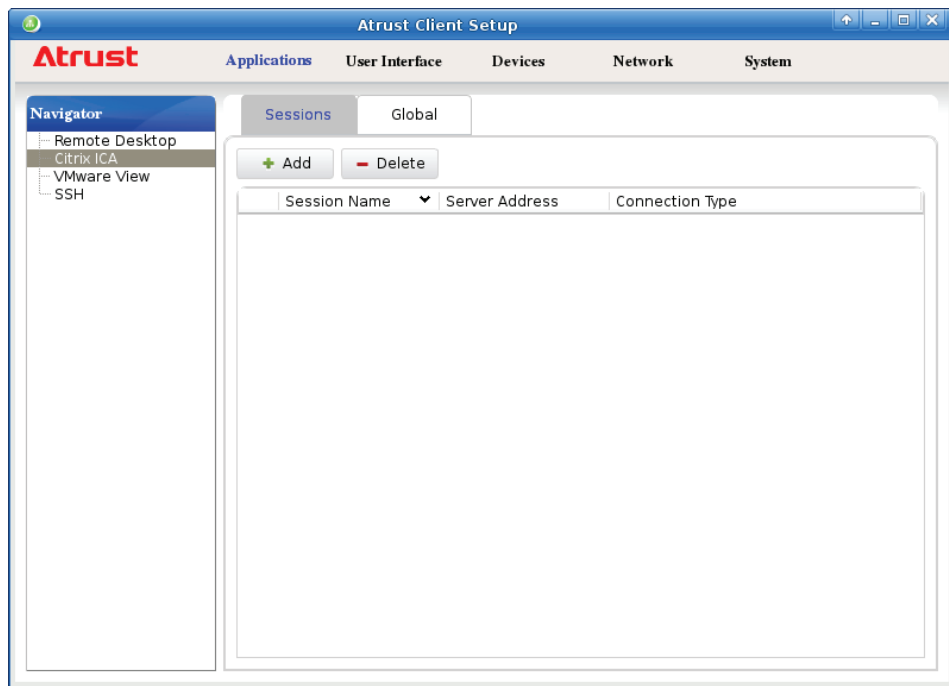


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.


- On **General** sub-tab, click the Connection Type drop-down menu to select **XenDesktop**.

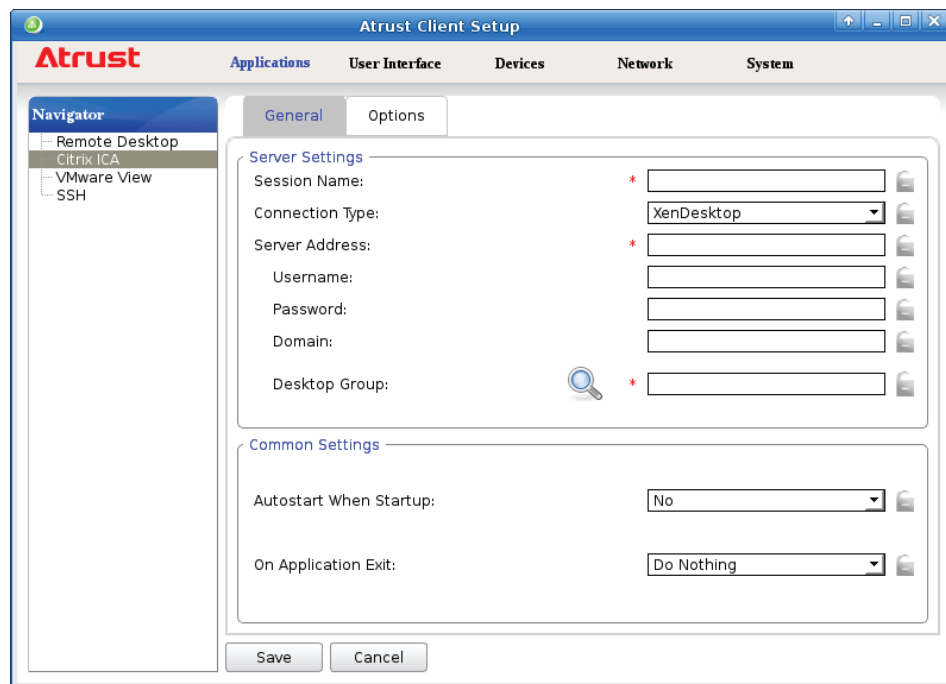

- Type the session name, the IP address / URL / FQDN of the server through which virtual desktops are accessible, and the desired desktop group.



#### NOTE

- You can use the Search icon  to help you discover available desktop groups for a given set of credentials.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



#### NOTE

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 173.

### Connection Type: XenApp

To quickly configure ICA connection settings for the connection type of XenApp, please do the following:




#### NOTE

- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

- On Atrust Client Setup, click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.

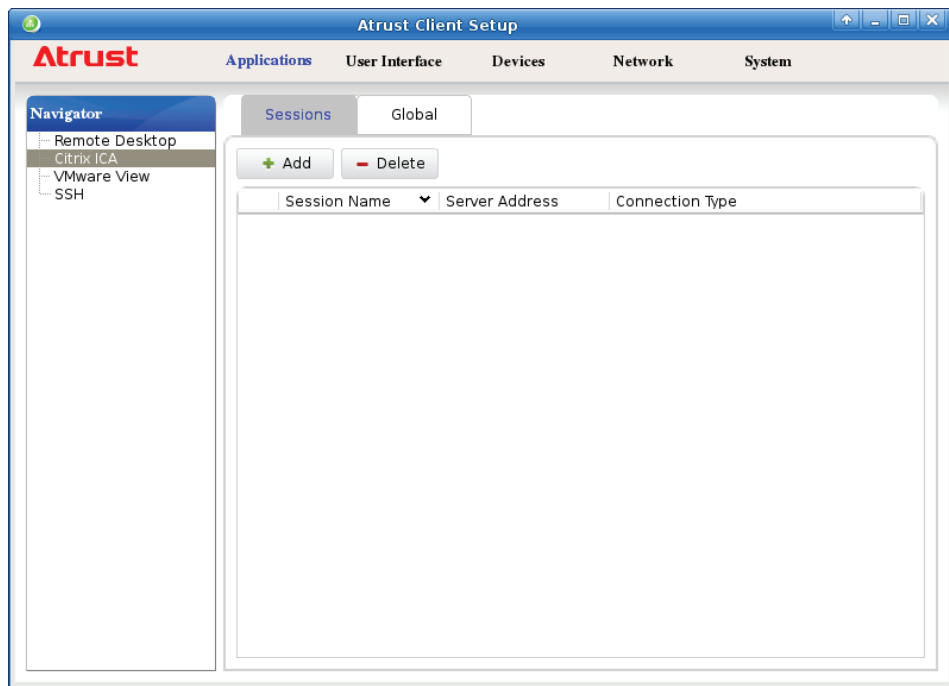


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.

- On **General** sub-tab, click the Connection Type drop-down menu to select **XenApp**.

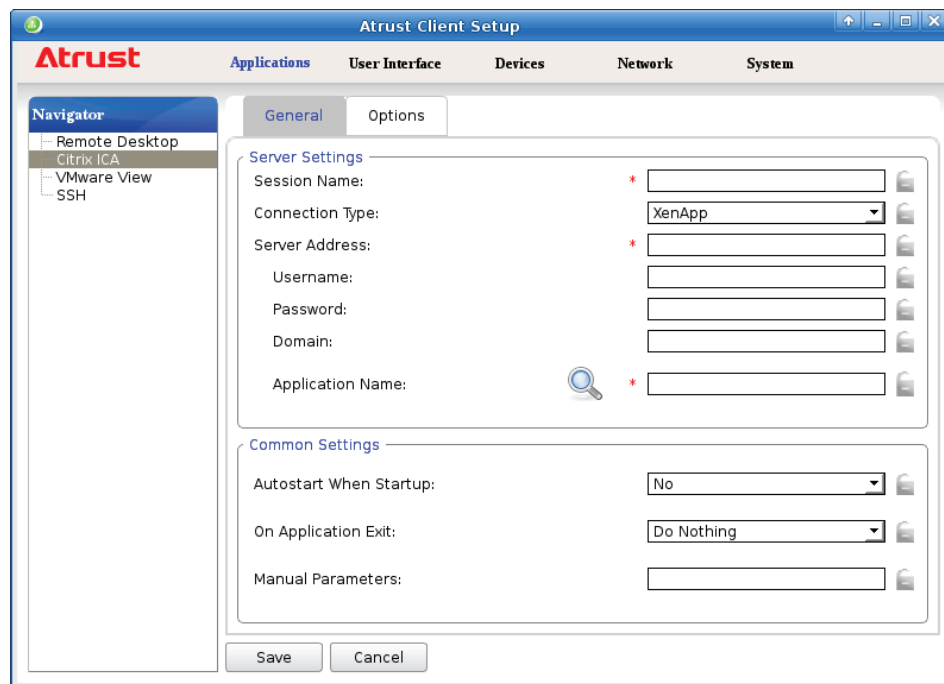

- Type the session name, the IP address / URL / FQDN of the server through which virtual applications are accessible, and the desired application name.




#### NOTE

- You may need to provide the ***XML port number*** as well for your server address (for example, XA65P.CTX.poc:**8080**), depending on your server-side configuration.



#### NOTE

- You can use the Search icon  to help you discover available applications for a given set of credentials.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



#### NOTE

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 173.

### Connection Type: Server Connection


To quickly configure ICA connection settings for the connection type of Server Connection, please do the following:



#### NOTE

- This connection type is used to connect to XenApp server for *administration* and supports *only XenApp 6.5 and earlier*.

- On Atrust Client Setup, click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.

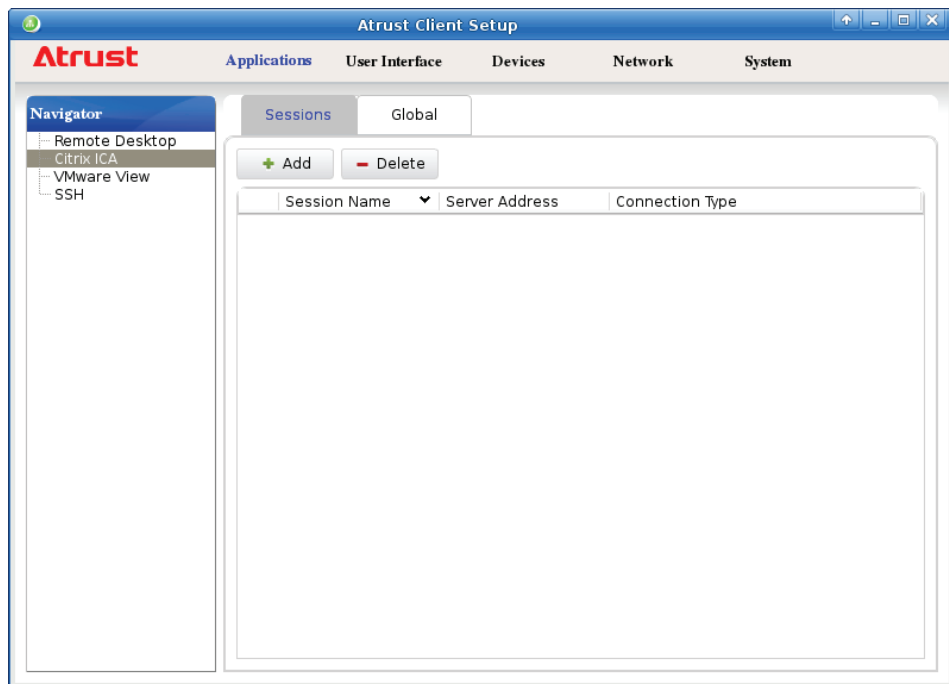


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.

- On **General** sub-tab, click the Connection Type drop-down menu to select **Server Connection**.

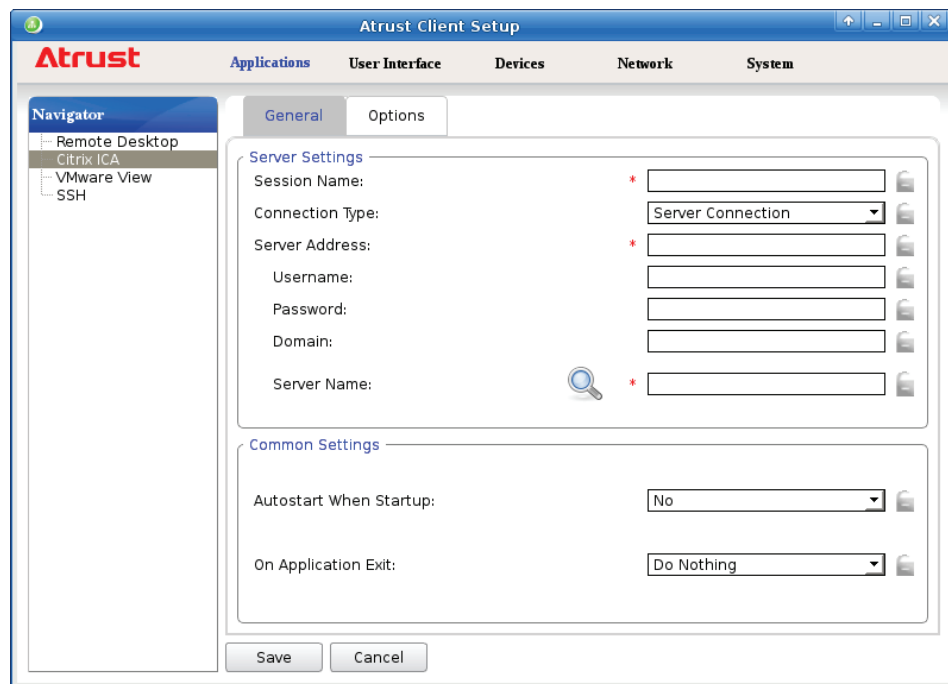

- Type the session name, server address, and server name.




#### NOTE

- You may need to provide the ***XML port number*** as well for your server address (for example, 192.168.77.10:8080), depending on your server-side configuration.



#### NOTE

- Only connections to XenApp servers are supported by this connection type.
- You can use the Search icon  to help you detect the server name.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



#### NOTE

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 173.



### 4.6.7 Switching the Citrix Receiver Version

Two versions of Citrix Receiver are switchable in case that an older version of Citrix Receiver is required for your Citrix environment.


To change the version of Citrix Receiver, please do the following:



#### NOTE

- This is a global setting; the change will affect all Citrix connections.

1. On Atrust Client Setup, click **Applications > Citrix ICA > Global**.
2. Click the drop-down menu to select the desired Citrix Receiver version. Two options are available: **12.x** and **13.x**.

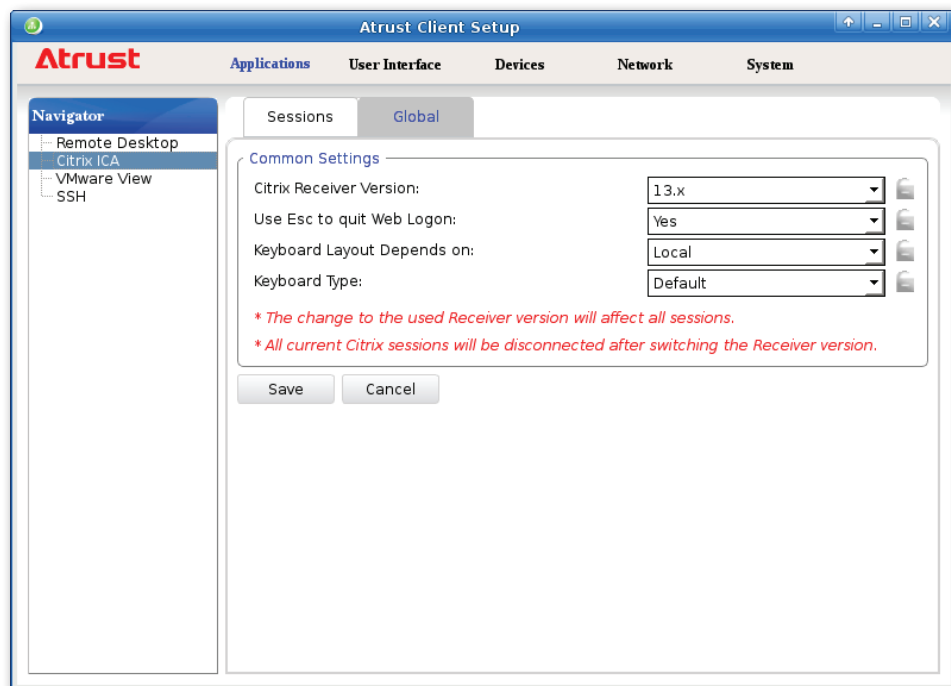

#### TIP

- The default Citrix Receiver version is **13.x**.
- You can refer to the following table for Citrix products and recommended Citrix Receiver version:

Citrix Product	Recommended Receiver Version
XenApp earlier than 6.5	12.x
XenDesktop earlier than 5.6	12.x
XenApp / XenDesktop 7.x or later	13.x

3. Click **Save** to apply.

#### 4.6.8 Enabling or Disabling Esc to Quit on the Web Logon Screen

You can choose whether to allow the use of **Esc** key to quit the Web Logon screen:

- If **Yes** is selected, you can use both **Esc** and **Alt + F4** to quit the Web Logon screen.
- If **No** is selected, only **Alt + F4** works.


To enable or disable Esc to Quit on the Web Logon screen, please do the following:



#### NOTE

- This is a global setting; the change will affect all Citrix connections.

1. On Atrust Client Setup, click **Applications > Citrix ICA > Global**.
2. Click the drop-down menu to select **Yes** or **No** to enable or disable Esc to Quit.

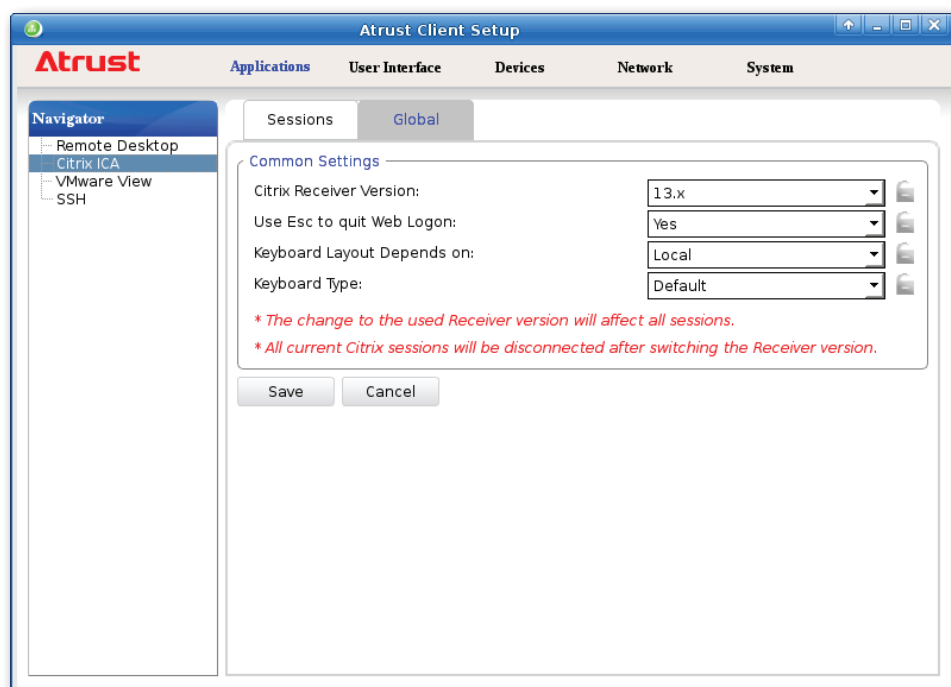


3. Click **Save** to apply.

#### 4.6.9 Configuring Keyboard Layout and Type for Citrix ICA Sessions

To set the used keyboard layout and type for all Citrix ICA sessions, please do the following:

1. On Atrust Client Setup, click **Applications > Citrix ICA > Global**.
2. Click drop-down menus to select what determines the keyboard layout and the desired keyboard type.

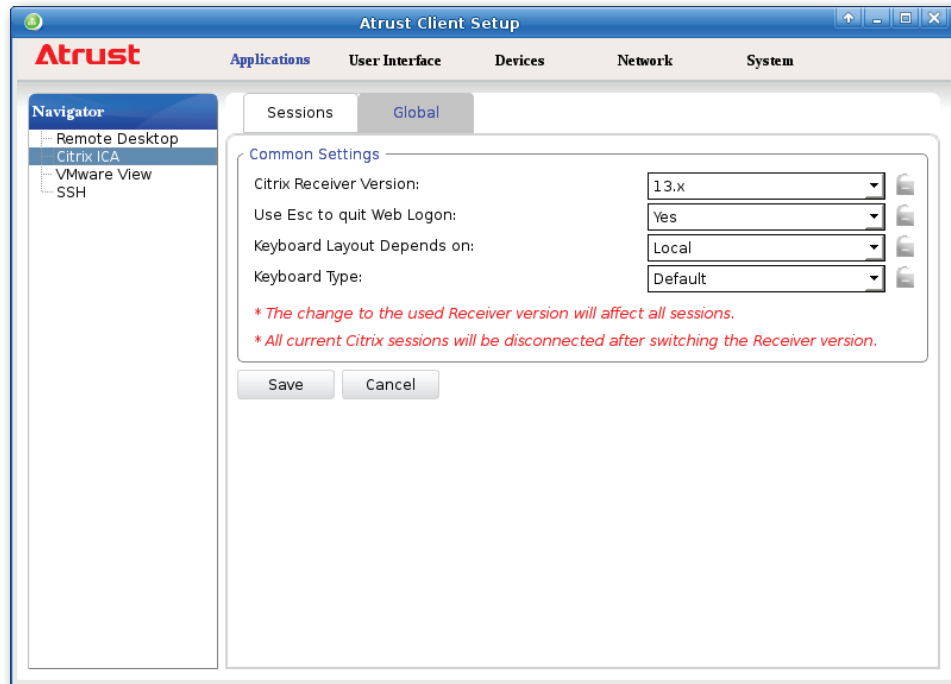

#### NOTE

- These are global settings; the changes will affect all ICA sessions.

3. Click **Save** to apply.

#### 4.6.10 Accessing Citrix Services

##### ***For Connection Types of StoreFront, VDI-in-a-Box, XenDesktop, XenApp, and Server Connection***

To access Citrix services, please do the following:


1. Double click the created (customized) shortcut on the desktop, and then provide your credentials if needed.
2. The desired desktop or application will be displayed on the screen.

##### ***For Connection Type of Web Logon***


To access Citrix services, please do the following:

1. Double click the created (customized) shortcut on the desktop.
2. The Web browser is launched in **full-screen** with the Citrix Logon screen.

#### **Citrix Logon Screen Example: XenApp 6.0 Fundamentals**

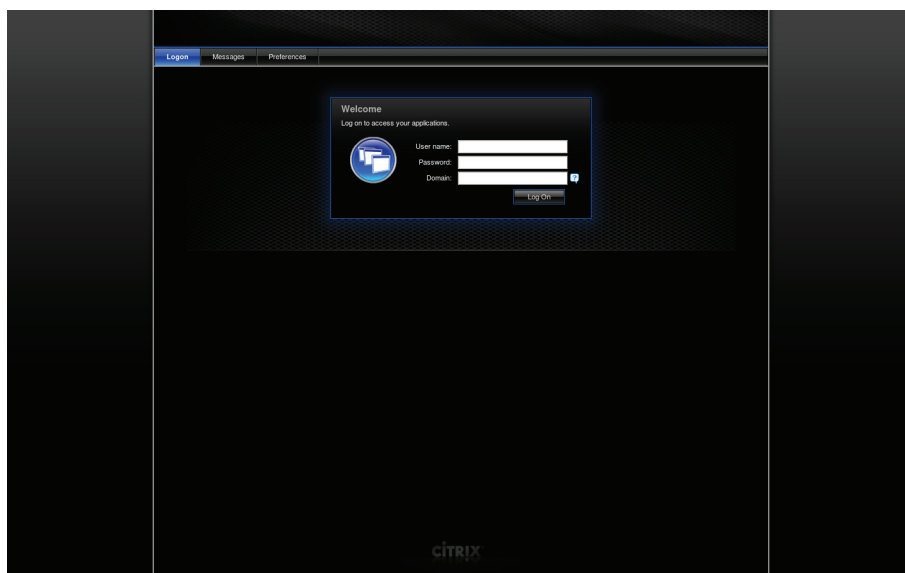


#### **Citrix Logon Screen Example: XenApp 6.5 Platinum**

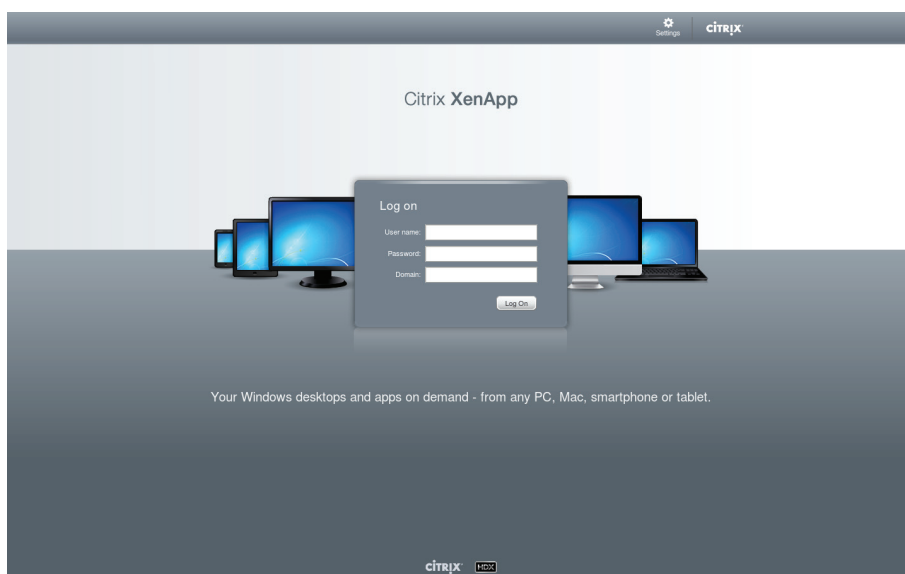


### Citrix Logon Screen Example: XenDesktop 5.6 Platinum



### Citrix Logon Screen Example: VDI-in-a-Box

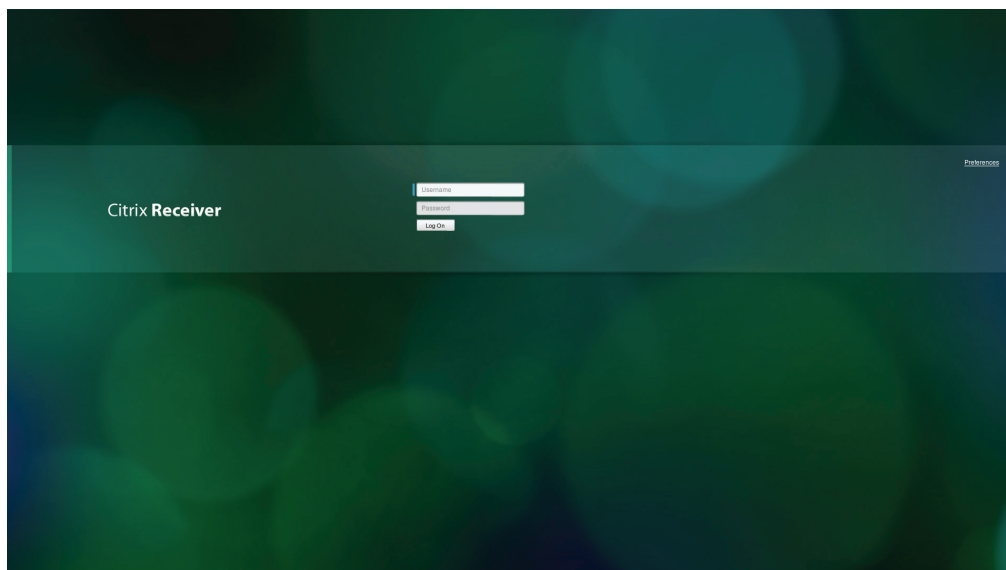

### Citrix Logon Screen Example: XenApp and XenDesktop 7.5 Platinum

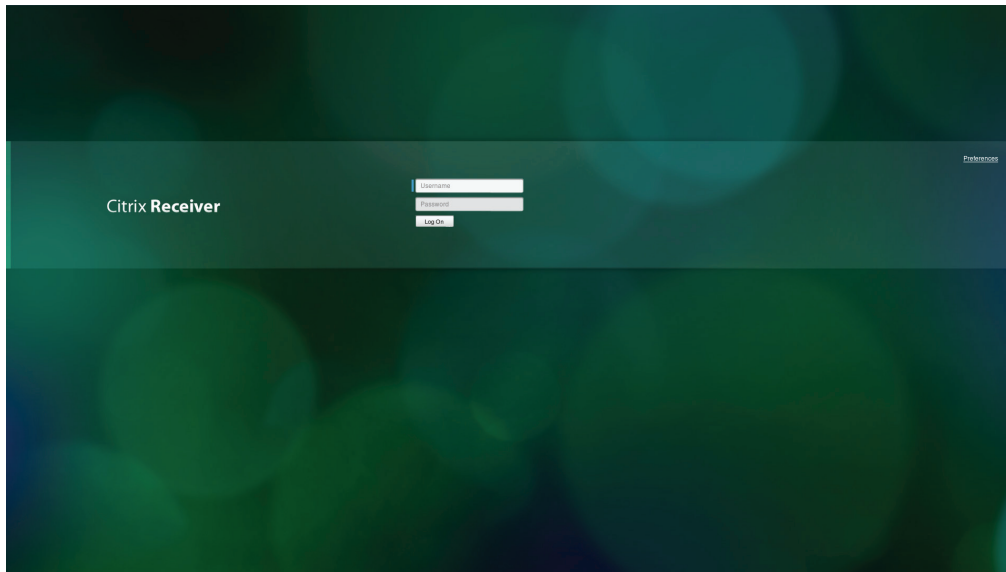

3. Type in the required credentials, and then click **Log On**.



#### NOTE

- If your XenApp server doesn't belong to any domain, type in the server name in the Domain field instead.


4. On the Desktop or Application Selection screen, click to select the desired desktop or application(s).



**NOTE**

- You might enter the virtual desktop directly if only one type of virtual desktop is assigned to the provided credentials.


**Selection Screen Example: XenApp 6.5 Platinum**

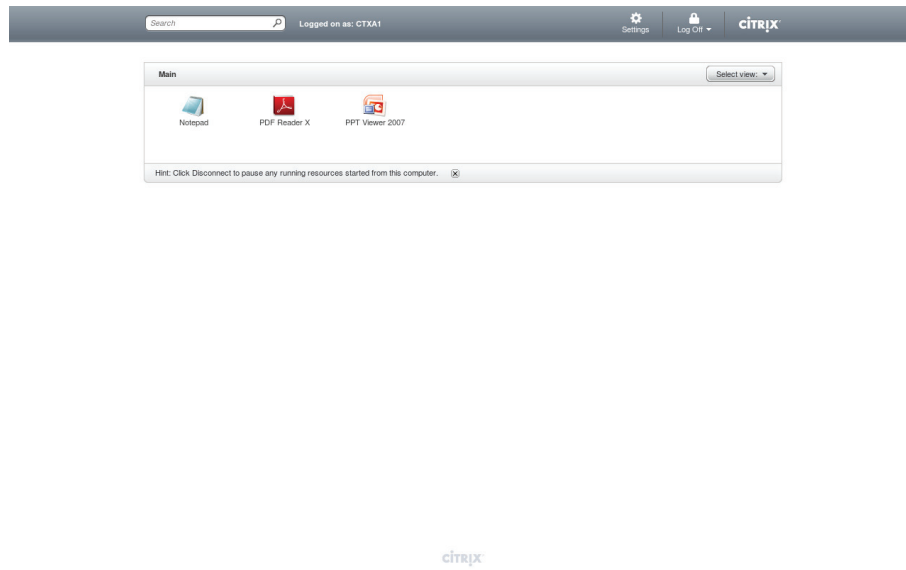


**Selection Screen Example: XenDesktop 5.6 Platinum**



### Selection Screen Example: XenApp 7.5 Platinum

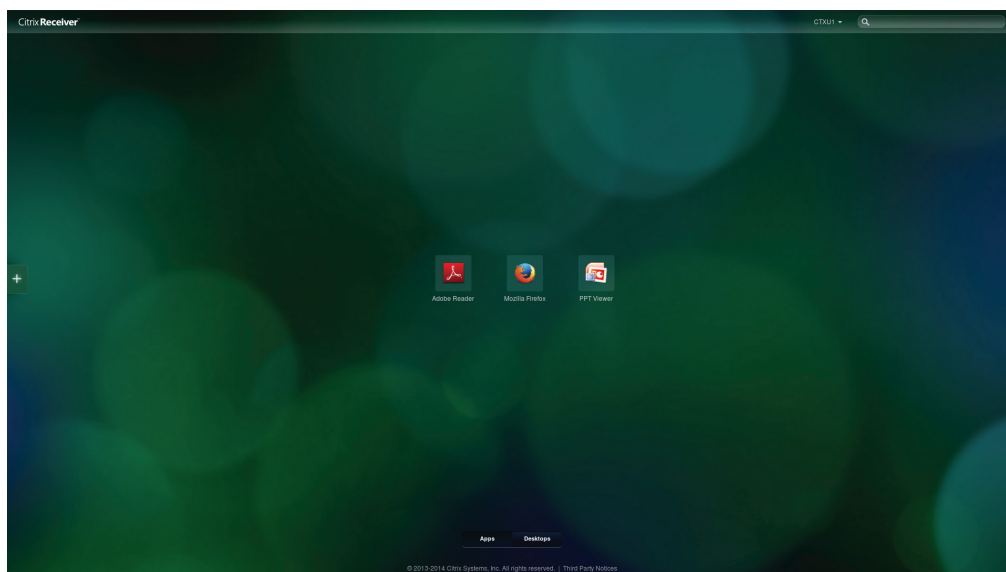


### Selection Screen Example: XenDesktop 7.5 Platinum

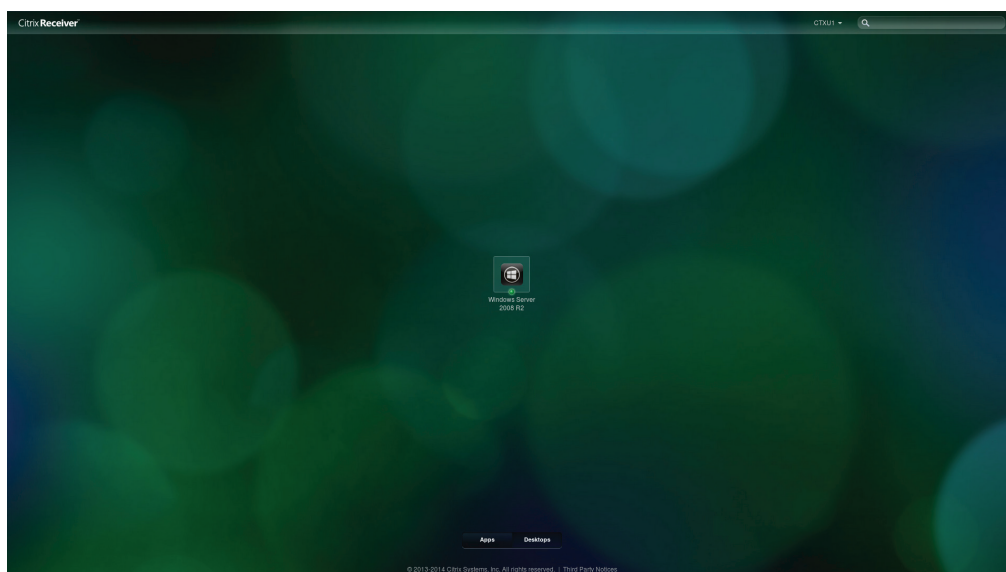




- The selected virtual desktop or application(s) will be displayed on the screen.

### Virtual Application Examples PowerPoint Viewer, Adobe Reader, and Notepad

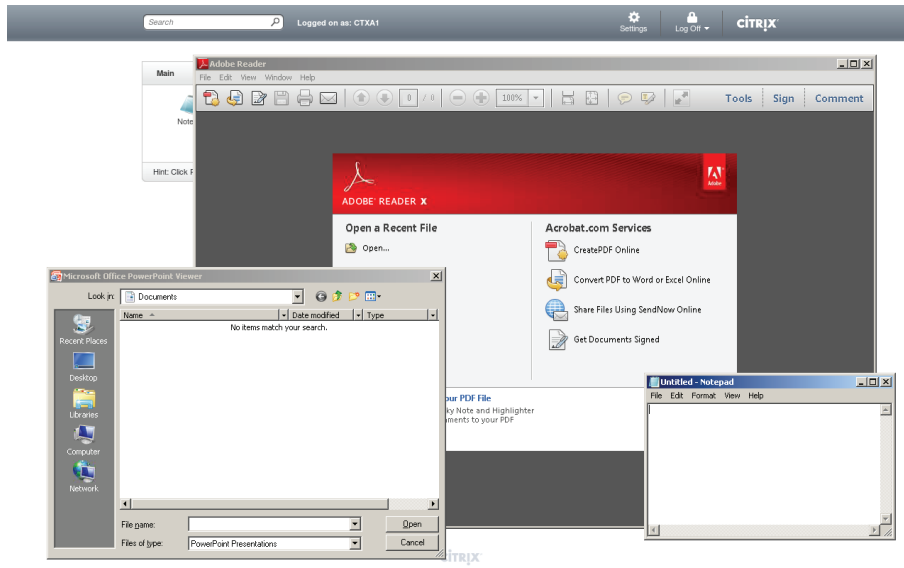


### Virtual Application Examples Adobe Reader, Mozilla Firefox, and PowerPoint Viewer

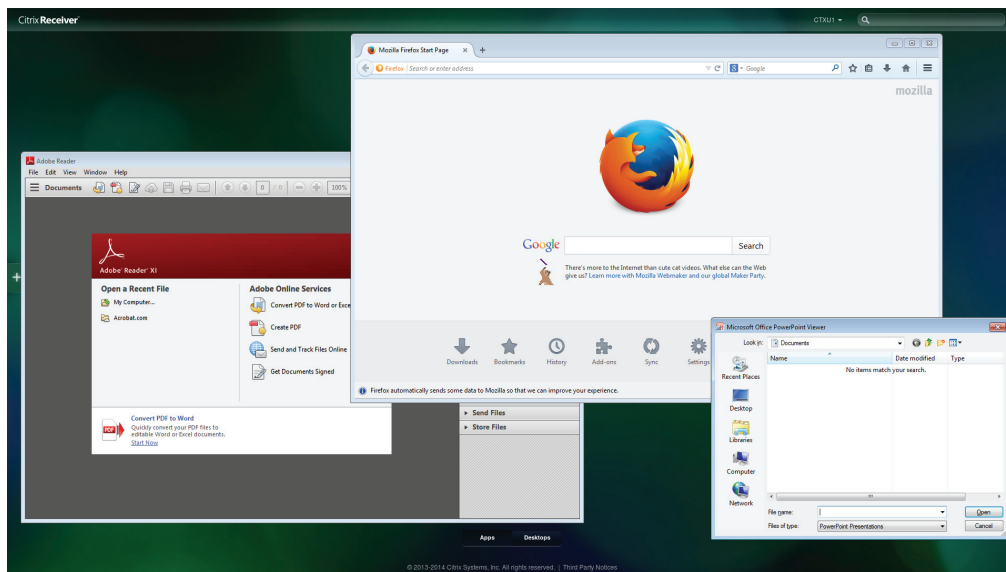

### Virtual Desktop Example Windows 7 Ultimate



### Virtual Desktop Example Windows Server 2008 R2

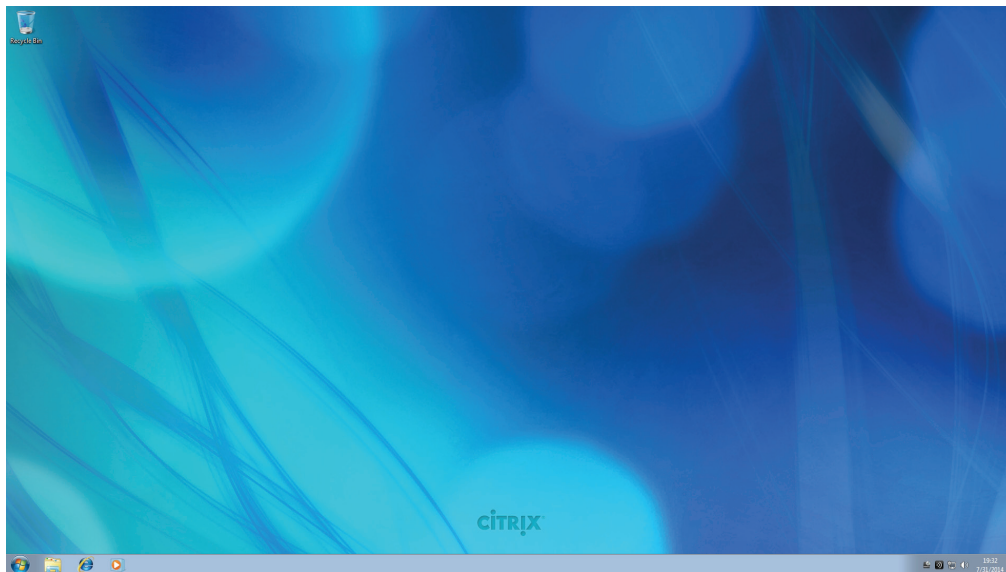

#### 4.6.11 Configuring Advanced ICA Connection Settings

The tables below provide a description of each setting item for ICA connections. Please refer to these tables to configure advanced settings and customize shortcuts on the local desktop and START menu for service access.

**NOTE**

- Please note that available settings vary with the selected connection type.

#### *Settings for the Connection Type of Web Logon*

**NOTE**

- For descriptions of available settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 177.
- For descriptions of available settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 182.
- For descriptions of settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 187.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 192.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 197.

## General Sub-tab

Server Settings			
Item	Description		
Session Name	Type in the name of browser sessions for Citrix service access.		
Connection Type	This table only provides descriptions for available settings when <b>Web Logon</b> is selected.		
	Six connection types are available:		
	<b>Option</b>	<b>Description</b>	
	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	
	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	
	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	
	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	
	XenApp	Provides access to virtual applications for an earlier version of XenApp.	
	Server Connection	Provides access to servers for administration (XenApp servers only).	
	Refer to the table below for Citrix products and recommended connection types:		
<b>Citrix Product</b>	<b>Recommended Connection Type</b>		
XenApp 6.5 or earlier	XenApp / Web Logon		
XenDesktop 5.6 or earlier	XenDesktop / Web Logon		
XenApp and XenDesktop 7.5	StoreFront / Web Logon		
VDI-in-a-Box	VDI-in-a-Box / Web Logon		
Server Address	Type in the IP address / URL / FQDN of the server through which Citrix services are accessible.		
	Refer to the table below for details:		
	<b>Citrix Product</b>	<b>Component to Connect</b>	<b>Connection Address</b>
	XenApp 6.5 or earlier	Web Interface	IP / URL / FQDN
	XenDesktop 5.6 or earlier	Web Interface	IP / URL / FQDN
			IP / URL / FQDN <b>plus</b> <i>sub-path</i>
XenApp and XenDesktop 7.5	StoreFront	<b>For example —</b> <b>FQDN:</b> X75.CTX.poc <b>Sub-path:</b> /Citrix/StoreWeb (default) <b>Connection Address:</b> X75.CTX.poc/Citrix/StoreWeb	

Common Settings												
Item	Description											
Autostart When Startup	Select whether to open a browser session for Citrix service access automatically or not when your mt180L is started up (Autostart mode).											
	<b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:											
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="4">1</td><td rowspan="4">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>		No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>		
	No.	Mode	Description									
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.									
Available actions include:												
<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>												
<table><tr><td rowspan="4">2</td><td rowspan="4">Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>		2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>						
2	Autostart			The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.								
				Available actions include:								
				<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>								
<table><tr><td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>		3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.								
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.										
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.											
On Application Exit	Select what to do when a browser session for Citrix service access is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .											
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Do Nothing</td><td>Returns to the Local Linux desktop.</td></tr><tr><td>Restart Application</td><td>Opens a browser session again for service access.</td></tr><tr><td>Reboot</td><td>Restarts your thin client.</td></tr><tr><td>Shutdown</td><td>Turns off your thin client.</td></tr></table>		Option	Description	Do Nothing	Returns to the Local Linux desktop.	Restart Application	Opens a browser session again for service access.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
	Option	Description										
	Do Nothing	Returns to the Local Linux desktop.										
	Restart Application	Opens a browser session again for service access.										
	Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.											

Options Sub-tab

Device Mapping	
Item	Description
Mapping Local USB Storage	<p>Click the drop-down menu to enable/disable the mapping of the local USB drive(s) and to select access type in a Citrix ICA session. Three options are available: <b>No</b>, <b>Read Only</b>, and <b>Read Write</b>. If <b>Read Only</b> or <b>Read Write</b> is selected, the locally attached USB drive(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 87 for details.</p>
Mapping Local Serial Ports	<p>Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> This setting item is not applicable to your mt180L. However, if you use a serial-based barcode scanner, and attach it to your mt180L with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a virtual desktop.</p>
Mapping Local Printers	<p>Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.7 Adding a Local Printer" on page 91 for detailed instructions.</p>
Connection Settings	
Item	Description
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>
HDX RealTime WebCam	<p>This item is available only when <b>Client Rendering</b> is selected.</p> <p>When <b>Yes</b> is selected, a locally attached webcam can be used in an ICA session.</p>
Use H264 Compression	<p>Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.</p>
USB Redirection Settings	
Item	Description
USB Storage	<p>Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 60 for detailed instructions on these similar settings.</p>
Printers	
Redirect Connected USB Devices	
Plugged USB Devices	
Redirection Rules	

## Settings for the Connection Type of StoreFront




### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 173.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 182.
- For descriptions of settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 187.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 192.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 197.

### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>StoreFront</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of the server through which virtual desktops or applications are accessible (where a StoreFront is hosted).											
Username	Type in the user/account name used for authentication.											
Password	Type in the password of the user account used for authentication.											
Domain	Type in the domain of the server.											
Desktop Group / Application	Type in the name of the desktop group / application or use the Search icon  in front of the field to discover available desktop groups / applications.											
<b>Common Settings</b>												
<b>Item</b>	<b>Description</b>											
Autostart When Startup	<p>Select whether to open a Citrix ICA session automatically or not when your mt180L is started up (Autostart mode).</p> <p><b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:</p>											
	<table border="1"> <thead> <tr> <th>No.</th><th>Mode</th><th>Description</th></tr> </thead> <tbody> <tr> <td>1</td><td>Appliance</td><td> <p>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul> </td></tr> <tr> <td>2</td><td>Autostart</td><td> <p>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"> <li>• Returning to the local desktop</li> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul> </td></tr> <tr> <td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr> </tbody> </table>	No.	Mode	Description	1	Appliance	<p>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul>	2	Autostart	<p>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"> <li>• Returning to the local desktop</li> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul>	3	Quick Connection
No.	Mode	Description										
1	Appliance	<p>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul>										
2	Autostart	<p>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"> <li>• Returning to the local desktop</li> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul>										
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.										
<p><b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.</p>												



On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .	
	<b>Option</b>	<b>Description</b>
	Do Nothing	Returns to the Local Linux desktop.
	Restart Application	Opens an ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b> , <b>1280x1024</b> , <b>1024x768</b> , and <b>800x600</b> .
Window Mode	Click the drop-down menu to select the desired window mode. Two options are available: <b>Regular Window</b> and <b>Seamless Window</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.  <b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 87 for details.
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> This setting item is not applicable to your mt180L. However, if you use a serial-based barcode scanner, and attach it to your mt180L with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a virtual desktop.
Mapping Local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.7 Adding a Local Printer" on page 91 for detailed instructions.

Connection Settings									
Item	Description								
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>								
HDX RealTime WebCam	<p>This item is available only when <b>Client Rendering</b> is selected.</p> <p>When <b>Yes</b> is selected, a locally attached webcam can be used in an ICA session.</p>								
Use H264 Compression	<p>Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.</p>								
Enable Automatic Reconnect	<p>Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.</p> <p><b>NOTE:</b> Automatic reconnecting (Auto Client Reconnect) may not work for a XenDesktop ICA session. This is a known issue. For more details, please visit Citrix websites at <a href="http://support.citrix.com">support.citrix.com</a> or <a href="http://www.citrix.com">www.citrix.com</a>.</p>								
Number of Retries	<p>Click the drop-down menu to select the number of retries, ranging from 1 to 10.</p>								
Delay between Retries	<p>Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.</p>								
Enable Audio	<p>Check/Uncheck to enable/disable sound in an ICA session.</p>								
Audio Quality	<p>Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b>, <b>Medium Quality</b>, and <b>Low Quality</b>.</p> <table><tr><th>Option</th><th>Description</th></tr><tr><td>High Quality</td><td>Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.</td></tr><tr><td>Medium Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.</td></tr><tr><td>Low Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.</td></tr></table>	Option	Description	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.
Option	Description								
High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.								
Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.								
Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.								
Enable Audio Input	<p>Check/Uncheck to enable/disable audio input in an ICA session.</p>								

Windows Key Combination	Click the drop-down menu to select where to apply Windows Key Combinations. Three options are available: <b>On the local computer</b> , <b>On the remote server</b> , and <b>In full screen mode only</b> .	
	<b>Option</b>	<b>Description</b>
	On the local computer	Applies to the local desktop only.
	On the remote server	Applies to the virtual desktop only.
	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
<b>USB Redirection Settings</b>		
<b>Item</b>	<b>Description</b>	
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 60 for detailed instructions on these similar settings.	
Printers		
Redirect Connected USB Devices		
Plugged USB Devices		
Redirection Rules		

## Settings for the Connection Type of VDI-in-a-Box




### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 173.
- For descriptions of settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 177.
- For descriptions of settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 187.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 192.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 197.

### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>VDI-in-a-Box</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of the server through which virtual desktops are accessible.									
Username	Type in the user/account name used for authentication.									
Password	Type in the password of the user account used for authentication.									
Domain	Type in the domain of the server.									
Desktop Group / Application	Type in the name of the desktop group or use the Search icon  in front of the field to discover available desktop groups.									
Common Settings										
Item	Description									
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your mt180L is started up (Autostart mode).									
	<b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:									
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="4">1</td><td rowspan="4">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	
	No.	Mode	Description							
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.							
Available actions include:										
<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>										
<table><tr><td rowspan="4">2</td><td rowspan="4">Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>	2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>					
2			Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.						
				Available actions include:						
				<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>						
<table><tr><td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>	3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.							
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.								
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.									

On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .	
	<b>Option</b>	<b>Description</b>
	Do Nothing	Returns to the Local Linux desktop.
	Restart Application	Opens an ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

#### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b> , <b>1280x1024</b> , <b>1024x768</b> , and <b>800x600</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.  <b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 87 for details.
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> This setting item is not applicable to your mt180L. However, if you use a serial-based barcode scanner, and attach it to your mt180L with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a virtual desktop.
Mapping Local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.7 Adding a Local Printer" on page 91 for detailed instructions.

Connection Settings		
Item	Description	
Rendering Type	Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b> .  <b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.	
HDX RealTime WebCam	This item is available only when <b>Client Rendering</b> is selected.  When <b>Yes</b> is selected, a locally attached webcam can be used in an ICA session.	
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.	
Enable Automatic Reconnect	Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.  <b>NOTE:</b> Automatic reconnecting (Auto Client Reconnect) may not work for a XenDesktop ICA session. This is a known issue. For more details, please visit Citrix websites at <a href="http://support.citrix.com">support.citrix.com</a> or <a href="http://www.citrix.com">www.citrix.com</a> .	
Number of Retries	Click the drop-down menu to select the number of retries, ranging from 1 to 10.	
Delay between Retries	Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.	
Enable Audio	Check/Uncheck to enable/disable sound in an ICA session.	
Audio Quality	Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b> , <b>Medium Quality</b> , and <b>Low Quality</b> .	
	Option	Description
	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.
	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.
	Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.
Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.	

Windows Key Combination	Click the drop-down menu to select where to apply Windows Key Combinations. Three options are available: <b>On the local computer</b> , <b>On the remote server</b> , and <b>In full screen mode only</b> .	
	<b>Option</b>	<b>Description</b>
	On the local computer	Applies to the local desktop only.
	On the remote server	Applies to the virtual desktop only.
	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
<b>USB Redirection Settings</b>		
<b>Item</b>	<b>Description</b>	
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 60 for detailed instructions on these similar settings.	
Printers		
Redirect Connected USB Devices		
Plugged USB Devices		
Redirection Rules		



## Settings for the Connection Type of XenDesktop




### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 173.
- For descriptions of settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 177.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 182.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 192.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 197.

## General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>XenDesktop</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of the server through which virtual desktops are accessible (where a Web Interface is hosted).									
Username	Type in the user/account name used for authentication.									
Password	Type in the password of the user account used for authentication.									
Domain	Type in the domain of the server.									
Desktop Group	Type in the name of the desktop group or use the Search icon  in front of the field to discover available desktop groups.									
Common Settings										
Item	Description									
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your mt180L is started up (Autostart mode).									
	<b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:									
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="4">1</td><td rowspan="4">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	
	No.	Mode	Description							
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.							
Available actions include:										
<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>										
<table><tr><td rowspan="4">2</td><td rowspan="4">Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>	2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>					
2			Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.						
				Available actions include:						
				<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>						
<table><tr><td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>	3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.							
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.								
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.									

On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .	
	<b>Option</b>	<b>Description</b>
	Do Nothing	Returns to the Local Linux desktop.
	Restart Application	Opens an ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b> , <b>1280x1024</b> , <b>1024x768</b> , and <b>800x600</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.  <b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 87 for details.
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> This setting item is not applicable to your mt180L. However, if you use a serial-based barcode scanner, and attach it to your mt180L with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a virtual desktop.
Mapping Local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.7 Adding a Local Printer" on page 91 for detailed instructions.

Connection Settings									
Item	Description								
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>								
HDX RealTime WebCam	<p>This item is available only when <b>Client Rendering</b> is selected.</p> <p>When <b>Yes</b> is selected, a locally attached webcam can be used in an ICA session.</p>								
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.								
Enable Automatic Reconnect	<p>Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.</p> <p><b>NOTE:</b> Automatic reconnecting (Auto Client Reconnect) may not work for a XenDesktop ICA session. This is a known issue. For more details, please visit Citrix websites at <a href="http://support.citrix.com">support.citrix.com</a> or <a href="http://www.citrix.com">www.citrix.com</a>.</p>								
Number of Retries	Click the drop-down menu to select the number of retries, ranging from 1 to 10.								
Delay between Retries	Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.								
Enable Audio	Check/Uncheck to enable/disable sound in an ICA session.								
Audio Quality	<p>Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b>, <b>Medium Quality</b>, and <b>Low Quality</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>High Quality</td><td>Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.</td></tr> <tr> <td>Medium Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.</td></tr> <tr> <td>Low Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.</td></tr> </table>	Option	Description	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.
Option	Description								
High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.								
Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.								
Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.								
Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.								

Windows Key Combination	Click the drop-down menu to select where to apply Windows Key Combinations. Three options are available: <b>On the local computer</b> , <b>On the remote server</b> , and <b>In full screen mode only</b> .	
	<b>Option</b>	<b>Description</b>
	On the local computer	Applies to the local desktop only.
	On the remote server	Applies to the virtual desktop only.
	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
<b>USB Redirection Settings</b>		
<b>Item</b>	<b>Description</b>	
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 60 for detailed instructions on these similar settings.	
Printers		
Redirect Connected USB Devices		
Plugged USB Devices		
Redirection Rules		

## Settings for the Connection Type of XenApp




### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 173.
- For descriptions of settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 177.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 182.
- For descriptions of available settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 187.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 197.

### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>XenApp</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of a XenApp server.						
Username	Type in the user/account name used for authentication.						
Password	Type in the password of the user account used for authentication.						
Domain	Type in the domain of the server.						
Application Name	Type in the application name or use the Search icon  in front of the field to discover available applications.						
Common Settings							
Item	Description						
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your mt180L is started up (Autostart mode).  <b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:						
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="2">1</td><td rowspan="2">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include:<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
	No.	Mode	Description				
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>				
			<table><tr><td rowspan="2">2</td><td rowspan="2">Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include:<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr></table>	2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	
2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>					
		<table><tr><td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>	3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.		
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.					
<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.							

On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .
	<b>Option</b> <b>Description</b>
	Do NothingReturns to the Local Linux desktop.
	Restart ApplicationOpens an ICA session again.
	RebootRestarts your thin client.
	ShutdownTurns off your thin client.
Manual Parameters	Type in parameters for extended parameter passing.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	<p>This item is available only when <b>Regular Window</b> is selected.</p> <p>Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b>, <b>1280x1024</b>, <b>1024x768</b>, and <b>800x600</b>.</p>
Window Mode	Click the drop-down menu to select the desired window mode. Two options are available: <b>Regular Window</b> and <b>Seamless Window</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	<p>Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.</p> <p><b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section “4.4.3 Configuring Settings for USB Storage Devices” on page 87 for details.</p>
Mapping Local Serial Ports	<p>Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> This setting item is not applicable to your mt180L. However, if you use a serial-based barcode scanner, and attach it to your mt180L with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a delivered application.</p>



Mapping Local Printers	<p>Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.7 Adding a Local Printer" on page 91 for detailed instructions.</p>
<b>Connection Settings</b>	
<b>Item</b>	<b>Description</b>
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>
HDX RealTime WebCam	<p>This item is available only when <b>Client Rendering</b> is selected.</p> <p>When <b>Yes</b> is selected, a locally attached webcam can be used in an ICA session.</p>
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.
Network Protocol	Click the drop-down menu to select the protocol(s) used for connection. Three options are available: <b>TCP/IP</b> , <b>TCP/IP + HTTP server location</b> , and <b>SSL/TLS + HTTPS server location</b> .
Enable Automatic Reconnect	Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.
Number of Retries	Click the drop-down menu to select the number of retries, ranging from 1 to 10.
Delay between Retries	Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.
Enable Audio	Check/Uncheck to enable/disable sound in an ICA session.

Audio Quality	Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b> , <b>Medium Quality</b> , and <b>Low Quality</b> .								
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>High Quality</td><td>Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.</td></tr><tr><td>Medium Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.</td></tr><tr><td>Low Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.</td></tr></table>	Option	Description	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.
	Option	Description							
	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.							
	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.							
Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.								
Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.								
Windows Key Combination	Click the drop-down menu to select where to apply Windows Key Combinations. Three options are available: <b>On the local computer</b> , <b>On the remote server</b> , and <b>In full screen mode only</b> .								
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>On the local computer</td><td>Applies to the local desktop only.</td></tr><tr><td>On the remote server</td><td>Applies to the virtual desktop only.</td></tr><tr><td>In full screen mode only</td><td>Applies to the virtual desktop only when the desktop is running in the full-screen mode.</td></tr></table>	Option	Description	On the local computer	Applies to the local desktop only.	On the remote server	Applies to the virtual desktop only.	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
	Option	Description							
	On the local computer	Applies to the local desktop only.							
	On the remote server	Applies to the virtual desktop only.							
In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.								
USB Redirection Settings									
Item	Description								
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 60 for detailed instructions on these similar settings.								
Printers									
Redirect Connected USB Devices									
Plugged USB Devices									
Redirection Rules									

## Settings for the Connection Type of Server Connection



### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 173.
- For descriptions of settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 177.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 182.
- For descriptions of available settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 187.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 192.

### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>Server Connection</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of the XenApp server. <b>NOTE:</b> Server Connection only supports connections to XenApp servers.												
Username	Type in the user/account name used for authentication.												
Password	Type in the password of the user account used for authentication.												
Domain	Type in the domain of the server.												
Server Name	Type in the name of the server.												
Common Settings													
Item	Description												
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your mt180L is started up (Autostart mode).  <b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:												
	<table><thead><tr><th>No.</th><th>Mode</th><th>Description</th></tr></thead><tbody><tr><td>1</td><td>Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include:<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>2</td><td>Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include:<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr></tbody></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.
	No.	Mode	Description										
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>										
	2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>										
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.											
<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.													

On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .	
	<b>Option</b>	<b>Description</b>
	Do Nothing	Returns to the Local Linux desktop.
	Restart Application	Opens an ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b> , <b>1280x1024</b> , <b>1024x768</b> , and <b>800x600</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.  <b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 87 for details.
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> This setting item is not applicable to your mt180L. However, if you use a serial-based barcode scanner, and attach it to your mt180L with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a virtual server desktop.
Mapping Local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.7 Adding a Local Printer" on page 91 for detailed instructions.

Connection Settings		
Item	Description	
Rendering Type	Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b> .  <b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.	
HDX RealTime WebCam	This item is available only when <b>Client Rendering</b> is selected.  When <b>Yes</b> is selected, a locally attached webcam can be used in an ICA session.	
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.	
Network Protocol	Click the drop-down menu to select the protocol(s) used for connection. Three options are available: <b>TCP/IP</b> , <b>TCP/IP + HTTP server location</b> , and <b>SSL/TLS + HTTPS server location</b> .	
Enable Automatic Reconnect	Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.  <b>NOTE:</b> Automatic reconnecting (Auto Client Reconnect) may not work for a XenDesktop ICA session. This is a known issue. For more details, please visit Citrix websites at <a href="http://support.citrix.com">support.citrix.com</a> or <a href="http://www.citrix.com">www.citrix.com</a> .	
Number of Retries	Click the drop-down menu to select the number of retries, ranging from 1 to 10.	
Delay between Retries	Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.	
Enable Audio	Check/Uncheck to enable/disable sound in an ICA session.	
Audio Quality	Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b> , <b>Medium Quality</b> , and <b>Low Quality</b> .	
	Option	Description
	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.
	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.
	Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.
Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.	

Windows Key Combination	Click the drop-down menu to select where to apply Windows Key Combinations. Three options are available: <b>On the local computer</b> , <b>On the remote server</b> , and <b>In full screen mode only</b> .	
	<b>Option</b>	<b>Description</b>
	On the local computer	Applies to the local desktop only.
	On the remote server	Applies to the virtual desktop only.
	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
<b>USB Redirection Settings</b>		
<b>Item</b>	<b>Description</b>	
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 60 for detailed instructions on these similar settings.	
Printers		
Redirect Connected USB Devices		
Plugged USB Devices		
Redirection Rules		

#### 4.6.12 Configuring Basic VMware View Connection Settings

The **VMware View** setting enables you to configure View connection settings for VMware View or Horizon View services and create shortcuts on the local desktop and START menu for service access. You can access on-demand services for work simply through these shortcuts.




##### NOTE

- For more information on VMware desktop virtualization solutions, please visit VMware website at [www.vmware.com](http://www.vmware.com).

To quickly configure VMware View connection settings, please do the following:

1. On Atrust Client Setup, click **Applications > VMware View**.
2. The View Connection list appears in the Configuration area.

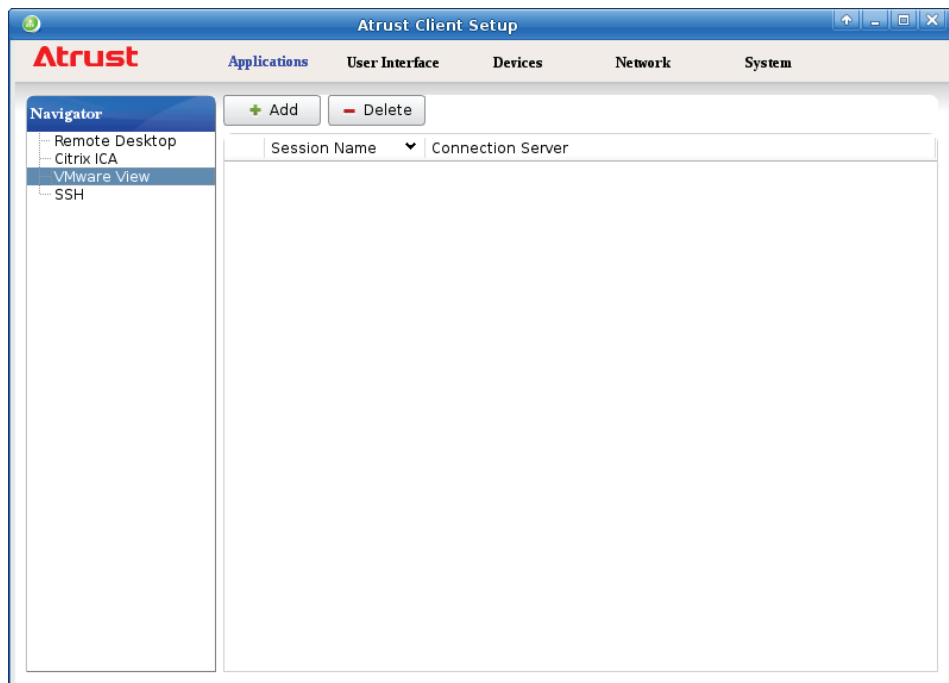


##### NOTE

- If you haven't created any entry, the View Connection list will be empty.

3. Click **Add** on the top of the View Connection list to add a new entry of View connection.



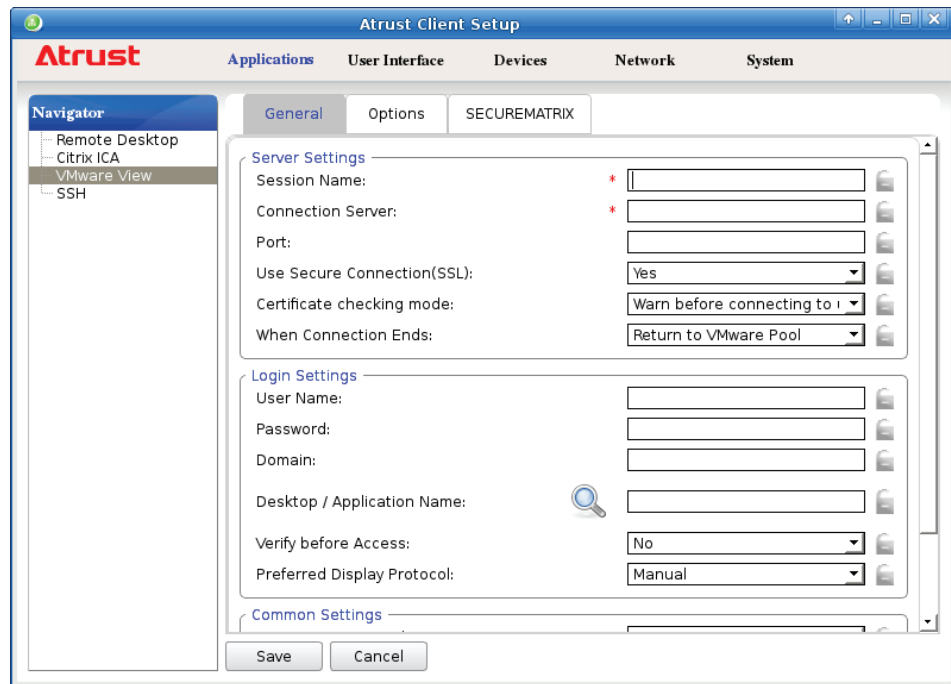

4. Type in the desired session name and the computer name or IP address of the View Connection Server, and then click **Save** to confirm.



#### NOTE

- These are the only required fields for the creation of a service access shortcut on the desktop. Other data can be provided during the period of service access. Depending on your needs, you might choose to type in more other data.

5. The new entry is added to the View Connection list and the access shortcuts are automatically created on the local desktop and START menu.

#### 4.6.13 Accessing VMware View or Horizon View Services

To access VMware View or Horizon View services, please do the following:


1. Double click the created (customized) access shortcut on the desktop.




#### NOTE

- A window might appear with a certificate message about the remote server. Consult the IT administrator for details and ensure the connection is secure **first**. To import a security certificate, please refer to section “4.2.16 Importing Certificates for Remote Computers” on page 69. To bypass, click **Connect Insecurely**.

2. A Welcome window might appear. Click **OK** to continue.
3. A window appears prompting for the credentials. Enter your user name, password, click the Domain drop-down menu to select the domain, and then click **OK**.

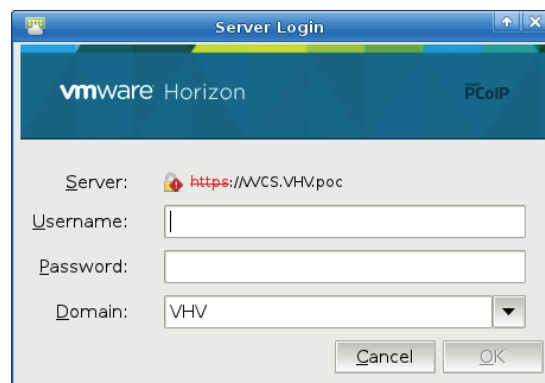

4. A window appears with available desktops and/or applications for the provided credentials.

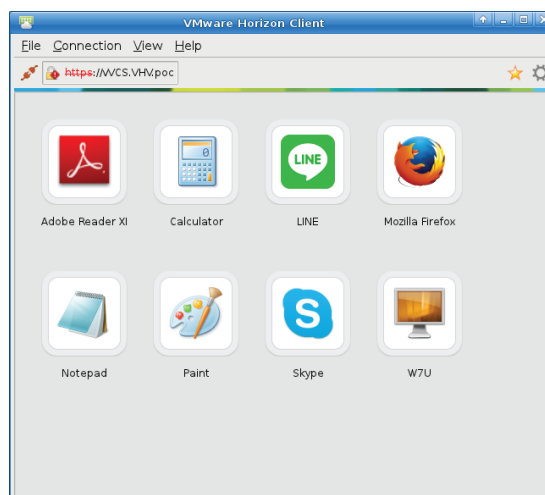


5. Double click to select the desired desktop or application.

6. The selected desktop or application will be displayed on the screen.




**NOTE**

- Your desktop or application will be displayed in full screen. You can:
  - ✧ Click **File > Return to Desktop and Application List** on the top tool bar to recall the Desktop and Application list.

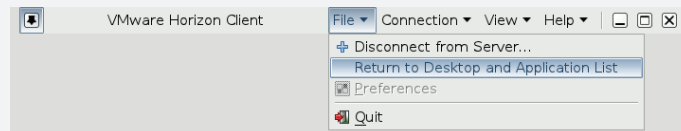


- ✧ Click **View** on the top tool bar to switch to a virtual desktop or application.

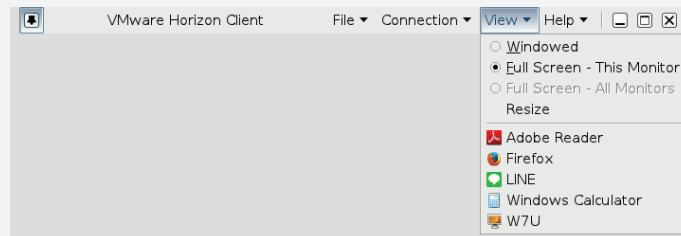

#### 4.6.14 Configuring Advanced View Connection Settings

The table below provides a description of each setting item for View connections. Please refer to this table to configure advanced settings and customize shortcuts on the local desktop and START menu for service access.

##### General Sub-tab

Server Settings		
Item	Description	
Session Name	Type in the name for VMware View or Horizon View sessions.	
Connection Server	Type in the computer name or IP address of the View Connection Server. <b>NOTE:</b> For more information on View Connection Server, please visit VMware website at <a href="http://www.vmware.com">www.vmware.com</a> .	
Port	Type in the port number used to communicate with the View Connection Server. To use the default value, simply leave it blank.	
Use secure connection (SSL)	Check/Uncheck to enable/disable secure connection.	
Certificate Checking Mode	Click the drop-down menu to select if to check server identity certificates and if to connect to untrusted servers. Three options are available: <b>Do not verify server identity certificates</b> , <b>Warn before connecting to untrusted servers</b> , and <b>Never connect to untrusted servers</b> .	
When Connection Ends	Click the drop-down menu to select what to do when the connection ends. Two options are available: <b>Return to VMware Pool</b> and <b>Quit VMware Client</b> .	
	Option	Description
	Return to VMware Pool	When the connection ends, return to the Desktop and Application list for given credentials.
	Quit VMware Client	When the connection ends, close VMware Client. To access virtual desktops and applications, you need to provide the credentials again.
Login Settings		
Item	Description	
Username	Type in the user name for authentication.	
Password	Type in the password for authentication.	
Domain	Type in the domain name of the View Connection Server.	
Desktop / Application Name	Type in the desktop / application name. Or, leave it blank for users to select one. <b>NOTE:</b> You can use the Search icon  to help you discover available desktops or applications for a given set of credentials.	

Verify before Access	<p>Click the drop-down menu to select whether to verify the entitlement to the virtual desktop or application provided in the previous setting item:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Yes</td><td>Verify the entitlement to the virtual desktop or application provided in the previous setting item. Stop if the given credentials do not pass this verification.</td></tr> <tr> <td>No</td><td>If the given credentials are not entitled to the virtual desktop or application provided in the previous setting item, just ignore that error and provide the Desktop and Application list available for that credentials.</td></tr> </table>	Option	Description	Yes	Verify the entitlement to the virtual desktop or application provided in the previous setting item. Stop if the given credentials do not pass this verification.	No	If the given credentials are not entitled to the virtual desktop or application provided in the previous setting item, just ignore that error and provide the Desktop and Application list available for that credentials.		
Option	Description								
Yes	Verify the entitlement to the virtual desktop or application provided in the previous setting item. Stop if the given credentials do not pass this verification.								
No	If the given credentials are not entitled to the virtual desktop or application provided in the previous setting item, just ignore that error and provide the Desktop and Application list available for that credentials.								
Preferred Display Protocol	<p>Click the drop-down menu to select the desired display protocol. Three options are available: <b>Manual</b>, <b>Microsoft RDP</b>, and <b>PCoIP</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Manual</td><td>Manually select the desired display protocol.</td></tr> <tr> <td>Microsoft RDP</td><td>Use Microsoft RDP as the display protocol.</td></tr> <tr> <td>PCoIP</td><td>Use VMware PCoIP as the display protocol.</td></tr> </table>	Option	Description	Manual	Manually select the desired display protocol.	Microsoft RDP	Use Microsoft RDP as the display protocol.	PCoIP	Use VMware PCoIP as the display protocol.
Option	Description								
Manual	Manually select the desired display protocol.								
Microsoft RDP	Use Microsoft RDP as the display protocol.								
PCoIP	Use VMware PCoIP as the display protocol.								
<b>Common Settings</b>									
<b>Item</b>	<b>Description</b>								
Non-Interactive Mode	<p>Select <b>Yes</b> or <b>No</b> to allow or disallow the Non-Interactive mode. The default is to use the Non-Interactive mode.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Yes</td><td>The Non-Interactive mode is used. Users are not allowed to re-select different settings if the settings have been specified in View connection settings.</td></tr> <tr> <td>No</td><td>The Interactive mode is used. Users are allowed to re-select different settings even if the settings have been specified in View connection settings.</td></tr> </table>	Option	Description	Yes	The Non-Interactive mode is used. Users are not allowed to re-select different settings if the settings have been specified in View connection settings.	No	The Interactive mode is used. Users are allowed to re-select different settings even if the settings have been specified in View connection settings.		
Option	Description								
Yes	The Non-Interactive mode is used. Users are not allowed to re-select different settings if the settings have been specified in View connection settings.								
No	The Interactive mode is used. Users are allowed to re-select different settings even if the settings have been specified in View connection settings.								

Autostart When Startup	<p>Select whether to open a VMware View or Horizon View session automatically or not when your mt180L is started up (Autostart mode).</p> <p><b>NOTE:</b> There are three similar but different modes for your mt180L and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:</p> <table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td>1</td><td>Appliance</td><td><p>The client will start up directly with the desired VMware View session and perform the configured action after exiting the session.</p><p>Available actions include:</p><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>2</td><td>Autostart</td><td><p>The client will start up directly with the desired VMware View or Horizon View session and perform the configured action after exiting the session.</p><p>Available actions include:</p><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>3</td><td>Quick Connection</td><td>The client will enter Atrust Quick Connection screen after system startup.</td></tr></table> <p><b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.</p>	No.	Mode	Description	1	Appliance	<p>The client will start up directly with the desired VMware View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	2	Autostart	<p>The client will start up directly with the desired VMware View or Horizon View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.
No.	Mode	Description											
1	Appliance	<p>The client will start up directly with the desired VMware View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>											
2	Autostart	<p>The client will start up directly with the desired VMware View or Horizon View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>											
3	Quick Connection	The client will enter Atrust Quick Connection screen after system startup.											
On Application Exit	<p>Select what to do when a VMware View or Horizon View session is ended. Four options are available: <b>Do Nothing</b>, <b>Restart Application</b>, <b>Reboot</b>, and <b>Shutdown</b>.</p> <table><tr><th>Option</th><th>Description</th></tr><tr><td>Do Nothing</td><td>Returns to the local desktop.</td></tr><tr><td>Restart Application</td><td>Opens a VMware View or Horizon View session again.</td></tr><tr><td>Reboot</td><td>Restarts your thin client.</td></tr><tr><td>Shutdown</td><td>Turns off your thin client.</td></tr></table>	Option	Description	Do Nothing	Returns to the local desktop.	Restart Application	Opens a VMware View or Horizon View session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.		
Option	Description												
Do Nothing	Returns to the local desktop.												
Restart Application	Opens a VMware View or Horizon View session again.												
Reboot	Restarts your thin client.												
Shutdown	Turns off your thin client.												

## Options Sub-tab

Window Settings		
Item	Description	
Resolution	Click the drop-down menu to select the desired display size of a View session. Three options are available: <b>Full Screen</b> , <b>Large Window</b> , and <b>Small Window</b> .	
	Option	Description
	Full Screen	Opens the selected View session in full screen.
	Large Window	Opens the selected View session in a large window.
	Small Window	Opens the selected View session in a small window.
USB Redirection Settings		
Item	Description	
Mass Storage	Please refer to “Advanced Quick Connection Settings for VMware View Sessions” on page 62 for detailed instructions on these similar settings.	
Smart Card		
Human Interface Device		
Printer		
Plugged USB Devices		
Redirection Rules		
Microsoft RDP Protocol Only		
Item	Description	
Printer Mapping	Click the drop-down menu to enable/disable printer mapping when RDP protocol is used for VMware View connections.	
	When <b>Enable</b> is selected, users can access a local or network printer in a virtual desktop session.	
	<b>NOTE:</b> You need to add a local or network printer for your mt180L first, and then enable this feature here to use that printer in a virtual desktop session.	
	<b>NOTE:</b> For detailed instructions on how to add a local or network printer for your mt180L, please refer to section “4.4.7 Adding a Local Printer” on page 91 or “4.4.8 Adding a Network Printer” on page 94.	

**SECUREMATRIX** Sub-tab

Connection Settings	
Item	Description
Use SECUREMATRIX	Check to use SECUREMATRIX authentication.
GSB Server Address	Type the server address of GSB server, the server for SECUREMATRIX authentication service.
Username	Type your user name (Login ID).



**NOTE**


- For details, please refer to “A.3 Using SECUREMATRIX Authentication for VMware Connections” on page 220.



#### 4.6.15 Configuring SSH Connection Settings

To configure SSH (Secure SHell) connection settings, please do the following:


1. On Atrust Client Setup, click **Applications** > **SSH**.
2. The SSH Connection list appears in the Configuration area.

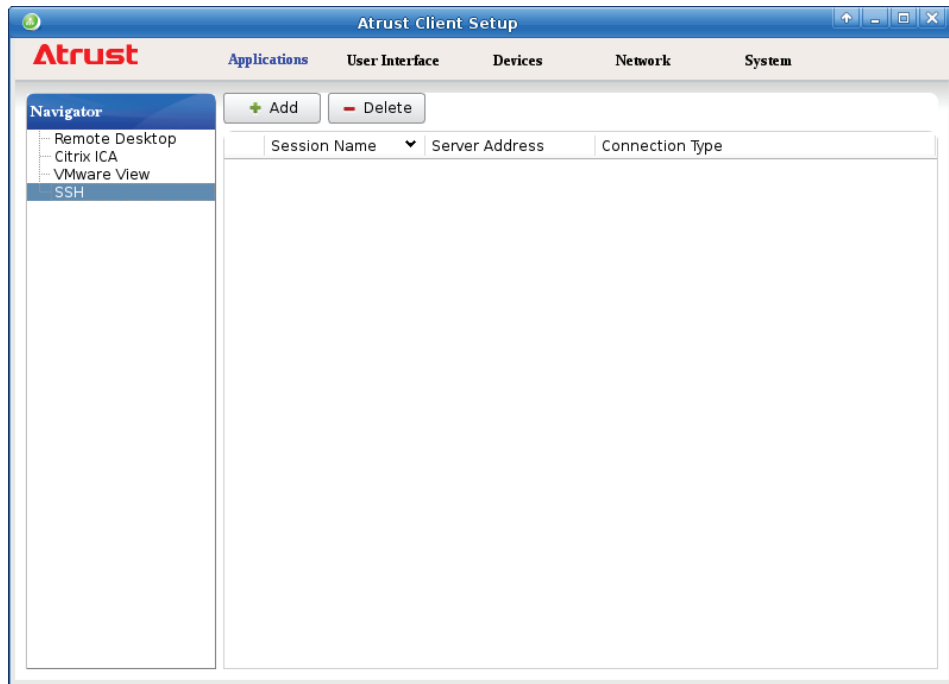


#### NOTE

- If you haven't created any entry, the SSH Connection list will be empty.

3. Click **Add** on the top of the SSH Connection list to add a new entry of SSH connection.

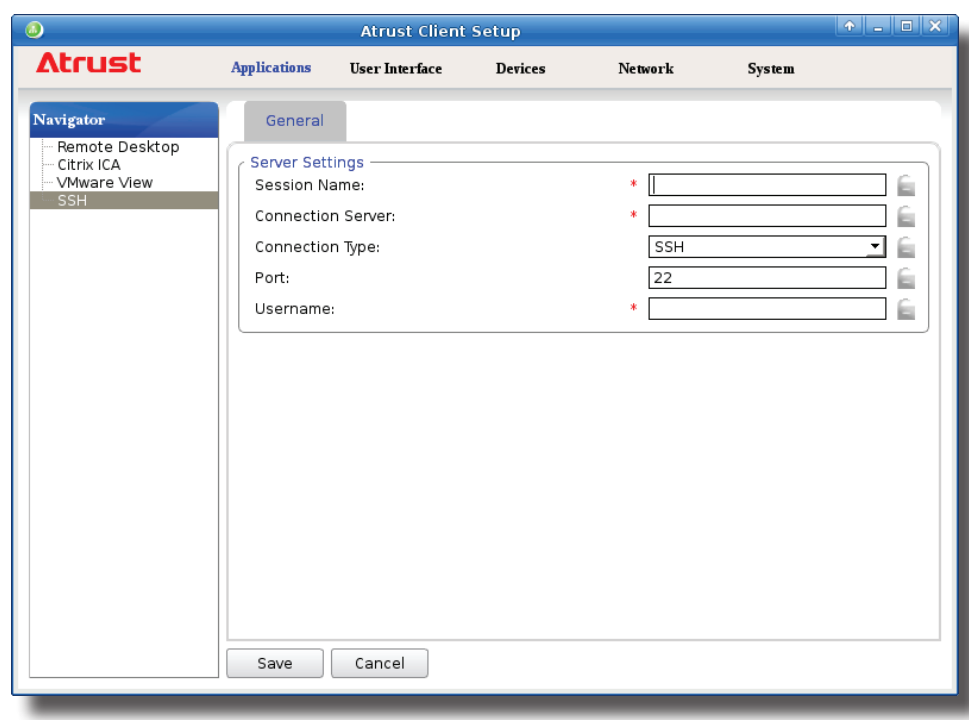

4. Click the drop-down menu to select the desired connection type. Two types are available: **SSH** and **Telnet**.
5. Type in the desired session name, the computer name or IP address of the remote server, the user name, and then click **Save** to confirm.
6. The new entry is added to the SSH Connection list and the access shortcuts are automatically created on the local desktop and START menu.

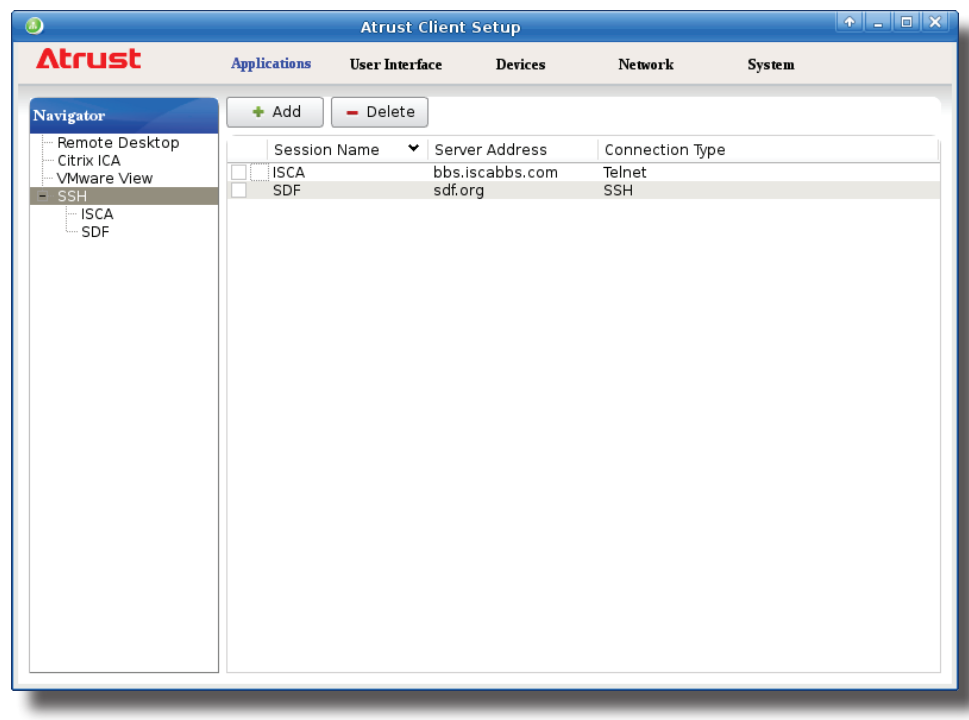

#### 4.6.16 Launching SSH and Telnet Sessions

To launch an SSH or Telnet session, please do the following:

1. Double click the created shortcut on the local desktop.
2. The SSH or Telnet session starts in the opened window.

##### Example: SSH Session

```

Terminal
File Edit View Terminal Go Help
Welcome to the SDF Public Access UNIX System - Est. 1987
You are the 11st guest today, logged in on 02-Jul-14 03:23:14.

Are you using Windows 2K or XP? (Y/N) NO

Please press your BACKSPACE key:

Would you like to view the guestbook? (y/n) YES
-----
[30-Jun-14 20:12:16      new      dl      ]
% full time
-----
[01-Jul-14 00:37:45      new      Daniel D      ]
% Whatever
-----
[01-Jul-14 01:45:32      new      shared4you      india]
% india ftw
-----
[01-Jul-14 14:21:48      new      nemysis      Switzerland]
%
-----
[01-Jul-14 19:26:58      new      Girish      Bangalore]
% hello
-----
    
```

##### Example: Telnet Session

```

Terminal
File Edit View Terminal Go Help
DOC (Dave's Own version of Citadel) Version 1.7
Welcome to the ISCA BBS.

Login as 'Guest' to just look around, or 'New' to create a new account.
Name: Guest
Iowa Student Computer Association BBS.

                Welcome to ISCA BBS!
                ~~~~~
As a Guest there are a few simple things to remember:

1) To see the commands available to you, type <?>
2) To leave ISCA BBS, type <l>
3) To read about ISCA BBS in depth, type <h> to enter the
   help system from which you may access the topics listed
4) More commands will be available once you start your own
   account on ISCA BBS
5) If you decide to create your own account here, you
   might want to keep the following in mind.
    
```



# Appendices

This chapter provides instructions on advanced settings, maintenance, and upgrade for your mt180L thin client.

## **A.1 Resetting Your mt180L to the Factory Default**

How to restore factory default settings for your mt180L 217

## **A.2 Updating Firmware for Your mt180L**

Four ways to update firmware for your mt180L 218

## **A.3 Using SECUREMATRIX Authentication for VMware Connections**

Enabling SECUREMATRIX authentication 220  
Using SECUREMATRIX authentication 222  
Changing Your Password Pattern 225

## **A.4 Auto Setup Flowchart**

Sequence of actions in Auto Setup mode 227



## A.1 Resetting Your mt180L to the Factory Default


To reset your mt180L to the factory default, please do the following:



### WARNING

- Resetting your mt180L to the factory default will erase all current settings in Atrust Client Setup and restore all settings to defaults.

- Restart your mt180L.
- During the POST (Power-on Self-Test) period, press **Esc** on the keyboard to enter Atrust Thin Client Menu.

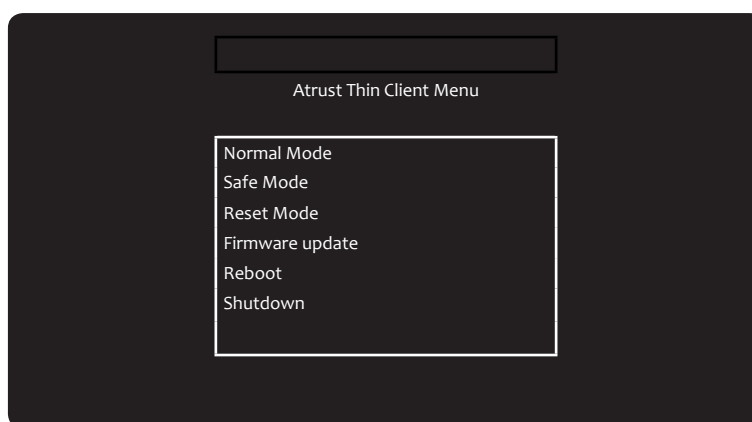

### NOTE

- You might need to wait about 15 seconds for this menu to appear on the screen.
- Six options are available on Atrust Thin Client Menu: **Normal Mode**, **Safe Mode**, **Reset Mode**, **Firmware update**, **Reboot**, and **Shutdown**. See the table below for the description of each option:

Menu Option	Description
Normal Mode	Boots up your mt180L as the normal startup procedure.
Safe Mode	Clears and resets the current screen resolution setting.
Reset Mode	Resets your mt180L to the factory default.
Firmware update	Updates firmware for your mt180L through the network.
Reboot	Reboots your mt180L.
Shutdown	Shuts down your mt180L.

- Use arrow keys on the keyboard to select **Reset Mode**, and then press **Enter** on the keyboard to continue.
- A message appears prompting for confirmation. Click **y** on the keyboard to confirm.
- After completion, press **Enter** on the keyboard to restart your system.

## A.2 Updating Firmware for Your mt180L

Four ways are available to update firmware for your mt180L:

Method	Description
Atrust Thin Client Menu	Downloads firmware from a remote computer and updates firmware for your thin client.
USB Flash Drive	Updates firmware with a USB flash drive created by Recovery USB Disk Creator.
Atrust Client Setup	Initiates firmware update locally on the thin client with the help of Atrust Client Setup.
Atrust Device Manger	Initiates firmware update remotely on the remote computer with Atrust Device Manager.

### Using Atrust Thin Client Menu

To update firmware using Atrust Thin Client Menu, please do the following:

1. Connect your thin client to the network, and then restart it.
2. During the POST (Power-On Self-Test) period, press **Esc** on the keyboard to enter Atrust Thin Client Menu.
3. Select **Firmware update** and then follow the on-screen instructions to complete the task.



#### NOTE

- You need to specify the IP address of the firmware server over the network. A firmware server is the server where Atrust Device Manager is installed and client firmware files are imported through Atrust Device Manager.
- For more information about Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

### Using a USB Flash Drive

To update firmware using a USB flash drive created by Recovery USB Disk Creator, please do the following:



#### NOTE

- For instructions on how to create a USB flash drive using Recovery USB Disk Creator, please refer to the Quick Guide for USB Creator.

1. Plug the USB flash drive, and then restart your thin client.
2. During the POST period, press **F7** to enter the Boot Device menu.
3. Select the USB flash drive on that menu to enter Atrust Thin Client Recovery System screen.
4. Follow the on-screen instructions to complete the task.



### Using Atrust Client Setup

To update firmware using Atrust Client Setup, please refer to section “4.2.7 Updating Firmware from the Management Computer” on page 52.

### Using Atrust Device Manager

To update firmware using Atrust Device Manager, please refer to the User’s Manual for Atrust Device Manager.

## A.3 Using SECUREMATRIX Authentication for VMware Connections

### Enabling SECUREMATRIX Authentication for Custom VMware Connections


To enable SECUREMATRIX authentication for a custom VMware connection, please do the following:




#### NOTE

- SECUREMATRIX authentication is not available in Quick Connection mode.

- On the local desktop, click **START > Settings > Atrust Client Setup** to launch Atrust Client Setup.
- Click **Applications > VMware > Add** to create a new entry of connection settings.
- On the General tab, type the desired session name and the server address of View Connection Server.

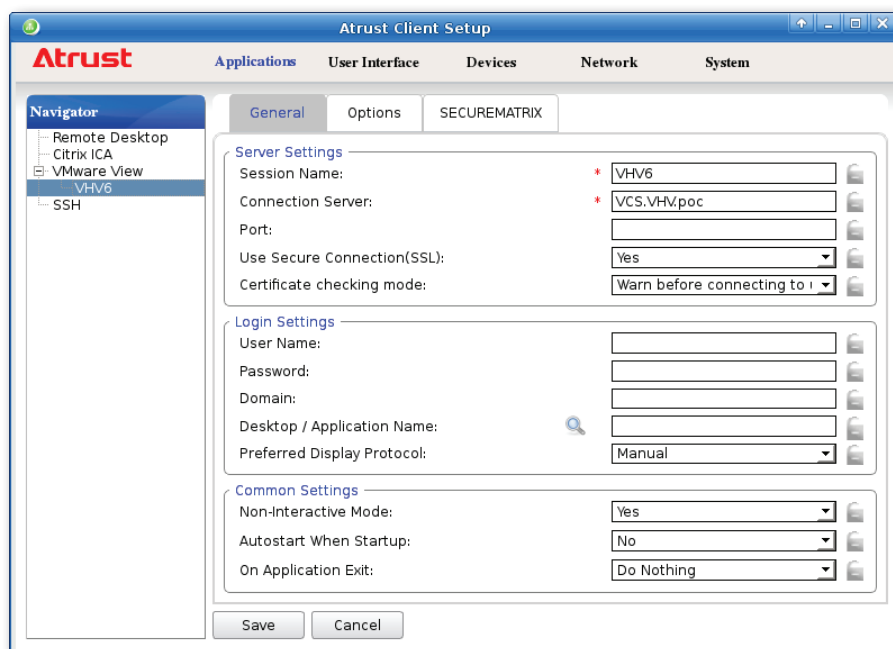

- On the SECUREMATRIX tab, click to check **Use SECUREMATRIX**.

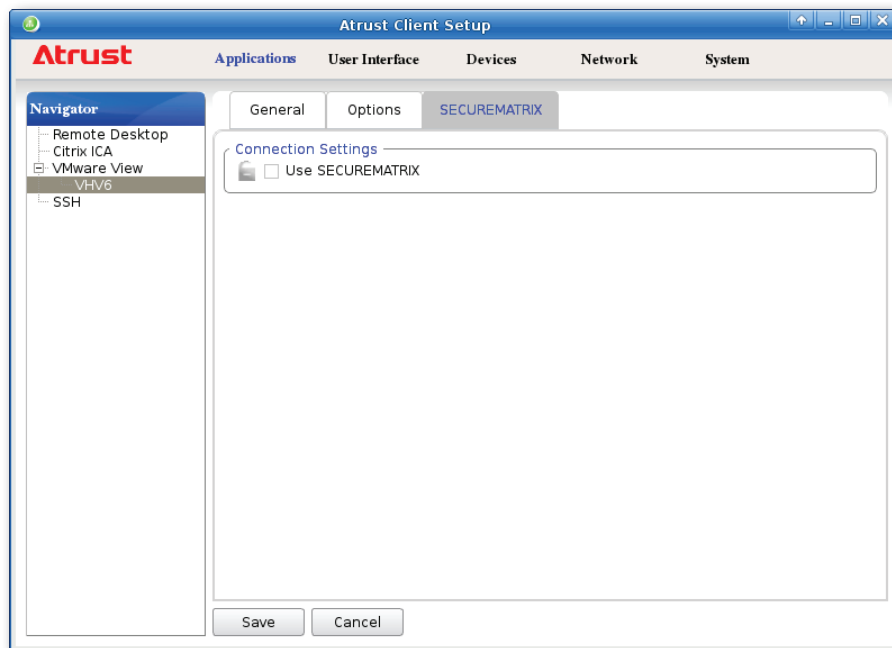**NOTE**

- By default, SECUREMATRIX authentication is disabled.


- Two fields appear for you to provide SECUREMATRIX related information. Type the server address of GSB server (the server for SECUREMATRIX authentication service).

- Configure other connection settings if needed, and then click **Save** to confirm.
- The access shortcuts will be created on the local desktop and START menu.

Using SECUREMATRIX Authentication in VMware Connections

When SECUREMATRIX is enabled in your VMware connection, follow the steps and instructions below to use SECUREMATRIX authentication:

- 1. Click the shortcut on the local desktop or START menu.
- 2. A window appears to prompt for the Login ID of SECUREMATRIX authentication.

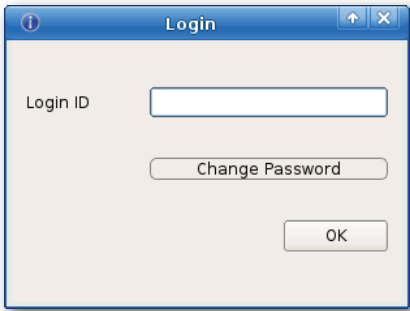

- 3. Type your Login ID, and then click **OK** to confirm.



NOTE

- To change your password pattern, click **Change Password**. For details, please see “Changing Your Password Pattern for SECUREMATRIX Authentication” on page 225.


- 4. The SECUREMATRIX window appears prompting for the password.




- 5. Type numbers under your *password pattern* using the keyboard or click numbers directly on the window, and then click **OK** to confirm.

**TIP**


- For example, if your *password pattern* is shown as below, type or click numbers, **0, 0, 4, 5, 1, 3, 6, 2**, in sequence.

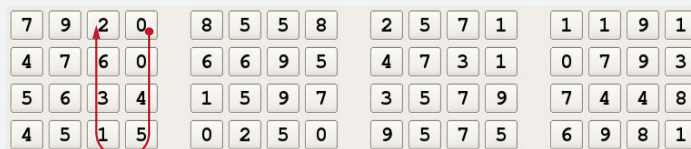


- A message appears when SECUREMATRIX authentication is completed. Click **OK** to continue.

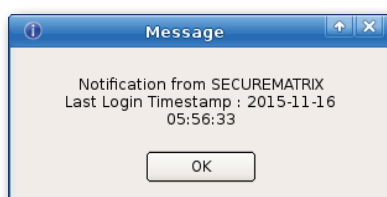


- A message appears prompting to provide credentials for access to VMware virtual desktops and applications. Click **OK** to continue.

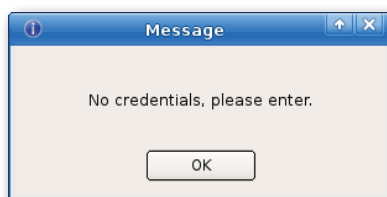

- Type your credentials on the opened window, and then click **OK** to continue.

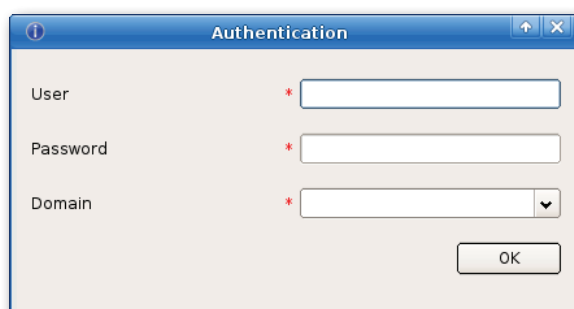

- The Desktop and Application list appears. Double-click to select the desired desktop or application.

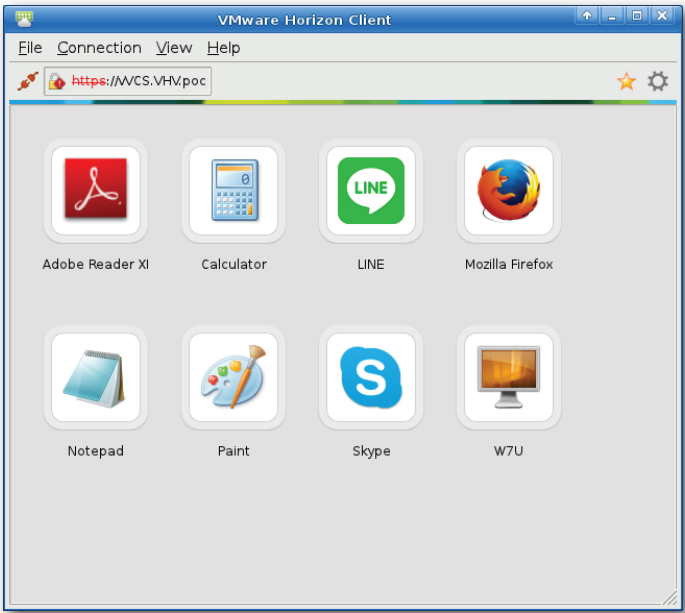


## Changing Your Password Pattern for SECUREMATRIX Authentication

To change your password pattern for SECUREMATRIX authentication, please do the following:


1. On the window prompting for the Login ID as shown, type your Login ID, and then click **Change Password**.




2. Type or click numbers under your *old password pattern*, and then click **OK** to continue.

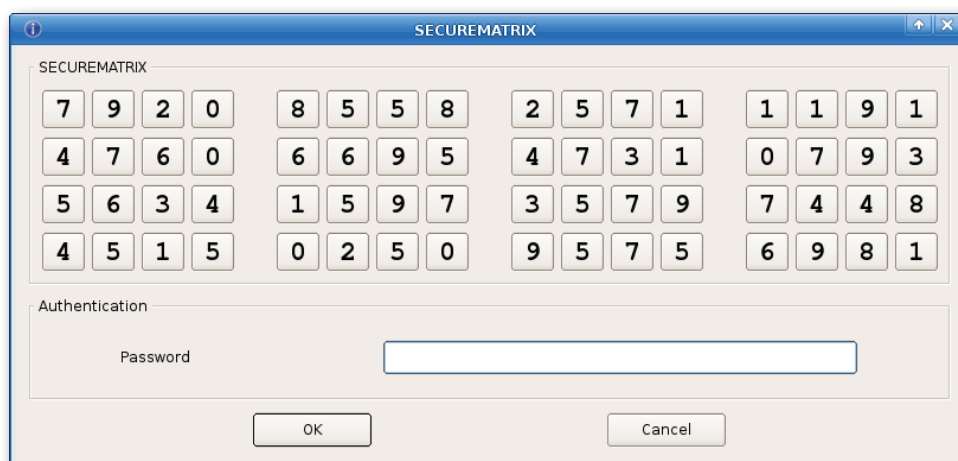


3. Type or click numbers under your *new password pattern*, and then click **OK** to continue.

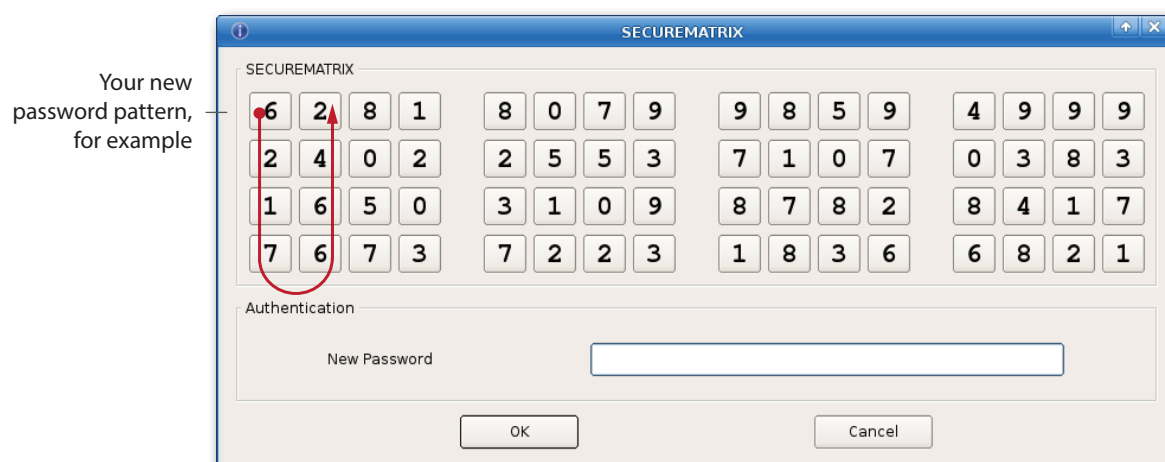

4. Type or click numbers under your *new password pattern* again, and then click **OK** to continue.

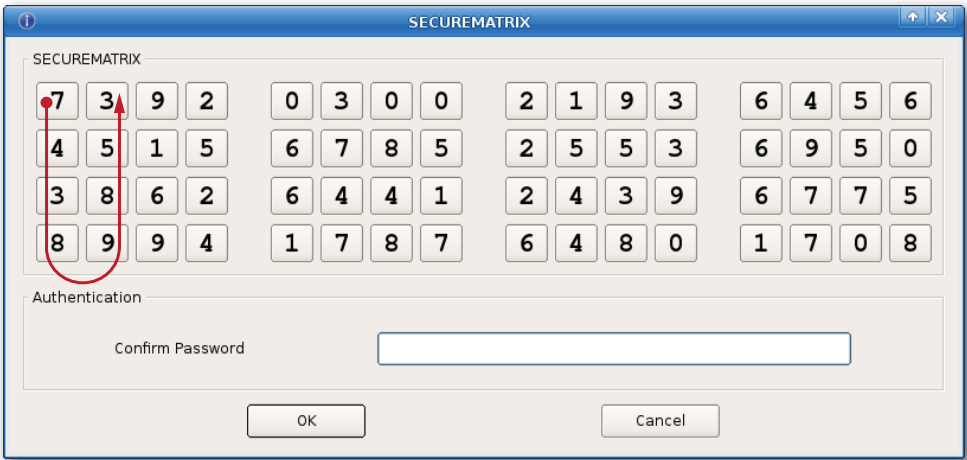

5. A window appears showing your *new password pattern* in numerical order and prompting for confirmation. Click **OK** to confirm.

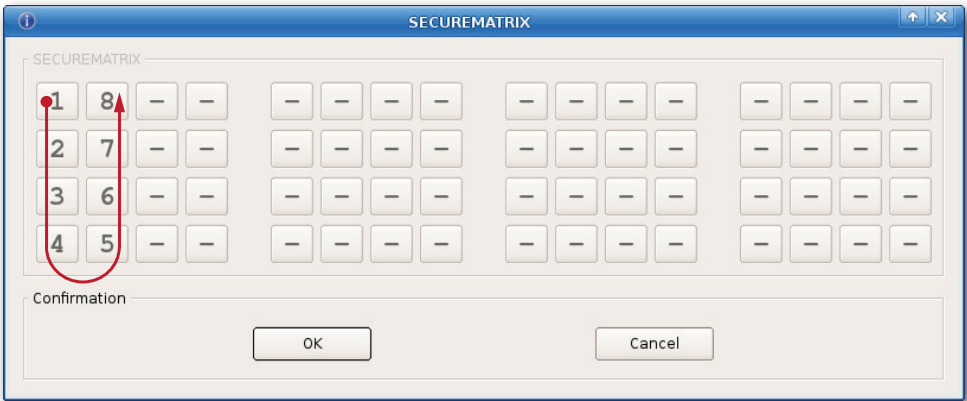




## A.4 Auto Setup Flowchart

Please see *next page* for sequence of actions in Auto Setup mode.


For details, please refer to User's Guide for Auto Setup.

## FLOWCHART

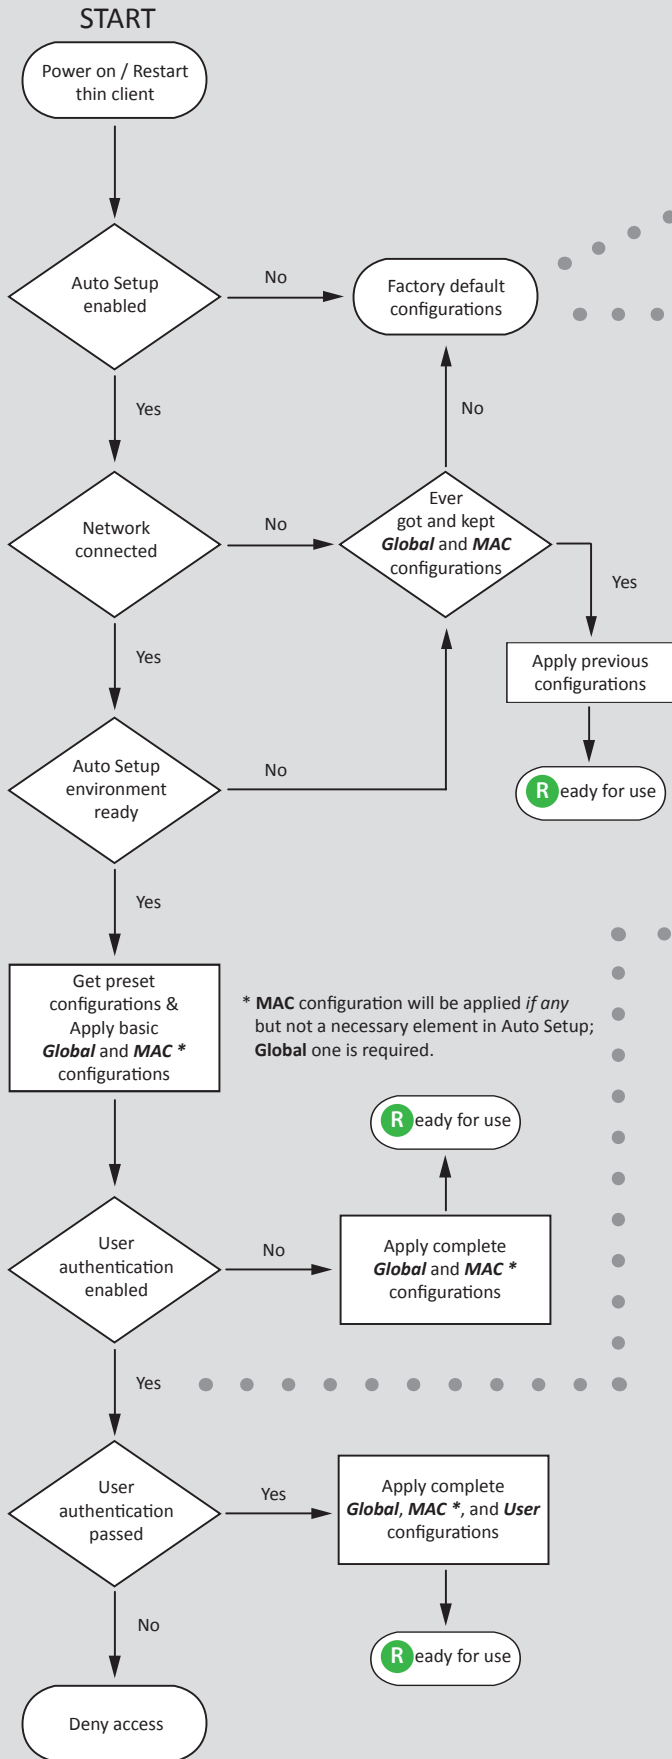


## SCREENS

Unportable thin clients start with Quick Connection screen

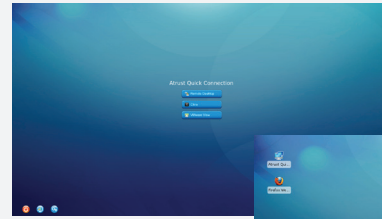

Portable thin clients start with Local Desktop

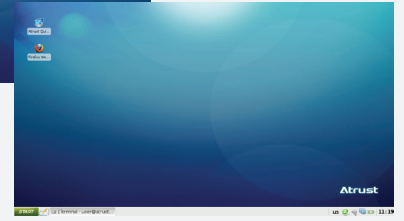

Logon screen with guest-enabled user authentication



Enter your Credentials

Username:   
Password:

\* You can also use 'guest' as the account name to log in with any password.

Logon screen with guest-disabled user authentication



Enter your Credentials

Username:   
Password:

Logon screen with Active Directory authentication



Enter your Credentials

Username:   
Password:   
Domain:

When Auto Setup is enabled, user environment might vary with preset configurations.

### AUTO SETUP REQUIREMENTS

- Auto Setup enabled endpoint devices
- Auto Setup environment and mechanism
- Network connectivity
- Target virtualization services for use

## Specifications

### Atrust mt180L mobile thin client

Processor	Intel® Celeron® N2807, Dual-core, 1.58 GHz		
System Memory	2 GB DDR3		
Flash Memory	4 GB eMMC (Optional: 8 / 16 / 32 / 64 GB)		
Display	Type: 14" 16:9 Glare Maximum Resolution: 1366 x 768		
Keyboard / Touchpad	Keyboard: 87 keys Touchpad: 2-button Glide pad		
Sound	Built-in speakers		
I/O interfaces	Left side: 1 x DC IN    1 x RJ-45    1 x USB 2.0 1 x VGA                      1 x USB 3.0	Right side: 1 x Smart card slot (Optional)    1 x Microphone port 1 x USB 2.0                      1 x Headphone port 1 x SD card slot (Optional)	Display and base: 1 x Webcam (Optional) 1 x Built-in microphone 2 x Built-in speaker
Networking	10/100/1000 Mb Ethernet Wi-Fi 802.11 a/b/g/n		
AC Adapter	INPUT: 100-240 V, ~2.5 A, 50-60 Hz OUTPUT: 19 V, 3.42 A, 65 W		
Battery Pack	Rechargeable lithium-ion battery 11.1 V, 5900 mAh, 65 Wh		
Operating system	Atrust Linux		
Supported Protocols	Microsoft RDP with RemoteFX / Citrix ICA with HDX / VMware PCoIP		
Management	Atrust Client Setup / Atrust Device Manager		
Security	Kensington security slot		
Dimensions	(W)339 x (D)239.4 x (H)25.4 mm		
Weight	1.7 kg (approx.)		
Environment	Operating Temperature:                      0° C ~ 35° C Non-operating Temperature:              -30° C ~ 60° C Operating Humidity (Rh):                    10% ~ 90% (non-condensing) Non-operating Humidity (Rh):              5% ~ 95%		





**Atrust**