



**Mobile Thin Client Solution  
Atrust mt180W**

**Topics Covered:**

Setup and Maintenance  
Basics as an Endpoint Device in VDI  
Atrust Client Setup Console



# USER'S MANUAL

---

**Internal Draft 0.01**

Copyright © 2015 Atrust Computer Corp.

## Copyright and Trademark Statements

Copyright © 2015 Atrust Computer Corp. All rights reserved.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Atrust Computer Corp.

### Disclaimer

Atrust Computer Corp. ("Atrust") makes no representations or warranties with respect to the contents or use of this document, and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. Atrust is not liable for technical or editorial errors or omissions contained herein. The information in this document is subject to change without notice.

### Trademark Statements

Atrust is a trademark of Atrust Computer Corp.

Intel is a registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

Microsoft, Windows, Windows Server, RemoteFX, and MultiPoint are trademarks or registered trademarks of the Microsoft group of companies.

Citrix, ICA, XenApp, XenDesktop, and VDI-in-a-Box are trademarks of Citrix Systems, Inc. and/or one or more of its subsidiaries, and may be registered in the United States Patent and Trademark Office and in other countries.

VMware, VMware View, and VMware Horizon View are trademarks or registered trademarks of the VMware, Inc.

PCoIP is a registered trademark of Teradici Corporation in the United States and/or other countries.

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

## About This User's Manual

This manual provides detailed instructions on how to set up, use, and maintain Atrust mt180W mobile thin clients.

### Manual Structure and Subjects

Chapter	Subject
1	Provides an overview of Atrust mt180W mobile thin clients.
2	Provides detailed instructions on how to set up Atrust mt180W mobile thin clients.
3	Provides the basics of how to use Atrust mt180W mobile thin clients.
4	Provides instructions on how to configure client settings and customize Atrust mt180W mobile thin clients with the Atrust Client Setup console.
Appendices	Provides supplementary instructions on the maintenance and upgrade of Atrust mt180W mobile thin clients.
Specifications	Provides detailed information on key components of Atrust mt180W mobile thin clients.

### Notes, Tips, and Warnings

Throughout this manual, the notes, tips, and warnings in the following formats are used to provide important information, useful advice, and prevent injuries to you, damage to your devices, or loss of data on your system.

**NOTE**

- A note provides important information for a specific situation.

**TIP**

- A tip gives a piece of useful advice to perform a task more efficiently.

**WARNING**

- A warning provides crucial information that must be followed to prevent injuries to you, damage to your devices, or loss of data on your system.

## Style Conventions

The following styles are used throughout this manual while referring to operational items on input devices, hardware panels, or application interfaces.

Item	Style	Example
keys on the keyboard	bold	<b>Ctrl + F2, Ctrl + Alt + F9, Alt + Tab</b>
application windows or entry lists	first letter capitalized	ICA Connection list, RDP Connection list, View Connection list
buttons or tabs on a window, toolbars, taskbar, or menu	bold	<b>OK, Next, Save, Applications</b> tab
options on a window, screen, list, or menu	bold	<b>Start the following program on connection, Remote Desktop Services, Better Appearance (32-bit), Web Logon</b>
selecting a series of options	bold	<b>Applications &gt; Citrix ICA, Applications &gt; Remote Desktop, Applications &gt; VMware View, System &gt; UWF</b>

## Safety and Regulatory Information

### Regulatory Statement

#### Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### IMPORTANT NOTE:

#### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Regulatory Information

### WEEE (Waste Electrical and Electronic Equipment) Directive



In the European Union, this symbol indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling. For proper disposal, please contact your local recycling or hazardous waste center.

## Safety Information



### WARNING

- Use only power supplies listed in the user instructions.



### WARNING

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.



### WARNING

- For safety, do not make mechanical or electrical modifications to the equipment.
- Do not remove equipment covers and access any of the components inside the equipment. Any access inside the equipment without an authorized or certified technician may cause serious injuries and damage. For any problem, contact your dealer for assistance.
- You should only make repairs as authorized by the product documentation. Repairs, replacement, expansion, and upgrades not performed by a certified service technician may cause injuries to you, damage your system, and void your warranty.



# Table of Contents

<b>Copyright and Trademark Statements</b>	<b>i</b>
Disclaimer	i
Trademark Statements	i
<b>About This User's Manual</b>	<b>ii</b>
Manual Structure and Subjects	ii
Notes, Tips, and Warnings	ii
Style Conventions	iii
<b>Safety and Regulatory Information</b>	<b>iv</b>
Regulatory Statement	iv
Regulatory Information	v
Safety Information	v
<b>1 Overview</b>	<b>1</b>
<b>1.1 Introduction</b>	<b>3</b>
<b>1.2 Features</b>	<b>3</b>
<b>1.3 Package Contents</b>	<b>3</b>
<b>1.4 Exterior Views</b>	<b>4</b>
<b>1.5 Exterior Components</b>	<b>5</b>
<b>1.6 Before Getting Started</b>	<b>9</b>
<b>1.7 Service Access with your mt180W</b>	<b>10</b>
<b>2 Setting Up Your mt180W</b>	<b>11</b>
<b>2.1 About the AC Adapter</b>	<b>13</b>
<b>2.2 Charging Your Lithium-ion Battery</b>	<b>13</b>
<b>2.3 Setting Up Your mt180W</b>	<b>14</b>
<b>3 Getting Started</b>	<b>15</b>
<b>3.1 Standard Shortcuts</b>	<b>17</b>
<b>3.2 Accessing Citrix Services</b>	<b>18</b>
<b>3.3 Accessing Microsoft Remote Desktop Services</b>	<b>24</b>
<b>3.4 Accessing VMware View and Horizon View Services</b>	<b>26</b>
<b>4 Configuring Client Settings</b>	<b>29</b>
<b>4.1 Atrust Client Setup</b>	<b>31</b>
4.1.1 Interface Overview	31
4.1.2 Client Settings at a Glance	32
<b>4.2 Configuring System Settings</b>	<b>33</b>
4.2.1 System Tab Overview	33
4.2.2 Available Settings at a Glance	34
4.2.3 Configuring the Access Privileges and Password of Atrust Client Setup	35
4.2.4 Configuring Shadow Settings for Remote Assistance	37
4.2.5 Updating Firmware from the Management Computer	38

4.2.6	Taking Snapshots for Mass Deployment	41	
4.2.7	Deploying a System Image with a Created Snapshot	42	42
4.2.8	Enabling or Disabling the Appliance Mode	45	
4.2.9	Configuring UWF (Unified Write Filter)	49	
<b>4.3</b>	<b>Configuring External Device Settings</b>	<b>51</b>	
4.3.1	Devices Tab Overview	51	
4.3.2	Available Settings at a Glance	51	
4.3.3	Configuring Settings for USB Storage Devices	52	
4.3.4	Disabling or Enabling Attached Audio Devices	53	
<b>4.4</b>	<b>Configuring User Interface Settings</b>	<b>54</b>	
4.4.1	User Interface Tab Overview	54	
4.4.2	Available Settings at a Glance	54	
4.4.3	Configuring the Display of Standard Desktop Shortcuts for Quick Access	55	55
<b>4.5</b>	<b>Configuring Service Access Settings</b>	<b>56</b>	
4.5.1	Applications Tab Overview	56	
4.5.2	Available Settings at a Glance	57	
4.5.3	Configuring Basic RDP Connection Settings	58	
4.5.4	Accessing Remote Desktop Services	65	
4.5.5	Configuring Advanced RDP Connection Settings	70	70
4.5.6	Configuring Basic ICA Connection Settings	83	
4.5.7	Accessing Citrix Services	91	
4.5.8	Configuring Advanced ICA Connection Settings	98	98
4.5.9	Configuring Basic VMware View Connection Settings	109	109
4.5.10	Accessing VMware View or Horizon View Services	111	111
4.5.11	Configuring Advanced View Connection Settings	113	113
4.5.12	Configuring Web Browser Settings	115	115

## Appendices 119

<b>A.1</b>	<b>Resetting Your mt180W</b>	<b>121</b>
<b>A.2</b>	<b>Restoring Your Operating System</b>	<b>122</b>

## Specifications 125

# 1

---

## Overview

This chapter provides an overview of Atrust mt180W.

<b>1.1 Introduction</b>	
Desktop virtualization and simple endpoint devices	3
<b>1.2 Features</b>	
Key features of Atrust mt180W	3
<b>1.3 Package Contents</b>	
Check your package contents	3
<b>1.4 Exterior Views</b>	
Exterior design of Atrust mt180W	4
<b>1.5 Exterior Components</b>	
Exterior components of Atrust mt180W	5



## 1.1 Introduction

Desktop virtualization provides a new perspective to reconsider the design and implementation of an IT infrastructure. In a desktop virtualization infrastructure, a station is no longer a cumbersome desktop, but simply an endpoint device for users to access delivery services from the server(s).

With the introduction of the desktop virtualization technologies, you can considerably benefit from:

- On-demand applications/desktops
- Centralized management of work environments
- Drastically reduced endpoint software/hardware issues
- Simplified system maintenance and improved system security
- More scalability with low-cost endpoint devices


## 1.2 Features

The key features of Atrust mt180W mobile thin clients are:

- Built-in Wireless 802.11 b/g/n and Ethernet network interface
- Support for a wide range of desktop virtualization solutions from industry-leading companies:
  - Microsoft® Remote Desktop
  - Citrix® XenApp™, XenDesktop®, and VDI-in-a-Box™
  - VMware® View™ and Horizon View™
- Support for high-definition technologies
  - Microsoft® RemoteFX®
  - Citrix® HDX™
  - VMware® View™ PCoIP®
- Simple click-access to various applications/desktops
- Built-in Atrust Client Setup as the local client management console

## 1.3 Package Contents

Please check your package contents. Ensure that all of the items are present in your package. If any items are missing or damaged, please contact your dealer immediately.

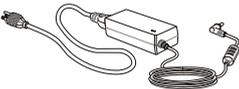Atrust mt180W	AC adapter	Battery
		
Quick Start Guide		




**NOTE:** Your package may not contain a hard copy of the Quick Start Guide. In this case, a soft copy in PDF format will be provided.

## 1.4 Exterior Views


Front View




Left View

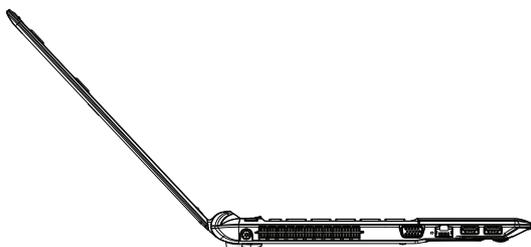

Right View

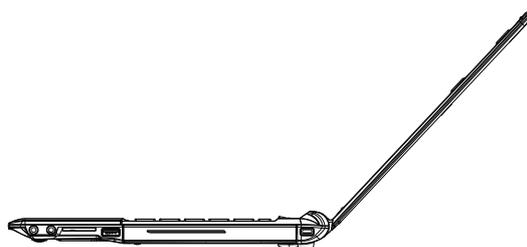


Bottom View and Battery

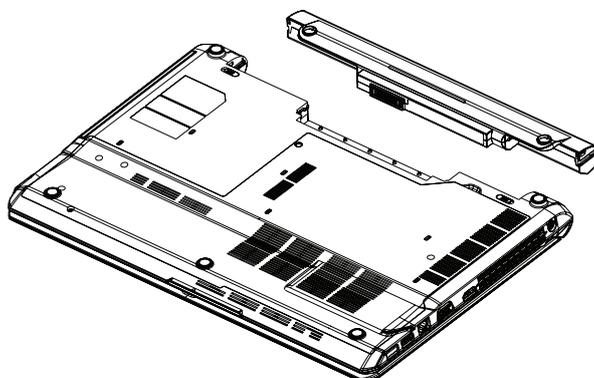

## 1.5 Exterior Components


### Display and Base Components

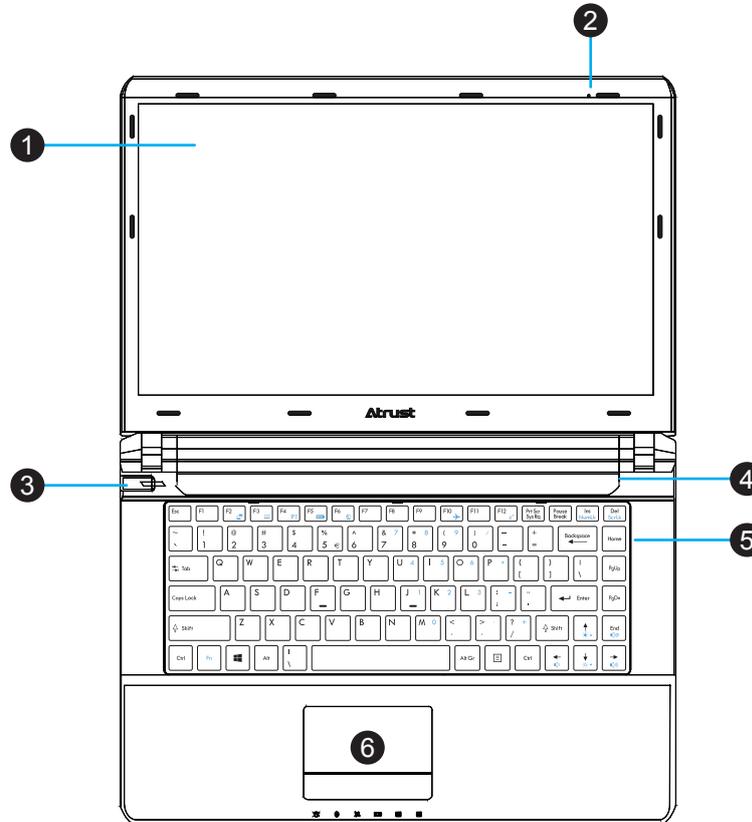

No.	Sign	Component	Description
1		LCD display	Built-in display for visual output.
2		Microphone	Built-in microphone for audio input.
3		Power button	<ul style="list-style-type: none"> <li>Press to power on the mobile thin client.</li> <li>Long press to <b>force power off</b> the mobile thin client.</li> </ul>
4		Speaker	Built-in speakers for audio output.
5		Keyboard	Built-in keyboard for control and input.
6		Touchpad	Built-in pointing device for control and input.

## Fn Key Combinations

With the combination of **Fn**  plus another specific key (with one printed blue symbol on it), you can quickly adjust hardware settings to suit your needs.

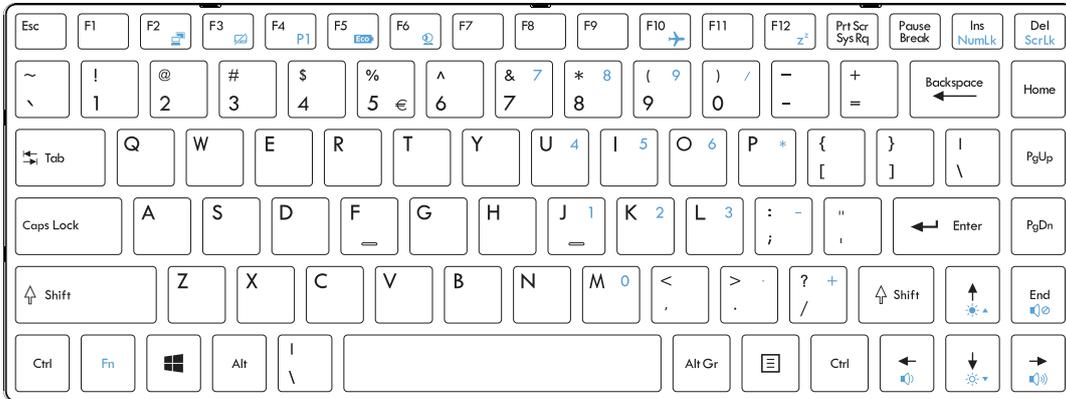


 **NOTE**

- To use an Fn key combination, press and hold **Fn**, and then press another key.

Combination	Description	Combination	Description
 + 	Use to switch the use of displays.	 + 	Use to enable / disable Num Lock mode. <b>Num Lock Mode:</b> allows to enter digits and symbols using Fn key combinations.
 + 	Use to enable / disable the touchpad.	 + 	This is not supported by your model.
 + 	Use to define the custom action. This is not supported by your model.	 + 	Use to increase the brightness of the LCD display.
 + 	Use to enable / disable the ECO mode. <b>ECO Mode:</b> brightness 0 to save power	 + 	Use to decrease the brightness of the LCD display.
 + 	Webcam is not supported by your model.	 + 	Use to decrease the volume of the built-in speakers.
 + 	Use to enable / disable the Flight mode. <b>Flight Mode:</b> disabled wireless module	 + 	Use to increase the volume of the built-in speakers.
 + 	Use to enter the System Sleep mode. Press the Power button or any key on the keyboard to exit.	 + 	Use to mute / unmute the sound.


Combination	Description
 +  /  /  /  / 	Use to type in the desired digit or symbol. <b>NOTE:</b> You must enable the Num Lock mode first.
 +  /  /  /  / 	
 +  /  /  /  / > . key" data-bbox="405 885 440 910"/>	

**Left and Right Side Components**

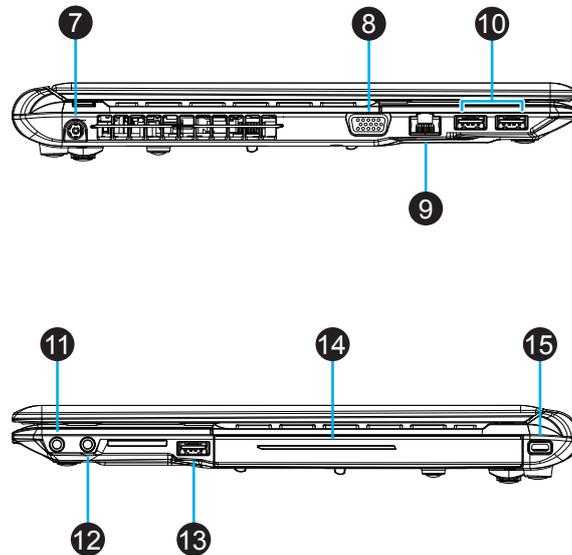


No.	Sign	Component	Description
7		DC IN	Connects to an AC adapter.
8		VGA port	Connects to an external display.
9		LAN port	Connects to a network.
10		USB port	Connects to a USB device.
11		Headphone port	Connects to a set of headphones or a speaker system.
12		Microphone port	Connects to a microphone.
13		USB port	Connects to a USB device.
14		Smart card slot (optional)	Reads/Writes data from a smart card.
15		Kensington security slot	Connects a Kensington cable to secure the mobile thin client.

**Front Side Components**

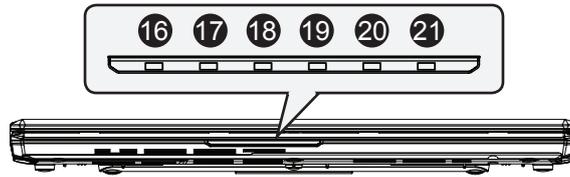

No.	Sign	Component	Description
16		Storage LED	Glow blue when eMMC (flash memory) is being accessed.
17		Bluetooth LED	Glow blue when Bluetooth is enabled (not supported).
18		Wi-Fi LED	Glow blue when Wi-Fi is enabled.
19		Battery LED	Glow orange when the battery is being charged. Glow blue when the battery is fully charged.
20		Caps Lock LED	Glow blue when Caps Lock is enabled.
21		Num Lock LED	Glow blue when Num Lock is enabled.

**Bottom Components**

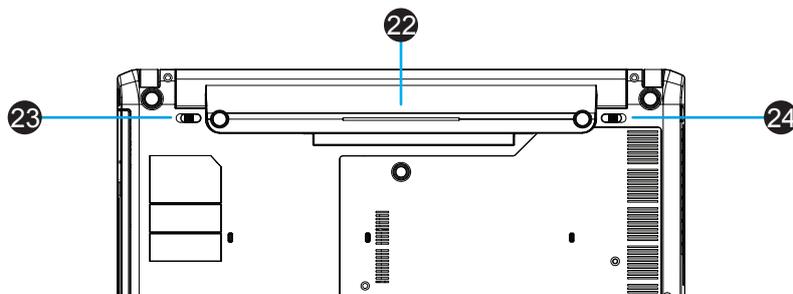

No.	Sign	Component	Description
22		Lithium-ion battery	Supplies the mobile thin client with the power when an external power source is not available.
23		Left battery latch	Unlocks the battery by sliding and holding left. <b>NOTE:</b> To remove the battery, use the right battery latch to unlock the battery, and then slide left and hold this latch to remove the battery.
24		Right battery latch	Locks / Unlocks the battery by sliding left / right. <b>NOTE:</b> To remove the battery, use this latch to unlock the battery, and then slide left and hold the left battery latch to remove the battery.

## 1.6 Before Getting Started

### About UWF (Unified Write Filter)

Before getting started on client configuration through the Atrust Client Setup console or through the Windows Embedded Standard operating system, please note that in a session any changes to the system will not be kept by default after the system restart. This is due to a special feature called UWF (Unified Write Filter) in your Windows Embedded-based system.

By default, your mt180W is UWF-enabled. Unified Write Filter (UWF) is a sector-based write filter intercepting all write attempts to a protected volume and redirecting those write attempts to a virtual overlay. With UWF, all system changes will only affect the session where the changes are made. After restart, all changes will be discarded.

You can change the default via the Atrust Client Setup console. It's strongly recommended that you read the related section in this user's manual first before making any changes to your system.



#### WARNING

- Please read the following section **FIRST** before making any changes to your system: "4.2.9 Configuring UWF (Unified Write Filter)" on page 49.



#### NOTE

- As a thin client device, your mt180W is mainly for access to remote or virtual desktops on servers. With the limited and protected (UWF-enabled) hard disk space, it's **not** recommended to save data on your mt180W. Instead, you can use storage spaces over remote / virtual desktops, removable storage devices, or networks.
- In case that you need to copy a file to the protected volume, ensure that its size is smaller than the free memory (overlay) space. Otherwise, your system may have unexpected results or become unresponsive.

### About Default User Accounts

There are two default user accounts for your Windows Embedded-based system: one is the standard, the other administrative. The default credentials are shown as follows:

Type	Account Name	Password
Administrator	Administrator	Atrustadmin
Standard user	User	Atrustuser



#### NOTE

- The passwords are case sensitive.

### About the Behavior of System Startup

Every time when the system is started up, it will automatically log in to the Windows Embedded operating system using the default standard user account as indicated in the preceding table about default user accounts.

## 1.7 Service Access with your mt180W

With Atrust mt180W, you can simply access desktop virtualization solutions from Microsoft, Citrix, and VMware, by mouse-clicking. Two types of access shortcuts are available: *standard* and *customized*. The former is available on the desktop of Windows Embedded by default; the latter can be created and customized through the Atrust Client Setup console.

### Standard Desktop Shortcuts

You can find the instructions on how to use standard desktop shortcuts to access on-demand applications or desktops in chapter 3 “Getting Started” on page 15 or in the Quick Start Guide for mt180W.



### Customized Desktop Shortcuts

You can find the instructions on how to create and customize access shortcuts in chapter 4 “Configuring Client Settings” on page 29.

# 2

---

## Setting Up Your mt180W

This chapter provides detailed instructions on how to set up your mt180W mobile thin client.

### **2.1 About the AC Adapter**

Information on the use of the AC adapter 13

### **2.2 Charging Your Lithium-ion Battery**

How to charge your lithium-ion battery  
(Recommended for first time use) 13

### **2.3 Setting Up Your mt180W**

How to set up your mt180W 14



## 2.1 About the AC Adapter

To use the supplied AC adapter, please do the following:

1. Unpack your mt180W package, and then take out the AC adapter and its detached power cord.
2. Attach the power cord to the AC adapter to assemble your AC adapter.

## 2.2 Charging Your Lithium-ion Battery




### NOTE

- For the first time use, it's recommended to charge your Lithium-ion battery first.

To charge your lithium-ion battery, please do the following:

1. Slide the battery into the battery compartment until it clicks into place, and then *Slide left the right battery latch to lock the battery securely.*

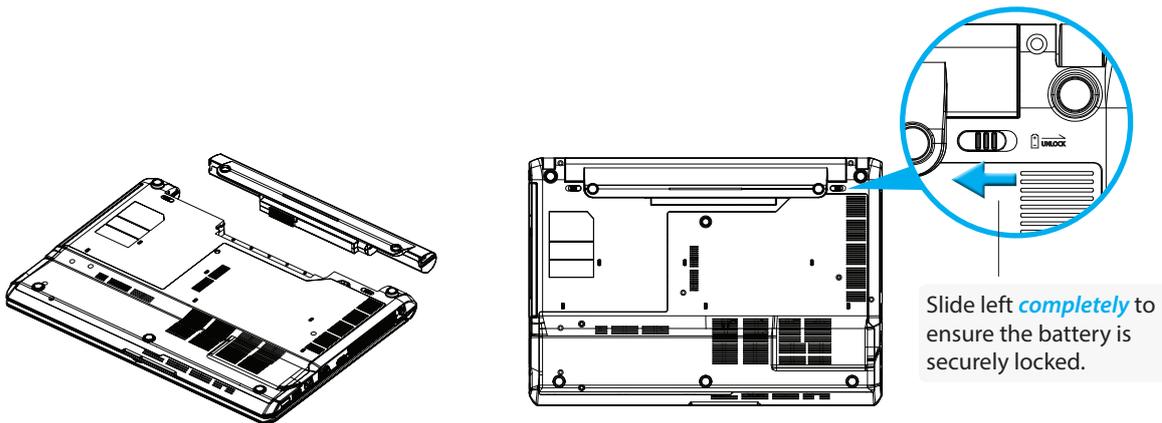


2. Attach the DC plug of the AC adapter to your mt180W, and then connect the AC plug of the adapter to a power outlet.
3. The Battery LED glows orange while the battery is being charged.
4. On completion, the Battery LED glows blue.

## 2.3 Setting Up Your mt180W

To set up your mt180W, please do the following:

1. Use the AC adapter or the Lithium-ion battery as the power source:
  - To use the AC adapter, attach its DC plug to your mt180W, and then connect its AC plug to a power outlet.
  - To use the Lithium-ion battery, slide it into the battery compartment until it clicks into place, and then **slide left the right battery latch to lock the battery securely.**

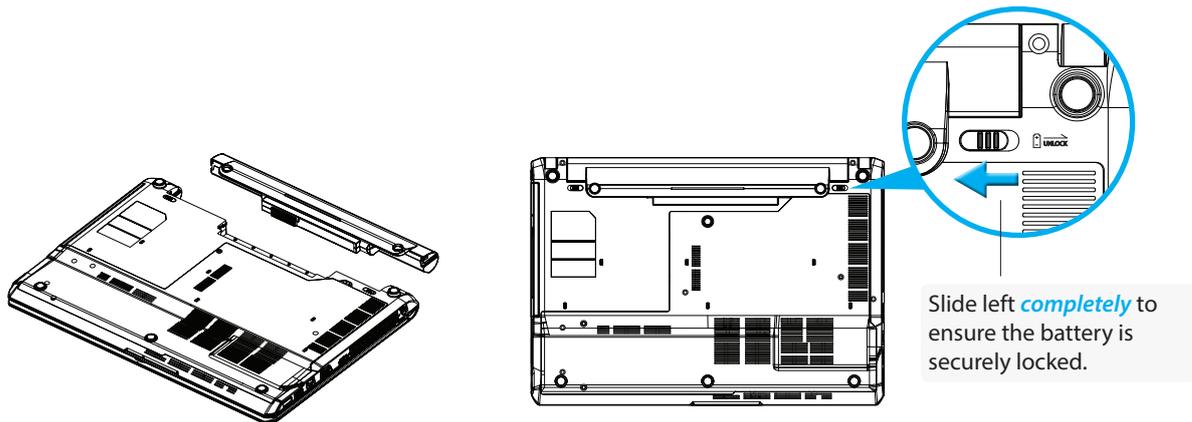

2. Connect the LAN port to your local network with an Ethernet cable or set up a wireless connection later.

# 3

---

## Getting Started

This chapter provides the basics of how to use your mt180W.

<b>3.1 Standard Shortcuts</b>	
Default shortcuts on the local (Windows Embedded Standard) desktop	17
<b>3.2 Accessing Citrix Services</b>	
How to access Citrix services	18
<b>3.3 Accessing Microsoft Remote Desktop Services</b>	
How to access Microsoft Remote Desktop services	24
<b>3.4 Accessing VMware View and Horizon View Services</b>	
How to access VMware View and Horizon View services	26



### 3.1 Standard Shortcuts

You can access virtual desktop or application services simply through standard shortcuts available on the desktop.



No.	Shortcuts	Description	See
1	Citrix Receiver	Double click to access Citrix services. <b>NOTE:</b> If the secure network connection is not implemented in your Citrix environment, you might not be able to access Citrix services through Citrix Receiver of this new version. Alternatively, Citrix allows service access simply through a Web browser. Try to use the built-in Internet Explorer if you have problems with Citrix Receiver (refer to instructions in this chapter).	3.2
2	Remote Desktop Connection	Double click to access Microsoft Remote Desktop services.	3.3
3	VMware Horizon View Client	Double click to access VMware View and VMware Horizon View services.	3.4

## 3.2 Accessing Citrix Services

### Accessing Citrix Service with Internet Explorer

To quickly access Citrix services with the Internet Explorer, please do the following:

1. Open the Internet Explorer by clicking its icon on the *Start screen* or the *desktop taskbar*.
2. Enter the IP address / URL / FQDN of the server through which Citrix services are accessible.




#### NOTE

- For XenDesktop 7.0 or the later, consult your IT administrator for the appropriate IP address / URL / FQDN.

3. Follow the on-line instructions to provide the required data and access Citrix services.

### Logon Screen Example


XenDesktop 5.6 Platinum

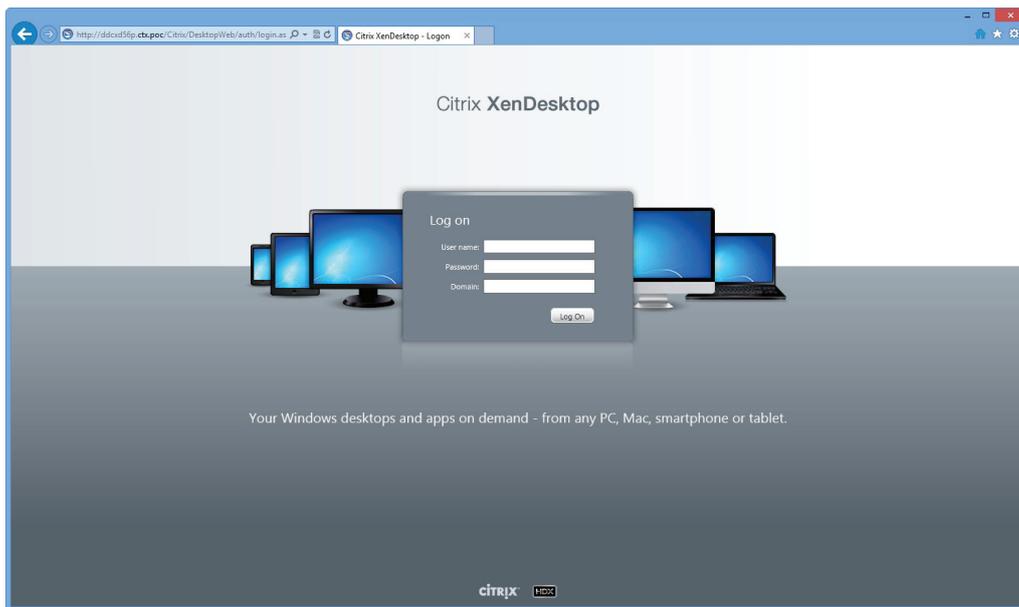

### Virtual Desktop Example Windows 7 Ultimate (launched in mt180W)




### Virtual Application Examples PowerPoint Viewer, Adobe Reader, and Skype (launched in mt180W)

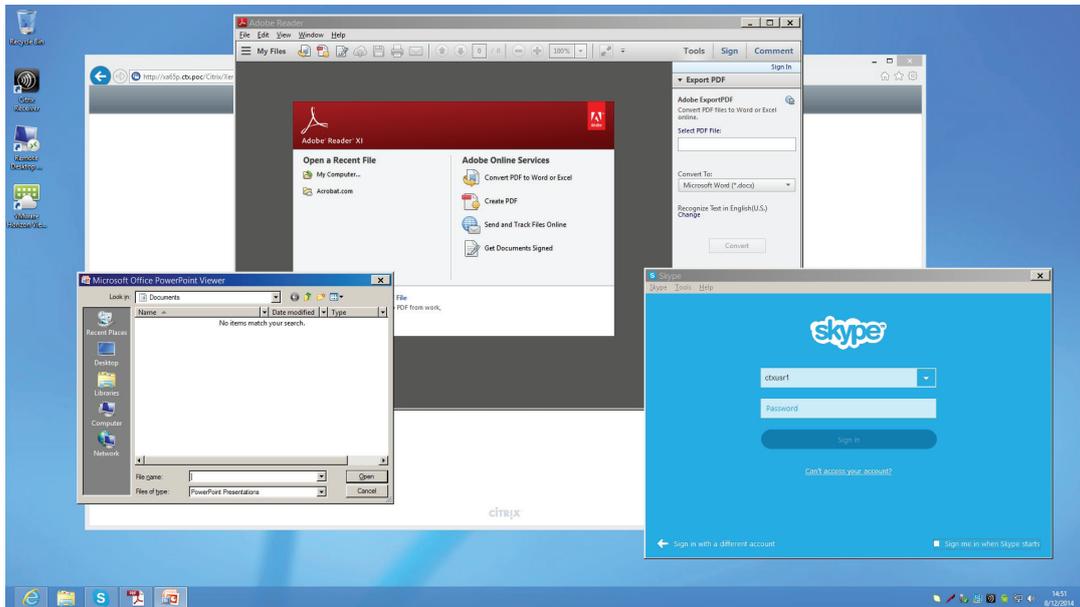


### Accessing Citrix Service through the Citrix Receiver Shortcut


To access Citrix services through the Citrix Receiver shortcut, please do the following:

1. Import the required safety certificate for available Citrix services with an administrator account. *Consult your IT administrator for necessary assistance.*
  - a. On the desktop, move the mouse to the bottom-left corner, and then right click on the appeared . A popup menu appears as shown below.

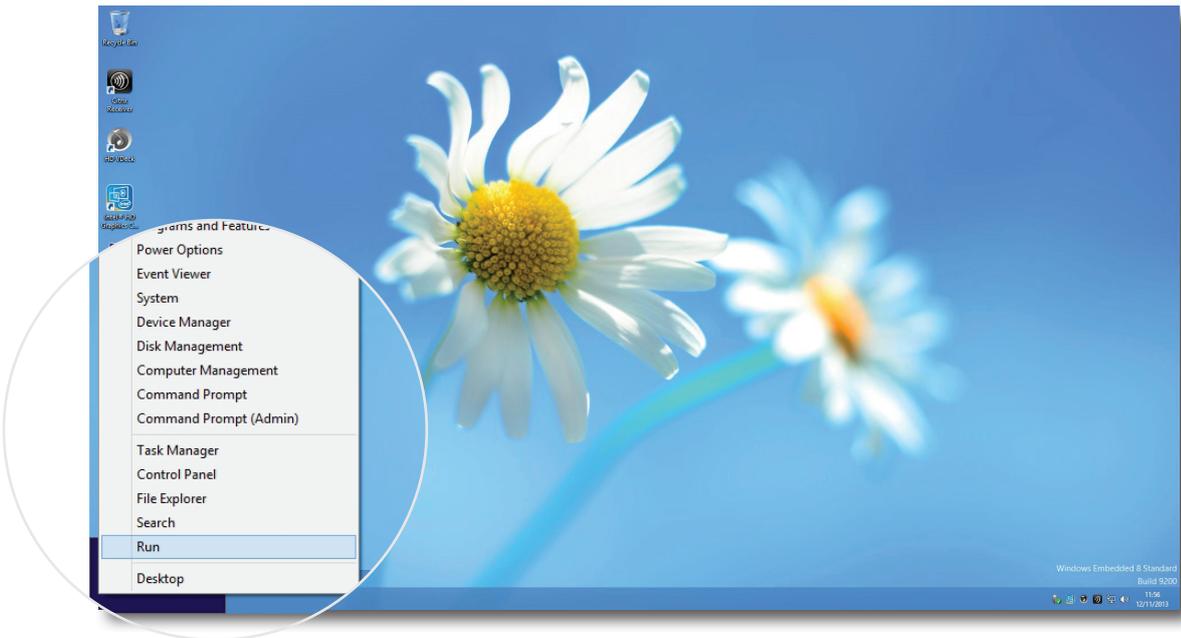


- b. Click to select **Run** on that popup menu.
    - c. Enter **mmc** on the opened window, and then press **Enter**.
    - d. On the Console window, click the File menu to select **Add/Remove Snap-in**.

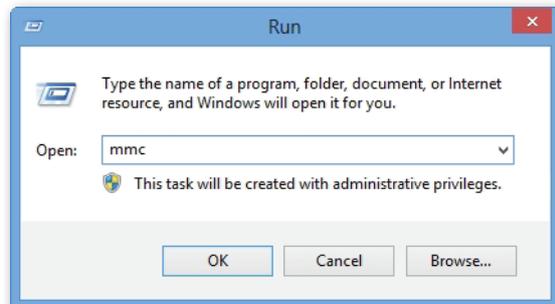


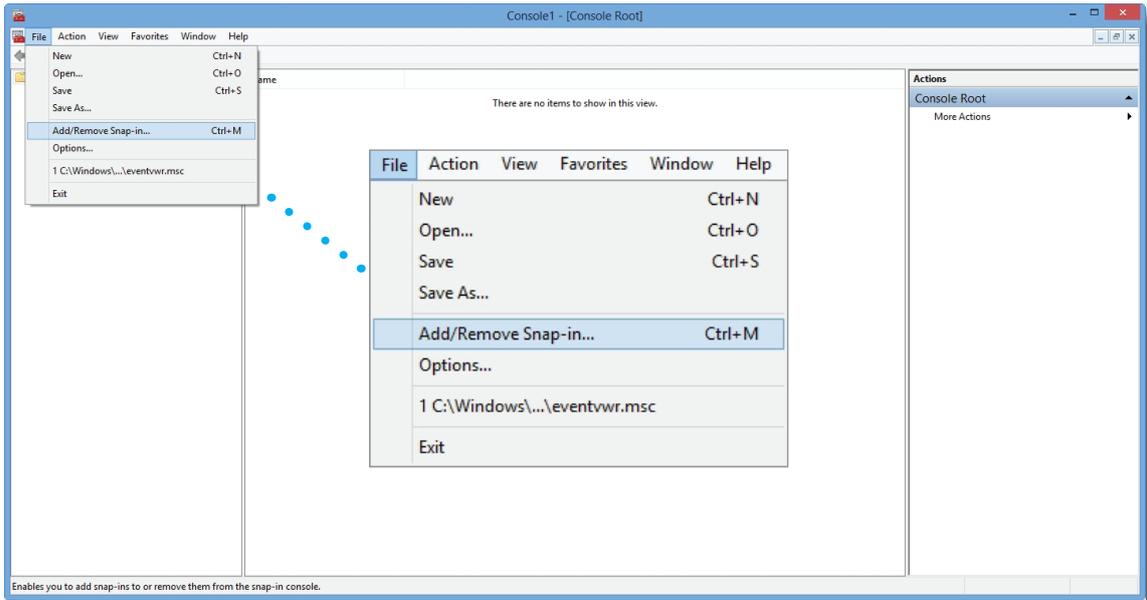

- e. On the opened window, click **Certificates > Add > Computer account > Local computer > OK** to add the Certificates snap-in.

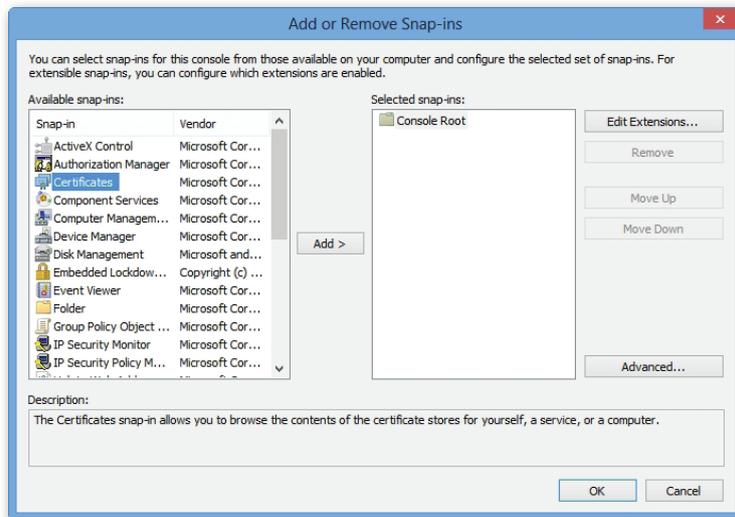

- f. On the Console window, click to expand the group tree of Certificates, right-click on **Trusted Root Certification Authorities**, and then select **All Tasks** > **Import** on the popup menu.

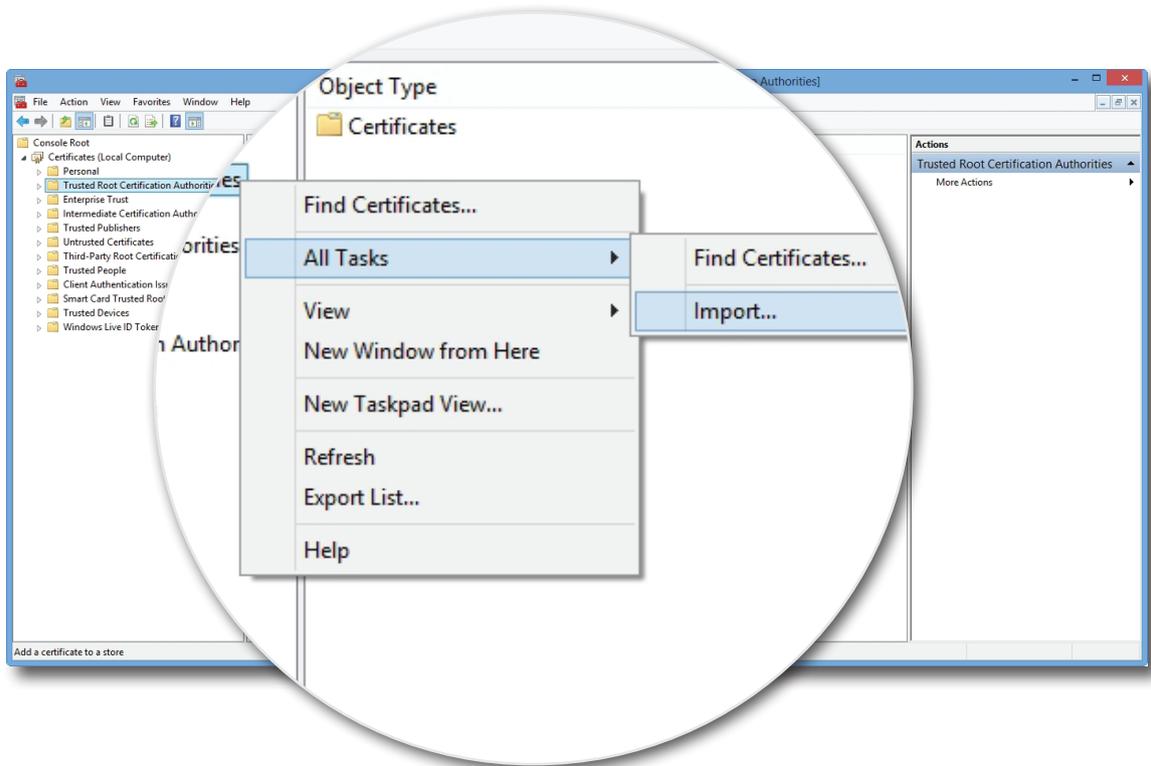


- g. Follow the Certificate Import Wizard to import your certificate, and then close the Console window when it's done.




2. Double click **Citrix Receiver**  on the desktop.
3. A window appears prompting for the work email or server address. Consult your IT administrator for proper information to provide here, enter the required data, and then click **Next** to continue.



4. Sign in with credentials for your Citrix services, and then in the opened window, click **Yes** to optimize your Citrix access. When it's completed, a success message appears. Click **Finish** to continue.

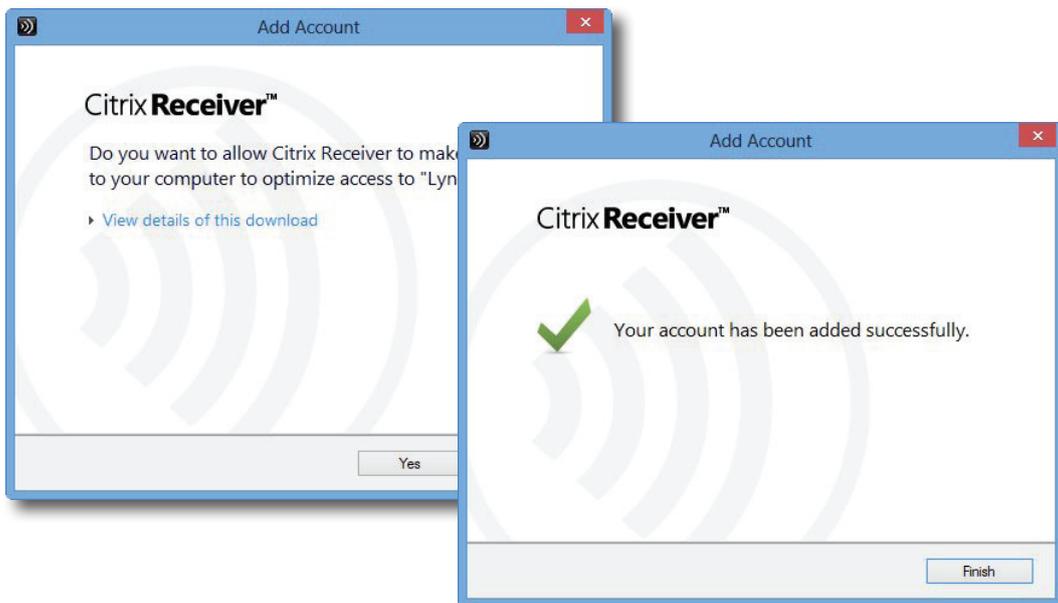

5. A window appears allowing you to add favorite apps (virtual desktops and applications) for the provided credentials. Click to select the desired application(s). The selected application(s) will appear on that window.

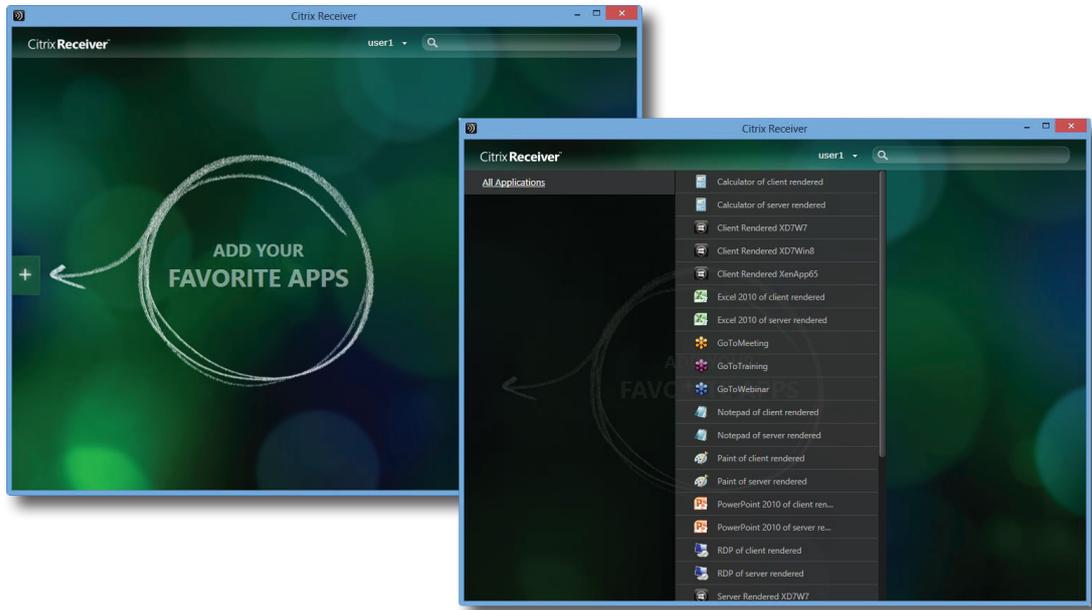

6. Now you can click to launch the desired application. The virtual desktop or application will be displayed on the screen.

### 3.3 Accessing Microsoft Remote Desktop Services

To quickly access Remote Desktop services, please do the following:


1. Double click **Remote Desktop Connection**  on the desktop.
2. Enter the name or IP address of the remote computer on the opened window, and then click **Connect**.



3. Enter your credentials, and then click **OK**.



4. A window may appear with a certificate message about the remote computer. Consult your IT administrator for details and ensure the connection is secure *first*. To bypass, click **Yes** to continue.

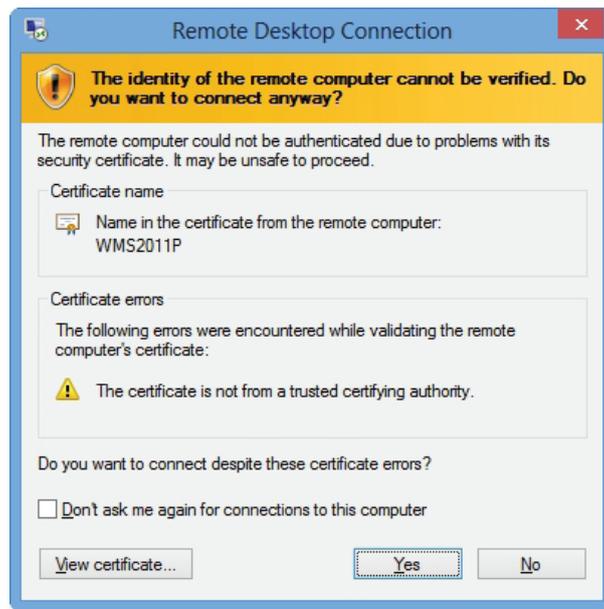


5. The remote desktop will be displayed on the screen (in full-screen by default).


### 3.4 Accessing VMware View and Horizon View Services

To quickly access VMware View or Horizon View services, please do the following:

1. Double click **VMware Horizon View Client**  on the desktop.
2. A window appears allowing you to add the name or IP address of the View Connection Server.
3. Double-click **Add Server** icon or click **New Server** in the top-left corner.

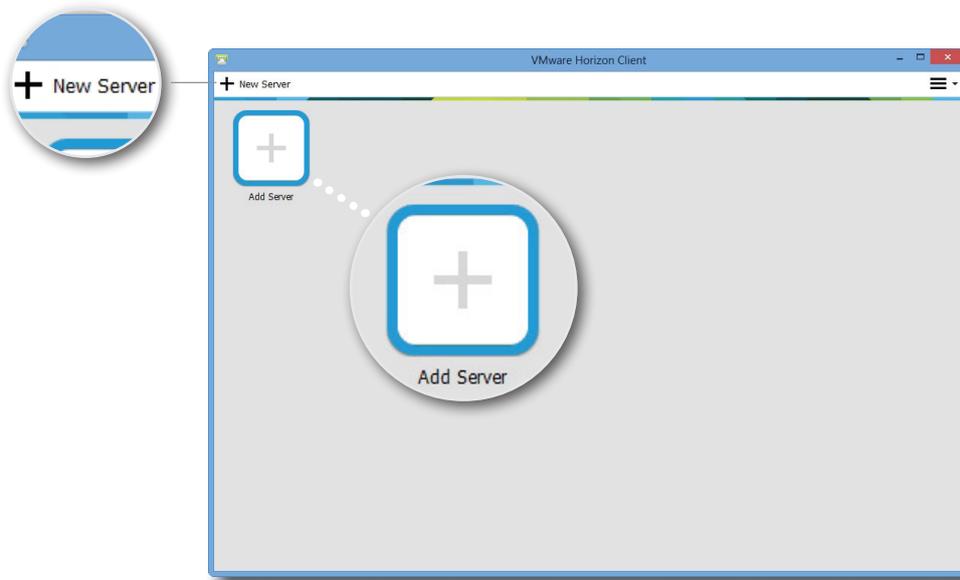


4. A window appears prompting for the name or IP address of the View Connection Server. Enter the required information, and then click **Connect**.

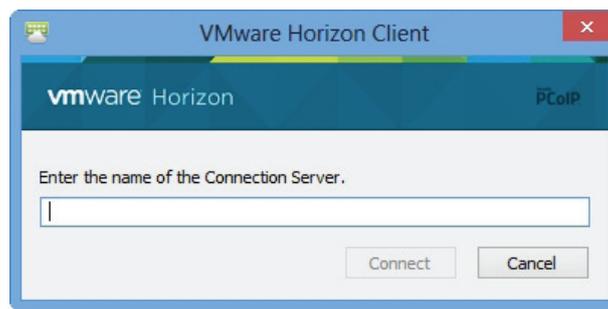


5. A window may appear with a certificate message about the remote server. Consult your IT administrator for details and ensure the connection is secure *first*. To bypass, click **Continue**.



6. A window may appear with a Welcome message. Click **OK** to continue.
7. Provide your user name and password on the opened window, and then click **Login**.

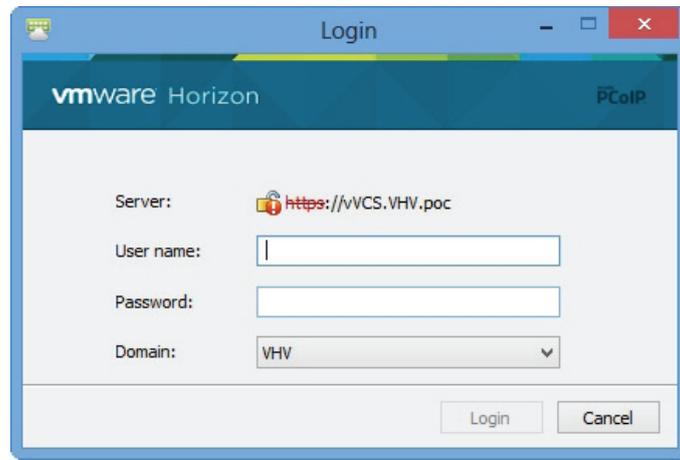

8. A window appears with available desktops or applications for your credentials. Double-click to select the desired desktop or application.

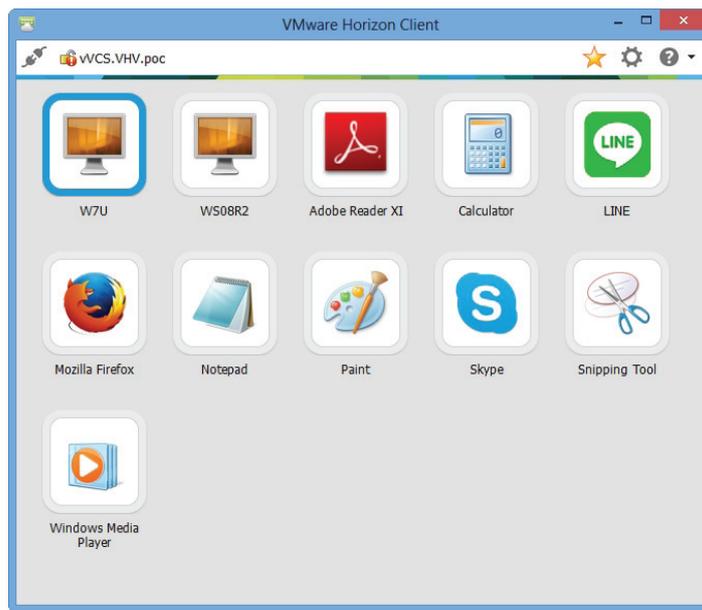

9. The desktop or application will be displayed on the screen.



# 4

---

## Configuring Client Settings

This chapter provides instructions on how to configure advanced settings and customize your mt180W with Atrust Client Setup.

<b>4.1 Atrust Client Setup</b>	
Interface overview	31
Available settings at a glance	32
<b>4.2 Configuring System Settings</b>	
System tab overview	33
Available settings at a glance	34
<b>4.3 Configuring External Device Settings</b>	
Devices tab overview	51
Available settings at a glance	51
<b>4.4 Configuring User Interface Settings</b>	
User Interface tab overview	54
Available settings at a glance	54
<b>4.5 Configuring Service Access Settings</b>	
Applications tab overview	56
Available settings at a glance	57




## 4.1 Atrust Client Setup

### 4.1.1 Interface Overview

To access Atrust Client Setup on your mt180W thin client, please do the following:

1. Log in to your mt180W with an administrator account (see page 4 for the default).
2. Click **Atrust Client Setup** on the Start screen.
3. The Atrust Client Setup window appears.

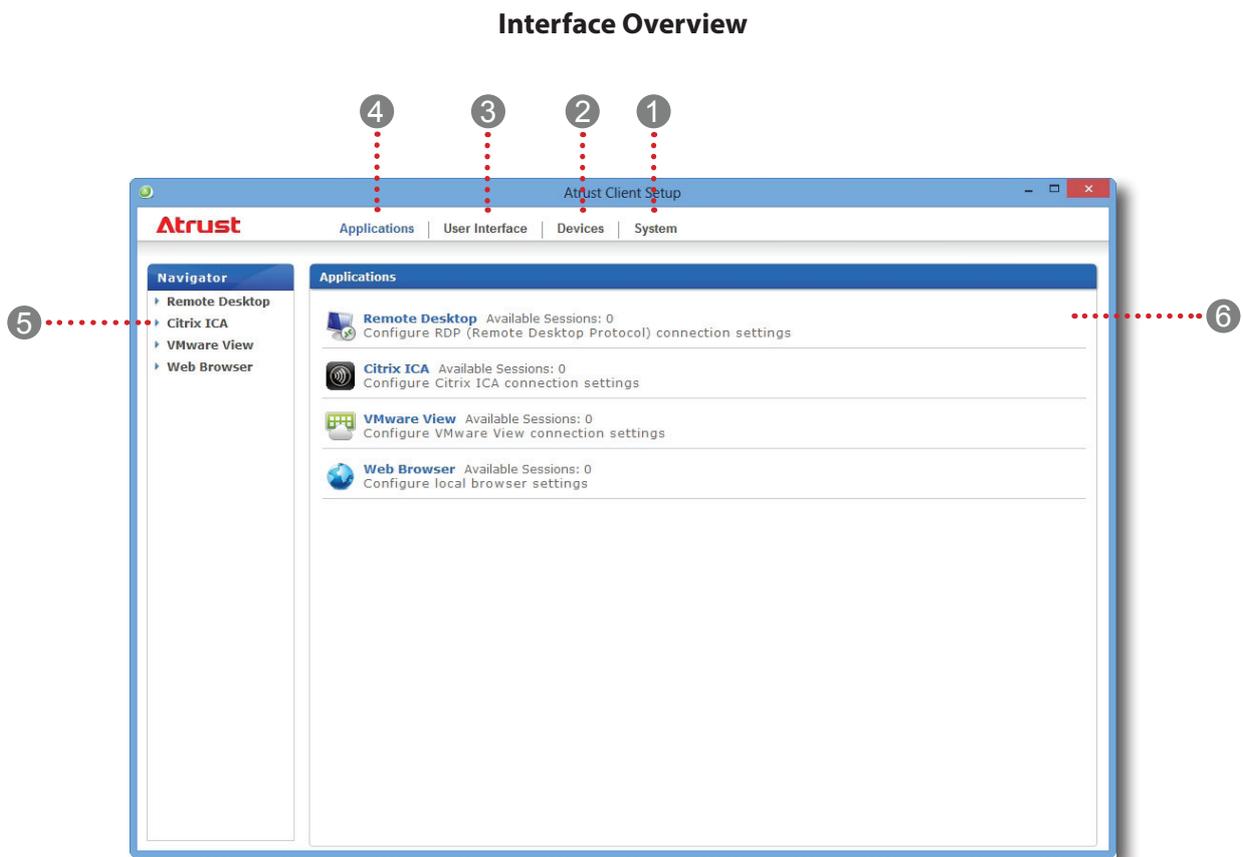

Interface Elements		
No.	Name	Description
1	System tab	Click to configure settings for the operation and maintenance of the client.
2	Devices tab	Click to configure settings for external devices of the client.
3	User Interface tab	Click to configure the user interface of the client.
4	Applications tab	Click to configure settings for service access through the client.
5	Navigation area	Click to select a setting item under a selected tab or to select a setting entry under a selected setting item.
6	Configuration area	Configures setting values when a setting item or entry is selected.

### 4.1.2 Client Settings at a Glance

The following table provides a brief description of each setting item under four main setting categories.

Tab	Setting Item	Section	Page
System	<ul style="list-style-type: none"> <li>• Configuring passwords</li> <li>• Configuring remote assistance settings</li> <li>• Updating firmware</li> <li>• Taking snapshots for mass deployment</li> <li>• Enabling/Disabling the Appliance mode</li> <li>• Configuring UWF (Unified Write Filter) settings</li> </ul>	4.2 Configuring System Settings	33
Devices	<ul style="list-style-type: none"> <li>• Configuring settings for USB storage devices</li> <li>• Configuring settings for audio devices</li> </ul>	4.3 Configuring External Device Settings	51
User Interface	<ul style="list-style-type: none"> <li>• Configuring the display of service access shortcuts</li> </ul>	4.4 Configuring User Interface Settings	54
Applications	<ul style="list-style-type: none"> <li>• Configuring Microsoft RDP connection settings</li> <li>• Configuring Citrix ICA connection settings</li> <li>• Configuring VMware View connection settings</li> <li>• Configuring Web browser session settings</li> </ul>	4.5 Configuring Service Access Settings	56



**NOTE**


- The table above is only applicable to Atrust mt180W thin clients running Windows Embedded 8 Standard. The available setting categories and items of the Atrust Client Setup console for other Windows Embedded-based, Linux-based, and ARM Linux-based thin clients might be different.

## 4.2 Configuring System Settings

### 4.2.1 System Tab Overview

**System** tab enables you to configure settings for the operation and maintenance of clients. To access available settings of **System** tab, click the tab on Atrust Client Setup.

#### System Tab Overview

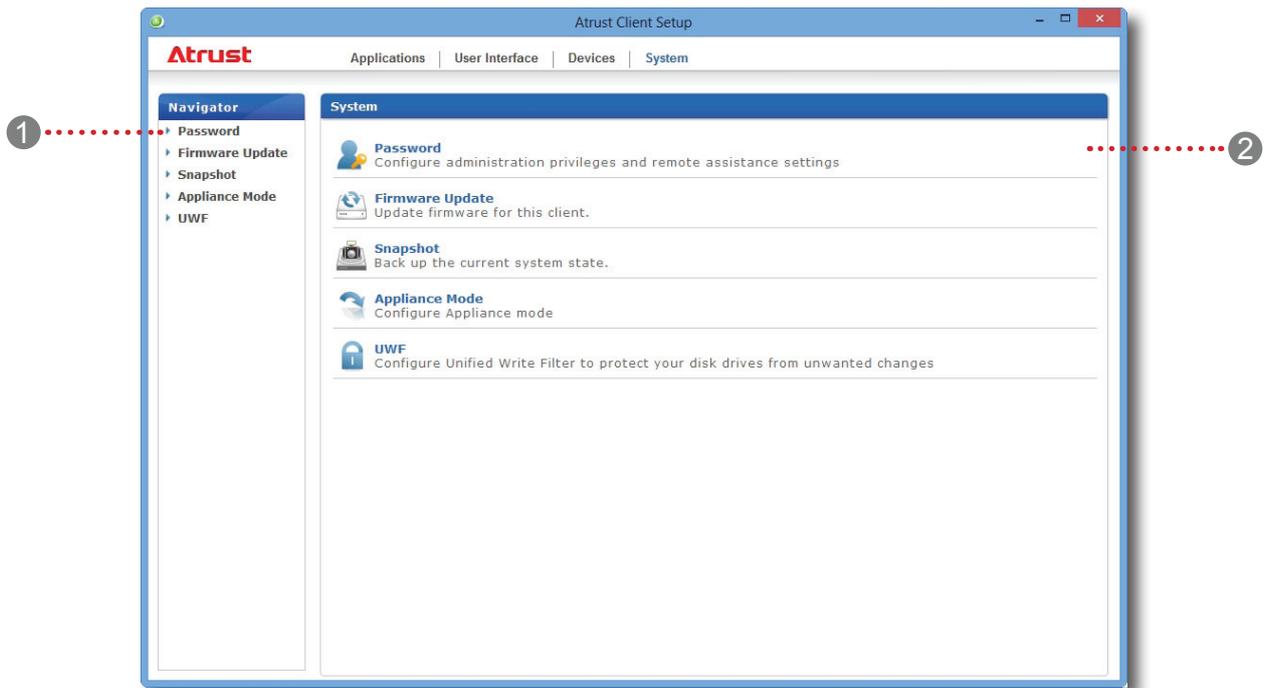

#### Interface Elements

No.	Name	Description
1	Navigation area	Click to select a setting item under <b>System</b> tab.
2	Configuration area	Configures setting values when a setting item is selected.

### 4.2.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
System	Password		Click to configure the access privileges of Atrust Client Setup for client users.	4.2.3	35
			Click to configure settings for remote assistance.	4.2.4	37
	Firmware Update		Click to update firmware locally with the help of a remote management computer. This feature is only applicable when the client is managed by the Atrust Device Manager console.	4.2.5	38
	Snapshot		Click to take a snapshot (system image) of the client for mass deployment.	4.2.6	41
				4.2.7	42
	Appliance Mode		Click to enable/disable the Appliance mode to allow/disallow the automatic RDP / ICA / View sessions. In Appliance mode, the client starts up with the desired RDP / ICA / View session and shuts down when the user logs out.	4.2.8	45
UWF		Click to configure UWF (Unified Write Filter) settings. Enabling UWF option will redirect all writes targeted for disk volumes to a RAM cache. All system changes will only affect the session where the changes are made.	4.2.9	49	



**NOTE**

- Atrust Device Manager is a remote and mass client management console, helping you remotely manage a large number of endpoint devices in a desktop virtualization infrastructure. For more information about Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

### 4.2.3 Configuring the Access Privileges and Password of Atrust Client Setup

You can configure the access privileges of Atrust Client Setup for client users by the **Password** setting.


#### **Setting Access Privileges and Password Only for Administrators**

To set access privileges and password only for administrators, please do the following:

 **NOTE**

- System administrators (and only administrators) are allowed to access Atrust Client Setup by default. If you don't enable user authentication for administrators and don't set a password here, the system administrator privileges are sufficient to access Atrust Client Setup. If authentication is enabled and the password is set, administrators will need that password to enter Atrust Client Setup.

1. On Atrust Client Setup, click **System > Password**.

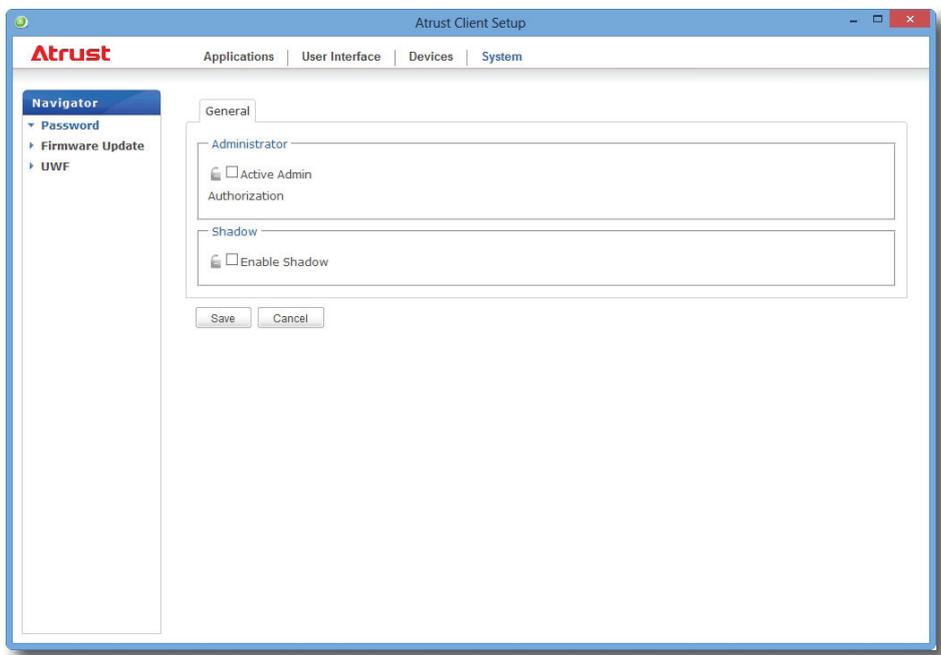

2. Under the Administrator section, click to check **Active Admin Authorization**.
3. The access privileges for administrators are granted and a window appears for you to set the password.




4. Type in the desired password, and then click **Save** to apply.
5. Click **Save** to store all the changes.

### Setting Access Privileges and Password Also for Standard Users

To set access privileges and password also for standard users, please do the following:

1. On Atrust Client Setup, click **System > Password**.
2. Under the User section, click to check **Use Password**.

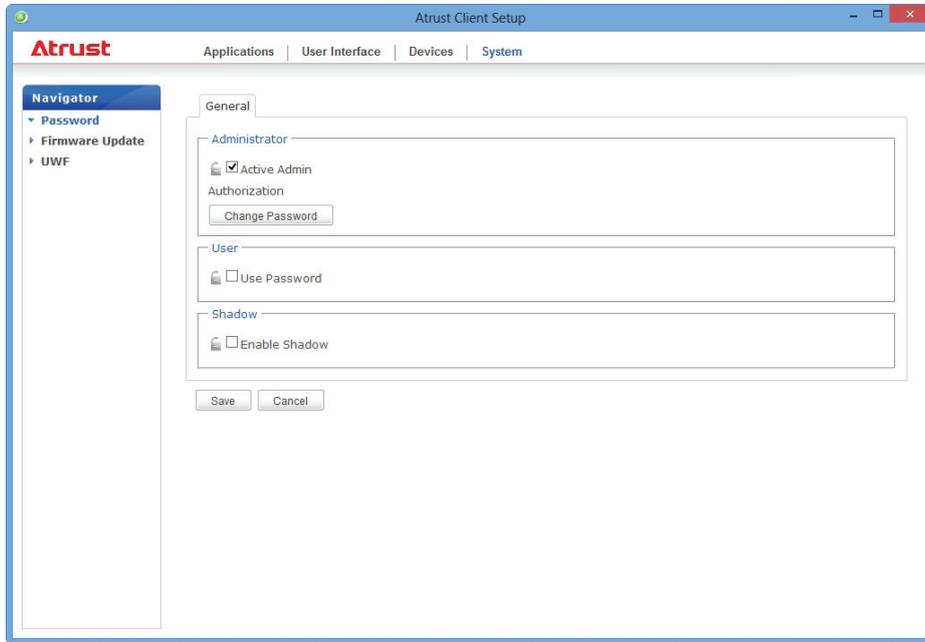

#### NOTE

- The User section appears only when **Active Admin Authorization** is checked.

3. The access privileges for standard users are granted and a window appears for you to set the password.
4. Type in the desired password, and then click **Save** to apply.
5. Click **Save** to store all the changes.



#### NOTE

- For standard users of your mt180W, two set of credentials are required to access Atrust Client Setup: one set of credentials is administrator credentials for Windows Embedded 8 Standard; the other is standard user credentials for Atrust Client Setup.

#### 4.2.4 Configuring Shadow Settings for Remote Assistance


The Shadow feature allows an administrator to remotely assist client users in resolving problems or configuring local settings. When this feature is enabled, an administrator can monitor and control a client from a remote computer just like a local user.

 **NOTE**

- To use the Shadow feature on a remote computer, you need to install the Atrust Device Manager and also Java software on the remote computer, and add your client into a managed group under Atrust Device Manager. For detailed instructions, please refer to the User's Manual for Atrust Device Manager.

To enable the Shadow feature and set the password for remote assistance, please do the following:

1. On Atrust Client Setup, click **System > Password**.

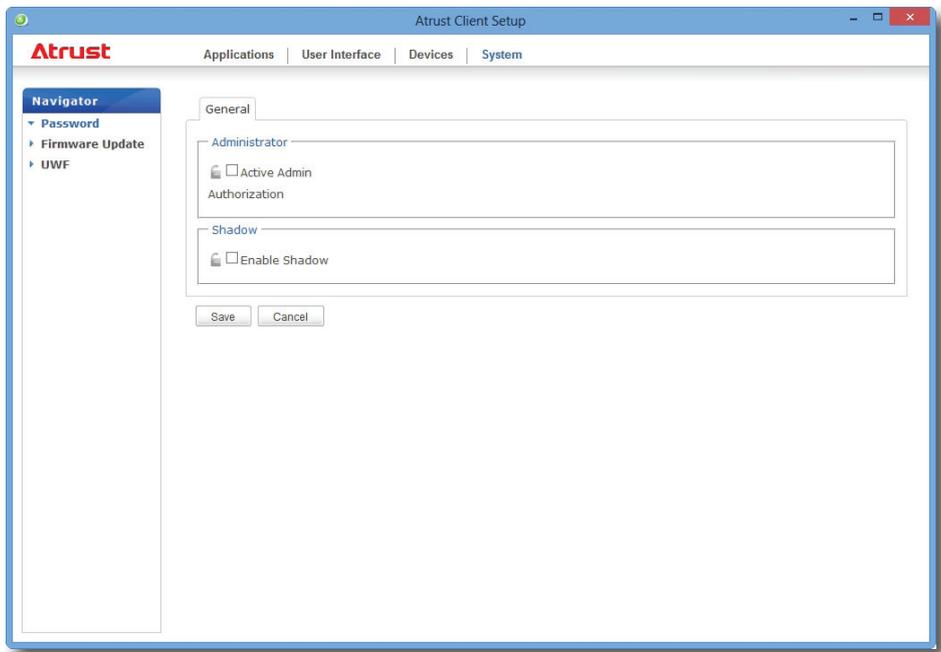

2. Under the Shadow section, click **Enable Shadow**.
3. The Shadow feature is enabled and a window appears for you to set the password for remote assistance.





**NOTE**

- On a remote computer, an administrator will need this password to use the Shadow feature (remote assistance) available in the Atrust Device Manager console. For more information, please refer to the User's Manual for Atrust Device Manager.

4. Type in the desired password, and then click **Save** to apply.
5. Click **Save** to store all the changes.



**NOTE**

- When the Shadow feature is enabled, on mt180W, the icon  will appear in the Notification area of the Task bar. If this feature is currently being performed from a remote computer, the icon will change its color to yellow .

#### 4.2.5 Updating Firmware from the Management Computer

**Update Firmware** allows users to update client firmware from the remote management computer to get the client device up-to-date.




**NOTE**

- Ensure that your client has been added into a managed group under Atrust Device Manager installed on a remote computer, and that you have imported client firmware files into Atrust Device Manager. These are prerequisites of this feature.
- For more information on firmware update and Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

To update client firmware from the remote management computer, please do the following:

1. On Atrust Client Setup, click **System > Firmware Update**.

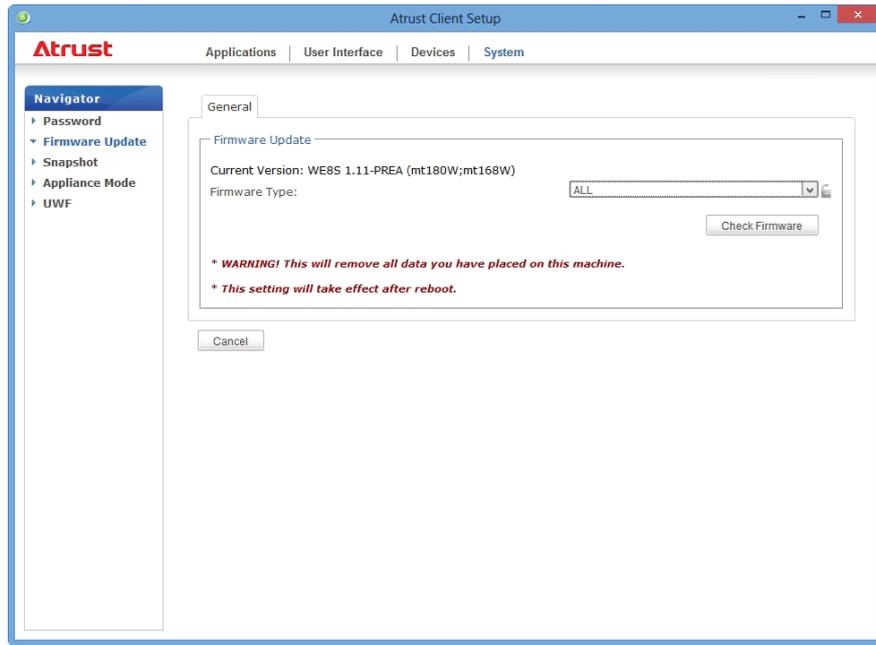

2. Under the Firmware Update section, click the Firmware Type drop-down menu to select **Firmware**. The system will then automatically download the Firmware list from the remote computer.

 **NOTE**


- You can also update the firmware of a client with a snapshot (the system image of a client) which is coming from another client of the same model and is with a newer firmware version. For detailed information, please refer to sections about the snapshot.

3. On completion, a window appears notifying you that the Firmware list has been loaded. Click **OK** to continue.

 **NOTE**

- The available firmware versions depend on how many versions have been imported into the remote Atrust Device Manager.

4. Click drop-down menus to select the desired firmware version and other options.

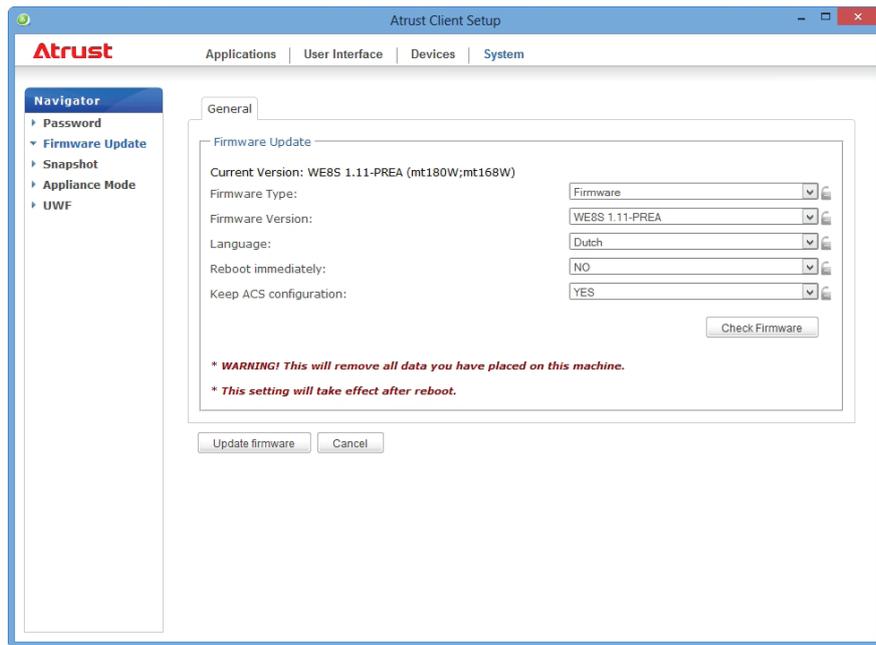

Firmware Update Options									
Item	Description								
Firmware Type	<p>Click to select the desired firmware type.</p> <table border="1"> <thead> <tr> <th>Type</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>ALL</td> <td>All firmware types, <b>Firmware</b> and <b>Snapshot</b>.</td> </tr> <tr> <td>Firmware</td> <td>The system image of a client.</td> </tr> <tr> <td>Snapshot</td> <td>The system image of a client coming from another client of the same model.</td> </tr> </tbody> </table>	Type	Description	ALL	All firmware types, <b>Firmware</b> and <b>Snapshot</b> .	Firmware	The system image of a client.	Snapshot	The system image of a client coming from another client of the same model.
Type	Description								
ALL	All firmware types, <b>Firmware</b> and <b>Snapshot</b> .								
Firmware	The system image of a client.								
Snapshot	The system image of a client coming from another client of the same model.								
Firmware Version	Click to select the desired firmware version from the Firmware list.								
Language	<p>Click to select the interface language of the system, including the Atrust Client Setup console.</p> <p><b>NOTE:</b> Available languages may vary with the firmware version.</p>								
Reboot immediately	Click to choose whether to restart the system immediately for firmware update or manually restart the system later.								
Keep ACS configuration	<p>Click to choose whether to keep client settings under Atrust Client Setup.</p> <p><b>NOTE:</b> If <b>Yes</b> is selected, all client settings under Atrust Client Setup will remain unchanged after firmware update. If <b>No</b> is selected, all settings will be restored to the factory default.</p> <p><b>NOTE:</b> If the client is managed by Atrust Device Manager and here <b>No</b> is selected, Atrust Device Manager will fail to manage the client after firmware update. For more information on Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.</p>								

5. Click **Update firmware** to confirm your selections. The system will start updating its firmware after restart.

## 4.2.6 Taking Snapshots for Mass Deployment

A snapshot is the system image of a client, allowing you to use that image for mass deployment. This system image can be stored on a remote management computer or a locally attached USB flash drive.



### NOTE

- To store the system image on a remote computer, ensure that Atrust Device Manager has been installed on that computer, and that the client has been added into a managed group under Atrust Device Manager.
- When taking a snapshot, all system specific information, including the Computer Security Identifier (SID) and computer name, will be reset or removed from the system image by performing the System Preparation (**Sysprep**) tool automatically.




### NOTE

- Taking a snapshot will reset the startup behavior to the default (auto-login with the default standard user account). For details, please refer to section "1.6 Before Getting Started" on page 9.

To take a snapshot from a client, please do the following:

1. On Atrust Client Setup, click **System** > **Snapshot**.

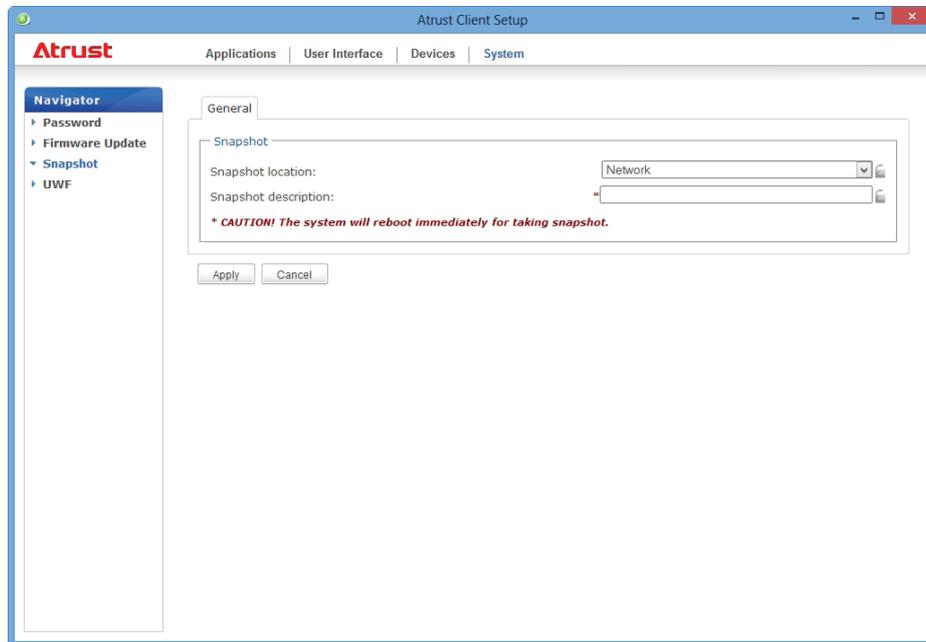

2. Under the Snapshot section, click the drop-down menu to select where to store the snapshot. Two options are available: **Network** and **USB**.

- To store the snapshot file set on the remote computer, please select **Network**.
- To store the snapshot file set on the locally attached USB flash drive, please select **USB**.

3. Type in the desired description for the snapshot, and then click **Apply**.
4. A message appears prompting for confirmation. Click **OK** to confirm.
5. The system will restart to complete the process *automatically*.



**NOTE**

- Please wait for the process to complete *automatically*. Taking a snapshot needs several minutes and requires system reboot more than one time. In addition, the **Sysprep** process will not be shown on the desktop but only be performed in the background.

### 4.2.7 Deploying a System Image with a Created Snapshot

Your snapshots may be stored on a remote computer over the network or on a USB flash drive. Depending on where your snapshot is located, you can deploy a system image either through a network or a USB flash drive.




**NOTE**

- For detailed information on how to take a snapshot, please refer to section “4.2.6 Taking Snapshots for Mass Deployment” on page 41.

#### ***With a Snapshot on a Remote Computer***

To deploy a system image on your mt180W with a snapshot on a remote computer, please do the following:

1. On Atrust Client Setup, click **System > Firmware Update**.

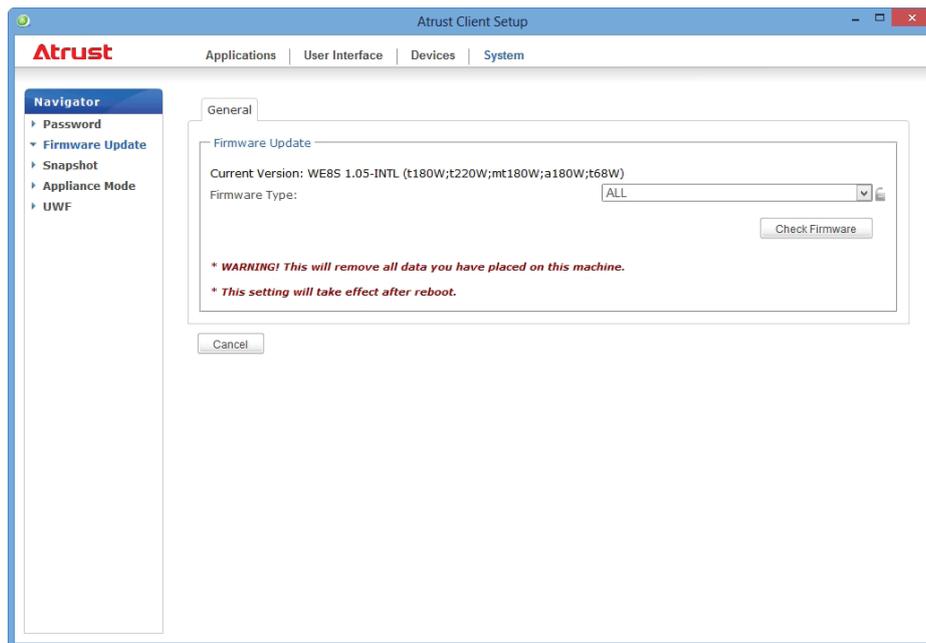


2. Under the Firmware Update section, click the Firmware Type drop-down menu to select **Snapshot**. The system will automatically download the Snapshot list from the remote computer.
3. Upon completion, a message appears notifying you that the Snapshot list has been loaded.

 **NOTE**

- Client snapshots stored on the remote computer are managed by Atrust Device Manager. For more information on how to manage client snapshots with Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

4. Click **OK** to continue.
5. Click drop-down menus to select the desired snapshot and other options.

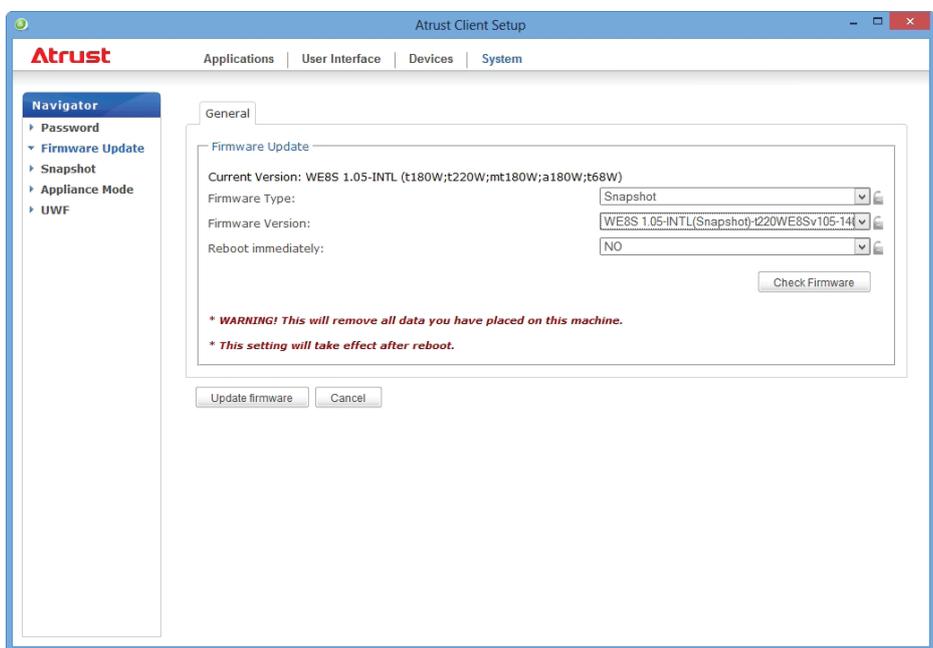


Options for Deploying a Snapshot	
Item	Description
Firmware Version	Click to select the desired snapshot from the Snapshot list.
Reboot immediately	Click to choose whether to restart the system immediately for firmware update or manually restart the system later.

6. Click **Update firmware** to confirm your selections. The system will start deploying the snapshot after restart.

### ***With a Snapshot on a USB Flash Drive***

To deploy a system image on your mt180W with a snapshot on a USB flash drive, please do the following:

1. Plug the USB flash drive into a free USB port of the client.
2. Start up or restart the client.
3. During the period of POST (Power-On Self-Test), press **F7** to enter the Boot Device menu.
4. Select to boot from the attached USB flash drive.
5. The Atrust Thin Client Recovery System is launched.
6. Select **USB**, and then click **Next** to continue.

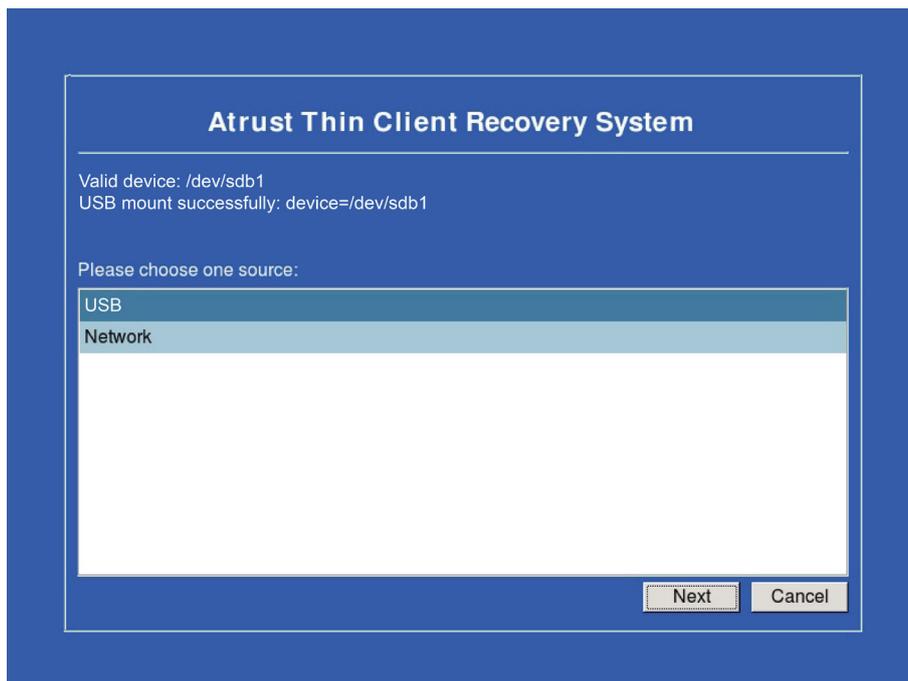

7. The recovery system start deploying the snapshot to the client.
8. After completion, click **Finish** to restart the client.

### 4.2.8 Enabling or Disabling the Appliance Mode

The Appliance mode allows your thin client to start up directly with the desired Microsoft Remote Desktop, Citrix ICA, VMware View or Horizon View session. After existing a session, the client will be turned off.



**NOTE**

- There are two similar but different modes for your thin client:

No.	Mode	Description
1	Appliance	The client will start up directly with the desired RDP / ICA / View session and turn off after existing the session.
2	Autostart	The client will start up directly with the desired RDP / ICA / View session and perform the configured action after existing the session.  Available actions include: <ul style="list-style-type: none"> <li>• Returning to the local desktop</li> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul>

- For more information on above modes, please refer to sections:
  - ◇ 4.2.8 on page 45 (Appliance mode)
  - ◇ 4.5.5 on page 70 (Autostart mode for RDP sessions)
  - ◇ 4.5.8 on page 98 (Autostart mode for ICA sessions)
  - ◇ 4.5.11 on page 113 (Autostart mode for View sessions)

### Enabling the Appliance Mode


To enable the Appliance mode, please do the following:




**NOTE**

- Ensure that you have configured the connection settings for the desired Microsoft Remote Desktop, Citrix ICA, VMware View or Horizon View session under **Applications** tab. You need to specify which service type and connection settings entry will be used under the Appliance mode. For detailed instructions, please see sections:
  - ◇ "4.5.3 Configuring Basic RDP Connection Settings" on page 58
  - ◇ "4.5.6 Configuring Basic ICA Connection Settings" on page 83
  - ◇ "4.5.9 Configuring Basic VMware View Connection Settings" on page 109

1. On Atrust Client Setup, click **System > Appliance Mode**.

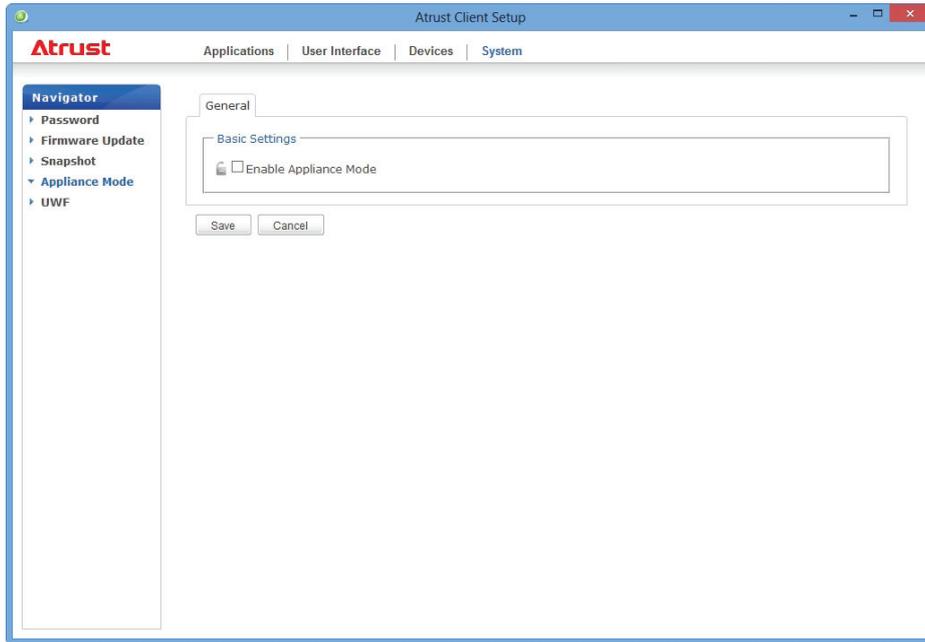

2. Click to check **Enable Appliance Mode**.
3. Other settings of the Appliance mode appear.

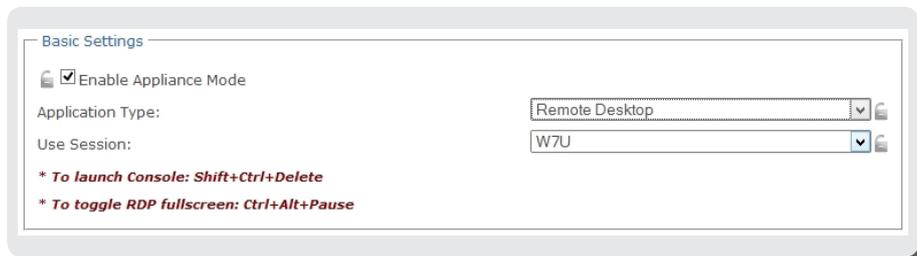

- Click drop-down menus to select the application (or service) type: **Citrix ICA**, **Remote Desktop**, or **VMware View**, and the specific service available in that type.

Basic Settings

Enable Appliance Mode

Application Type: Remote Desktop

Use Session: W7U

*\* To launch Console: Shift+Ctrl+Delete*

*\* To toggle RDP fullscreen: Ctrl+Alt+Pause*

Basic Settings

Enable Appliance Mode

Application Type: Citrix ICA

Use Session: X75P

*\* To launch Console: Shift+Ctrl+Delete*

Basic Settings

Enable Appliance Mode

Application Type: VMware View

Use Session: VMH6

*\* To launch Console: Shift+Ctrl+Delete*

- Click **Save** to confirm your selections.
- The system will enter the Appliance mode after restart.

 **NOTE**

- To disable the Appliance mode or to access Atrust Client Setup under the Appliance mode, please refer to “Disabling the Appliance Mode” on page 48.

### Disabling the Appliance Mode

To disable the Appliance mode, please do the following:

1. Under the Appliance mode, exit the Full Screen mode of the RDP / ICA session, or release the keyboard and mouse from the View session (virtual desktop):
  - To exit the Full Screen mode of the RDP session, press **Ctrl + Alt + Pause**.
  - To exit the Full Screen mode of the ICA session, use the XenDesktop toolbar at the top (You may not in the Full Screen mode).
  - To release the keyboard and mouse from the View session (virtual desktop), press **Ctrl + Alt**.



#### NOTE

- Please note that the View session (virtual desktop) will remain on the background after you release the keyboard and mouse from the View session (virtual desktop).

2. Click **Ctrl + Shift + Del** to launch Atrust Client Setup.



#### NOTE

- You cannot access the Taskbar of the client operating system (Atrust ARM Linux) under the Appliance mode.

3. On Atrust Client Setup, click **System > Appliance Mode**.
4. Click to uncheck **Enable Appliance Mode**, and then click **Save** to apply the change.
5. Return to the current RDP / ICA / View session:
  - To return to the current RDP / ICA session, use **Alt + Tab** (press and hold **Alt**, and then press **Tab** to switch between different items) to select and restore the current RDP / ICA session.
  - To return to the current View session, click any place of the View session (virtual desktop) on the background.
6. Log off from the current RDP / ICA / View session.
7. The client will shut down then. Restart your client manually.

### 4.2.9 Configuring UWF (Unified Write Filter)

Your mt180W is UWF-enabled by default. Unified Write Filter (UWF) is a sector-based write filter intercepting all write attempts to a protected volume and redirecting those write attempts to a RAM cache. With UWF, all system changes will only affect the session where the changes are made. After restart, all changes will be discarded.




#### WARNING

- The UWF feature is enabled by factory default. **Except for changes to ACS settings**, all the changes made in a session will not be kept after the system restart. Ensure that you choose the desired settings here before making any changes to the system.
- An icon in the Notification area of the Taskbar will indicate the current UWF state of your system. For details, please refer to the description at the end of this section.

To configure the UWF settings, please do the following:

1. On Atrust Client Setup, click **System > UWF**.
2. Click the State drop-down menu to enable/disable the UWF feature.

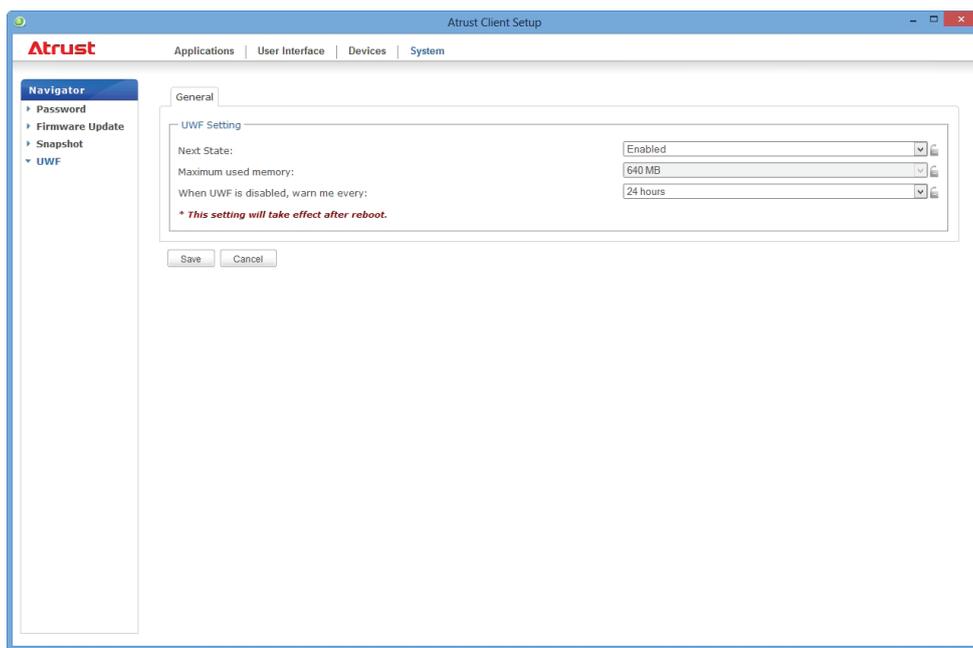

3. Click to select other options if needed.



#### TIP

- You can change the maximum memory size used **only when UWF is disabled**. Disable UWF first, and then change the memory size used. A restart is required when you switch the UWF state.

UWF Options	
Item	Description
Next State	Click to enable / disable UWF. A restart is required for switching.
Maximum used memory	Click to select the maximum memory used for UWF.
When UWF is disabled, warn me every	Click to select how often the system warns you when UWF is disabled.

4. Click **Save** to confirm your selections.
5. You may need to restart the system for the change(s) to take effect.



**WARNING**


- You need to restart the system for switching between the UWF enabled and disabled states. An icon will appear in the Notification area of the Taskbar to indicate the current UWF state of the system. The following table provides a description of each icon:

Icon	Name	Description
	Green Lock	The UWF is currently enabled. Except for changes to ACS settings, all the other changes made to the system in current session will not be kept after the system restart.
	Orange Lock	The UWF state was changed and will take effect after the system restart.
	Red Lock	The UWF is currently disabled.



**TIP**

- When UWF is enabled, you can move the mouse pointer over the UWF icon to check currently free memory (overlay) for UWF. A tooltip as below will be shown.

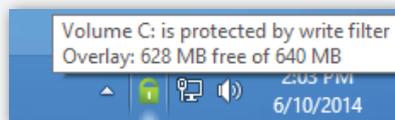

**NOTE**


- As a thin client device, your mt180W is mainly for access to remote or virtual desktops on servers. With the limited and protected (UWF-enabled) hard disk space, it's **not** recommended to save data on your mt180W. Instead, you can use storage spaces over remote / virtual desktops, removable storage devices, or networks.
- In case that you need to copy a file to the protected volume, ensure that its size is smaller than the free memory (overlay) space. Otherwise, your system may have unexpected results or become unresponsive.

## 4.3 Configuring External Device Settings

### 4.3.1 Devices Tab Overview

**Devices** tab enables you to configure settings for external devices of clients. To access available settings of **Devices** tab, click the tab on Atrust Client Setup.

#### Devices Tab Overview

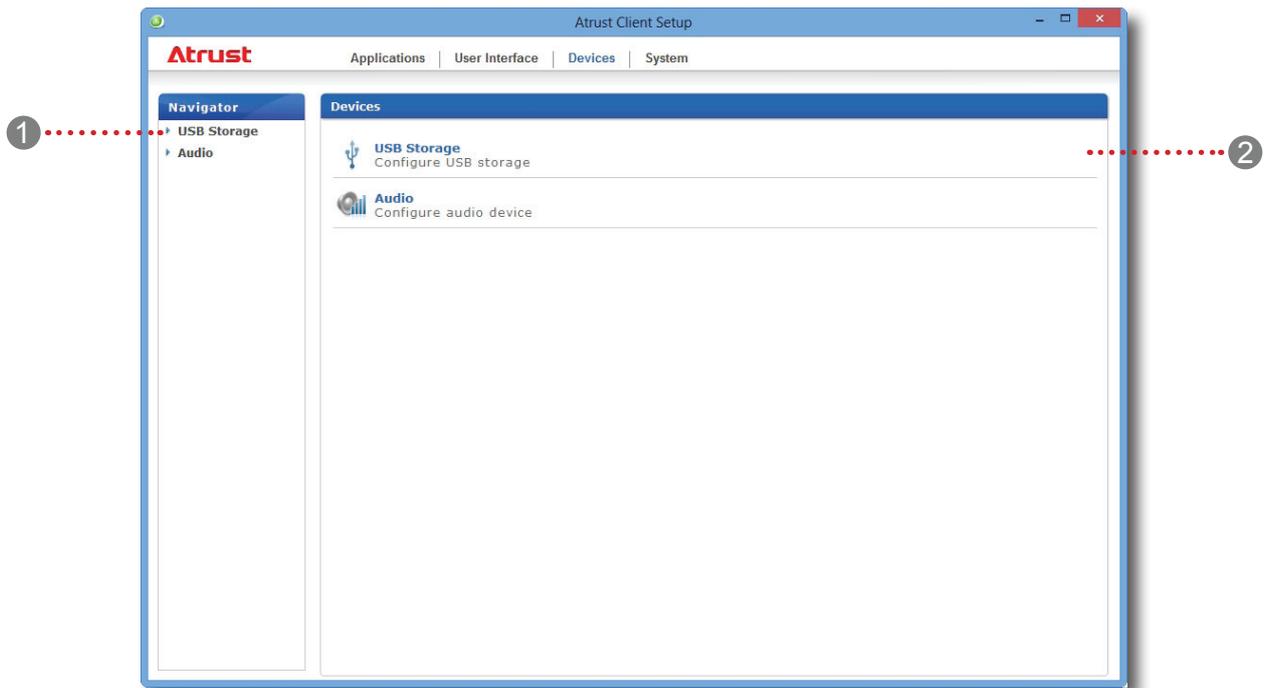

Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>Devices</b> tab.
2	Configuration area	Configures setting values when a setting item is selected.


### 4.3.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Devices	USB Storage		Click to configure settings for USB storage devices.	4.3.3	52
	Audio		Click to configure settings for audio devices.	4.3.4	53

### 4.3.3 Configuring Settings for USB Storage Devices

To configure settings for USB storage devices, please do the following:

1. On Atrust Client Setup, click **Devices > USB Storage**.

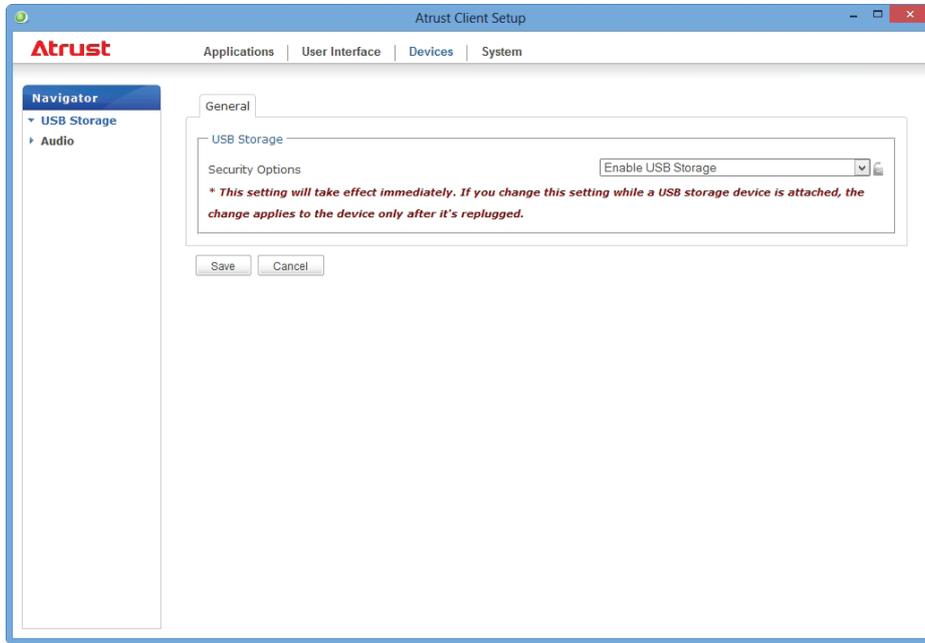

2. Click the drop-down menu to select the desired setting. Three options are available: **Enable USB Storage**, **Read-Only Access**, and **Disable USB Storage**.

 **NOTE**

- When **Enable USB Storage** is selected, settings of RDP / ICA connection entries under **Applications** tab may affect if you can use *mapped* USB storage devices in remote / virtual desktop sessions. For details, please refer to sections:
  - ✧ "4.5.5 Configuring Advanced RDP Connection Settings" on page 70
  - ✧ "4.5.8 Configuring Advanced ICA Connection Settings" on page 98
- When **Disable USB Storage** is selected, Citrix ICA and VMware View / Horizon View sessions may still allow users to use locally attached USB storage devices through *redirection*. To really prevent the use of USB storage devices in virtual desktop sessions, some configurations in Citrix and VMware service delivery environments are required.

3. Click **Save** to store your change.


### 4.3.4 Disabling or Enabling Attached Audio Devices

To disable/enable attached audio devices, please do the following:

 **NOTE**

- If you disable locally attached audio devices, client users are not allowed to perform audio playback or recording with these devices in an RDP / ICA / View session.
- To perform audio playback or recording with local audio devices in an RDP / ICA / View session, you need to enable locally attached audio devices here (the **Audio** setting item under **Devices** tab) and configure audio related settings (if any) in the RDP / ICA / View connection settings. For detailed instructions, please refer to sections:
  - ✧ “4.5.5 Configuring Advanced RDP Connection Settings” on page 70
  - ✧ “4.5.8 Configuring Advanced ICA Connection Settings” on page 98
  - ✧ “4.5.11 Configuring Advanced View Connection Settings” on page 113

1. On Atrust Client Setup, click **Devices > Audio**.

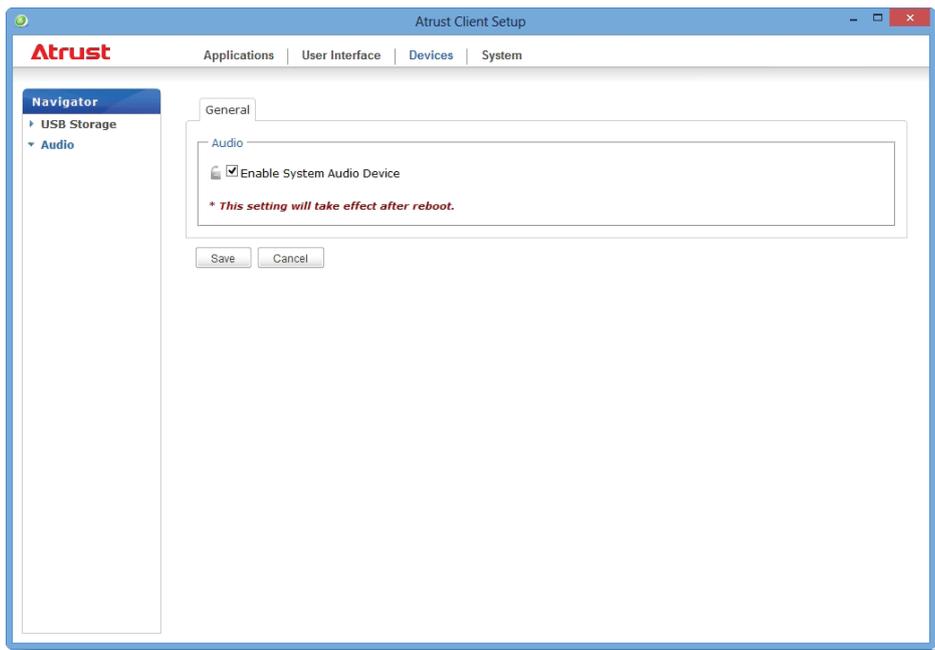

2. Click to check/uncheck **Enable System Audio Device**.

3. Click **Save** to confirm your selection.

 **NOTE**


- The change will not take effect until the client has been restarted.

## 4.4 Configuring User Interface Settings

### 4.4.1 User Interface Tab Overview

**User Interface** tab enables you to configure settings for the user interface of clients. To access available settings of **User Interface** tab, click the tab on Atrust Client Setup.

#### User Interface Tab Overview

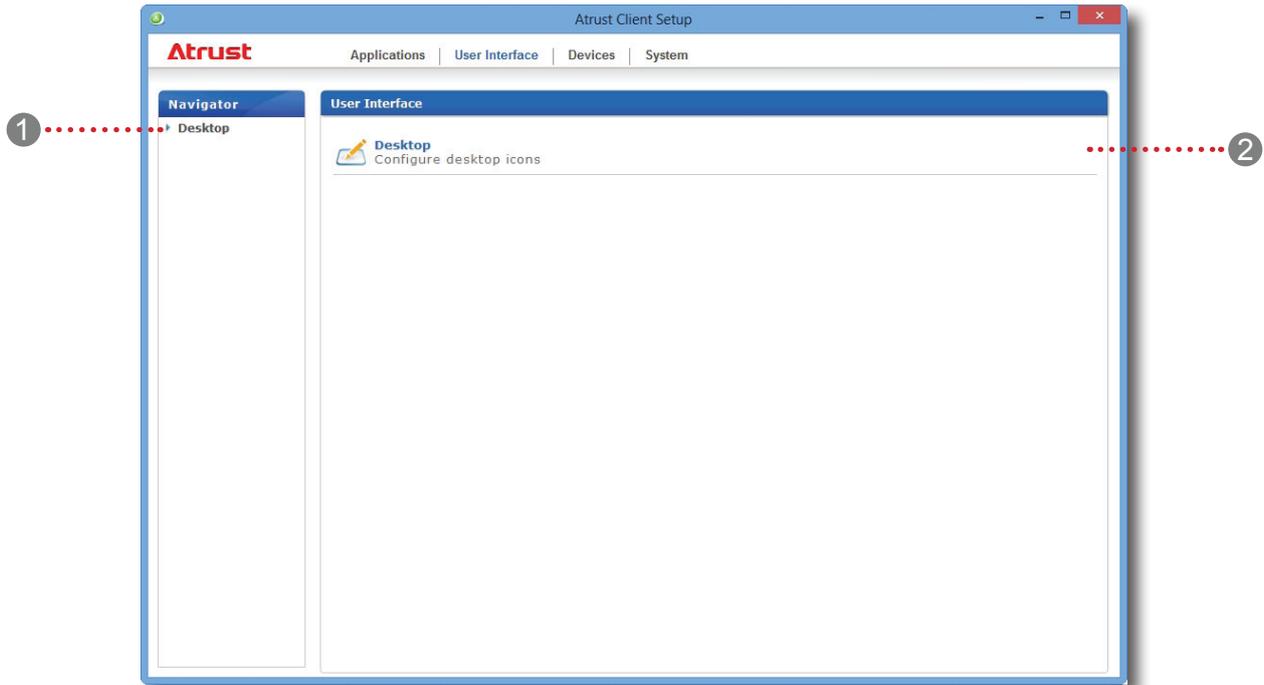

#### Interface Elements

No.	Name	Description
1	Navigation area	Click to select a setting item under <b>User Interface</b> tab.
2	Configuration area	Configures setting values when a setting item is selected.

### 4.4.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
User Interface	Desktop		Click to configure the display of standard desktop shortcuts for quick service access.	4.4.3	55

### 4.4.3 Configuring the Display of Standard Desktop Shortcuts for Quick Access

The **Desktop** setting enables you to display or hide the standard desktop shortcuts for service quick access. Three standard desktop shortcuts are available: **Citrix Receiver**, **Remote Desktop Connection**, and **VMware Horizon View Client**, separately for quick service access of Citrix XenApp / XenDesktop / VDI-in-a-Box, Microsoft Remote Desktop / Remote Application (RemoteApp), and VMware View / VMware Horizon View.



Remote Desktop Connection



Citrix Receiver



VMware Horizon View Client



**TIP**

- You can use these standard desktop shortcuts to quickly access services. For detailed instructions, please refer to chapter 3 “Getting Started” on page 15.




**NOTE**

- You can also customize your desktop shortcuts for quick service access. For detailed instructions on how to create and customize your own desktop shortcuts, please refer to section “4.5 Configuring Service Access Settings” on page 56.

To display or hide the standard desktop shortcuts for quick service access, please do the following:

1. On Atrust Client Setup, click **User Interface > Desktop**.

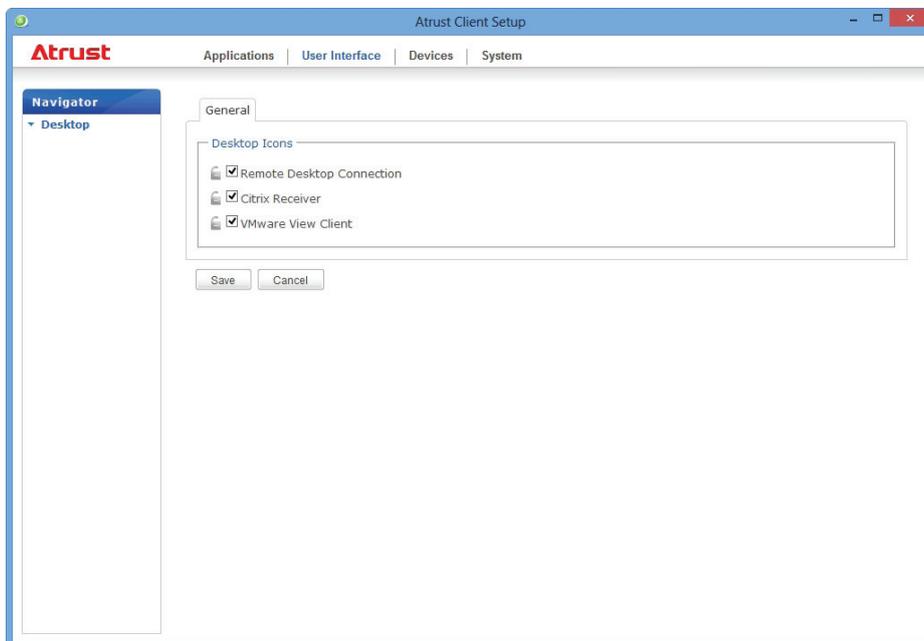


2. Click to check/uncheck **Remote Desktop Connection**, **Citrix Receiver**, or **VMware View Client**.
3. Click **Save** to apply.

## 4.5 Configuring Service Access Settings

### 4.5.1 Applications Tab Overview

**Applications** tab enables you to configure settings for service access on clients. To access available settings of **Applications** tab, click the tab on Atrust Client Setup.

#### Applications Tab Overview

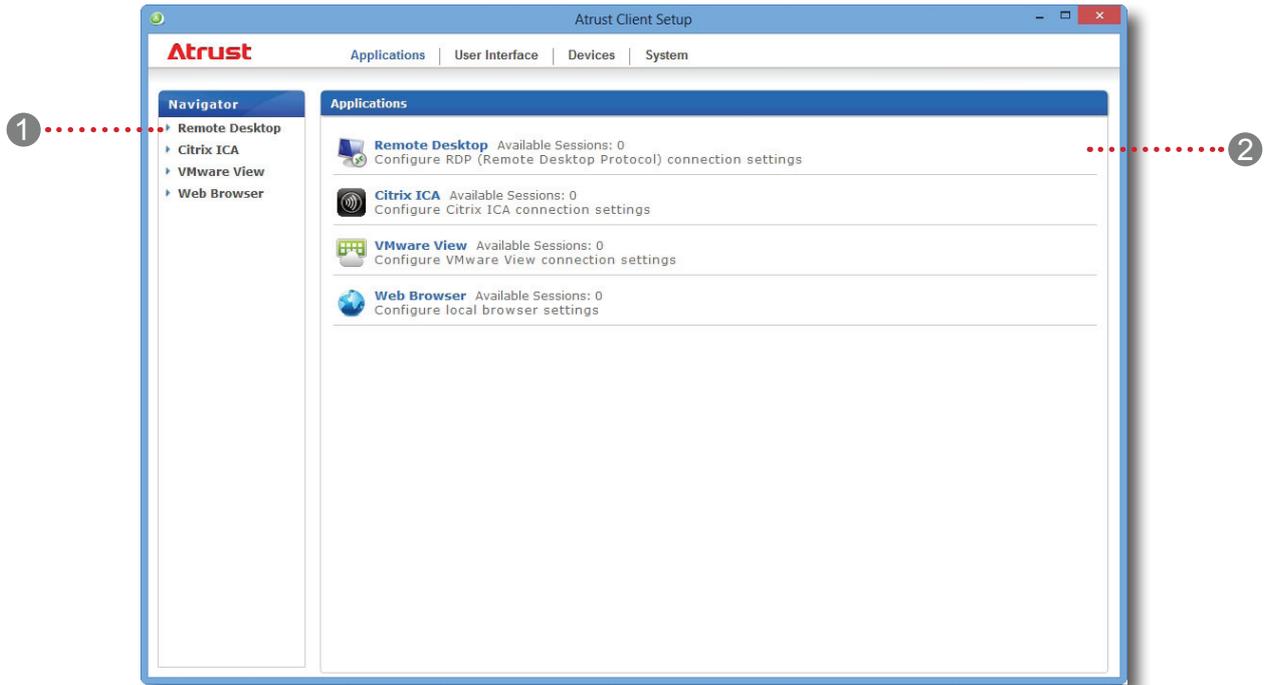

#### Interface Elements

No.	Name	Description
1	Navigation area	Click to select a setting item under <b>Applications</b> tab or to select a setting entry under a selected setting item.
2	Configuration area	Configures setting values when a setting item or entry is selected.

#### 4.5.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Applications	Remote Desktop		Click to configure RDP (Remote Desktop Protocol) connection settings and create access shortcuts on the desktop for RDP sessions.	4.5.3 4.5.4 4.5.5	58
	Citrix ICA		Click to configure Citrix ICA (Independent Computing Architecture) connection settings and create access shortcuts on the desktop for ICA sessions.	4.5.6 4.5.7 4.5.8	83
	VMware View		Click to configure VMware View connection settings and create access shortcuts on the desktop for View sessions.	4.5.9 4.5.10 4.5.11	109
	Web Browser		Click to configure browser session settings and create access shortcuts on the desktop for browser sessions.	4.5.12	115

### 4.5.3 Configuring Basic RDP Connection Settings

The **Remote Desktop** setting allows you to configure RDP (Remote Desktop Protocol) connection settings and create shortcuts on the desktop or Start screen for Remote Desktop services. You can access services for work simply through these shortcuts.



**NOTE**

- For more information on Microsoft Remote Desktop services, please visit Microsoft website at [www.microsoft.com](http://www.microsoft.com).


Three connection types are available:

Connection Type	Description	Page
Remote Desktop	Select to access remote desktops/applications.	59
Remote Web Access	Select to access remote desktops/applications through a Web browser.	61
Web Feed	Select to access remote applications through published Start screen tiles.	63

**Connection Type: Remote Desktop**

To quickly configure RDP connection settings for Remote Desktop connection type, please do the following:

1. On Atrust Client Setup, click **Applications > Remote Desktop**.

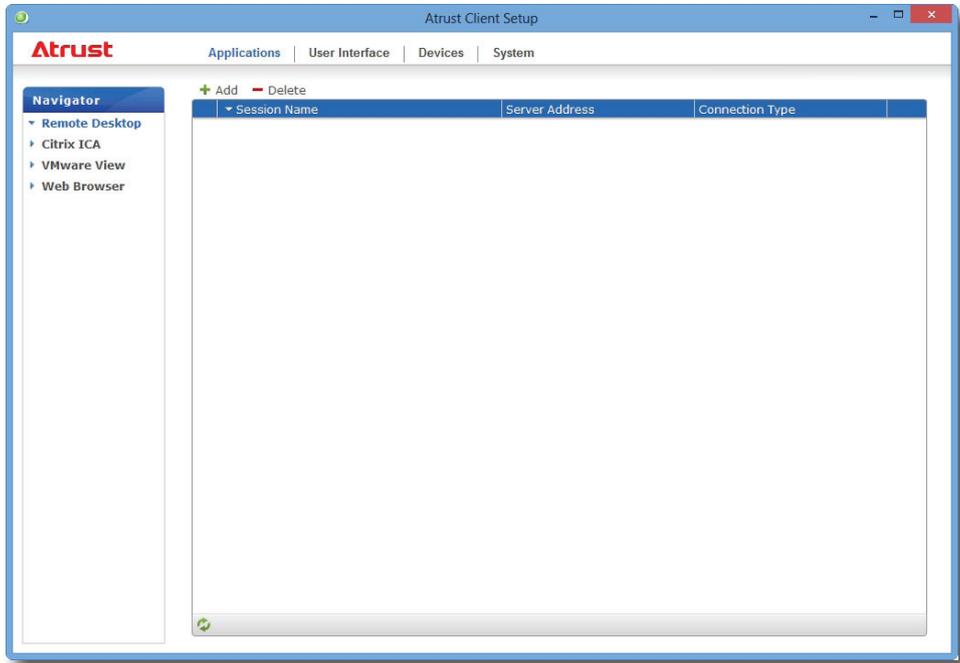


2. The RDP Connection list appears in the Configuration area.

 **NOTE**

- If you haven't create any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

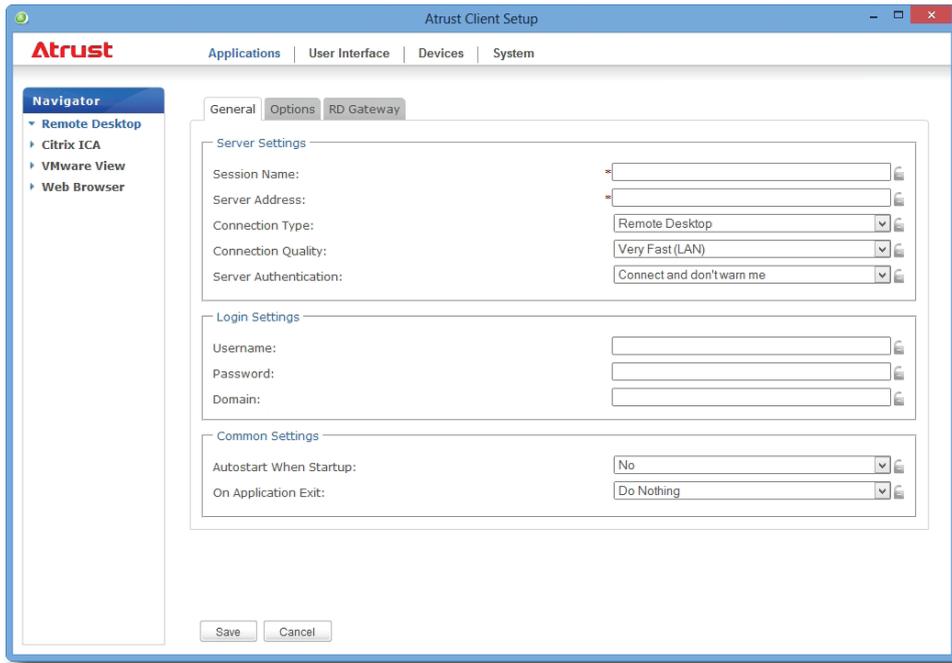

4. On **General** sub-tab, type in the session name and the server/virtual machine address under the Server Settings section.

 **NOTE**

- The red asterisks indicate the required fields.
- The remote computer can be a physical server or a virtual machine. Please visit Microsoft's websites at [www.microsoft.com](http://www.microsoft.com) or [support.microsoft.com](http://support.microsoft.com) for more information.

5. Click **Save** to add this RDP connection entry.
6. The shortcut for Remote Desktop connection is automatically created on the desktop.

 **NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced RDP connection settings for service access. For more information on other available settings, please refer to section "4.5.5 Configuring Advanced RDP Connection Settings" on page 70.


**Connection Type: Remote Web Access**

To quickly configure RDP connection settings for Remote Web Access connection type, please do the following:

 **NOTE**

- Your mt180W supports only RD Web Access based on Windows Server 2012 R2; Windows Server 2008 R2 based is not supported.

1. On Atrust Client Setup, click **Applications > Remote Desktop**.

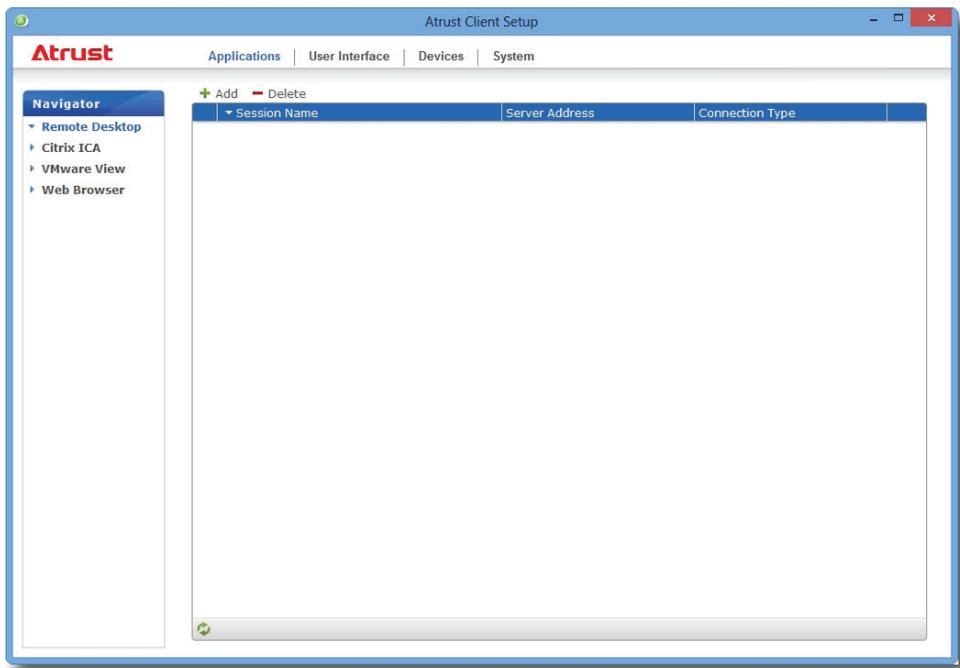


2. The RDP Connection list appears in the Configuration area.

 **NOTE**

- If you haven't create any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

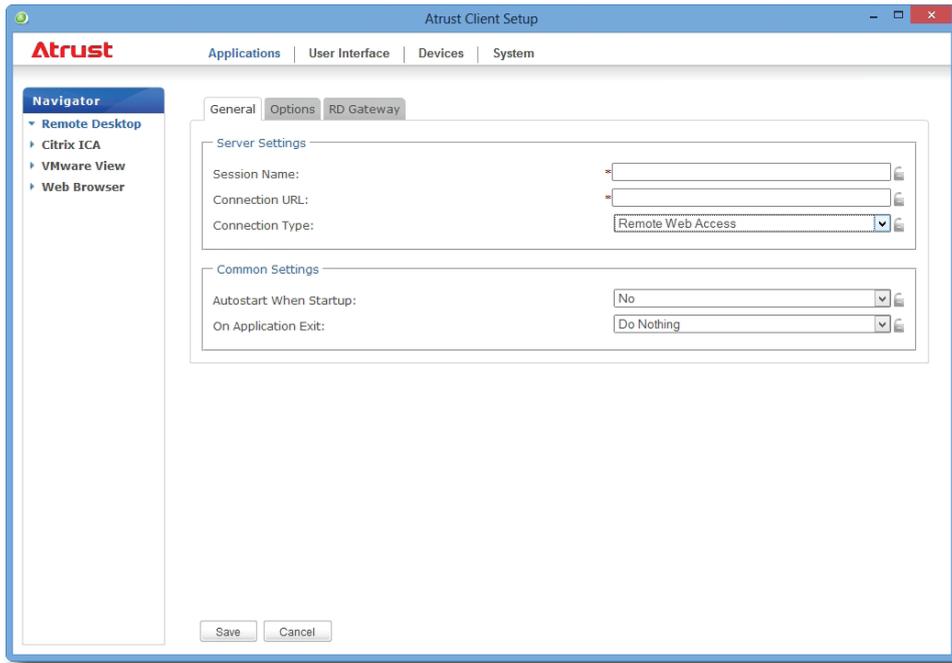

4. On **General** sub-tab, click the Connection Type drop-down menu to select **Remote Web Access**.
5. Type in the session name and connection URL through which Web-based remote applications/desktops is accessible.

 **NOTE**

- The red asterisks indicate the required fields.
- Consult your IT administrator for the appropriate connection URL.

6. Click **Save** to add this RDP connection entry.
7. The shortcut for Remote Web Access connection is automatically created on the desktop.

 **NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced RDP connection settings for service access. For more information on other available settings, please refer to section "4.5.5 Configuring Advanced RDP Connection Settings" on page 70.


**Connection Type: Web Feed**

To quickly configure RDP connection settings for Web Feed connection type, please do the following:

 **NOTE**

- Your mt180W supports only RD Web Access based on Windows Server 2012 R2; Windows Server 2008 R2 based is not supported.

1. On Atrust Client Setup, click **Applications > Remote Desktop**.

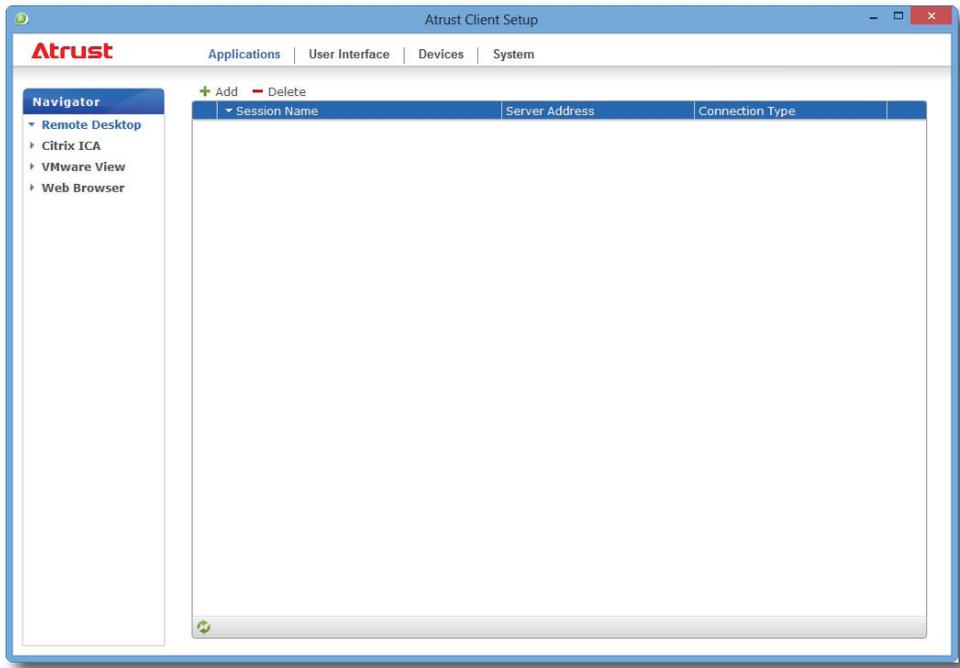


2. The RDP Connection list appears in the Configuration area.

 **NOTE**

- If you haven't create any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

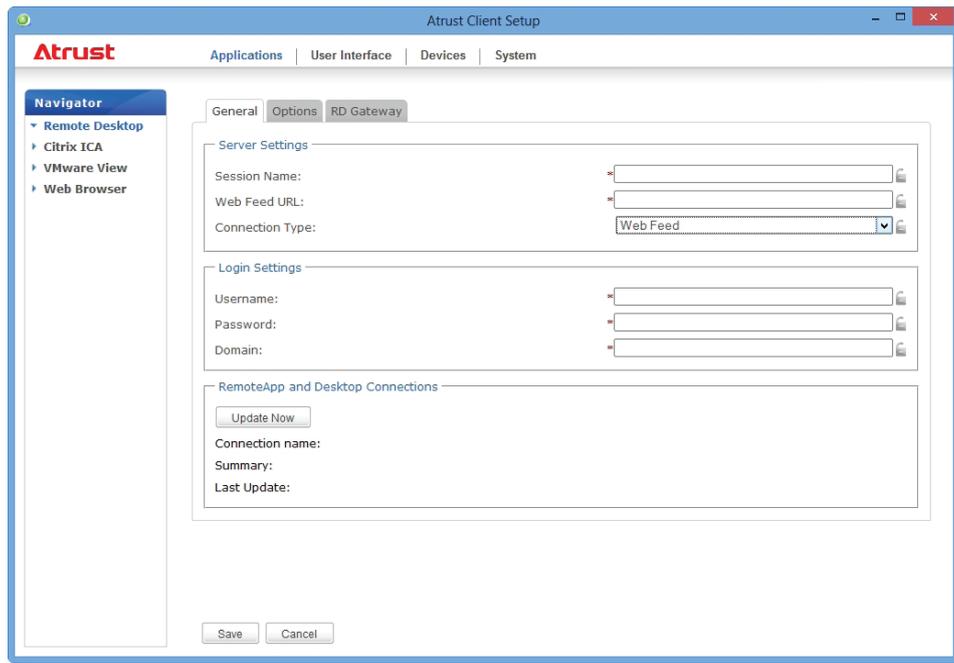

4. On **General** sub-tab, click the Connection Type drop-down menu to select **Web Feed**.
5. Type in the session name, the Web Feed URL through which remote applications is accessible, and your credentials for Web Feed.

 **NOTE**

- The red asterisks indicate the required fields.
- Consult your IT administrator about the appropriate Web Feed URL.

6. Click **Update Now** in the RemoteApp and Desktop Connections section. After completion, the result will be shown as blow in that section.



7. Click **Save** to add this RDP connection entry.
8. The application tiles for Web Feed are automatically created on the Start screen.

 **NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced RDP connection settings for service access. For more information on other available settings, please refer to section "4.5.5 Configuring Advanced RDP Connection Settings" on page 70.

#### 4.5.4 Accessing Remote Desktop Services

##### **Connection Type: Remote Desktop**

To access Remote Desktop services, please do the following:

1. Double click the created (customized) shortcut on the desktop.

 **NOTE**


- You can also access Remote Desktop services through the standard desktop shortcut **Remote Desktop Connection**. For detailed instructions on how to access services via this standard shortcut, please refer to section “3.3 Accessing Microsoft Remote Desktop Services” on page 24.

2. Follow the on-screen instructions and provide required credentials if needed.
3. The desired remote desktop will be displayed on the desktop in full screen (by default).


 **NOTE**

- The connection type of Remote Desktop also allows you to launch **application-only** sessions; only a specific application is launched rather than a full desktop. For details, please refer to “4.5.5 Configuring Advanced RDP Connection Settings” on page 70.


#### Example: Windows MultiPoint Server 2012

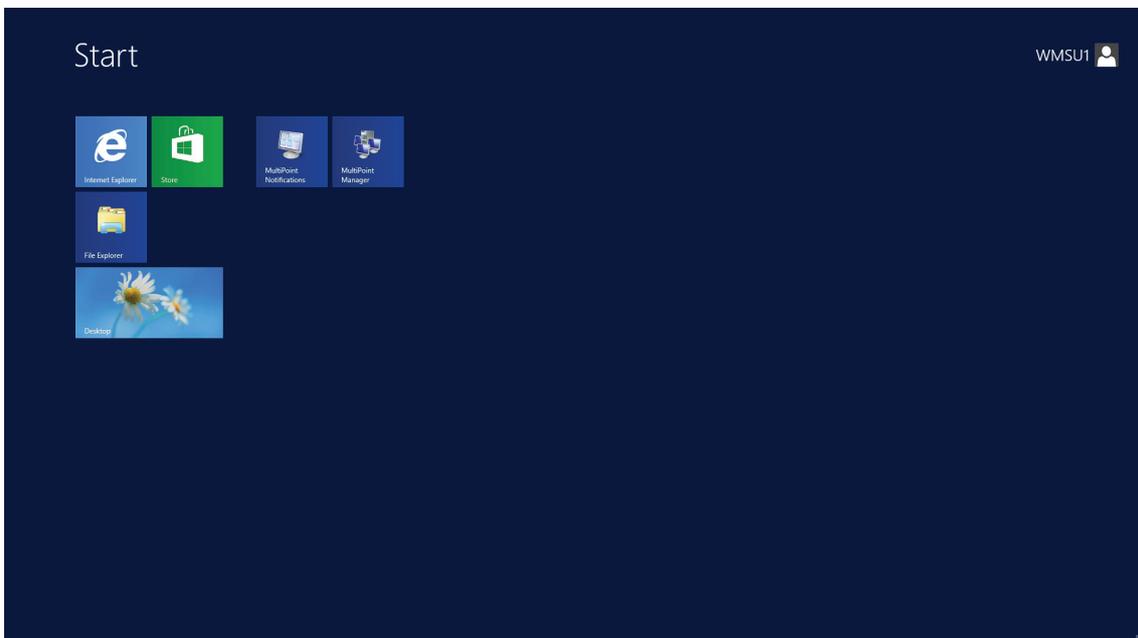

### Example: Windows Server 2012

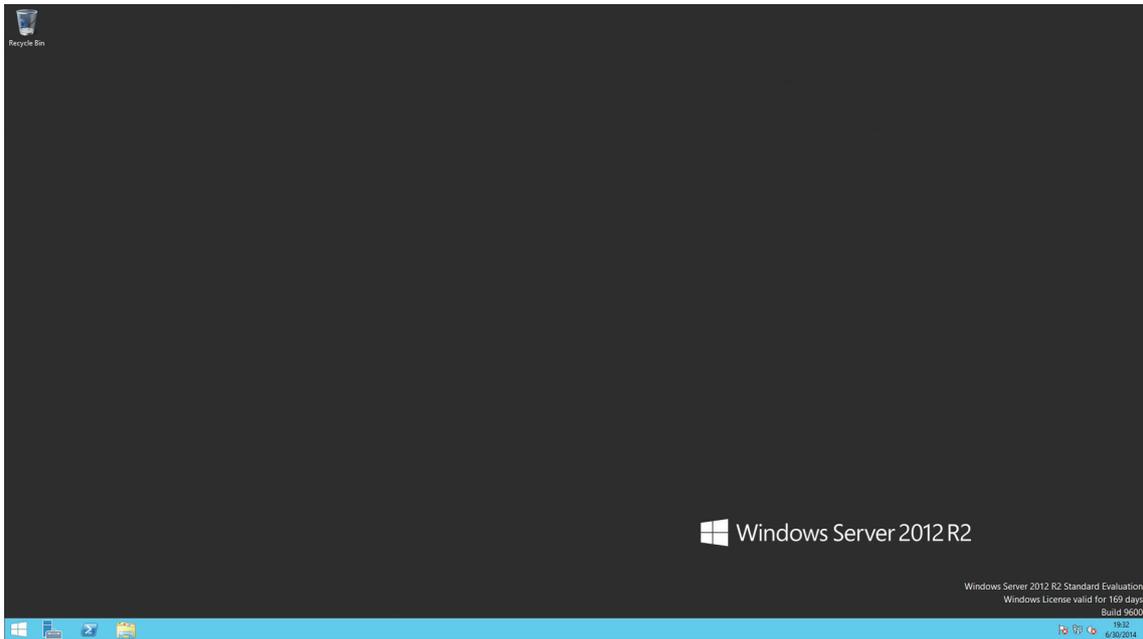


### Example: Windows 8 Enterprise

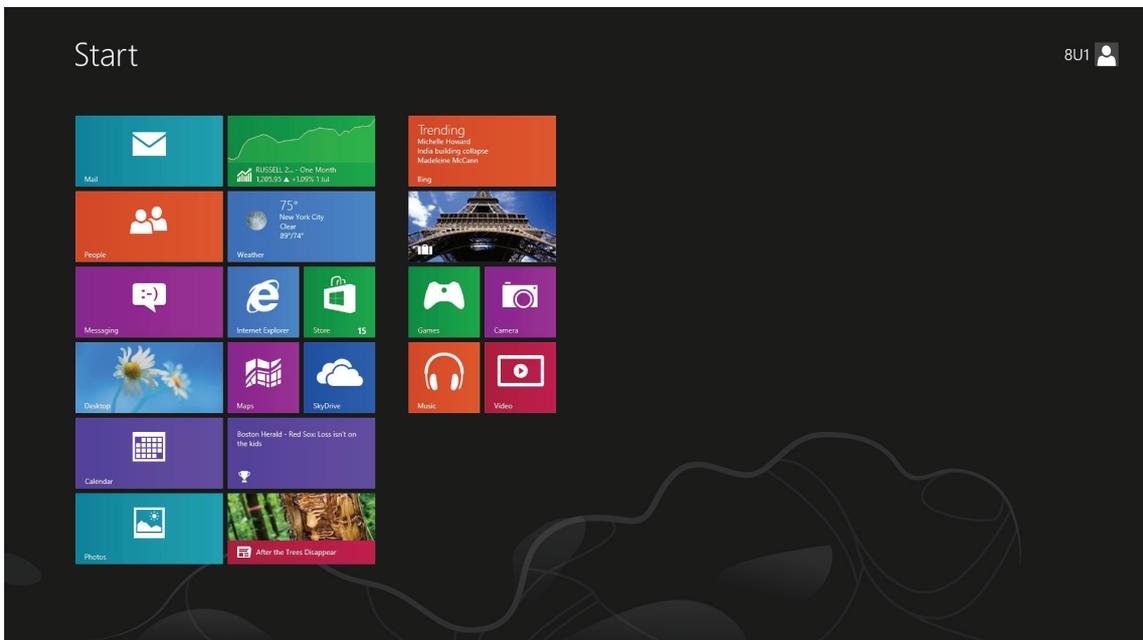

**Connection Type: Remote Web Access**

To access remote applications/desktops, please do the following:

1. Double click the created shortcut on the desktop.
2. A window appears prompting for credentials.


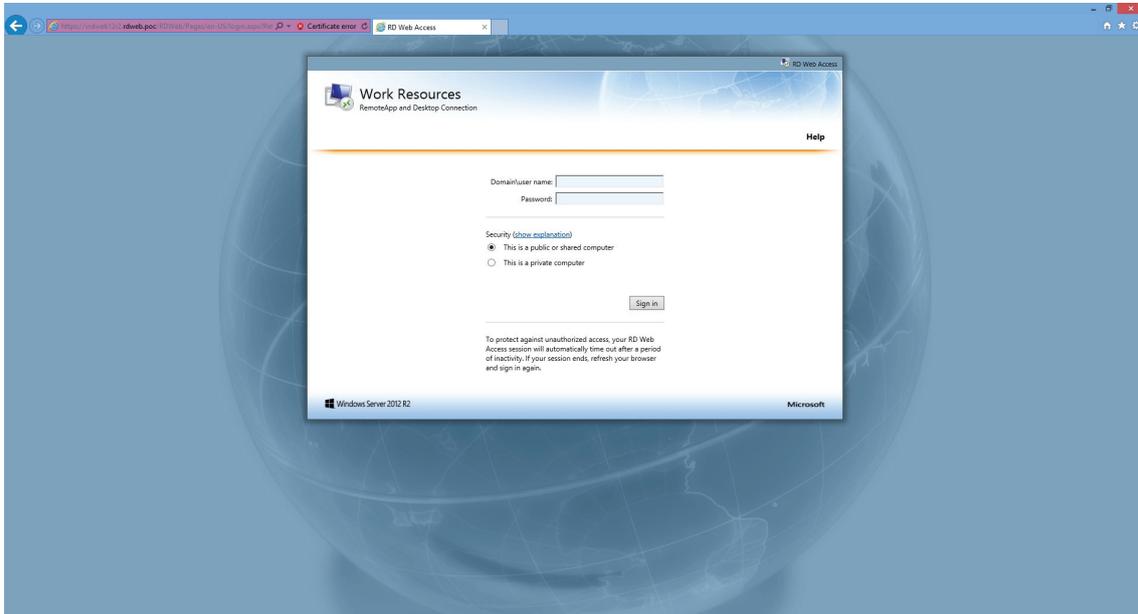


 **NOTE**

- A warning message about security might appear. Consult your IT administrator for details and ensure the connection is secure *first*. To by pass, click **Continue to this website**.
- Click to select **Allow** to enable ActiveX Control when a popup message appears at the bottom of the page.

3. Provide your credentials, and then click **Sign in**.

4. Click to select **RemoteApp and Desktops** or **Connect to a remote PC**.

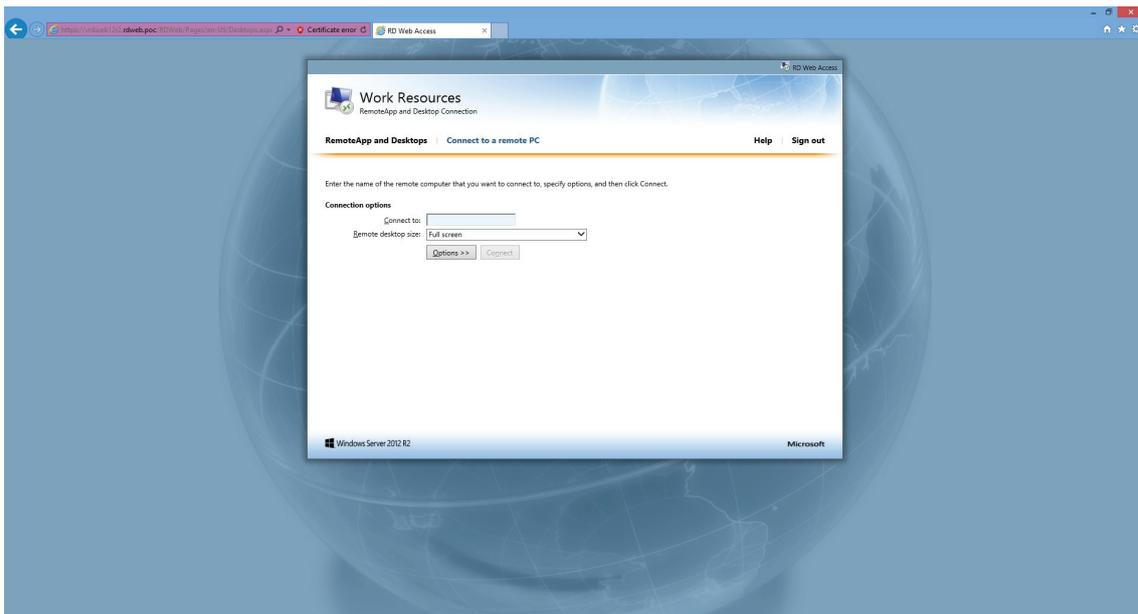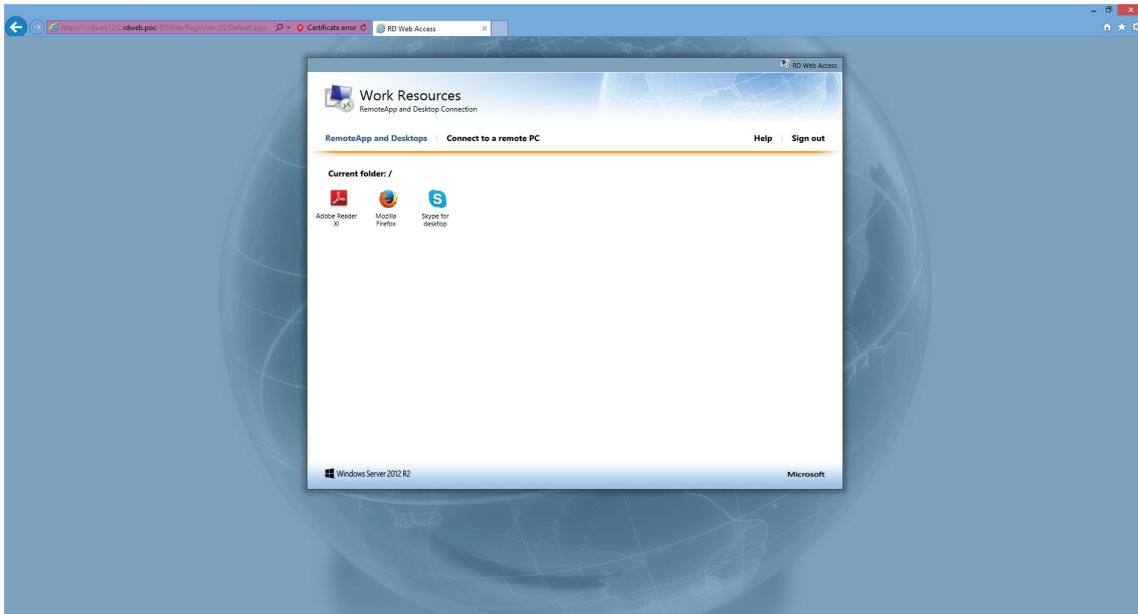


5. Click icons or follow the on-screen instructions to launch applications or desktops.


**Connection Type: Web Feed**

To access remote applications, please do the following:

1. On Start screen, click the application tile to launch an application.

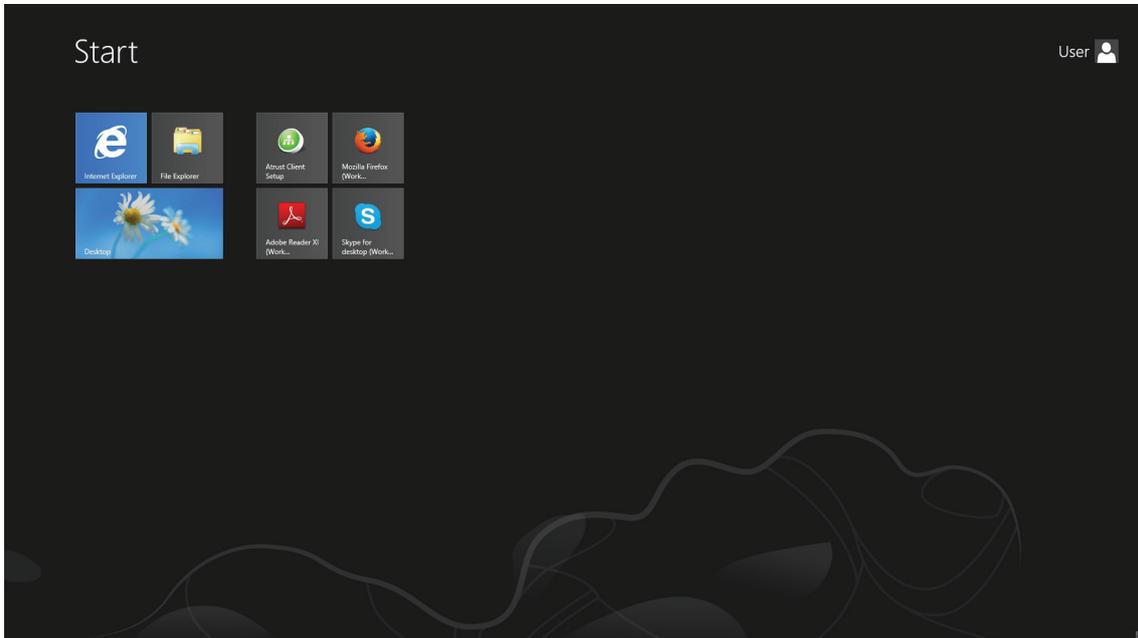

2. The application is opened on the desktop.

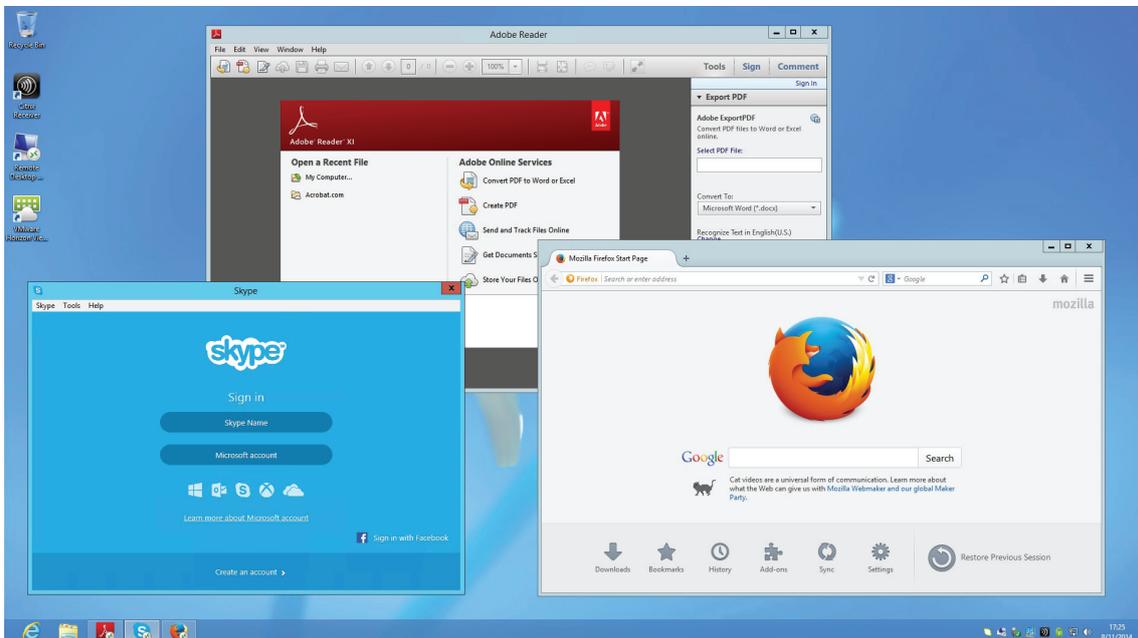

### 4.5.5 Configuring Advanced RDP Connection Settings

The table below provides a description of each setting item for RDP connections. Please see this table to configure advanced settings and customize your mt180W desktop shortcuts or Start screen tiles for service access.

 **NOTE**

- Please note that available settings vary with the selected connection type.

#### Settings for the Connection Type of Remote Desktop

 **NOTE**

- For descriptions of settings for the connection type of Remote Web Access, please refer to “Settings for the Connection Type of Remote Web Access” on page 77.
- For descriptions of settings for the connection type of Web Feed, please refer to “Settings for the Connection Type of Web Feed” on page 79.

#### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for Remote Desktop sessions.								
Sever Address	Type in the computer name or IP address of the server/virtual machine where to deliver a Remote Desktop session.								
Connection Type	<p>This table only provides descriptions for available settings when <b>Remote Desktop</b> is selected.</p> <p>Three connection types are available:</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Remote Desktop</td> <td>Provides access to remote desktops/applications.</td> </tr> <tr> <td>Remote Web Access</td> <td>Provides access to remote desktops/applications through a Web browser (Internet Explorer).</td> </tr> <tr> <td>Web Feed</td> <td>Provides access to remote applications through published Start screen tiles.</td> </tr> </tbody> </table>	Option	Description	Remote Desktop	Provides access to remote desktops/applications.	Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).	Web Feed	Provides access to remote applications through published Start screen tiles.
Option	Description								
Remote Desktop	Provides access to remote desktops/applications.								
Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).								
Web Feed	Provides access to remote applications through published Start screen tiles.								
Connection Quality	Select the setting that best describes the quality of your network connection. Three options are available: <b>Very Fast (LAN)</b> , <b>Fast (Broadband)</b> , and <b>Slow (Modem)</b> .								

Server Authentication	<p>Select what to do next if the client cannot verify the identity of the remote computer. Three options are available: <b>Connect and don't warn me</b>, <b>Warn me</b>, and <b>Do not connect</b>.</p> <table border="1" data-bbox="547 342 1390 584"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Connect and don't warn me</td> <td>Connects anyway without any warning.</td> </tr> <tr> <td>Warn me</td> <td>Warns and allows users to choose whether to connect or not.</td> </tr> <tr> <td>Do not connect</td> <td>Disallows the connection.</td> </tr> </tbody> </table>	Option	Description	Connect and don't warn me	Connects anyway without any warning.	Warn me	Warns and allows users to choose whether to connect or not.	Do not connect	Disallows the connection.		
Option	Description										
Connect and don't warn me	Connects anyway without any warning.										
Warn me	Warns and allows users to choose whether to connect or not.										
Do not connect	Disallows the connection.										
<b>Login Settings</b>											
<b>Item</b>	<b>Description</b>										
Username	Type in the user/account name used for authentication.										
Password	Type in the password of the user account used for authentication.										
Domain	Type in the domain of the server. <b>NOTE:</b> Leave this field blank if the server doesn't belong to any domain.										
<b>Common Settings</b>											
<b>Item</b>	<b>Description</b>										
Autostart When Startup	<p>Select whether to open a Remote Desktop session automatically or not when Windows Embedded starts.</p> <p>If <b>Yes</b> is selected, every time when you log in to the system, the Remote Desktop session will be opened automatically.</p>										
On Application Exit	<p>Select what to do when a Remote Desktop session is ended. Four options are available: <b>Do Nothing</b>, <b>Restart Application</b>, <b>Reboot</b>, and <b>Shutdown</b>.</p> <table border="1" data-bbox="547 1328 1390 1570"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do Nothing</td> <td>Returns to the Windows Embedded desktop.</td> </tr> <tr> <td>Restart Application</td> <td>Opens a Remote Desktop session again.</td> </tr> <tr> <td>Reboot</td> <td>Restarts your thin client.</td> </tr> <tr> <td>Shutdown</td> <td>Turns off your thin client.</td> </tr> </tbody> </table>	Option	Description	Do Nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a Remote Desktop session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
Option	Description										
Do Nothing	Returns to the Windows Embedded desktop.										
Restart Application	Opens a Remote Desktop session again.										
Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.										

Options Sub-tab

Programs									
Item	Description								
Start the following program on connection	<p>Click the drop-down menu to enable/disable the Application mode. You can use this option to select the session type. Two remote session types are available:</p> <ul style="list-style-type: none"> <li>• Remote Desktop (when the Application mode is disabled)</li> <li>• Remote Application (when the Application mode is enabled)</li> </ul> <p><b>NOTE:</b> Remote Application sessions are Remote sessions used to access only specific applications rather than full desktops.</p> <p><b>NOTE:</b> Before you can open a Remote Application session, you need to add the desired application to the RemoteApp Programs list with RemoteApp Manager on the application hosted server. For detailed instructions on how to add a desired application to the RemoteApp Programs list on the server, please visit Microsoft Support website at <a href="http://support.microsoft.com">support.microsoft.com</a>.</p>								
Start in the following folder	<p>Type in the location of the desired application (on the host server) if <b>Start the following program on connection</b> is enabled.</p> <p><b>NOTE:</b> You can type in the location/path of the desired application in this field, and specify only the name of the application in <b>Program path and file name</b> (the next field). Or, you can type in the full path and name of the application in <b>Program path and file name</b>, and leave this field empty.</p>								
Program path and file name	<p>Type in the path and name of the desired application if <b>Start the following program on connection</b> is enabled.</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Remote APP</th> <th style="text-align: left;">Format Example</th> </tr> </thead> <tbody> <tr> <td>Windows Media Player</td> <td>C:\Programs Files (x86)\Windows Media Player\wmplayer.exe</td> </tr> <tr> <td>Adobe Reader X</td> <td>C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32.exe</td> </tr> <tr> <td>Adobe Reader X</td> <td>C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32</td> </tr> </tbody> </table> <p><b>NOTE:</b> the file extension can be omitted.</p>	Remote APP	Format Example	Windows Media Player	C:\Programs Files (x86)\Windows Media Player\wmplayer.exe	Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32.exe	Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32
Remote APP	Format Example								
Windows Media Player	C:\Programs Files (x86)\Windows Media Player\wmplayer.exe								
Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32.exe								
Adobe Reader X	C:\Programs Files (x86)\Adobe\Reader 10.0\Reader\ArcoRd32								
Window Settings									
Item	Description								
Color Depth	<p>Click the drop-down menu to select the desired color depth for a Remote Desktop session. Four options are available: <b>15 Bit</b>, <b>16 Bit</b>, <b>24 Bit</b>, and <b>32 Bit</b>.</p> <p><b>NOTE:</b> If RemoteFX is enabled, then no matter which color depth you choose here, 32 bit per pixel will be applied.</p> <p><b>NOTE:</b> You can configure the upper limit of the color depth for a Remote Desktop session on the host server. In this case, no matter which color depth you choose here, the value cannot exceed the defined limit.</p>								
Resolution	<p>Click the drop-down menu to select the desired display resolution on a Remote Desktop session. Twelve options are available: <b>Fullscreen</b>, <b>1920x1200</b>, <b>1920x1080</b>, <b>1680x1050</b>, <b>1400x1050</b>, <b>1440x900</b>, <b>1280x1024</b>, <b>1280x768</b>, <b>1280x720</b>, <b>1024x768</b>, <b>800x600</b>, and <b>640x480</b>.</p>								

Multi-Monitor	Click the drop-down menu to enable/disable multiple displays in a Remote Desktop session.								
Display the connection bar when I use the full screen	Click the drop-down menu to select if the Connection bar is displayed or not in full-screen mode.								
<b>Connection Settings</b>									
<b>Item</b>	<b>Description</b>								
Printer Mapping	<p>Click the drop-down menu to enable/disable printer mapping.</p> <p>When <b>Enable</b> is selected, users can access a local or network printer in a Remote Desktop session.</p> <p><b>NOTE:</b> You need to add the desired local or network printer(s) for your thin client first, and then enable this feature here to use that printer in a Remote Desktop session.</p> <p><b>NOTE:</b> To add a local or network printer for your Windows Embedded-based thin client, go to Control Panel, click <b>Hardware and Sound &gt; Devices and Printers &gt; Add a printer</b>, and then follow the on-screen instructions to add the desired local or network printer.</p>								
Clipboard Redirection	<p>Click the drop-down menu to enable/disable Clipboard redirection.</p> <p><b>NOTE:</b> When <b>Enable</b> is selected, Clipboard can be used across local and remote desktops (in both directions).</p>								
Smart Card Mapping	<p>Click the drop-down menu to enable/disable smart card mapping.</p> <p>When <b>Enable</b> is selected, users can access smart cards through a smart card reader in a Remote Desktop session.</p>								
Port Mapping	<p>Click the drop-down menu to enable/disable port mapping.</p> <p>When <b>Enable</b> is selected, users can access attached devices using locally available ports, in a Remote Desktop session.</p> <p><b>NOTE:</b> The types and availability of device ports on thin clients may vary, depending on your product models.</p>								
<b>Local Resources Settings</b>									
<b>Item</b>	<b>Description</b>								
Remote Audio Playback	<p>Click the drop-down menu to configure the computer sounds and audio playback setting in a Remote Desktop session. Three options are available: <b>Bring to this computer</b>, <b>Do not play</b>, and <b>Leave at remote computer</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Bring to this computer</td> <td>Allows computer sounds and audio playback in a Remote Desktop session using locally attached audio devices.</td> </tr> <tr> <td>Do not play</td> <td>Disables computer sounds and audio playback in a Remote Desktop session.</td> </tr> <tr> <td>Leave at remote computer</td> <td>Leave computer sounds and audio playback at the remote computer.</td> </tr> </tbody> </table>	Option	Description	Bring to this computer	Allows computer sounds and audio playback in a Remote Desktop session using locally attached audio devices.	Do not play	Disables computer sounds and audio playback in a Remote Desktop session.	Leave at remote computer	Leave computer sounds and audio playback at the remote computer.
Option	Description								
Bring to this computer	Allows computer sounds and audio playback in a Remote Desktop session using locally attached audio devices.								
Do not play	Disables computer sounds and audio playback in a Remote Desktop session.								
Leave at remote computer	Leave computer sounds and audio playback at the remote computer.								

Remote Audio Recording	<p>Click the drop-down menu to configure the audio recording setting in a Remote Desktop session. Two options are available: <b>Recording from this computer</b> and <b>Do not record</b>.</p> <table border="1" data-bbox="547 371 1433 589"> <thead> <tr> <th data-bbox="547 371 890 416">Option</th> <th data-bbox="890 371 1433 416">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="547 416 890 488">Recording from this computer</td> <td data-bbox="890 416 1433 488">Allows audio recording in a Remote Desktop session using locally attached audio devices.</td> </tr> <tr> <td data-bbox="547 488 890 589">Do not record</td> <td data-bbox="890 488 1433 589">Disables audio recording in a Remote Desktop session using locally attached audio devices.</td> </tr> </tbody> </table> <p><b>NOTE:</b> When <b>Leave at remote computer</b> is selected on the drop-down menu of <b>Remote Audio Playback</b>, this setting item will be grayed out.</p>	Option	Description	Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.	Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.
Option	Description						
Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.						
Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.						
Apply Windows key combinations	<p>Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On this computer</b>, <b>On the remote computer</b>, <b>Only when using the full screen</b>.</p>						
Drives	<p>Click the drop-down menu to enable/disable locally attached drives in a Remote Desktop session.</p>						
Supported plug and play devices	<p>Click the drop-down menu to enable/disable the supported plug and play devices in a Remote Desktop session.</p>						

RemoteFX USB redirection

Click to enable/disable locally attached RemoteFX USB devices.

**NOTE:** To use RemoteFX USB devices in remote desktops, you need to configure the policy setting about device redirection to allow RemoteFX USB Device Redirection as well. To do so, please follow the steps below:


1. Log in to your mt180W with an administrative account.
2. Disable UWF (Unified Write Filter) through Atrust Client Setup (See "4.2.9 Configuring UWF (Unified Write Filter)" on page 49).
3. On the **desktop** or **Start screen**, move your mouse to the bottom-right corner. The charms appear.



Charms: Search, Share, Start, Devices, Settings



4. Click **Search** to select the Search charm.
5. Type **group policy** in the Search charm, and then click **Settings**. **Edit group policy** appears on the left.
6. Click to select **Edit group policy**.

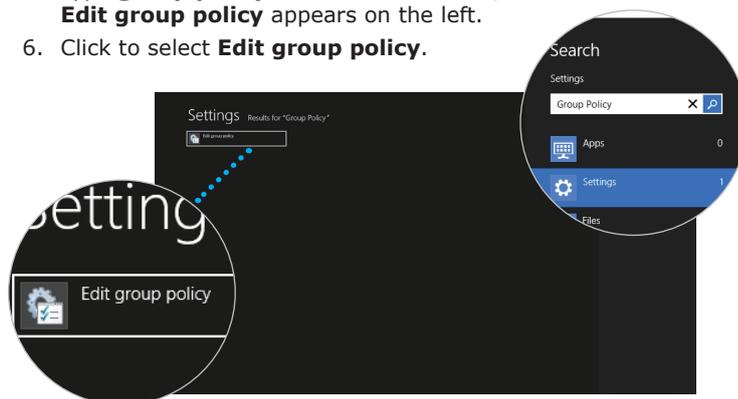

7. On the opened window, select **Computer Configuration > Administrative Templates > Windows Components > Remote Desktop Services > Remote Desktop Connection Client > RemoteFX USB Device Redirection > Allow RDP redirection of other supported RemoteFX USB devices from this computer**.
8. Select **Enabled** and to which users this setting applies: **Administrators Only** or **Administrators and Users**, and then click **OK**.
9. Enable UWF through Atrust Client Setup.

RD Gateway Sub-tab

Connection Settings									
Item	Description								
RD Gateway Server Settings	Click the drop-down menu to choose if a RD Gateway server is used, automatically detected, or manually configured. Three options are available: <b>Automatically detect RD Gateway server settings</b> , <b>Use these RD Gateway server settings</b> , and <b>Do not use an RD Gateway server</b> .								
Server Name	Type the IP address / URL / FQDN of the RD Gateway server. <b>NOTE:</b> Consult your network administrator for details.								
Logon method	Click the drop-down menu to select the logon method. Three options are available: <b>Allow me to select later</b> , <b>Ask for password (NTLM)</b> , and <b>Smart card</b> .								
	<table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Allow me to select later</td> <td>Users can select a logon method while connecting to the server.</td> </tr> <tr> <td>Ask for password (NTLM)</td> <td>Users will be prompted for a password while connecting to the server.</td> </tr> <tr> <td>Smart card</td> <td>Users will be prompted for a smart card while connecting to the server.</td> </tr> </tbody> </table>	Option	Description	Allow me to select later	Users can select a logon method while connecting to the server.	Ask for password (NTLM)	Users will be prompted for a password while connecting to the server.	Smart card	Users will be prompted for a smart card while connecting to the server.
	Option	Description							
	Allow me to select later	Users can select a logon method while connecting to the server.							
Ask for password (NTLM)	Users will be prompted for a password while connecting to the server.								
Smart card	Users will be prompted for a smart card while connecting to the server.								
Bypass RD Gateway server for local addresses	Check to prevent traffic to and from local network addresses from being routed through the RD Gateway server and make a connection faster.								
Logon Settings									
Item	Description								
Use my RD Gateway credentials for the remote computer	Check to use the same set of credentials for authenticating to both the RD Gateway server and the remote computer.								

**Settings for the Connection Type of Remote Web Access**

 **NOTE**

- For descriptions of settings for the connection type of Remote Desktop, please refer to “Settings for the Connection Type of Remote Desktop” on page 70.
- For descriptions of settings for the connection type of Web Feed, please refer to “Settings for the Connection Type of Web Feed” on page 79.

**General** Sub-tab

Server Settings											
Item	Description										
Session Name	Type in the name for Remote Web Access sessions.										
Connection URL	Type in the connection URL through which RD Web Access is available.										
Connection Type	<p>This table only provides descriptions for available settings when <b>Remote Web Access</b> is selected.</p> <p>Three connection types are available:</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Remote Desktop</td> <td>Provides access to remote desktops/applications.</td> </tr> <tr> <td>Remote Web Access</td> <td>Provides access to remote desktops/applications through a Web browser (Internet Explorer).</td> </tr> <tr> <td>Web Feed</td> <td>Provides access to remote applications through published Start screen tiles.</td> </tr> </tbody> </table>	Option	Description	Remote Desktop	Provides access to remote desktops/applications.	Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).	Web Feed	Provides access to remote applications through published Start screen tiles.		
Option	Description										
Remote Desktop	Provides access to remote desktops/applications.										
Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).										
Web Feed	Provides access to remote applications through published Start screen tiles.										
Common Settings											
Item	Description										
Autostart When Startup	<p>Select whether to open a Remote Desktop session automatically or not when Windows Embedded starts.</p> <p>If <b>Yes</b> is selected, every time when you log in to the system, the Remote Desktop session will be opened automatically.</p>										
On Application Exit	<p>Select what to do when a Remote Desktop session is ended. Four options are available: <b>Do Nothing</b>, <b>Restart Application</b>, <b>Reboot</b>, and <b>Shutdown</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do Nothing</td> <td>Returns to the Windows Embedded desktop.</td> </tr> <tr> <td>Restart Application</td> <td>Opens a Remote Desktop session again.</td> </tr> <tr> <td>Reboot</td> <td>Restarts your thin client.</td> </tr> <tr> <td>Shutdown</td> <td>Turns off your thin client.</td> </tr> </tbody> </table>	Option	Description	Do Nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a Remote Desktop session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
Option	Description										
Do Nothing	Returns to the Windows Embedded desktop.										
Restart Application	Opens a Remote Desktop session again.										
Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.										

### Options Sub-tab



#### NOTE

- No options are available under the **Options** sub-tab in the connection type of Remote Web Access.

### RD Gateway Sub-tab



#### NOTE

- No options are available under the **RD Gateway** sub-tab in the connection type of Remote Web Access.

### Settings for the Connection Type of Web Feed

 **NOTE**

- For descriptions of settings for the connection type of Remote Desktop, please refer to “Settings for the Connection Type of Remote Desktop” on page 70.
- For descriptions of settings for the connection type of Remote Web Access, please refer to “Settings for the Connection Type of Remote Web Access” on page 77.

#### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for Web Feed sessions.								
Web Feed URL	Type in the URL through which RD Web Feed is accessible.								
Connection Type	<p>This table only provides descriptions for available settings when <b>Web Feed</b> is selected.</p> <p>Three connection types are available:</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Remote Desktop</td> <td>Provides access to remote desktops/applications.</td> </tr> <tr> <td>Remote Web Access</td> <td>Provides access to remote desktops/applications through a Web browser (Internet Explorer).</td> </tr> <tr> <td>Web Feed</td> <td>Provides access to remote applications through published Start screen tiles.</td> </tr> </tbody> </table>	Option	Description	Remote Desktop	Provides access to remote desktops/applications.	Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).	Web Feed	Provides access to remote applications through published Start screen tiles.
Option	Description								
Remote Desktop	Provides access to remote desktops/applications.								
Remote Web Access	Provides access to remote desktops/applications through a Web browser (Internet Explorer).								
Web Feed	Provides access to remote applications through published Start screen tiles.								
Login Settings									
Item	Description								
Username	Type in the user/account name used for authentication.								
Password	Type in the password of the user account used for authentication.								
Domain	Type in the domain of the server. <b>NOTE:</b> Leave this field blank if the server doesn't belong to any domain.								
RemoteApp and Desktop Connection									
Item	Description								
Update Now	Click to fetch and update the published applications list from the server.								

**Options** Sub-tab

<b>Window Settings</b>	
<b>Item</b>	<b>Description</b>
Color Depth	<p>Click the drop-down menu to select the desired color depth for a Remote Desktop session. Four options are available: <b>15 Bit</b>, <b>16 Bit</b>, <b>24 Bit</b>, and <b>32 Bit</b>.</p> <p><b>NOTE:</b> If RemoteFX is enabled, then no matter which color depth you choose here, 32 bit per pixel will be applied.</p> <p><b>NOTE:</b> You can configure the upper limit of the color depth for a Remote Desktop session on the host server. In this case, no matter which color depth you choose here, the value cannot exceed the defined limit.</p>
Resolution	<p>Click the drop-down menu to select the desired display resolution on a Remote Desktop session. Twelve options are available: <b>Fullscreen</b>, <b>1920x1200</b>, <b>1920x1080</b>, <b>1680x1050</b>, <b>1400x1050</b>, <b>1440x900</b>, <b>1280x1024</b>, <b>1280x768</b>, <b>1280x720</b>, <b>1024x768</b>, <b>800x600</b>, and <b>640x480</b>.</p>
Multi-Monitor	<p>Click the drop-down menu to enable/disable multiple displays in a Remote Desktop session.</p>
Display the connection bar when I use the full screen	<p>Click the drop-down menu to select if the Connection bar is displayed or not in full-screen mode.</p>
<b>Local Resources Settings</b>	
<b>Item</b>	<b>Description</b>
Apply Windows key combinations	<p>Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On this computer</b>, <b>On the remote computer</b>, <b>Only when using the full screen</b>.</p>

RemoteFX USB redirection

Click to enable/disable locally attached RemoteFX USB devices.

**NOTE:** To use RemoteFX USB devices in remote desktops, you need to configure the policy setting about device redirection to allow RemoteFX USB Device Redirection as well. To do so, please follow the steps below:


1. Log in to your mt180W with an administrative account.
2. Disable UWF (Unified Write Filter) through Atrust Client Setup (See "4.2.9 Configuring UWF (Unified Write Filter)" on page 49).
3. On the **desktop** or **Start screen**, move your mouse to the bottom-right corner. The charms appear.



Charms: Search, Share, Start, Devices, Settings



4. Click **Search** to select the Search charm.
5. Type **group policy** in the Search charm, and then click **Settings**. **Edit group policy** appears on the left.
6. Click to select **Edit group policy**.

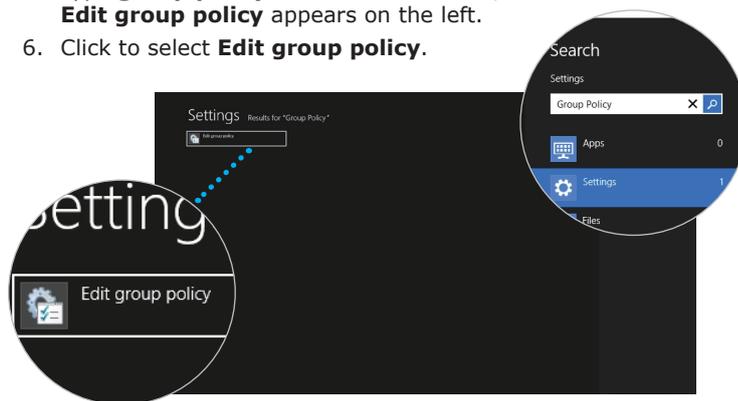

7. On the opened window, select **Computer Configuration > Administrative Templates > Windows Components > Remote Desktop Services > Remote Desktop Connection Client > RemoteFX USB Device Redirection > Allow RDP redirection of other supported RemoteFX USB devices from this computer**.
8. Select **Enabled** and to which users this setting applies: **Administrators Only** or **Administrators and Users**, and then click **OK**.
9. Enable UWF through Atrust Client Setup.

### RD Gateway Sub-tab



**NOTE**

- No options are available under the **RD Gateway** sub-tab in the connection type of Remote Web Access.

### 4.5.6 Configuring Basic ICA Connection Settings

The **Citrix ICA** setting allows you to configure ICA connections for Citrix services and create shortcuts on the local desktop for service access. You can access virtual desktops and applications for work simply through these shortcuts.

 **NOTE**

- For more information on Citrix desktop virtualization solutions, please visit Citrix website at [www.citrix.com](http://www.citrix.com) or Citrix Knowledge Center at [support.citrix.com](http://support.citrix.com).


 **NOTE**

- You can also access Citrix services through the Internet Explorer or the standard desktop shortcut **Citrix Receiver**. For detailed instructions on how to access services via this standard desktop shortcut, please refer to section “3.2 Accessing Citrix Services” on page 18.
- The following topics in this section will guide you through the steps of creating and customizing your own service access shortcuts on the desktop and Start menu.
- To configure connection settings for *Citrix VDI-in-a-Box*, you can choose **Web Logon** or **XenDesktop** connection type.

#### **Connection Type: Web Logon**

To quickly configure ICA connection settings for the connection type of Web Logon, please do the following:

1. On Atrust Client Setup, click **Applications > Citrix ICA**.
2. The available ICA Connection list appears in the Configuration area.

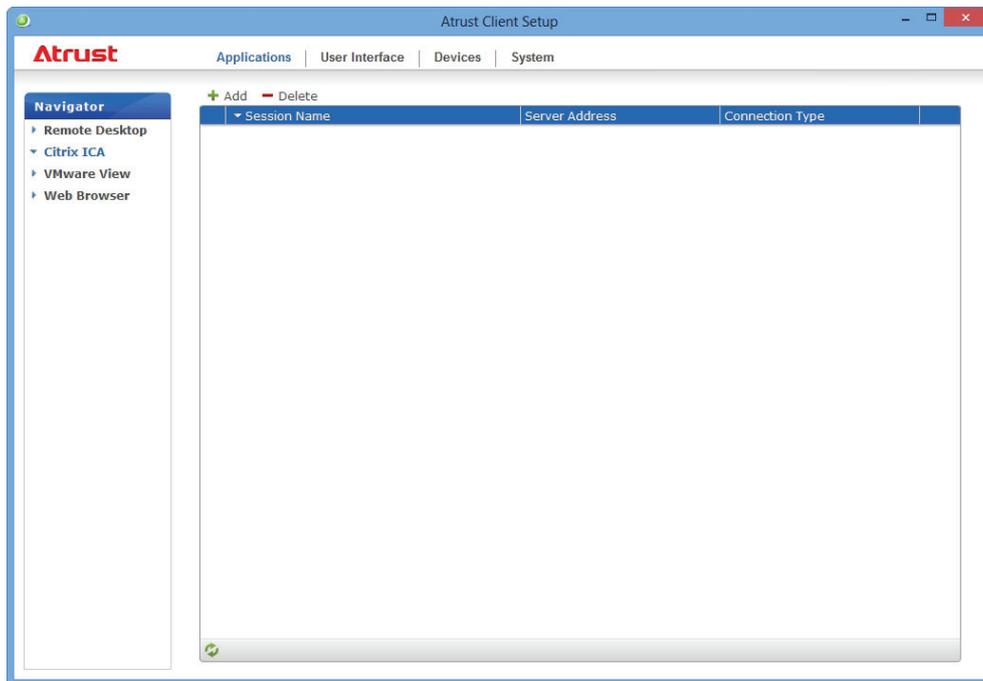




**NOTE**

- If you haven't create any entry, the ICA Connection list will be empty.

3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.
4. On **General** sub-tab, leave the connection type as **Web Logon** as default, and then type in the desired session name and the IP address / URL / FQDN of the server through which Citrix services are accessible under the Server Settings section.

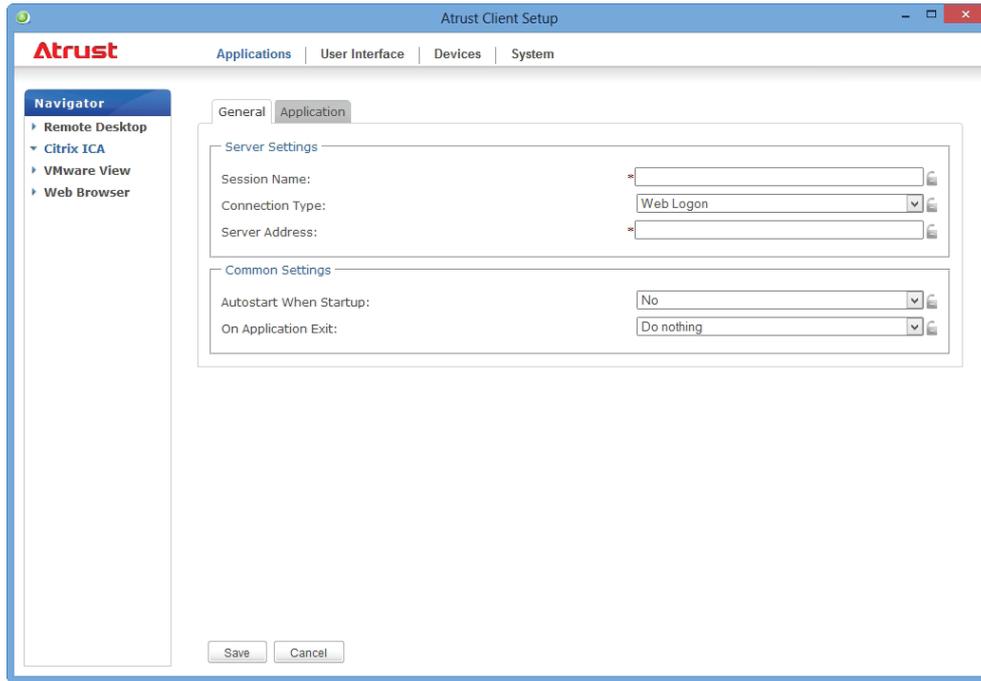

**NOTE**

- The applicable or best suitable information type of the server side may vary with your Citrix environment. Consult your IT administrator for more information.

5. Click **Save** to add this ICA connection entry. The access shortcut will be created automatically on the desktop.




**NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.5.8 Configuring Advanced ICA Connection Settings" on page 98.

**Connection Type: XenDesktop**

To quickly configure ICA connection settings for the connection type of XenDesktop, please do the following:


1. On Atrust Client Setup, click **Applications > Citrix ICA**.
2. The available ICA Connection list appears in the Configuration area.

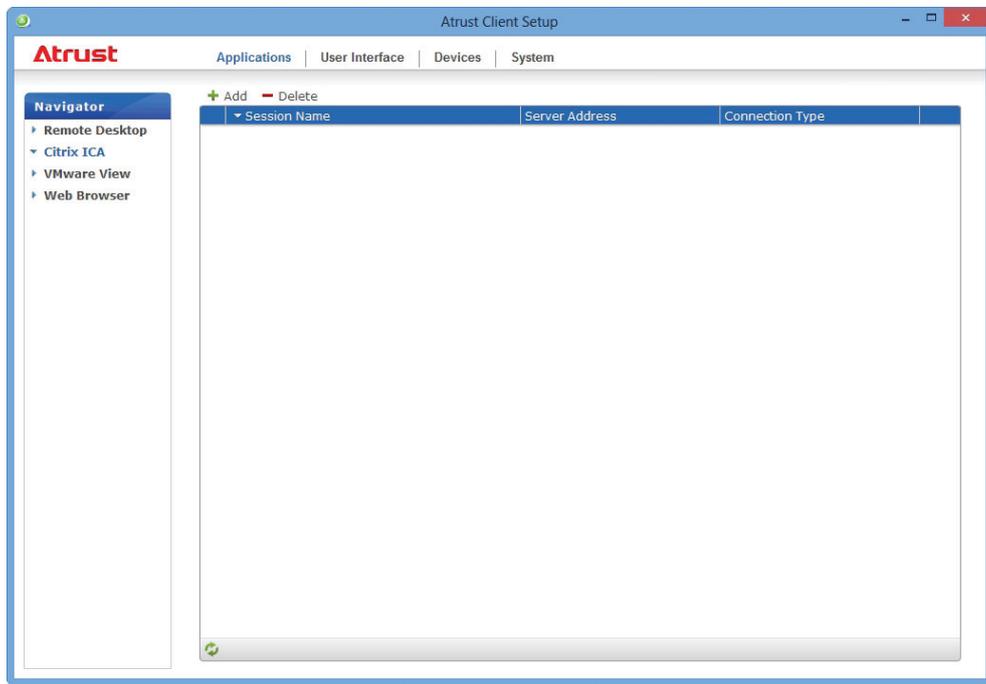

 **NOTE**

- If you haven't create any entry, the ICA Connection list will be empty.

3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.
4. On **General** sub-tab, click the Connection Type drop-down menu to select **XenDesktop**.

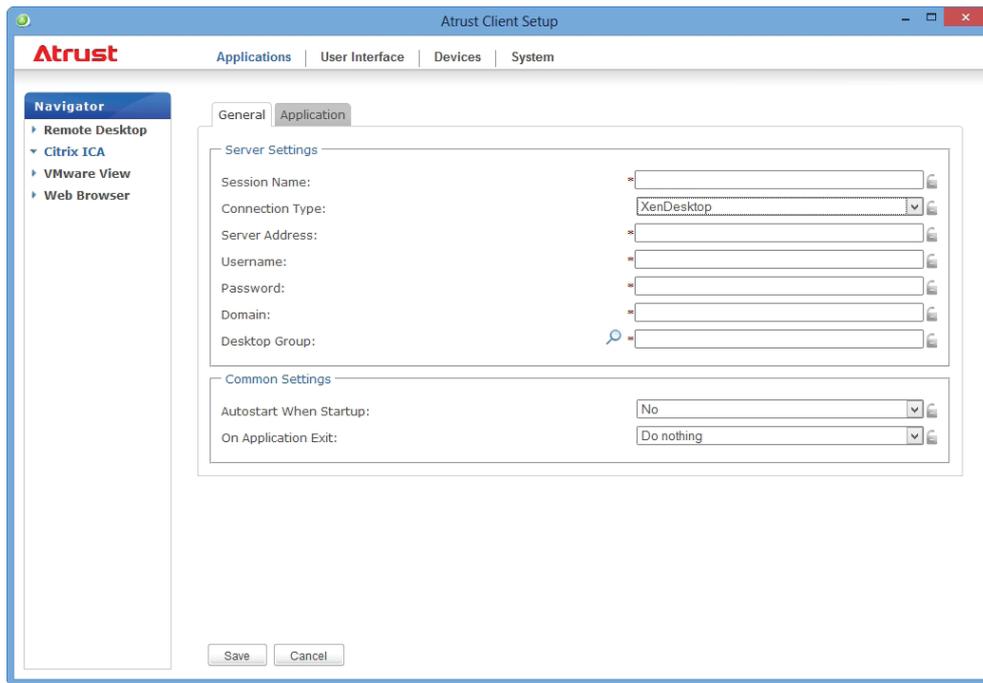


5. Type the session name, the IP address / FQDN of the server through which XenDesktop is accessible, user credentials, the domain of the server, and then click the Search icon  to discover available desktop groups.

 **NOTE**

- The applicable or best suitable information type of the server side may vary with your Citrix environment. Consult your IT administrator for more information.
- The Search icon works only when required data (fields marked with a red asterisk) have been provided.

6. Upon completion, the Search Dialog window appears for you to select the desktop group. Click the drop-down menu to select the desired desktop group, and then click **Select** to confirm.

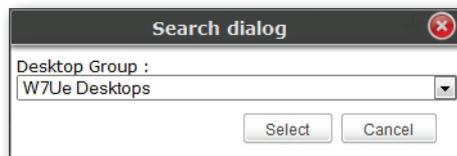

7. The selected desktop group name automatically appears in the Desktop Group field.
8. Click **Save** to confirm. The access shortcut will be created automatically on the desktop.


 **NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.5.8 Configuring Advanced ICA Connection Settings" on page 98.

**Connection Type: XenApp**

To quickly configure ICA connection settings for the connection type of XenApp, please do the following:


1. On Atrust Client Setup, click **Applications > Citrix ICA**.
2. The available ICA Connection list appears in the Configuration area.

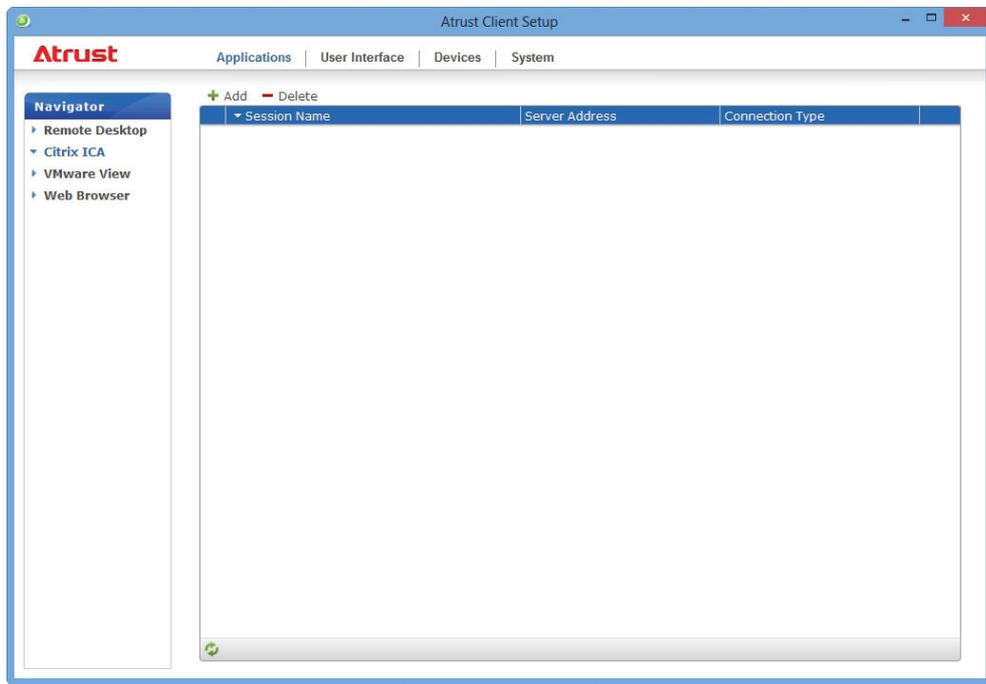

 **NOTE**

- If you haven't create any entry, the ICA Connection list will be empty.

3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.
4. On **General** sub-tab, click the Connection Type drop-down menu to select **XenApp**.

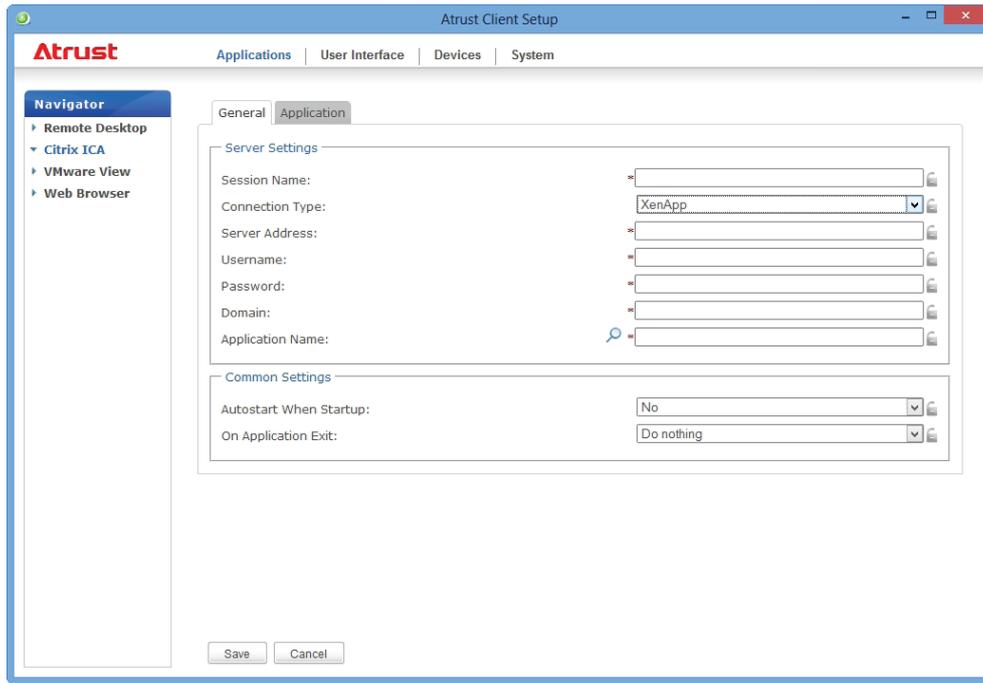

5. Type the session name, the IP address / FQDN of the server through which XenApp is accessible, user credentials, the domain of the server, and then click the Search icon  to discover available applications.

 **NOTE**

- The applicable or best suitable information type of the server side may vary with your Citrix environment. Consult your IT administrator for more information.
- The Search icon works only when required data (fields marked with a red asterisk) have been provided. If your XenApp server doesn't belong to any domain, just type its computer name in the Domain field.

6. Upon completion, the Search Dialog window appears for you to select the application. Click the drop-down menu to select the desired application, and then click **Select** to confirm.



7. The selected application name automatically appears in the Application Name field.
8. Click **Save** to confirm. The access shortcut will be created automatically on the desktop.


 **NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.5.8 Configuring Advanced ICA Connection Settings" on page 98.

**Connection Type: Server Connection**

To quickly configure ICA connection settings for the connection type of Server Connection, please do the following:


1. On Atrust Client Setup, click **Applications > Citrix ICA**.
2. The available ICA Connection list appears in the Configuration area.

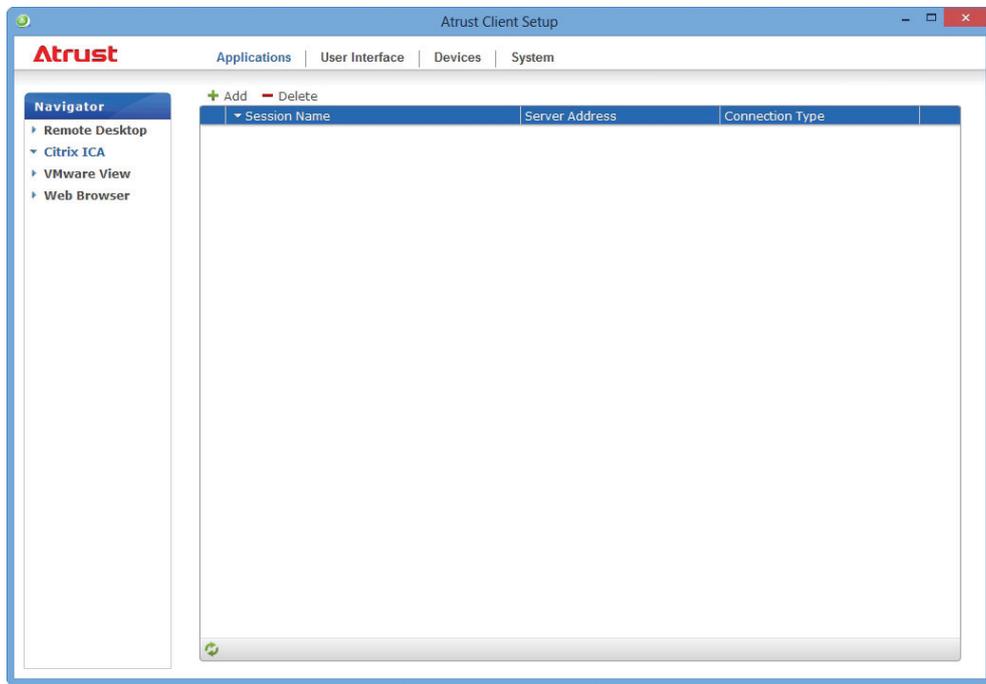

 **NOTE**

- If you haven't create any entry, the ICA Connection list will be empty.

3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.
4. On **General** sub-tab, click the Connection Type drop-down menu to select **Server Connection**.

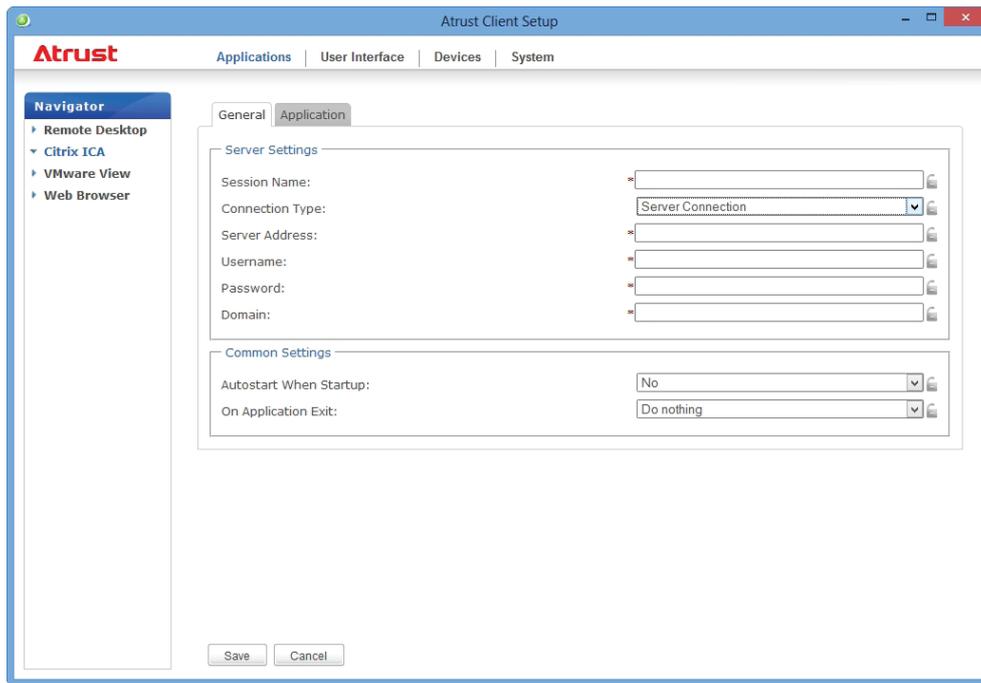

5. Type the session name, the IP address / FQDN of the server, user credentials, and the domain of the server.

 **NOTE**

- The applicable or best suitable information type of the server side may vary with your Citrix environment. Consult your IT administrator for more information.
- Only connections to XenApp servers are supported by this connection type.

6. Click **Save** to confirm. The access shortcut will be created automatically on the desktop.

 **NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.5.8 Configuring Advanced ICA Connection Settings" on page 98.

### 4.5.7 Accessing Citrix Services

#### **For Connection Types of XenDesktop, XenApp, and Server Connection**

To access Citrix services, please do the following:

1. Double click the created (customized) shortcut on the desktop.

 **NOTE**

- You can also access Citrix services through the standard desktop shortcut **Citrix Receiver**. For details on how to access services via the standard desktop shortcut, please refer to section "3.2 Accessing Citrix Services" on page 18.

2. The desired application or desktop is displayed on the screen.

#### **For Connection Types of Web Logon**

To access Citrix services, please do the following:


1. Double click the created (customized) shortcut on the desktop.

 **NOTE**


- You can also access Citrix services through the standard desktop shortcut **Citrix Receiver**. For details on how to access services via the standard desktop shortcut, please refer to section "3.2 Accessing Citrix Services" on page 18.

2. The Web browser is launched with the Citrix Logon screen.


### Logon Screen Example: XenApp 6.5 Platinum

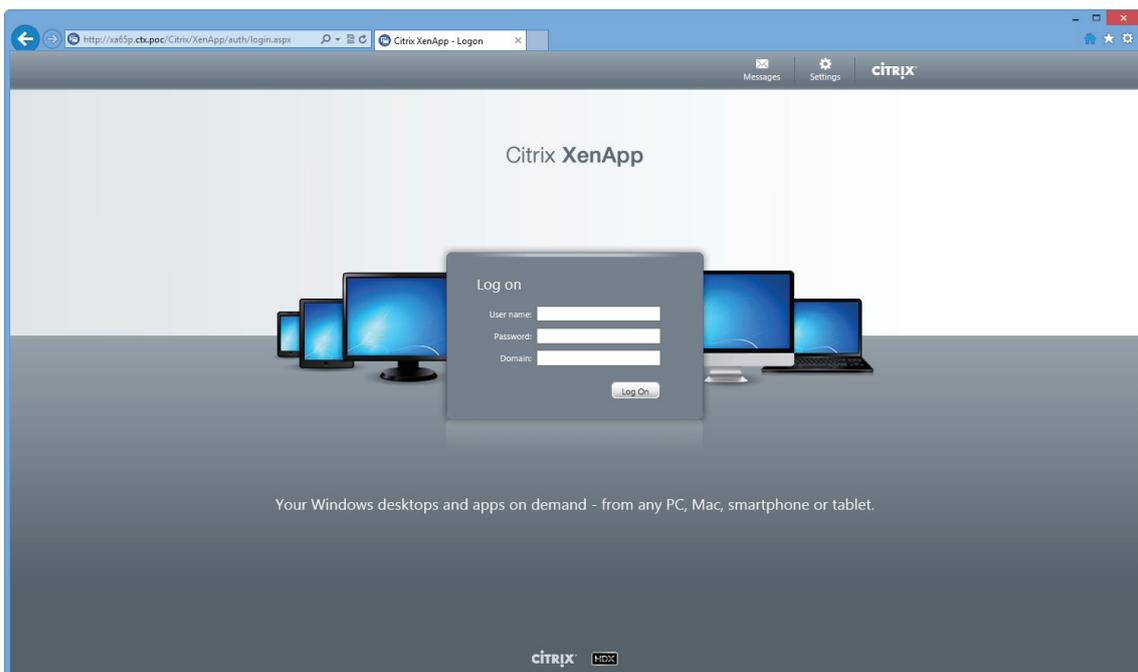

### Logon Screen Example: XenDesktop 5.6 Platinum

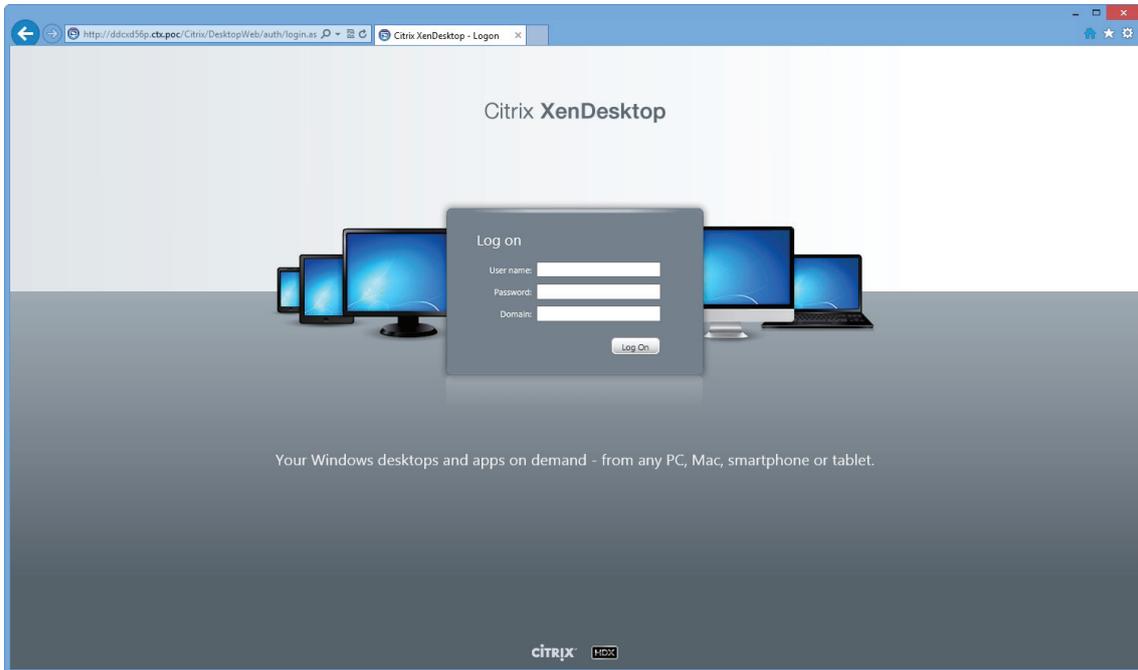

### Logon Screen Example: XenApp and XenDesktop 7.5 Platinum

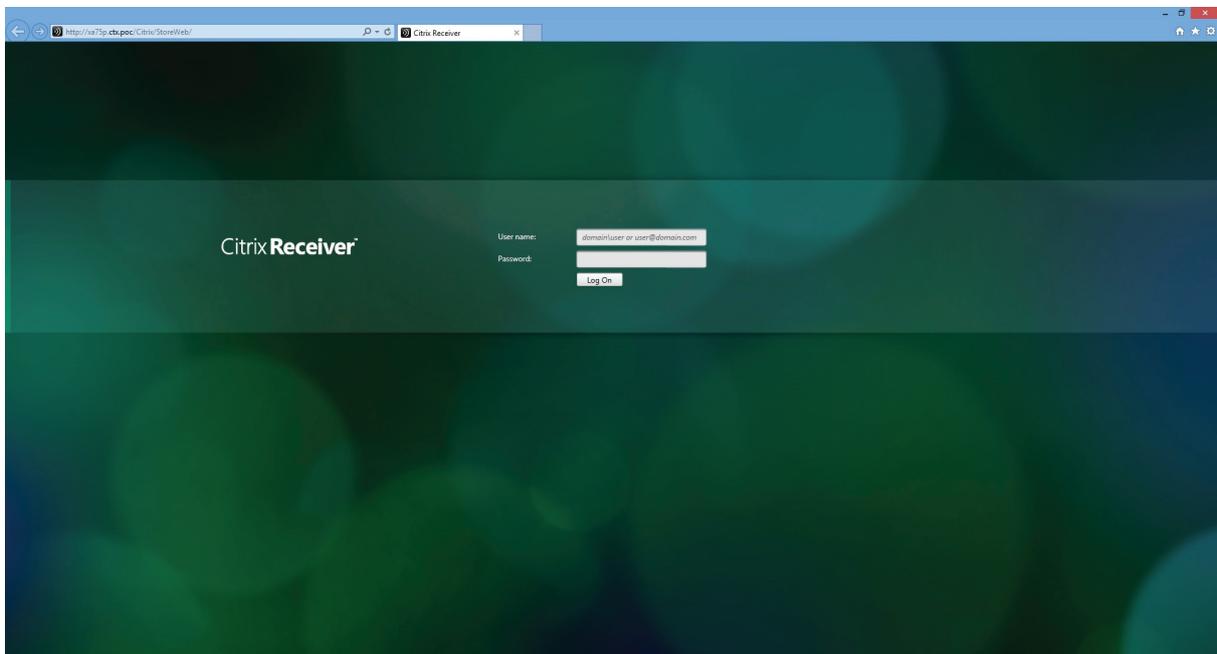


3. Type in the required credentials and domain name, and then click **Log On**.

 **NOTE**


- If your service-hosted server doesn't belong to any domain, type in the server name instead if required.

4. Click to select the desired application(s) or desktop(s).


### Screen for On-Demand Applications: XenApp 6.5 Platinum

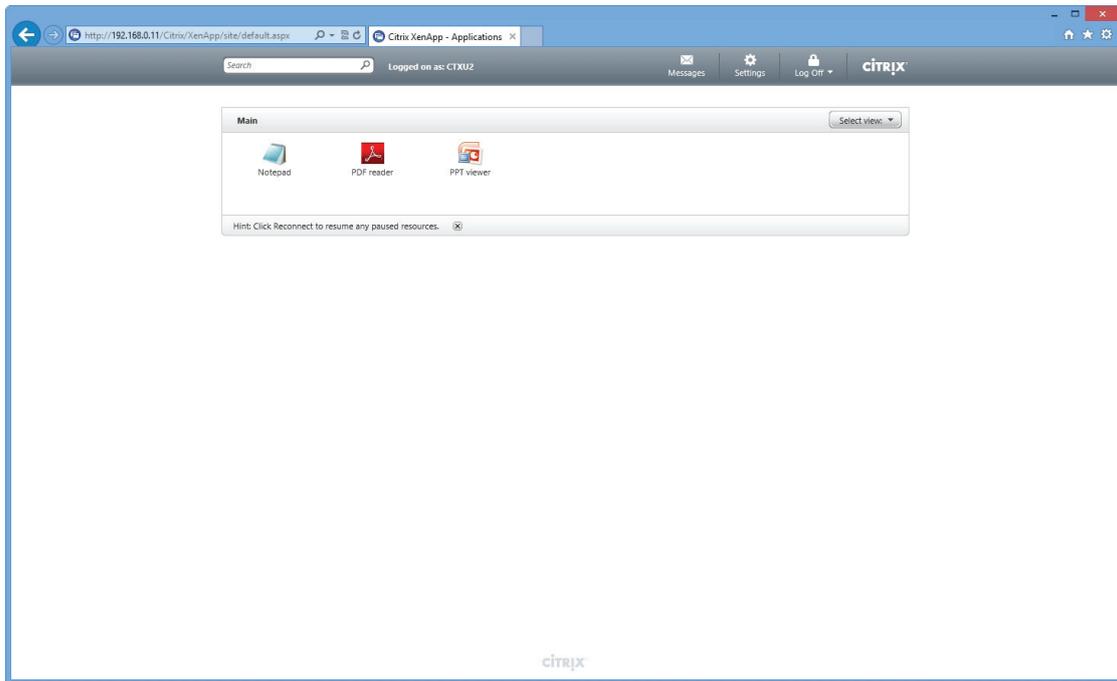


### Screen for On-Demand Desktops: XenDesktop 5.6 Platinum

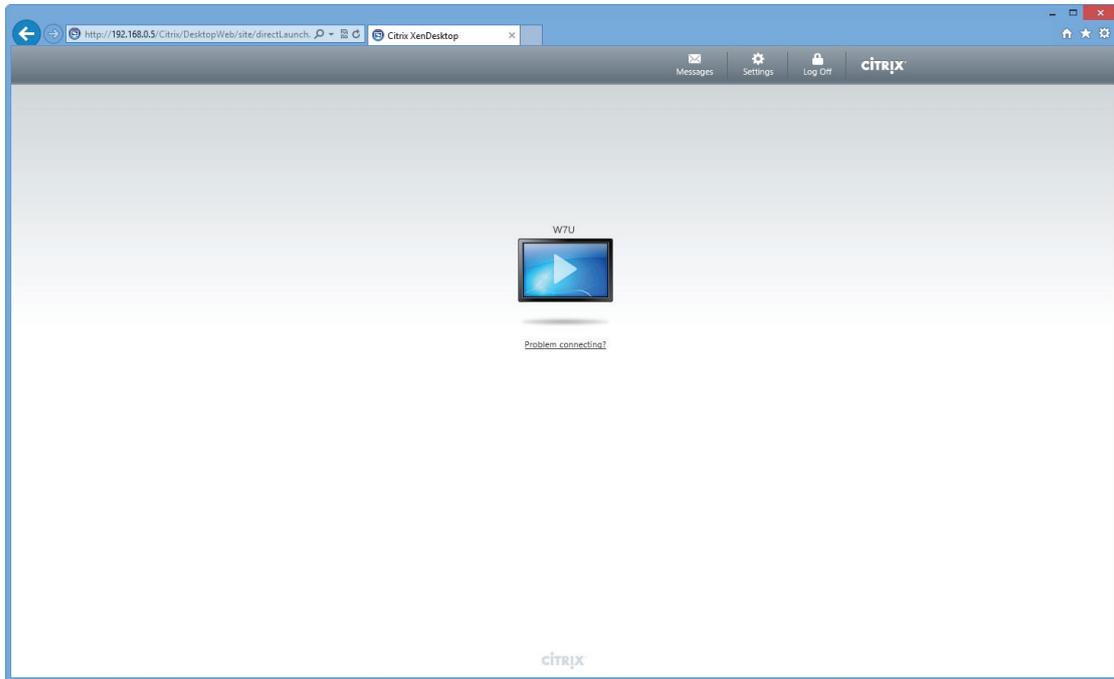

### Screen for On-Demand Applications: XenApp 7.5 Platinum

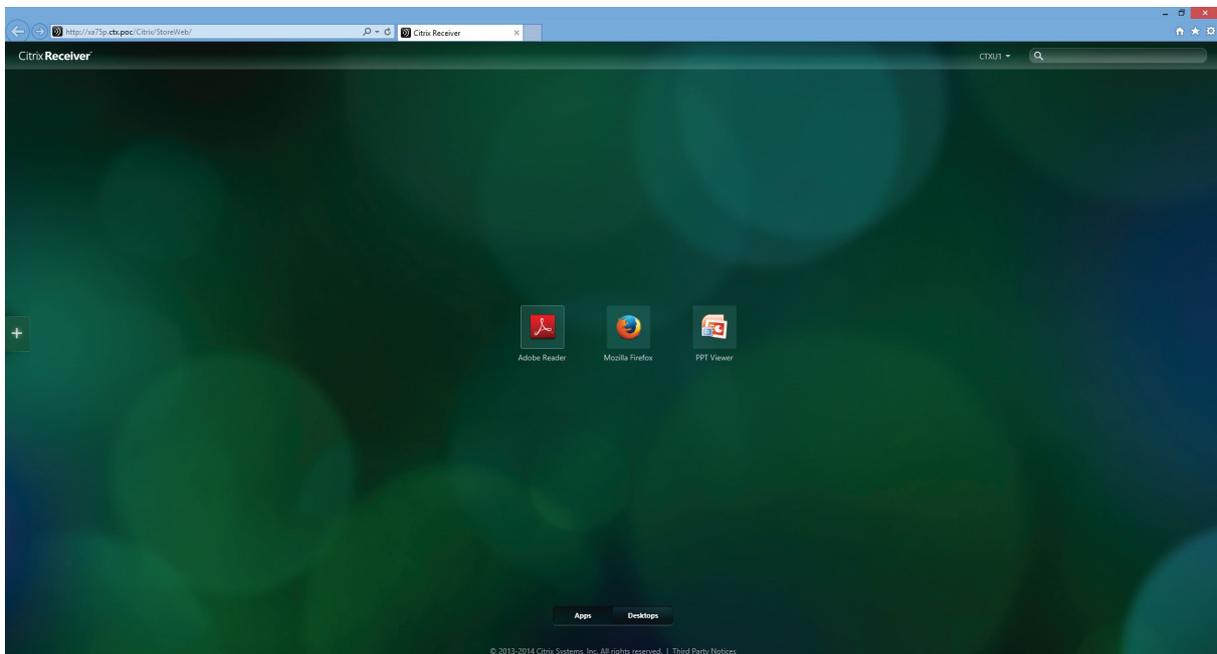


## Screen for On-Demand Desktops: XenDesktop 7.5 Platinum

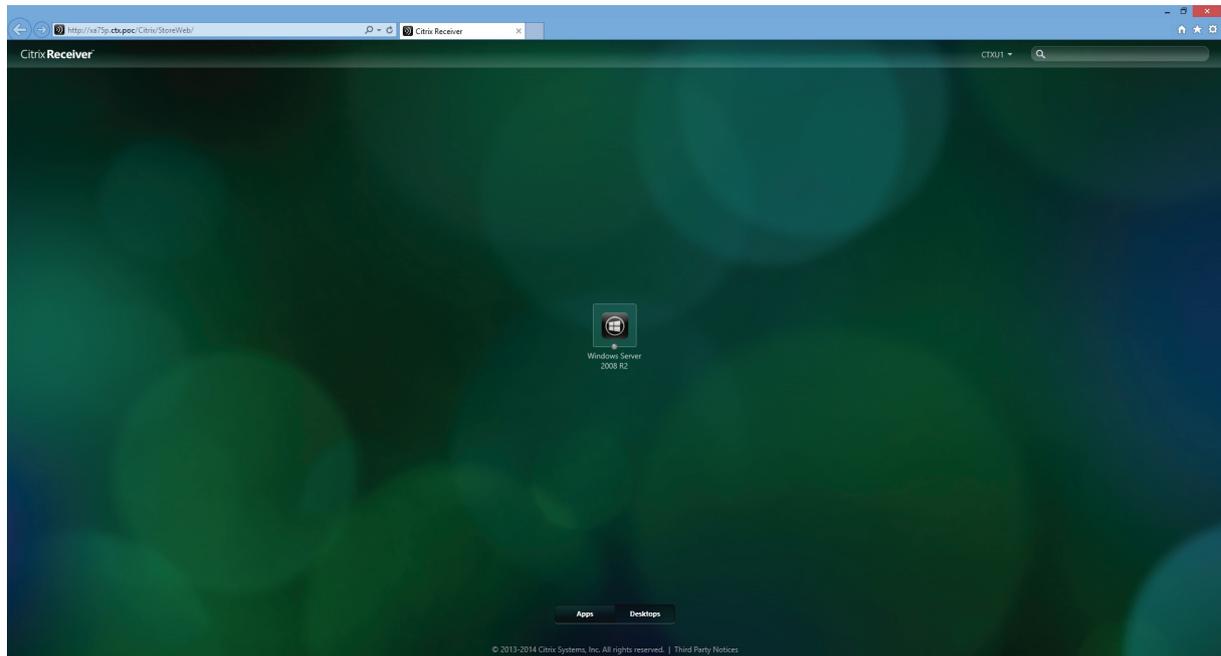


5. The selected application(s) or desktop(s) will be displayed on the screen.


## Example: Desktop Delivered by XenDesktop 5.6 Platinum Windows 7 Ultimate

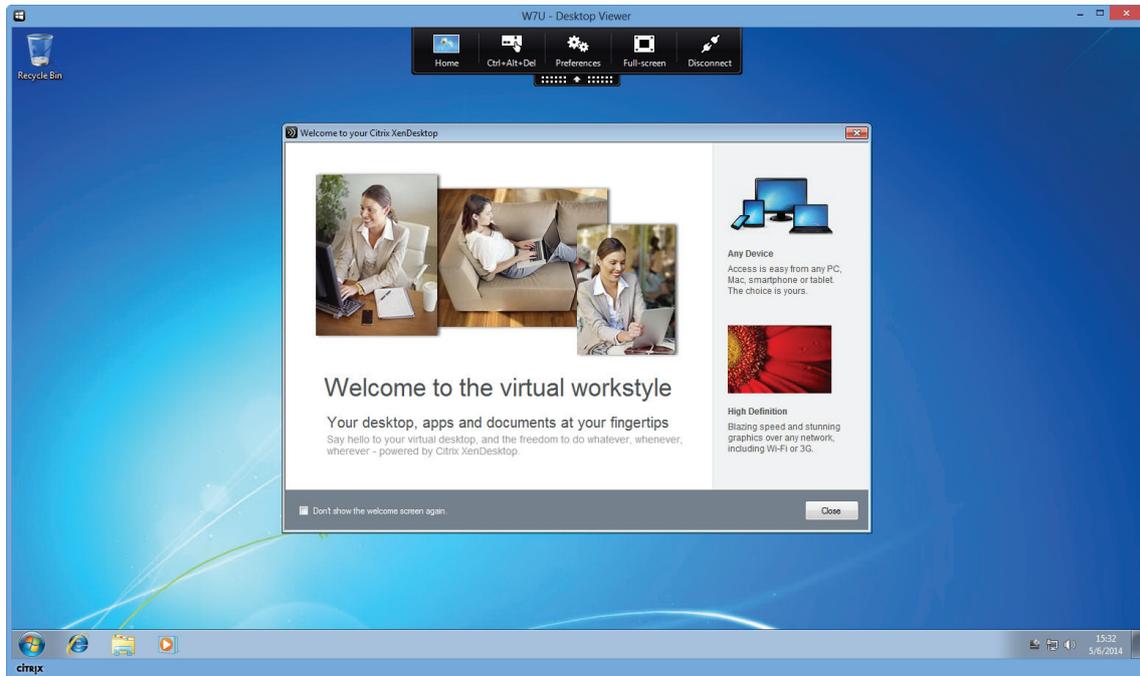


### Example: Desktop Delivered by XenDesktop 7.5 Platinum Windows Server 2008 R2

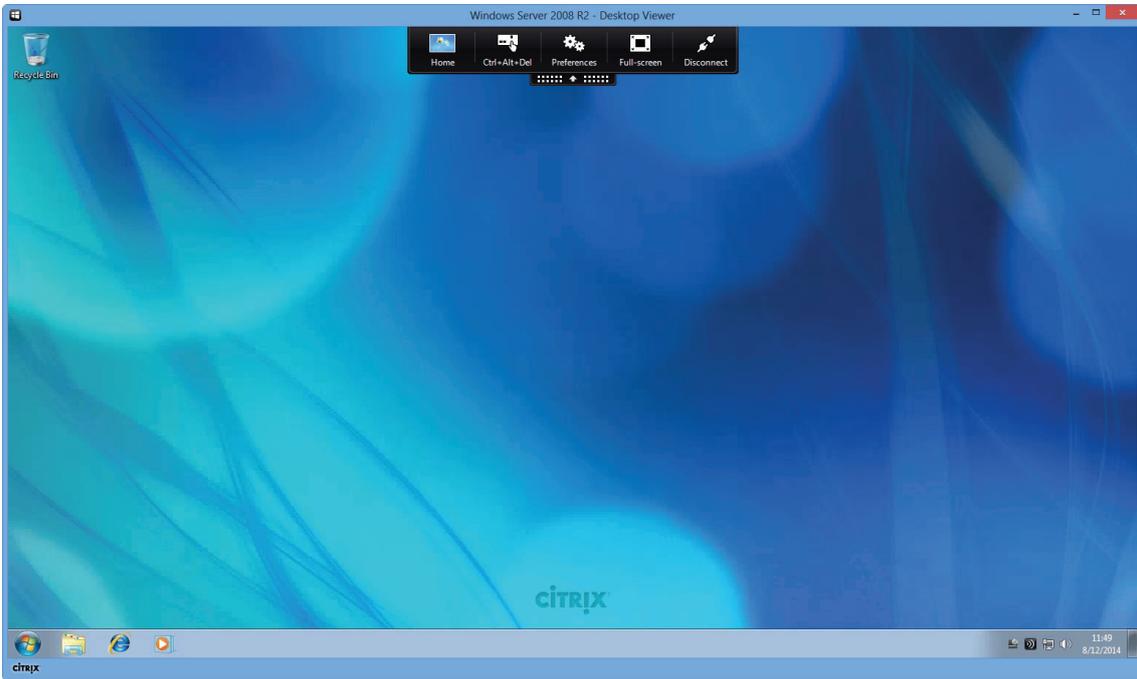

### Example: Applications Delivered by XenApp 6.5 Platinum PowerPoint Viewer, Adobe Reader, and Skype

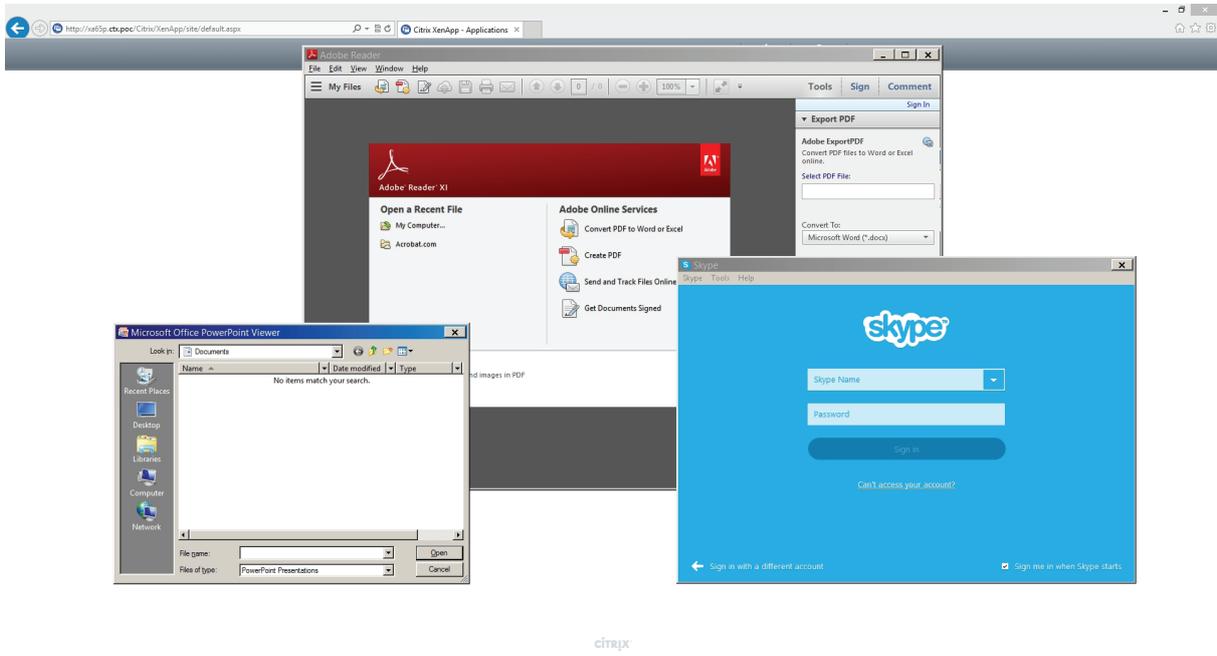

### Example: Applications Delivered by XenApp 7.5 Platinum PowerPoint Viewer, Adobe Reader, and Mozilla Firefox

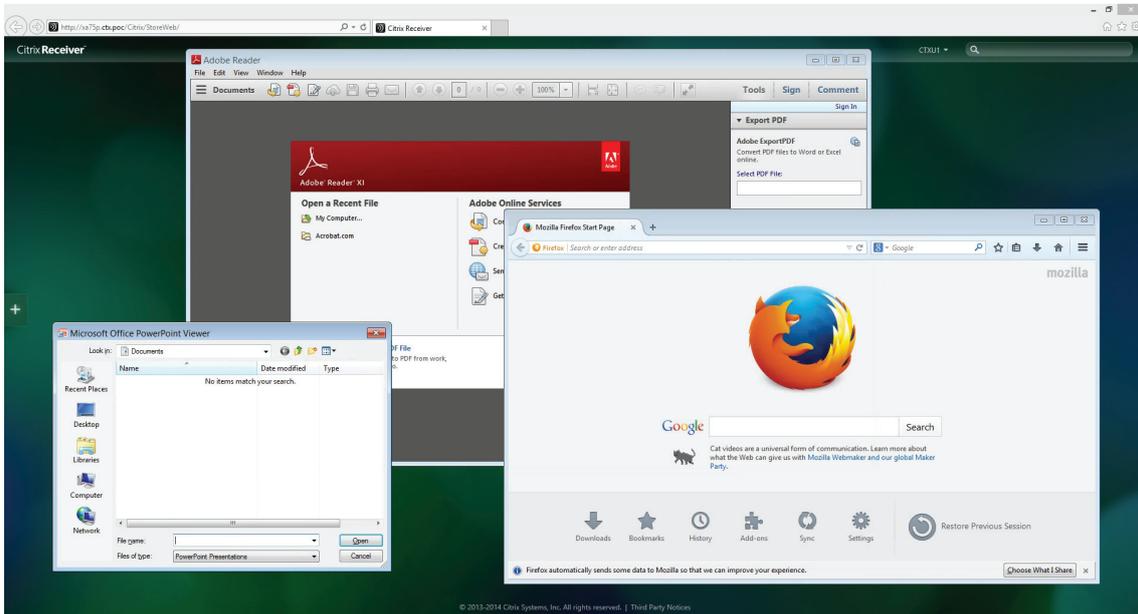

### 4.5.8 Configuring Advanced ICA Connection Settings

The table below provides a description of each setting item for ICA connections. Please refer to this table to configure advanced settings and customize shortcuts on the desktop and Start menu for service access.

 **NOTE**

- Please note that available settings vary depending on the selected connection type.

#### Settings for the Connection Type of Web Logon

 **NOTE**

- For descriptions of available settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 100.
- For descriptions of available settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 103.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 106.

#### General Sub-tab

Server Settings											
Item	Description										
Session Name	Type in the name for Citrix ICA sessions.										
Connection Type	<p>This table only provides descriptions for available settings when <b>Web Logon</b> is selected.</p> <p>Four connection types are available:</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Web Logon</td> <td>Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).</td> </tr> <tr> <td>XenDesktop</td> <td>Provides desktop delivery services.</td> </tr> <tr> <td>XenApp</td> <td>Provides application delivery services.</td> </tr> <tr> <td>Server Connection</td> <td>Provides full server access services for administrators (XenApp servers only).</td> </tr> </tbody> </table> <p><b>NOTE:</b> When <b>Web Logon</b> is selected, your mt180W will use a Web browser for service access. The Internet Explorer is always used no matter if you have installed other browsers and which browser you have set as default. For more details, please refer to section “4.5.7 Accessing Citrix Services” on page 91.</p>	Option	Description	Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).	XenDesktop	Provides desktop delivery services.	XenApp	Provides application delivery services.	Server Connection	Provides full server access services for administrators (XenApp servers only).
Option	Description										
Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).										
XenDesktop	Provides desktop delivery services.										
XenApp	Provides application delivery services.										
Server Connection	Provides full server access services for administrators (XenApp servers only).										
Sever Address	Type in the IP address / URL / FQDN of the server through which Citrix services are accessible.										

Common Settings											
Item	Description										
Autostart When Startup	<p>Select whether to open a Citrix ICA session automatically or not when Windows Embedded starts.</p> <p>If <b>Yes</b> is selected, every time when you log in to the system, the Citrix ICA session will be opened automatically.</p>										
On Application Exit	<p>Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do nothing</b>, <b>Restart Application</b>, <b>Reboot</b>, and <b>Shutdown</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do nothing</td> <td>Returns to the Windows Embedded desktop.</td> </tr> <tr> <td>Restart Application</td> <td>Opens a Citrix ICA session again.</td> </tr> <tr> <td>Reboot</td> <td>Restarts your thin client.</td> </tr> <tr> <td>Shutdown</td> <td>Turns off your thin client.</td> </tr> </tbody> </table>	Option	Description	Do nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a Citrix ICA session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
Option	Description										
Do nothing	Returns to the Windows Embedded desktop.										
Restart Application	Opens a Citrix ICA session again.										
Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.										

**Application Sub-tab**

Web Settings							
Item	Description						
Mode Setting	<p>Click the drop-down menu to select the desired browser window mode. Two options are available: <b>Full Screen</b> and <b>Normal Mode</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Full Screen</td> <td>The browser is opened in the Full Screen mode.</td> </tr> <tr> <td>Normal Mode</td> <td>The browser is opened in the Normal mode.</td> </tr> </tbody> </table> <p><b>NOTE:</b> This setting item is available only when <b>Web Logon</b> is selected in the Connection Type field. This type of connection allows you to access services through the interface of the Web browser.</p> <p><b>NOTE:</b> The used Web browser for service access is always the Internet Explorer, no matter which browser you set as the default.</p>	Option	Description	Full Screen	The browser is opened in the Full Screen mode.	Normal Mode	The browser is opened in the Normal mode.
Option	Description						
Full Screen	The browser is opened in the Full Screen mode.						
Normal Mode	The browser is opened in the Normal mode.						

**Settings for the Connection Type of XenDesktop**

 **NOTE**

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 98.
- For descriptions of available settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 103.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 106.

**General** Sub-tab

Server Settings											
Item	Description										
Session Name	Type in the name for Citrix ICA sessions.										
Connection Type	<p>This table only provides descriptions for available settings when <b>XenDesktop</b> is selected.</p> <p>Four connection types are available:</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Web Logon</td> <td>Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).</td> </tr> <tr> <td>XenDesktop</td> <td>Provides desktop delivery services.</td> </tr> <tr> <td>XenApp</td> <td>Provides application delivery services.</td> </tr> <tr> <td>Server Connection</td> <td>Provides full server access services for administrators (XenApp servers only).</td> </tr> </tbody> </table>	Option	Description	Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).	XenDesktop	Provides desktop delivery services.	XenApp	Provides application delivery services.	Server Connection	Provides full server access services for administrators (XenApp servers only).
Option	Description										
Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).										
XenDesktop	Provides desktop delivery services.										
XenApp	Provides application delivery services.										
Server Connection	Provides full server access services for administrators (XenApp servers only).										
Sever Address	Type in the IP address / FQDN of the server through which XenDesktop is accessible.										
Username	Type in the user/account name used for authentication.										
Password	Type in the password of the user account used for authentication.										
Domain	Type in the domain of the server.										
Desktop Group	<p>Type in the desktop group.</p> <p><b>NOTE:</b> You can use the Search icon  in front of the field to discover available desktop groups. For detailed instructions, please refer to “Connection Type: XenDesktop” on page 85.</p>										

Common Settings											
Item	Description										
Autostart When Startup	<p>Select whether to open a Citrix ICA session automatically or not when Windows Embedded starts.</p> <p>If <b>Yes</b> is selected, every time when you log in to the system, the Citrix ICA session will be opened automatically.</p>										
On Application Exit	<p>Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do nothing</b>, <b>Restart Application</b>, <b>Reboot</b>, and <b>Shutdown</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do nothing</td> <td>Returns to the Windows Embedded desktop.</td> </tr> <tr> <td>Restart Application</td> <td>Opens a Citrix ICA session again.</td> </tr> <tr> <td>Reboot</td> <td>Restarts your thin client.</td> </tr> <tr> <td>Shutdown</td> <td>Turns off your thin client.</td> </tr> </tbody> </table>	Option	Description	Do nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a Citrix ICA session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
Option	Description										
Do nothing	Returns to the Windows Embedded desktop.										
Restart Application	Opens a Citrix ICA session again.										
Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.										

**Application** Sub-tab

Window Settings									
Item	Description								
Requested Color Quality	<p>Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>No preference</b>, <b>Better Speed (16-bit)</b>, and <b>Better Appearance (32-bit)</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>No preference</td> <td>No preference for a specific color quality.</td> </tr> <tr> <td>Better Speed (16-bit)</td> <td>The 16-bit color quality is used for better display speed.</td> </tr> <tr> <td>Better Appearance (32-bit)</td> <td>The 32-bit color quality is used for better desktop appearance.</td> </tr> </tbody> </table>	Option	Description	No preference	No preference for a specific color quality.	Better Speed (16-bit)	The 16-bit color quality is used for better display speed.	Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.
Option	Description								
No preference	No preference for a specific color quality.								
Better Speed (16-bit)	The 16-bit color quality is used for better display speed.								
Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.								
Window Size	<p>Click the drop-down menu to select the desired window size of a Citrix ICA session. Eight options are available: <b>Default</b>, <b>Seamless</b>, <b>Full Screen</b>, <b>640 x 480</b>, <b>800 x 600</b>, <b>1024 x 768</b>, <b>1280 x 1024</b>, and <b>1600 x 1200</b>.</p> <p><b>NOTE:</b> When the XenDesktop toolbar is enabled on the server side, you may not be able to change the window size.</p> <p><b>NOTE:</b> For more information about how to disable the XenDesktop toolbar, please visit Citrix websites at <a href="http://support.citrix.com">support.citrix.com</a> or <a href="http://www.citrix.com">www.citrix.com</a> for online help.</p> <p><b>NOTE:</b> In case that you don't want to disable the toolbar, you can use the toolbar or your mouse to resize the launched window if needed.</p>								

Device Mapping		
Item	Description	
Mapping Local Drive	Click the drop-down menu to enable/disable the mapping of the local drive(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached drive(s) will become available in launched Citrix ICA sessions.	
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.	
Mapping local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.	
Connection Settings		
Item	Description	
Network Protocol	Click the drop-down menu to select the protocol(s) used for connection. Three options are available: <b>TCP/IP</b> , <b>TCP/IP + HTTP server location</b> , and <b>SSL/TLS + HTTPS server location</b> .	
Audio Quality	Click the drop-down menu to disable audio playback or choose the desired sound quality in a Citrix ICA session.	
	Click the drop-down menu to disable audio playback or to configure the quality setting for audio playback in a Citrix ICA session. Four options are available: <b>High - high definition audio</b> , <b>Medium - optimized for speech</b> , <b>Low - for low-speed connections</b> , and <b>Off</b> .	
	Option	Description
	High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.
	Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.
Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.	
Off	Disables audio playback in opened ICA sessions.	
Encryption	Click the drop-down menu to select the desired encryption method. Five options are available: <b>Basic</b> , <b>RC5 128 bit (login only)</b> , <b>RC5 40 bit</b> , <b>RC5 56 bit</b> , <b>RC5 128 bit</b> .	
Apply Windows key combinations	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On the local desktop</b> , <b>On the remote desktop</b> , <b>In full screen desktops only</b> .	

### Settings for the Connection Type of XenApp

 **NOTE**

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 98.
- For descriptions of available settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 100.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 106.

#### General Sub-tab

Server Settings											
Item	Description										
Session Name	Type in the name for Citrix ICA sessions.										
Connection Type	<p>This table only provides descriptions for available settings when <b>XenApp</b> is selected.</p> <p>Four connection types are available:</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Web Logon</td> <td>Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).</td> </tr> <tr> <td>XenDesktop</td> <td>Provides desktop delivery services.</td> </tr> <tr> <td>XenApp</td> <td>Provides application delivery services.</td> </tr> <tr> <td>Server Connection</td> <td>Provides full server access services for administrators (XenApp servers only).</td> </tr> </tbody> </table>	Option	Description	Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).	XenDesktop	Provides desktop delivery services.	XenApp	Provides application delivery services.	Server Connection	Provides full server access services for administrators (XenApp servers only).
Option	Description										
Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).										
XenDesktop	Provides desktop delivery services.										
XenApp	Provides application delivery services.										
Server Connection	Provides full server access services for administrators (XenApp servers only).										
Sever Address	Type in the IP address / FQDN of the server through which XenApp is accessible.										
Username	Type in the user/account name used for authentication.										
Password	Type in the password of the user account used for authentication.										
Domain	<p>Type in the domain of the server.</p> <p><b>NOTE:</b> Type in the full computer/server name if your XenApp server doesn't belong to any domain.</p>										
Application Name	<p>Type in the application name.</p> <p><b>NOTE:</b> You can use the Search icon  in front of the field to discover available applications. For detailed instructions, please refer to “Connection Type: XenApp” on page 87.</p>										

Common Settings											
Item	Description										
Autostart When Startup	<p>Select whether to open a Citrix ICA session automatically or not when Windows Embedded starts.</p> <p>If <b>Yes</b> is selected, every time when you log in to the system, the Citrix ICA session will be opened automatically.</p>										
On Application Exit	<p>Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do nothing</b>, <b>Restart Application</b>, <b>Reboot</b>, and <b>Shutdown</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do nothing</td> <td>Returns to the Windows Embedded desktop.</td> </tr> <tr> <td>Restart Application</td> <td>Opens a Citrix ICA session again.</td> </tr> <tr> <td>Reboot</td> <td>Restarts your thin client.</td> </tr> <tr> <td>Shutdown</td> <td>Turns off your thin client.</td> </tr> </tbody> </table>	Option	Description	Do nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a Citrix ICA session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
Option	Description										
Do nothing	Returns to the Windows Embedded desktop.										
Restart Application	Opens a Citrix ICA session again.										
Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.										

**Application** Sub-tab

Window Settings									
Item	Description								
Requested Color Quality	<p>Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>No preference</b>, <b>Better Speed (16-bit)</b>, and <b>Better Appearance (32-bit)</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>No preference</td> <td>No preference for a specific color quality.</td> </tr> <tr> <td>Better Speed (16-bit)</td> <td>The 16-bit color quality is used for better display speed.</td> </tr> <tr> <td>Better Appearance (32-bit)</td> <td>The 32-bit color quality is used for better desktop appearance.</td> </tr> </tbody> </table>	Option	Description	No preference	No preference for a specific color quality.	Better Speed (16-bit)	The 16-bit color quality is used for better display speed.	Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.
Option	Description								
No preference	No preference for a specific color quality.								
Better Speed (16-bit)	The 16-bit color quality is used for better display speed.								
Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.								
Window Size	<p>Click the drop-down menu to select the desired window size of a Citrix ICA session. Eight options are available: <b>Default</b>, <b>Seamless</b>, <b>Full Screen</b>, <b>640 x 480</b>, <b>800 x 600</b>, <b>1024 x 768</b>, <b>1280 x 1024</b>, and <b>1600 x 1200</b>.</p>								
Device Mapping									
Item	Description								
Mapping Local Drive	<p>Click the drop-down menu to enable/disable the mapping of the local drive(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached drive(s) will become available in launched Citrix ICA sessions through this connection.</p>								
Mapping Local Serial Ports	<p>Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.</p>								

Mapping local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions through this connection.										
<b>Connection Settings</b>											
<b>Item</b>	<b>Description</b>										
Network Protocol	Click the drop-down menu to select the protocol(s) used for connection. Three options are available: <b>TCP/IP</b> , <b>TCP/IP + HTTP server location</b> , and <b>SSL/TLS + HTTPS server location</b> .										
Audio Quality	Click the drop-down menu to disable audio playback or choose the desired sound quality in a Citrix ICA session.  Click the drop-down menu to disable audio playback or to configure the quality setting for audio playback in a Citrix ICA session. Four options are available: <b>High - high definition audio</b> , <b>Medium - optimized for speech</b> , <b>Low - for low-speed connections</b> , and <b>Off</b> .										
	<table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>High - high definition audio</td> <td>Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.</td> </tr> <tr> <td>Medium - optimized for speech</td> <td>Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.</td> </tr> <tr> <td>Low - for low-speed connections</td> <td>Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.</td> </tr> <tr> <td>Off</td> <td>Disables audio playback in opened ICA sessions.</td> </tr> </tbody> </table>	Option	Description	High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.	Off	Disables audio playback in opened ICA sessions.
	Option	Description									
	High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.									
	Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.									
Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.										
Off	Disables audio playback in opened ICA sessions.										
Encryption	Click the drop-down menu to select the desired encryption method. Five options are available: <b>Basic</b> , <b>RC5 128 bit (login only)</b> , <b>RC5 40 bit</b> , <b>RC5 56 bit</b> , <b>RC5 128 bit</b> .										
Apply Windows key combinations	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On the local desktop</b> , <b>On the remote desktop</b> , <b>In full screen desktops only</b> .										

**Settings for the Connection Type of Server Connection**

 **NOTE**

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 98.
- For descriptions of available settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 100.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 103.

**General** Sub-tab

Server Settings											
Item	Description										
Session Name	Type in the name for Citrix ICA sessions.										
Connection Type	<p>This table only provides descriptions for available settings when <b>Server Connection</b> is selected.</p> <p>Four connection types are available:</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Web Logon</td> <td>Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).</td> </tr> <tr> <td>XenDesktop</td> <td>Provides desktop delivery services.</td> </tr> <tr> <td>XenApp</td> <td>Provides application delivery services.</td> </tr> <tr> <td>Server Connection</td> <td>Provides full server access services for administrators (XenApp servers only).</td> </tr> </tbody> </table>	Option	Description	Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).	XenDesktop	Provides desktop delivery services.	XenApp	Provides application delivery services.	Server Connection	Provides full server access services for administrators (XenApp servers only).
Option	Description										
Web Logon	Provides application, desktop, and content access services through the interface of a Web browser (Internet Explorer).										
XenDesktop	Provides desktop delivery services.										
XenApp	Provides application delivery services.										
Server Connection	Provides full server access services for administrators (XenApp servers only).										
Sever Address	Type in the IP address / URL / FQDN of the XenApp server. <b>NOTE:</b> Server Connection only supports connections to XenApp servers.										
Username	Type in the user/account name used for authentication.										
Password	Type in the password of the user account used for authentication.										
Domain	Type in the domain of the server. <b>NOTE:</b> Type in the full computer/server name if the server doesn't belong to any domain.										

Common Settings											
Item	Description										
Autostart When Startup	<p>Select whether to open a Citrix ICA session automatically or not when Windows Embedded starts.</p> <p>If <b>Yes</b> is selected, every time when you log in to the system, the Citrix ICA session will be opened automatically.</p>										
On Application Exit	<p>Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do nothing</b>, <b>Restart Application</b>, <b>Reboot</b>, and <b>Shutdown</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do nothing</td> <td>Returns to the Windows Embedded desktop.</td> </tr> <tr> <td>Restart Application</td> <td>Opens a Citrix ICA session again.</td> </tr> <tr> <td>Reboot</td> <td>Restarts your thin client.</td> </tr> <tr> <td>Shutdown</td> <td>Turns off your thin client.</td> </tr> </tbody> </table>	Option	Description	Do nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a Citrix ICA session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
Option	Description										
Do nothing	Returns to the Windows Embedded desktop.										
Restart Application	Opens a Citrix ICA session again.										
Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.										

### Application Sub-tab

Window Settings									
Item	Description								
Requested Color Quality	<p>Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>No preference</b>, <b>Better Speed (16-bit)</b>, and <b>Better Appearance (32-bit)</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>No preference</td> <td>No preference in a specific color quality.</td> </tr> <tr> <td>Better Speed (16-bit)</td> <td>The 16-bit color quality is used for better display speed.</td> </tr> <tr> <td>Better Appearance (32-bit)</td> <td>The 32-bit color quality is used for better desktop appearance.</td> </tr> </tbody> </table>	Option	Description	No preference	No preference in a specific color quality.	Better Speed (16-bit)	The 16-bit color quality is used for better display speed.	Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.
Option	Description								
No preference	No preference in a specific color quality.								
Better Speed (16-bit)	The 16-bit color quality is used for better display speed.								
Better Appearance (32-bit)	The 32-bit color quality is used for better desktop appearance.								
Window Size	<p>Click the drop-down menu to select the desired window size of a Citrix ICA session. Eight options are available: <b>Default</b>, <b>Seamless</b>, <b>Full Screen</b>, <b>640 x 480</b>, <b>800 x 600</b>, <b>1024 x 768</b>, <b>1280 x 1024</b>, and <b>1600 x 1200</b>.</p>								
Device Mapping									
Item	Description								
Mapping Local Drive	<p>Click the drop-down menu to enable/disable the mapping of the local drive(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached drive(s) will become available in launched Citrix ICA sessions through this connection.</p>								
Mapping Local Serial Ports	<p>Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.</p>								

Mapping local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions through this connection.										
<b>Connection Settings</b>											
<b>Item</b>	<b>Description</b>										
Network Protocol	Click the drop-down menu to select the protocol(s) used for connection. Three options are available: <b>TCP/IP</b> , <b>TCP/IP + HTTP server location</b> , and <b>SSL/TLS + HTTPS server location</b> .										
Audio Quality	Click the drop-down menu to disable audio playback or choose the desired sound quality in a Citrix ICA session.										
	Click the drop-down menu to disable audio playback or to configure the quality setting for audio playback in a Citrix ICA session. Four options are available: <b>High - high definition audio</b> , <b>Medium - optimized for speech</b> , <b>Low - for low-speed connections</b> , and <b>Off</b> .										
	<table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>High - high definition audio</td> <td>Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.</td> </tr> <tr> <td>Medium - optimized for speech</td> <td>Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.</td> </tr> <tr> <td>Low - for low-speed connections</td> <td>Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.</td> </tr> <tr> <td>Off</td> <td>Disables audio playback in opened ICA sessions.</td> </tr> </tbody> </table>	Option	Description	High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.	Off	Disables audio playback in opened ICA sessions.
	Option	Description									
	High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.									
Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.										
Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.										
Off	Disables audio playback in opened ICA sessions.										
High - high definition audio	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.										
Medium - optimized for speech	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.										
Low - for low-speed connections	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.										
Off	Disables audio playback in opened ICA sessions.										
Encryption	Click the drop-down menu to select the desired encryption method. Five options are available: <b>Basic</b> , <b>RC5 128 bit (login only)</b> , <b>RC5 40 bit</b> , <b>RC5 56 bit</b> , <b>RC5 128 bit</b> .										
Apply Windows key combinations	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On the local desktop</b> , <b>On the remote desktop</b> , <b>In full screen desktops only</b> .										

### 4.5.9 Configuring Basic VMware View Connection Settings

The **VMware View** setting enables you to configure View connection settings for VMware View or Horizon View desktop services and create shortcuts on the desktop and Start menu for service access. You can access on-demand desktop services for work simply through these shortcuts.

 **NOTE**


- For more information on VMware desktop virtualization solutions, please visit VMware website at [www.vmware.com](http://www.vmware.com).

 **NOTE**

- You can also access VMware View or Horizon View services through the standard desktop shortcut **VMware Horizon View Client**. For detailed instructions on how to access services via the standard desktop shortcut, please refer to chapter 3 “Getting Started” on page 15 or the Quick Start Guide for mt180W.
- The following sections will guide you through the steps of creating your own service access shortcuts on the desktop.

To quickly configure VMware View connection settings, please do the following:

1. On Atrust Client Setup, click **Applications > VMware View**.
2. The View Connection list appears in the Configuration area.

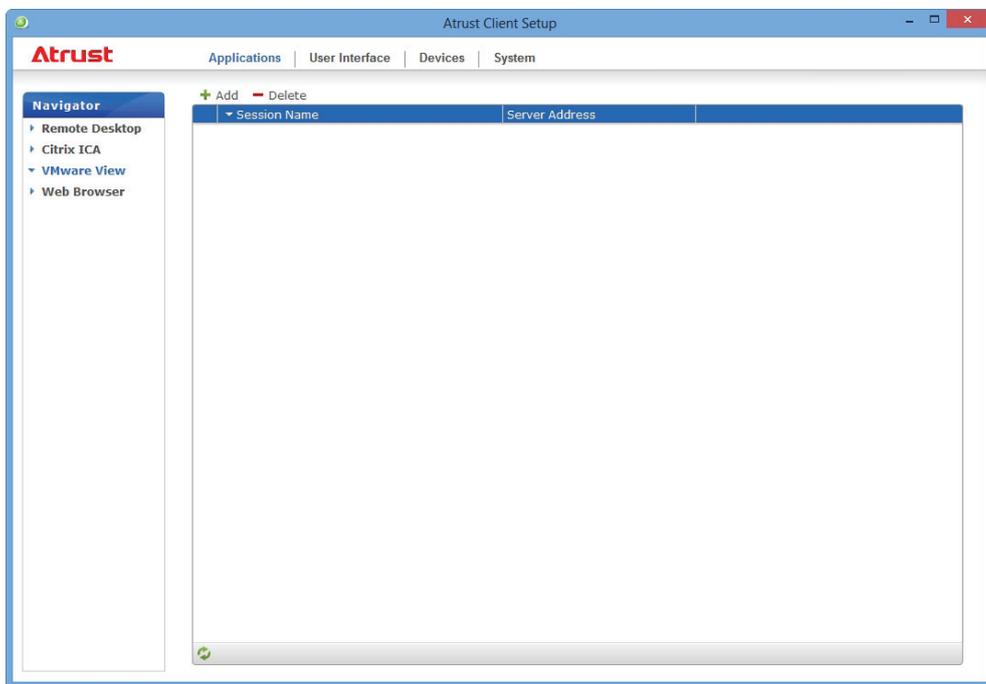




**NOTE**

- If you haven't create any entry, the View Connection list will be empty.

3. Click **Add** on the top of the View Connection list to add a new entry of View connection.

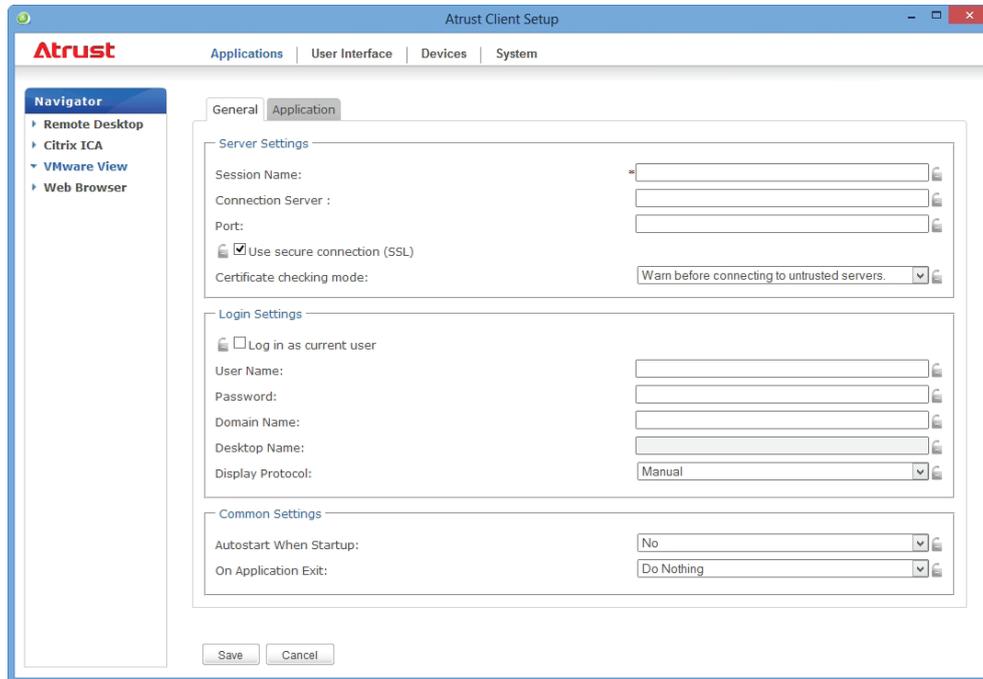

4. Type in the desired session name, and then click **Save** to confirm.



**NOTE**


- This is the only required field for the creation of a service access shortcut on the desktop. Other data can be provided during the period of service access. Depending on your needs, you might choose to type in more other data.

5. The new entry is added to the View Connection list and the access shortcut is created automatically on the desktop.


#### 4.5.10 Accessing VMware View or Horizon View Services

To access VMware View or Horizon View services, please do the following:


1. Double click the created (customized) access shortcut on the desktop.
2. A window appears allowing you to add the name or IP address of the View Connection Server.
3. Double-click **Add Server** icon or click **New Server** in the top-left corner.

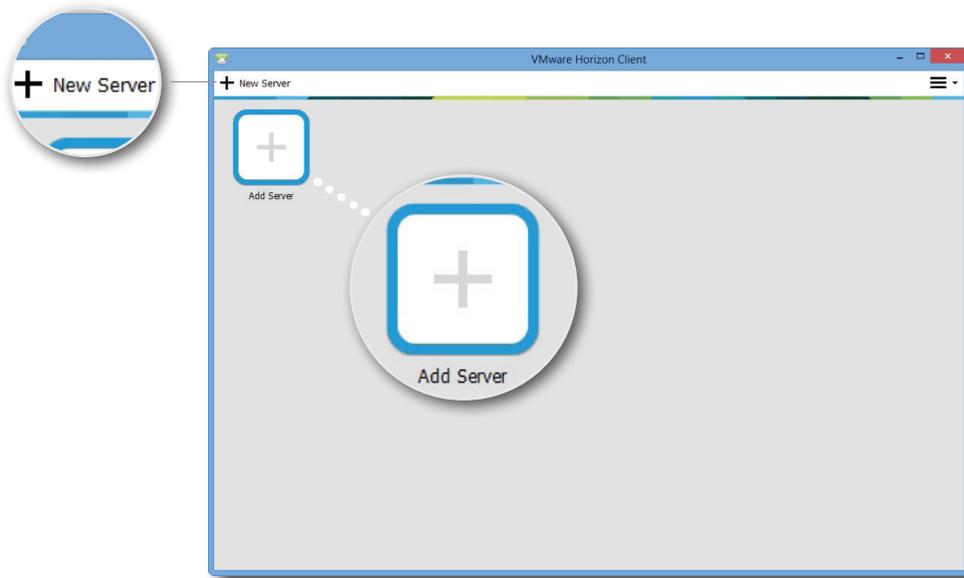

4. A window appears prompting for the name or IP address of the View Connection Server. Enter the required information, and then click **Connect**.

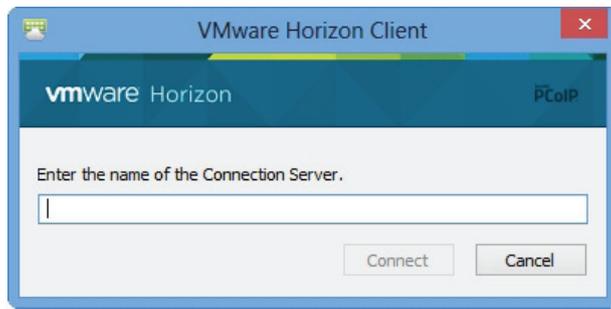


5. A window may appear with a certificate message about the remote server. Consult your IT administrator for details and ensure the connection is secure *first*. To bypass, click **Continue**.

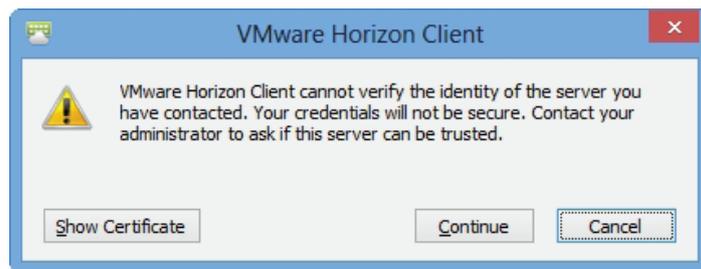


6. A window may appear with a Welcome message. Click **OK** to continue.

7. Provide your user name and password on the opened window, and then click **Login**.

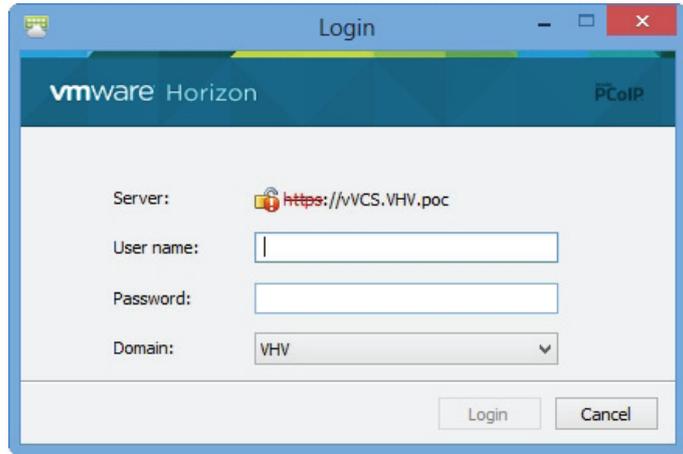

8. A window appears with available desktops or applications for your credentials. Double-click to select the desired desktop or application.

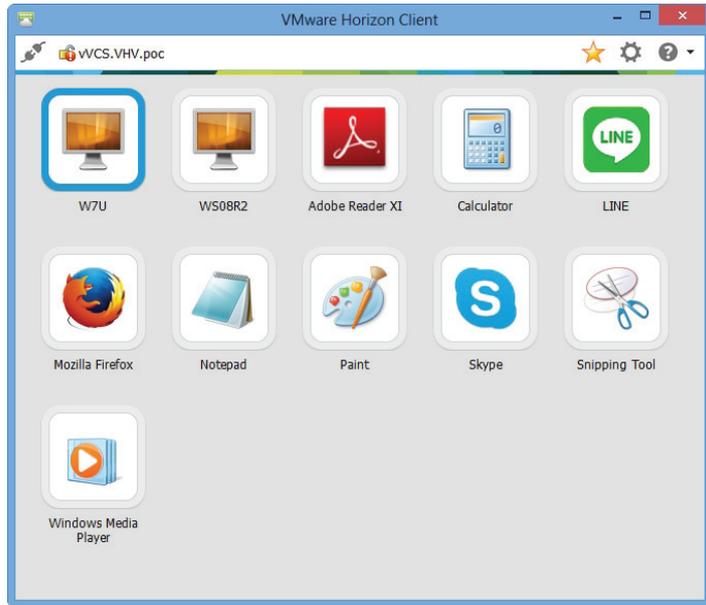

9. The desktop or application will be displayed on the screen.

### 4.5.11 Configuring Advanced View Connection Settings

The table below provides a description of each setting item for View connections. Please refer to this table to configure advanced settings and customize shortcuts on the desktop and Start menu for service access.

#### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for VMware View or Horizon View sessions.								
Connection Server	Type in the computer name or IP address of the View Connection Server. <b>NOTE:</b> For more information on View Connection Sever, please visit VMware website at <a href="http://www.vmware.com">www.vmware.com</a> .								
Port	Type in the port number used to communicate with the View Connection Server. To use the default value, simply leave it blank.								
Use secure connection (SSL)	Check/Uncheck to enable/disable secure connection.								
Certificate checking mode	<p>Click to select whether to verify the identity of the remote server and whether to connect to an untrusted server. Three options are available: <b>Do not verify server identity certificates</b>, <b>Warn before connecting to untrusted servers</b>, and <b>Never connect to untrusted servers</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do not verify server identity certificates</td> <td>Do not verify the identity of the remote server and connect to it anyway.</td> </tr> <tr> <td>Warn before connecting to untrusted servers</td> <td>Warns and allows users to choose whether to connect or not.</td> </tr> <tr> <td>Never connect to untrusted servers</td> <td>Disallows untrusted connections.</td> </tr> </tbody> </table>	Option	Description	Do not verify server identity certificates	Do not verify the identity of the remote server and connect to it anyway.	Warn before connecting to untrusted servers	Warns and allows users to choose whether to connect or not.	Never connect to untrusted servers	Disallows untrusted connections.
Option	Description								
Do not verify server identity certificates	Do not verify the identity of the remote server and connect to it anyway.								
Warn before connecting to untrusted servers	Warns and allows users to choose whether to connect or not.								
Never connect to untrusted servers	Disallows untrusted connections.								
Login Settings									
Item	Description								
Log in as current user	Check to log in to VMware View or Horizon View services with the current user credentials. When checked, the User Name, Password, and Domain Name fields will be grayed out.								
User Name	Type in the user name for authentication.								
Password	Type in the password for authentication.								
Domain Name	Type in the domain name of the View Connection Sever.								
Desktop Name	Type in the desktop name. Or, leave it blank for users to select one. <b>NOTE:</b> If <b>Manual</b> is selected for the Display Protocol field below, this field will be grayed out.								

Display Protocol	Click the drop-down menu to select the display protocol. Three options are available: <b>Manual</b> , <b>Microsoft RDP</b> , and <b>PCoIP</b> .										
	<table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Manual</td> <td>Manually select the desired display protocol.</td> </tr> <tr> <td>Microsoft RDP</td> <td>Use Microsoft RDP as the display protocol.</td> </tr> <tr> <td>PCoIP</td> <td>Use VMware PCoIP as the display protocol.</td> </tr> </tbody> </table>	Option	Description	Manual	Manually select the desired display protocol.	Microsoft RDP	Use Microsoft RDP as the display protocol.	PCoIP	Use VMware PCoIP as the display protocol.		
	Option	Description									
	Manual	Manually select the desired display protocol.									
Microsoft RDP	Use Microsoft RDP as the display protocol.										
PCoIP	Use VMware PCoIP as the display protocol.										
<b>Common Settings</b>											
Item	Description										
Autostart When Startup	<p>Select whether to open a VMware View or Horizon View session automatically or not when Windows Embedded starts.</p> <p>If <b>Yes</b> is selected, when you log in to the system, the VMware View or Horizon View session will be opened automatically.</p>										
On Application Exit	<p>Select what to do when a VMware View or Horizon View session is ended. Four options are available: <b>Do Nothing</b>, <b>Restart Application</b>, <b>Reboot</b>, and <b>Shutdown</b>.</p> <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do Nothing</td> <td>Returns to the Windows Embedded desktop.</td> </tr> <tr> <td>Restart Application</td> <td>Opens a View or Horizon View session again.</td> </tr> <tr> <td>Reboot</td> <td>Restarts your thin client.</td> </tr> <tr> <td>Shutdown</td> <td>Turns off your thin client.</td> </tr> </tbody> </table>	Option	Description	Do Nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a View or Horizon View session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
Option	Description										
Do Nothing	Returns to the Windows Embedded desktop.										
Restart Application	Opens a View or Horizon View session again.										
Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.										

**Application** Sub-tab

Window Settings											
Item	Description										
Display	Click the drop-down menu to select the desired display size of a View desktop. Five options are available: <b>Full Screen</b> , <b>Multi Monitor</b> , <b>Large Window</b> , and <b>Small Window</b> .										
	<table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Full Screen</td> <td>Opens the selected View desktop in full screen.</td> </tr> <tr> <td>Multi Monitor</td> <td>Opens the selected View desktop in multiple displays.</td> </tr> <tr> <td>Large Window</td> <td>Opens the selected View desktop in a large window.</td> </tr> <tr> <td>Small Window</td> <td>Opens the selected View desktop in a small window.</td> </tr> </tbody> </table>	Option	Description	Full Screen	Opens the selected View desktop in full screen.	Multi Monitor	Opens the selected View desktop in multiple displays.	Large Window	Opens the selected View desktop in a large window.	Small Window	Opens the selected View desktop in a small window.
	Option	Description									
	Full Screen	Opens the selected View desktop in full screen.									
	Multi Monitor	Opens the selected View desktop in multiple displays.									
Large Window	Opens the selected View desktop in a large window.										
Small Window	Opens the selected View desktop in a small window.										


### 4.5.12 Configuring Web Browser Settings

The **Web Browser** setting item allows you to configure browser session settings and create shortcuts on the desktop or Start menu for browser sessions.

#### **Configuring General Browser Session Settings**

To configure general browser session settings, please do the following:

1. On Atrust Client Setup, click **Applications > Web Browser > Global Setting**.

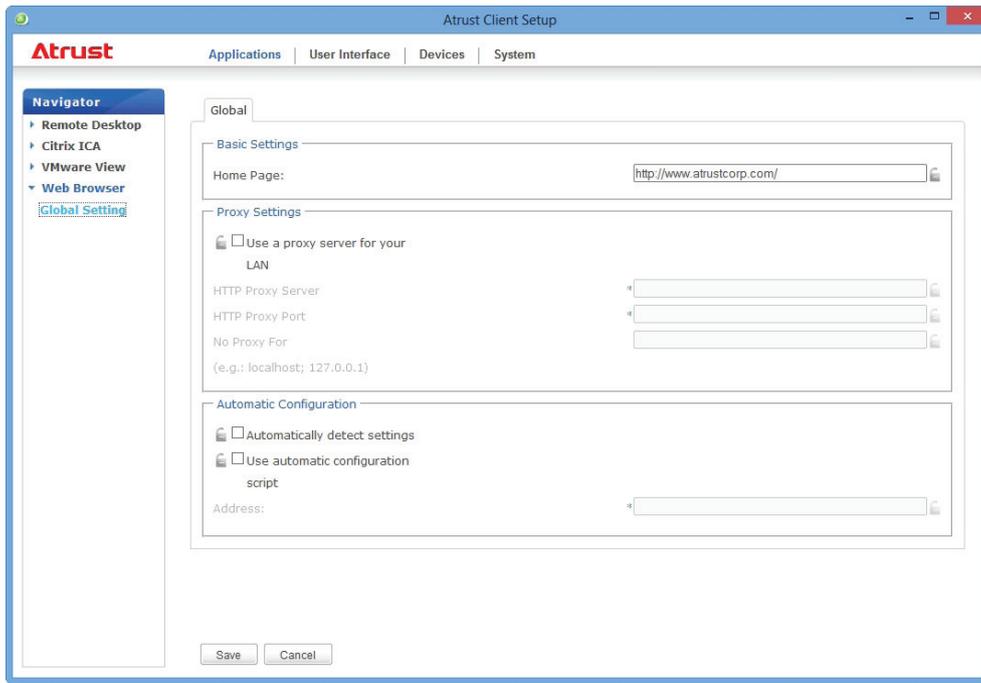

2. Refer to the table below to set up home page, proxy, and automatic configuration settings, and then click **Save** to apply.

Basic Settings	
Item	Description
Home Page	Type in the URL of a Web page for quick access via the Home button.
Proxy Settings	
Item	Description
Use a proxy server for your LAN	Check to use a proxy server in your local area network.
HTTP Proxy Server	Type in the IP address of the proxy server.
HTTP Proxy Port	Type in the communication port of the proxy server.
No Proxy For	Type in the IP address(es) to bypass the proxy server.

Automatic Configuration	
Item	Description
Automatically detect settings	Check to automatically detect browser settings.
Use automatic configuration script	Check to allow automatic configuration and indicate the IP address where a configuration file is located.
Address	Type in the IP address when <b>Use automatic configuration script</b> is selected.

### Configuring Specific Browser Session Settings


To configure specific browser session settings and create shortcuts on the desktop and Start menu, please do the following:



**TIP**

- You can use this feature to create a desktop shortcut for a specific web page, for example, your intranet home page.


1. On Atrust Client Setup, click **Applications > Web Browser**.
2. The Browser Session list appears in the Configuration area.

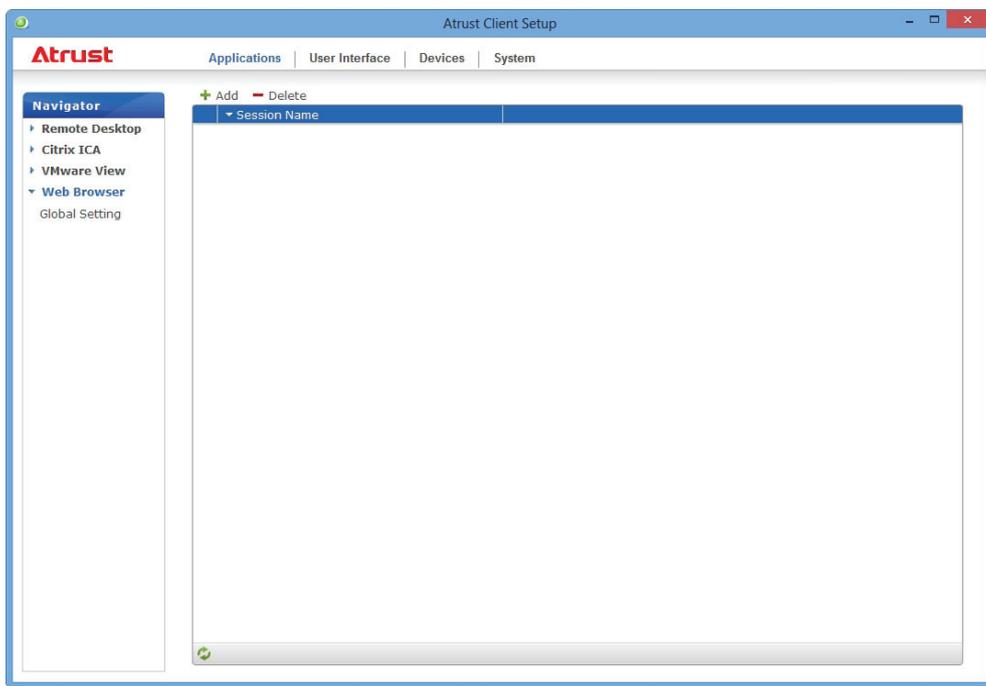

**NOTE**

- If you haven't create any entry, the Browser Session list will be empty.

3. Click **Add** on the top of the Browser Session list.
4. On **General** sub-tab, type in the desired session name, the URL of the initial web page, and select other settings if needed (refer to the table below for descriptions).

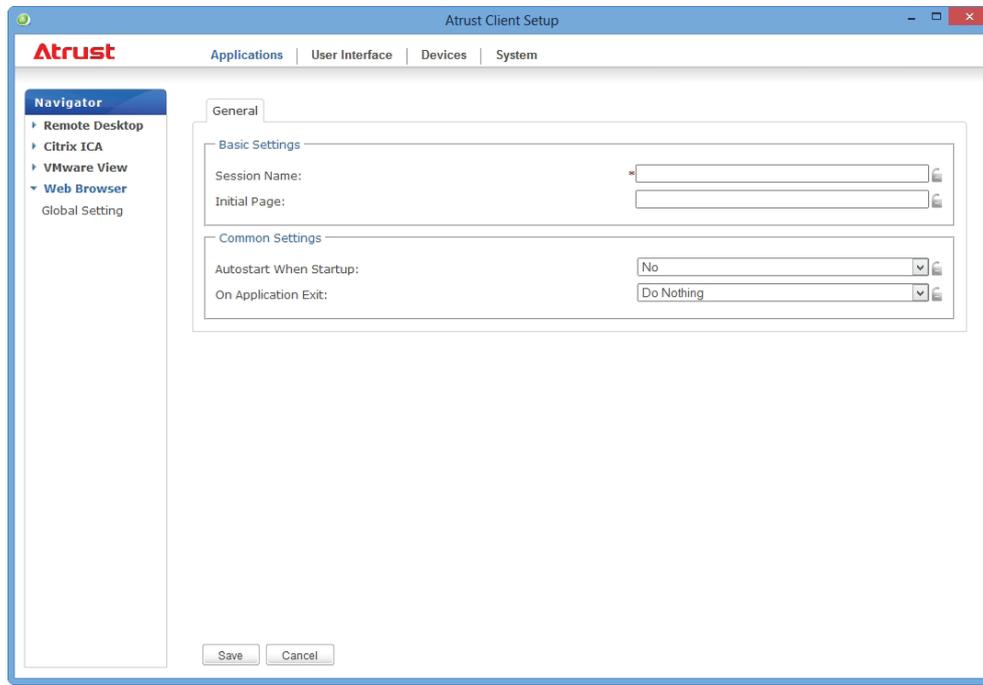

Common Settings											
Item	Description										
Autostart When Startup	Select whether to open a browser session automatically or not when Windows Embedded starts.  If <b>Yes</b> is selected, every time when you log in to the system, the browser session will be opened automatically.										
On Application Exit	Select what to do when a browser session is ended. Four options are available: <b>Do Nothing, Restart Application, Reboot, and Shutdown.</b>  <table border="1"> <thead> <tr> <th>Option</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Do Nothing</td> <td>Returns to the Windows Embedded desktop.</td> </tr> <tr> <td>Restart Application</td> <td>Opens a browser session again.</td> </tr> <tr> <td>Reboot</td> <td>Restarts your thin client.</td> </tr> <tr> <td>Shutdown</td> <td>Turns off your thin client.</td> </tr> </tbody> </table>	Option	Description	Do Nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a browser session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
Option	Description										
Do Nothing	Returns to the Windows Embedded desktop.										
Restart Application	Opens a browser session again.										
Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.										

5. Click **Save** to confirm. The access shortcut will be created automatically on the desktop.



# Appendices

This chapter provides instructions for the maintenance of your mt180W thin clients.

## **A.1 Resetting Your mt180W**

How to reset your mt180W to the unmanaged state and its settings under Atrust Client Setup to factory defaults 121

## **A.2 Restoring Your Operating System**

How to restore the operating system for your mt180W 122



## A.1 Resetting Your mt180W

Reset Mode enables you to restore settings under Atrust Client Setup to the factory defaults. Additionally, it also releases a managed mt180W from the management of Atrust Device Manager, a management console developed by Atrust for remote and mass client management.

You can perform **Reset Mode** locally through Atrust Thin Client Menu.




### NOTE

- You can also release a managed mt180W **remotely** from Atrust Device Manager. For details, please refer to the User's Manual for Atrust Device Manager.

To reset your mt180W, please do the following:

- Restart your mt180W.
- During the POST (Power-On Self-Test) period, press **Esc** on the keyboard to enter Atrust Thin Client Menu.

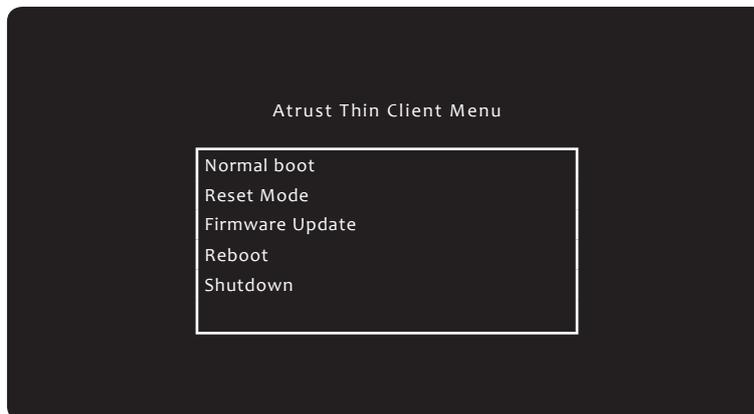

### NOTE

- Five options are available on Atrust Thin Client Menu: **Normal boot**, **Reset Mode**, **Firmware Update**, **Reboot**, and **Shutdown**. See the table below for the description of each option:

Menu Option	Description
Normal boot	Powers up your mt180W as the normal startup procedure.
Reset Mode	Resets Atrust Client Setup settings and remote management status for your mt180W.
Firmware Update	Updates firmware for your mt180W through the network.
Reboot	Restarts your mt180W.
Shutdown	Powers off your mt180W.

- Use arrow keys to select **Reset Mode**, and then press **Enter** to continue.
- A message appears prompting you for confirmation. Type **y** to confirm.
- Upon completion, press **Enter** to restart.

## A.2 Restoring Your Operating System

The Recovery DVD for Atrust mt180W enables you to restore your operating system to the factory default state.



### NOTE

- Contact our technical support via [fae@atrustcorp.com](mailto:fae@atrustcorp.com) to get instructions on how to get or make a Recovery DVD.
- You can also restore your operating system in a similar way here with a Recovery USB flash drive. Contact our technical support via [fae@atrustcorp.com](mailto:fae@atrustcorp.com) to get instructions on how to make a Recovery USB flash drive with the help of Atrust Recovery USB Disk Creator, a tool developed by Atrust.


To restore your operating system through the Recovery DVD, please do the following:



### WARNING

- Restoring your system will overwrite all of the data in your system. Ensure that you've backed up important data before proceeding.

1. Attach a DVD drive to Atrust mt180W.
2. Insert the Recovery DVD.
3. Reboot your Atrust mt180W.
4. During the POST (Power-On Self-Test) period, press **F7** to enter the Boot Device menu.
5. On the Boot Device menu, select to boot from the optical disc drive (the optical disc drive entry that starts with **UEFI**), and then press **Enter** to continue.
6. The Atrust Recovery System screen appears.
7. Press **Enter** to continue.
8. A screen appears prompting you to select the source of recovery.

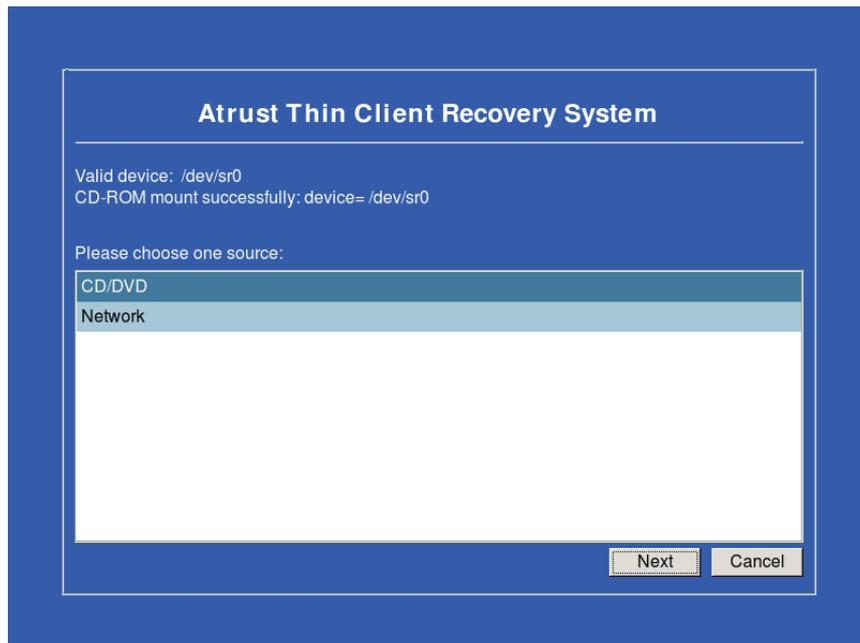

9. Select **CD/DVD** and then click **Next** to continue.
10. Select **INSTALL** or **UPDATE**, and then click **Next** to continue.
11. A screen appears prompting you to select the language of the user interface for your Atrust mt180W. Select the desired language, and then press **Next** to continue.

**NOTE**

- The available *UI languages* may vary with the *firmware version* of your mt180W.

12. The system recovery starts.
13. After completion, remove the Recovery DVD and then click **Finish** to restart your system.



## Specifications

### Atrust mt180W mobile thin client

Processor	Intel® Celeron® N2807, Dual-core, 1.58 GHz
System Memory	2 GB DDR3 (Optional: 4 GB)
Flash Memory	8 GB mSATA (Optional: 16 / 32 / 64 GB)
Display	Type: 14" 16:9 Glare Maximum Resolution: 1366 x 768
Keyboard / Touchpad	Keyboard: 87 keys Touchpad: 2-button Glide pad
Sound	Built-in speakers
I/O interfaces	Left side: 1 x DC IN 1 x RJ-45 1 x USB 2.0 1 x VGA Right side: 1 x Smart card slot (Optional) 1 x USB 3.0 1 x USB 2.0 Display and base: 1 x Microphone port 1 x Built-in microphone 1 x Headphone port 2 x Built-in speaker
Networking	10/100/1000 Mb Ethernet Wi-Fi 802.11 a/b/g/n
AC Adapter	INPUT: 100-240 V, ~2.5 A, 50-60 Hz OUTPUT: 19 V, 3.42 A, 65 W
Battery Pack	Rechargeable lithium-ion battery 11.1 V, 5900 mAh, 65 Wh
Operating system	Windows Embedded 8 Standard
Supported Protocols	Microsoft RDP with RemoteFX / Citrix ICA with HDX / VMware PCoIP
Management	Atrust Client Setup / Atrust Device Manager
Security	Kensington security slot
Dimensions	(W)339 x (D)239.4 x (H)25.4 mm
Weight	1.7 kg (approx.)
Environment	Operating Temperature: 0° C ~ 35° C Non-operating Temperature: -30° C ~ 60° C Operating Humidity (Rh): 10% ~ 90% (non-condensing) Non-operating Humidity (Rh): 5% ~ 95%





**Atrust**