

**Atrust**

**Atrust t66 Thin Client**

# USER'S MANUAL

**Internal Draft 0.05**

Copyright © 2014-17 Atrust Computer Corp.



## Copyright and Trademark Statements

Copyright © 2014-17 Atrust Computer Corp. All rights reserved.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of Atrust Computer Corp.

### Disclaimer

Atrust Computer Corp. ("Atrust") makes no representations or warranties with respect to the contents or use of this document, and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. Atrust is not liable for technical or editorial errors or omissions contained herein. The information in this document is subject to change without notice.

### Trademark Statements

Atrust is a trademark of Atrust Computer Corp.

Microsoft, Windows, Windows Server, RemoteFX, and MultiPoint are trademarks or registered trademarks of the Microsoft group of companies.

Citrix, ICA, XenApp, XenDesktop, and VDI-in-a-Box are trademarks of Citrix Systems, Inc. and/or one or more of its subsidiaries, and may be registered in the United States Patent and Trademark Office and in other countries.

VMware, VMware View, and VMware Horizon View are trademarks or registered trademarks of the VMware, Inc.

PCoIP is a registered trademark of Teradici Corporation in the United States and/or other countries.

Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

## About This User's Manual

This manual provides detailed instructions on how to set up, use, manage, and maintain Atrust t66 thin clients.

### Manual Structure and Subjects

Chapter	Subject
1	Provides an overview of Atrust t66 thin clients.
2	Provides detailed instructions on how to set up Atrust t66 thin clients.
3	Provides the basics of how to use Atrust t66 thin clients.
4	Provides instructions on how to configure client settings and customize Atrust t66 thin clients with the Atrust Client Setup console.
Appendices	Provides supplementary instructions on the maintenance and upgrade of Atrust t66 thin clients.
Specifications	Provides detailed information on key components of Atrust t66 thin clients.

### Notes, Tips, and Warnings

Throughout this manual, the notes, tips, and warnings in the following formats are used to provide important information, useful advice, and prevent injuries to you, damage to your devices, or loss of data on your system.



#### NOTE

- A note provides important information for a specific situation.



#### TIP

- A tip gives a piece of useful advice to perform a task more efficiently.



#### WARNING

- A warning provides crucial information that must be followed to prevent injuries to you, damage to your devices, or loss of data on your system.



## Style Conventions

The following styles are used throughout this manual while referring to operational items on input devices, hardware panels, or application interfaces.

Item	Style	Example
keys on the keyboard	bold	<b>Ctrl + F2, Alt + F9, Alt + Tab</b>
application windows or entry lists	first letter capitalized	Confirm Dialog window, RDP Connection list, ICA Connection list, View Connection list
buttons or tabs on a window, toolbars, taskbar, or menu	bold	<b>OK, Next, Save, Applications</b> tab
options on a window, screen, list, or menu	bold	<b>Add, Domain, Connection Type, High Quality</b>
selecting a series of options	bold	<b>Applications &gt; Citrix ICA, Applications &gt; Remote Desktop, Applications &gt; VMware View, Network &gt; Wireless, Devices &gt; Printer, System &gt; Time Zone</b>

## Safety and Regulatory Information

### Regulatory Statement

#### Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### IMPORTANT NOTE:

#### FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Regulatory Information

### WEEE (Waste Electrical and Electronic Equipment) Directive



In the European Union, this symbol indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling. For proper disposal, please contact your local recycling or hazardous waste center.

## Safety Information



### WARNING

- Use only power supplies listed in the user instructions.



### WARNING

- Don't use a keyboard and mouse that in total require more than 200 mA of rated current during operation.



### WARNING

- For safety, do not make mechanical or electrical modifications to the equipment.
- Do not remove equipment covers and access any of the components inside the equipment. Any access inside the equipment without an authorized or certified technician may cause serious injuries and damage. For any problem, contact your dealer for assistance.
- You should only make repairs as authorized by the product documentation. Repairs, replacement, expansion, and upgrades not performed by a certified service technician may cause injuries to you, damage your system, and void your warranty.



# Table of Contents

## Copyright and Trademark Statements i

Disclaimer i  
Trademark Statements i

## About This User's Manual ii

Manual Structure and Subjects ii  
Notes, Tips, and Warnings ii  
Style Conventions iii

## Safety and Regulatory Information iv

Regulatory Statement iv  
Regulatory Information v  
Safety Information v

## 1 Overview 1

- 1.1 Introduction 3
- 1.2 Features 3
- 1.3 Package Contents 4
- 1.4 Exterior Views 4
- 1.5 Panel Components 5
- 1.6 LED Indicators 7

## 2 Setting Up Your t66 9

- 2.1 Positioning Your t66 11
- 2.2 Assembling the AC Adapter 13
- 2.3 Getting Connected 13

## 3 Getting Started 15

- 3.1 Learning the Basics 17

## 4 Configuring Client Settings 35

- 4.1 Atrust Client Setup 37
  - 4.1.1 Interface Overview 37
  - 4.1.2 Client Settings at a Glance 38
- 4.2 Configuring System Settings 39
  - 4.2.1 System Tab Overview 39
  - 4.2.2 Available Settings at a Glance 40
  - 4.2.3 Configuring Time Zone and Time Server 41
  - 4.2.4 Configuring the Access Privileges and Passwords of Atrust Client Setup 42
  - 4.2.5 Configuring Shadow Settings for Remote Assistance 44
  - 4.2.6 Updating Firmware from the Management Computer 46
  - 4.2.7 Enabling or Disabling the Appliance Mode 48
  - 4.2.8 Enabling or Disabling Auto Setup 52
  - 4.2.9 Enabling or Disabling the Quick Connection Mode 52
  - 4.2.10 Configuring Advanced Quick Connection Settings 55
  - 4.2.11 Enabling or Disabling the Command-line Functions 59
  - 4.2.12 Collecting Event Logs and Capturing Related Screens 60
  - 4.2.13 Uploading Files for Error Reporting 62
  - 4.2.14 Importing Certificates for Remote Computers 63
  - 4.2.15 Enabling or Disabling Auto Registration 67

4.2.16	Viewing System Information	68
<b>4.3</b>	<b>Configuring User Interface Settings</b>	<b>69</b>
4.3.1	User Interface Tab Overview	69
4.3.2	Available Settings at a Glance	70
4.3.3	Configuring Display Settings	70
4.3.4	Customizing Desktop and System Language Settings	72
4.3.5	Hiding or Showing Quick Access Shortcuts	74
4.3.6	Using a Custom Wallpaper	75
4.3.7	Adjusting Keyboard Settings	76
4.3.8	Configuring Mouse Settings	78
4.3.9	Configuring Screensaver Settings	79
<b>4.4</b>	<b>Configuring External Device Settings</b>	<b>80</b>
4.4.1	Devices Tab Overview	80
4.4.2	Available Settings at a Glance	81
4.4.3	Configuring Settings for USB Storage Devices	81
4.4.4	Manually Mount and Eject Attached USB Storage Devices	82
4.4.5	Disabling or Enabling Attached Audio Devices	83
4.4.6	Adding a Local Printer	84
4.4.7	Adding a Network Printer	87
<b>4.5</b>	<b>Configuring Network Settings</b>	<b>88</b>
4.5.1	Network Tab Overview	88
4.5.2	Available Settings at a Glance	89
4.5.3	Configuring Wired Network Settings	90
4.5.4	Enabling or Disabling Wake On LAN	93
4.5.5	Establishing and Stopping a VPN connection	94
4.5.6	Configuring Virtual Private Network Settings	98
4.5.7	Creating the Mapping of IP Addresses to Names of Hosts	99
4.5.8	Configuring the Failover Cluster List	101
4.5.9	Changing the Host Name of Your Thin Client	103
4.5.10	Enabling or Disabling the Wireless Interface	104
4.5.11	Configuring the Trigger Threshold for Roaming	105
4.5.12	Establishing and Stopping a Wireless Connection	106
4.5.13	Configuring Wireless Connection Settings	109
4.5.14	Configuring Proxy Settings for Web-based Access to Services	110
<b>4.6</b>	<b>Configuring Service Access Settings</b>	<b>112</b>
4.6.1	Applications Tab Overview	112
4.6.2	Available Settings at a Glance	113
4.6.3	Configuring Basic RDP Connection Settings	114
4.6.4	Accessing Remote Desktop Services	123
4.6.5	Configuring Advanced RDP Connection Settings	129
4.6.6	Configuring Basic ICA Connection Settings	145
4.6.7	Switching the Citrix Receiver Version	158
4.6.8	Enabling or Disabling Esc to Quit on the Web Logon Screen	159
4.6.9	Configuring Keyboard Layout and Type for Citrix ICA Sessions	160
4.6.10	Accessing Citrix Services	161
4.6.11	Configuring Advanced ICA Connection Settings	168
4.6.12	Configuring Basic VMware View Connection Settings	197
4.6.13	Accessing VMware View or Horizon View Services	199
4.6.14	Configuring Advanced View Connection Settings	201
4.6.15	Configuring SSH Connection Settings	205
4.6.16	Launching SSH and Telnet Sessions	207

## Appendices 209

<b>A.1</b>	<b>Resetting Your t66 to the Factory Default</b>	<b>211</b>
<b>A.2</b>	<b>Updating Firmware for Your t66 with a USB Flash Drive</b>	<b>212</b>
<b>A.3</b>	<b>Using SECUREMATRIX Authentication for VMware Connections</b>	<b>215</b>

## Specifications 223

# 1

---

## Overview

This chapter provides an overview of Atrust t66 thin clients.

<b>1.1 Introduction</b>	
Desktop virtualization and simple endpoint devices	3
<b>1.2 Features</b>	
Key features of Atrust t66	3
<b>1.3 Package Contents</b>	
Check your package contents	4
<b>1.4 Exterior Views</b>	
Overview of thin client outside elements	4
<b>1.5 Panel Components</b>	
Descriptions of front and rear panel components	5
<b>1.6 LED Indicators</b>	
Descriptions of signals for LED indicators	7





## 1.1 Introduction

Desktop virtualization provides a new perspective to reconsider the design and implementation of an IT infrastructure. In a desktop virtualization infrastructure, a station is no longer a cumbersome desktop, but simply an endpoint device for users to access delivery services from the server(s).

With the introduction of the desktop virtualization technologies, you can considerably benefit from:

- On-demand applications/desktops
- Centralized management of work environments
- Drastically reduced endpoint software/hardware issues
- Simplified system maintenance and Improved system security
- More scalability with low-cost endpoint devices






## 1.2 Features

The key features of Atrust t66 thin clients are:

- Support for a wide range of desktop virtualization solutions from industry-leading companies:
  - Microsoft® Remote Desktop
  - Citrix® XenApp™, XenDesktop®, and VDI-in-a-Box™
  - VMware® View™ and Horizon View™
- Support for high-definition technologies:
  - Microsoft® RemoteFX®
  - Citrix® HDX™
  - VMware® View™ PCoIP®
- Simple click-access to various applications/desktops
- Built-in Atrust Client Setup as the local client management console

### 1.3 Package Contents

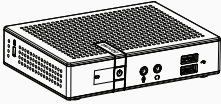Please check your package contents. Ensure that all of the items are present in your package. If any items are missing or damaged, please contact your dealer immediately.

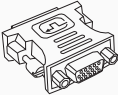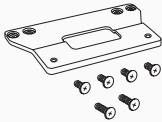Atrust t66	AC adapter	Quick Start Guide
		
DVI-I to VGA adapter	VESA mount kit (Optional)	
		




**NOTE**


- Your package may not contain a *hard copy* of the Quick Start Guide. In this case, a *soft copy* in PDF format will be provided.

### 1.4 Exterior Views


Left front view

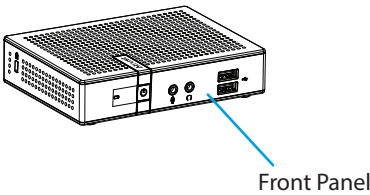



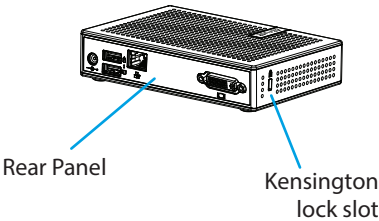


Right rear view

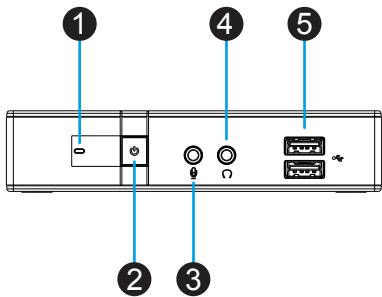

### 1.5 Panel Components



Front Panel Components			
No.	Sign	Name	Description
1		Power LED	Indicates the status of power.
2		Power button	<ul style="list-style-type: none"><li>Press to power on the thin client.</li><li>Press to exit the Sleep mode.</li><li>Long press to <b>force power off</b> the thin client.</li></ul>
3		Microphone port	Connects to a microphone.
4		Headphone port	Connects to a set of headphones or a speaker system.
5		USB port	Connects to a USB device.

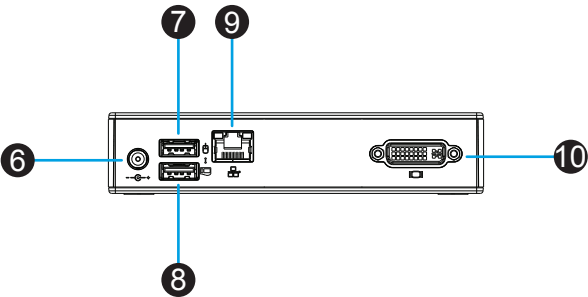


Rear Panel Components			
No.	Sign	Component Name	Description
6		DC IN	Connects to an AC adaptor.
7		USB port	Connects to a mouse.
8		USB port	Connects to a keyboard.
9		LAN port	Connects to a network.
10		DVI-I port	Connects to a monitor.

## 1.6 LED Indicators

Your t66 is equipped with a Power LED to indicate the state of power. The meanings of LED signals are described as follows:

LED	Signal	Meaning
Power LED	Off	The client is off.
	Blue	The client is on.
	Orange	The client is in Sleep mode.

The LAN port of your t66 is equipped with two LED indicators, showing the status of networking. The meanings of LED signals of the LAN port are described as follows:

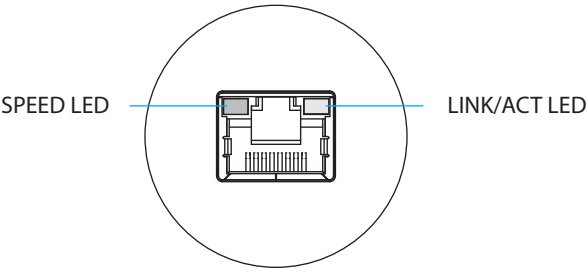

	SPEED LED (transmission rate)	LINK/ACT LED (linking/transmission activity)	Meaning
LED Signal	Off	Off	The client is not connected to a LAN.
	Off	Amber blinking	The client connects to a 10 Mbps LAN.
	Orange	Amber blinking	The client connects to a 100 Mbps LAN.
	Green	Amber blinking	The client connects to a 1000 Mbps LAN.



# 2

---

## Setting Up Your t66

This chapter provides detailed instructions on how to set up your t66 thin client.

### 2.1 Positioning Your t66

To mount your t66

Step 1: Understand Your VESA Mount Kit for t66 11

Step 2: Mount Your t66 12

### 2.2 Assembling the AC Adapter

How to assemble the AC adapter and its detached plug 13

### 2.3 Getting Connected

How to connect peripherals and power for t66 13





## 2.1 Positioning Your t66

There are two ways to position your t66:

- Put it on a desk or a desired place *horizontally*.
- Mount it on *the back of a monitor* using a VESA mount kit.



**NOTE**

- The VESA mount kit is an optional accessory for your t66. Your package may not contain a VESA mount kit. Contact your dealer if needed.


To mount your t66 on the back of a monitor, please follow the steps below:

**Step 1:** Understand Your VESA Mount Kit for t66

**Step 2:** Mount Your t66


### Step 1: Understand Your VESA Mount Kit for t66

Your t66's VESA mount kit consists of a bracket and six screws.

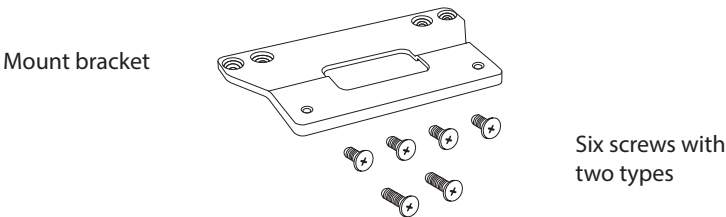


**Mount Bracket**

Refer to the following figure and descriptions for the VESA mount holes on the mount bracket for t66.

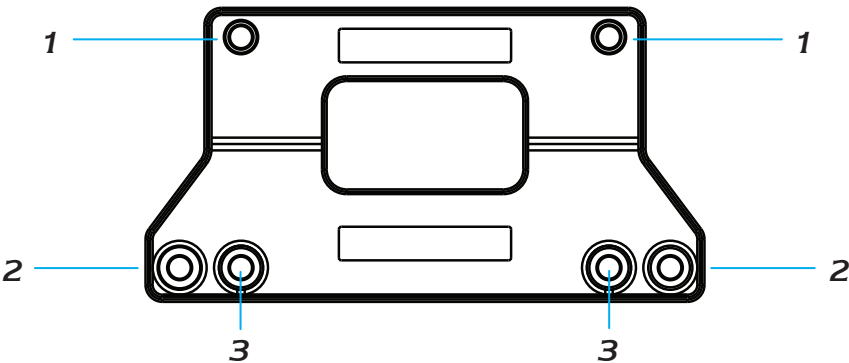

Mount Hole	Description
1	The VESA mount holes used to secure the bracket to your t66.
2	The VESA mount holes (with the distance of 100 mm) used to secure the bracket to a monitor.
3	The VESA mount holes (with the distance of 75 mm) used to secure the bracket to a monitor.

Mount Screws

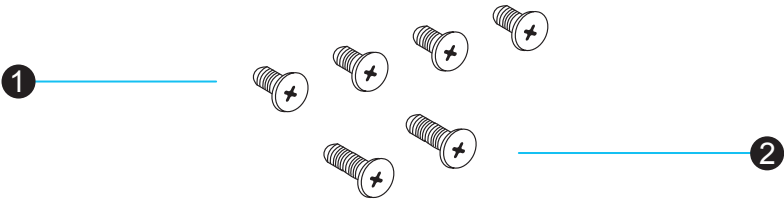


Screw Type	Number	Description
1	4	The screws used to secure the bracket to your t66 and to a monitor.
2	2	The longer screws used to secure the bracket to a monitor if the screws of type 1 cannot firmly secure the bracket and your t66 to the monitor.


Step 2: Mount Your t66

To mount your t66 on the back of the monitor, please do the following:

- 1. Place your t66 on a flat surface with the VESA mount hole side upward.
- 2. With the bracket side marked with **Atrust** facing downward, align two mount holes on the bracket with two mount holes on your t66 such that the bracket projects out and is closer to the rear panel than the front one as shown below, and then secure the bracket to your t66 with two (2) screws of type 1.

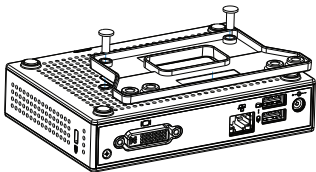


- 3. Align the mount holes on the bracket with the mount holes on the back of the monitor, and then secure the bracket to the monitor with two (2) screws of 1 or 2. Ensure that the rear panel of your t66 is **facing downward** as shown below.

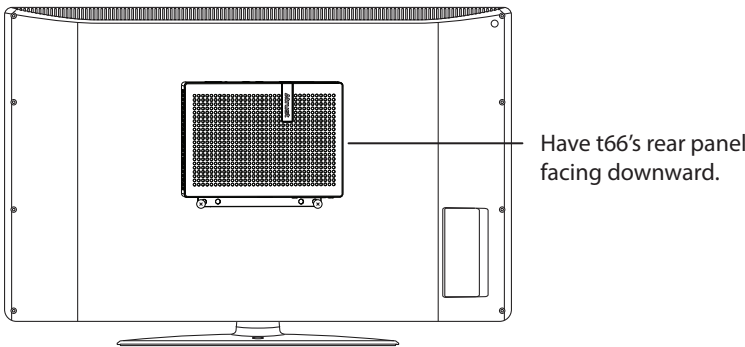

## 2.2 Assembling the AC Adapter

To assemble the AC adapter for your t66, please do the following:

1. Unpack your thin client package and take out the AC adapter and its detached plug.
2. Slide the plug into the AC adapter until it clicks into place.

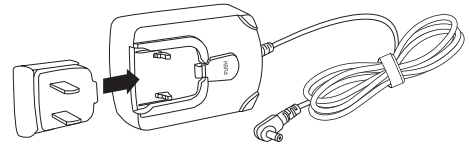

### NOTE

- The supplied plug may vary, depending on different areas.

## 2.3 Getting Connected

To make connections for your t66, please do the following:

1. Connect your t66 to your local network with an Ethernet cable.
2. Connect a keyboard and mouse to your t66.
3. Connect and **turn on** the monitor.



### NOTE

- In case that only the VGA monitor is available, use the supplied DVI-I to VGA adapter to connect your t66 and monitor.
- Please note that you need to connect and turn on your monitor **before** powering up your thin client. Otherwise, the client may fail to set an appropriate resolution for the monitor.

4. Connect your t66 to a power outlet using the AC adapter included in the package.



### NOTE

- For detailed instructions on how to assemble the supplied AC adapter, please refer to section "2.2 Assembling the AC Adapter" on page 13.

5. Connect other peripherals for your t66 if needed.



# 3

---

## Getting Started

This chapter provides the basics of how to use your t66.

### 3.1 Learning the Basics

Topic 1: Powering On Your t66	18
Topic 2: Configuring the Time Zone	19
Topic 3: Returning to the Quick Connection Screen	20
Topic 4: Accessing Desktops or Applications	21



## 3.1 Learning the Basics

The following topics will guide you through the basics of using your t66:

**Topic 1:** Powering On Your t66

**Topic 2:** Configuring the Time Zone

**Topic 3:** Returning to the Quick Connection Screen (if needed)

**Topic 4:** Accessing Desktops or Applications

- Microsoft Remote Desktop Services (RDP sessions)
- Citrix Services (ICA sessions)
- VMware View or Horizon View Services (View sessions)



### NOTE

- Three client modes are available for your t66:


No.	Mode	Description
1	Appliance	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
2	Autostart	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
3	Quick Connection	<p><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</p>

- In Quick Connection mode, you can access Microsoft Remote Desktop /Citrix / VMware View or Horizon View services **quickly** without much client configuration required. The main purpose of this chapter is to guide you through the use of your t66 under the Quick Connection mode.
- To understand other modes, configure advanced settings, and customize your t66, please refer to chapter 4 “Configuring Client Settings” on page 35.

Topic 1: Powering On Your t66

To start using your t66, please do the following:


- 1. Ensure that your monitor is *connected and turned on*.

**NOTE**

- Please note that you need to connect and turn on your monitor *before* powering up the thin client. Otherwise, the client may fail to set an appropriate resolution for the connected monitor.

- 2. Press the Power button to turn on the client. Wait a moment for *Atrust Quick Connection screen* to appear.
- 3. (a) Go to [Topic 2](#) to set the time zone for the *first time* use.  
(b) Go to [Topic 4](#) if the time zone had been set.

Atrust Quick Connection Screen

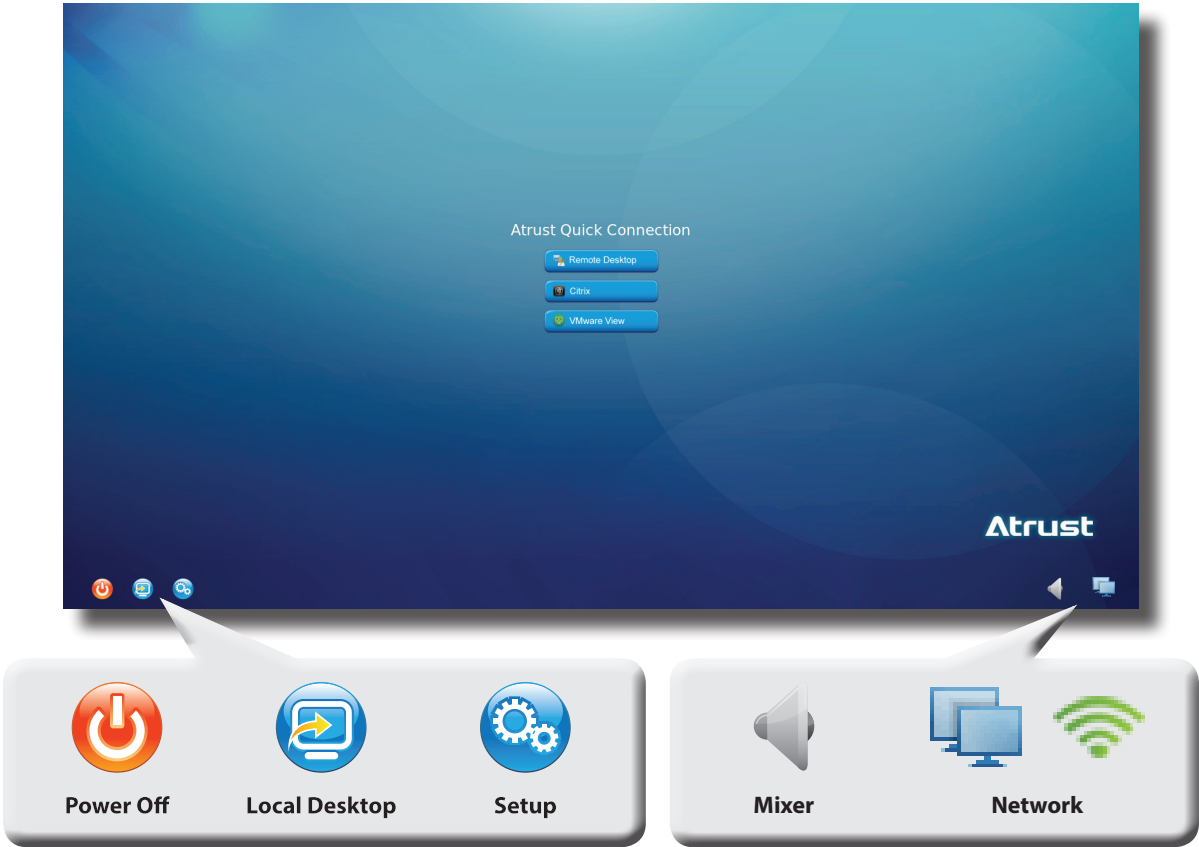


Power Off	Click the icon to suspend, shut down, or restart the system.
Local Desktop	Click the icon to enter the local Linux desktop. To return to this screen from the local Linux desktop, see <a href="#">Topic 3</a> .
Setup	Click the icon to launch Atrust Client Setup.
Mixer	Click the icon to configure audio settings.
Network	Indicates the network type (wired or wireless) and status. Click the icon to configure network settings.




## Topic 2: Configuring the Time Zone

To set the time zone for your t66, please do the following:

1. Click the **Setup**  icon to launch Atrust Client Setup.


### Atrust Client Setup

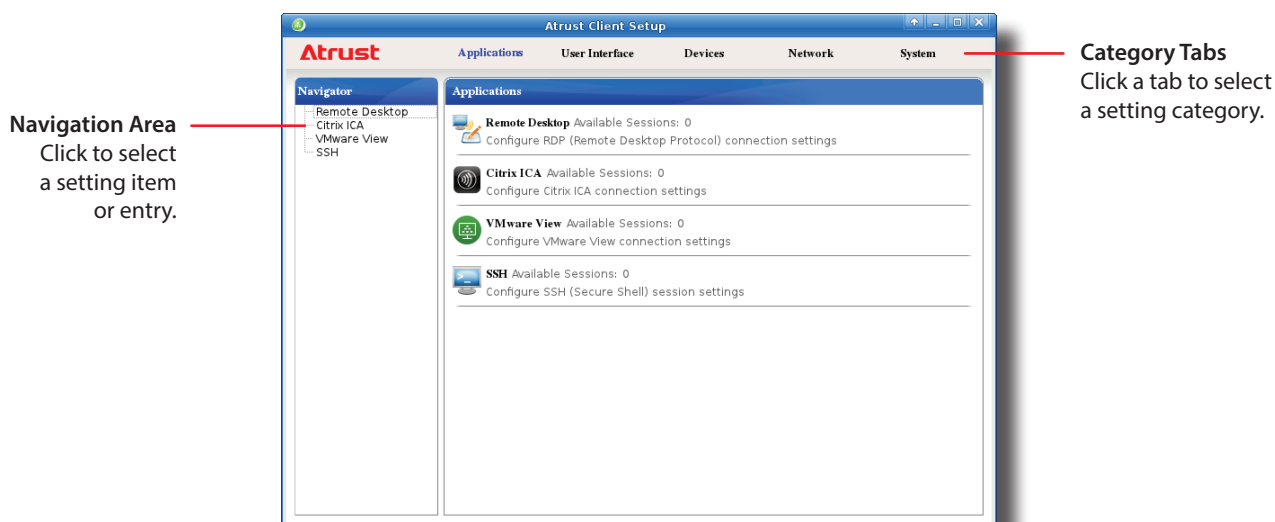

#### NOTE

- For detailed instructions on how to configure client settings and customize your t66 with Atrust Client Setup, please refer to chapter 4 "Configuring Client Settings" on page 35.

2. On Atrust Client Setup, click **System** > **Time Zone**.

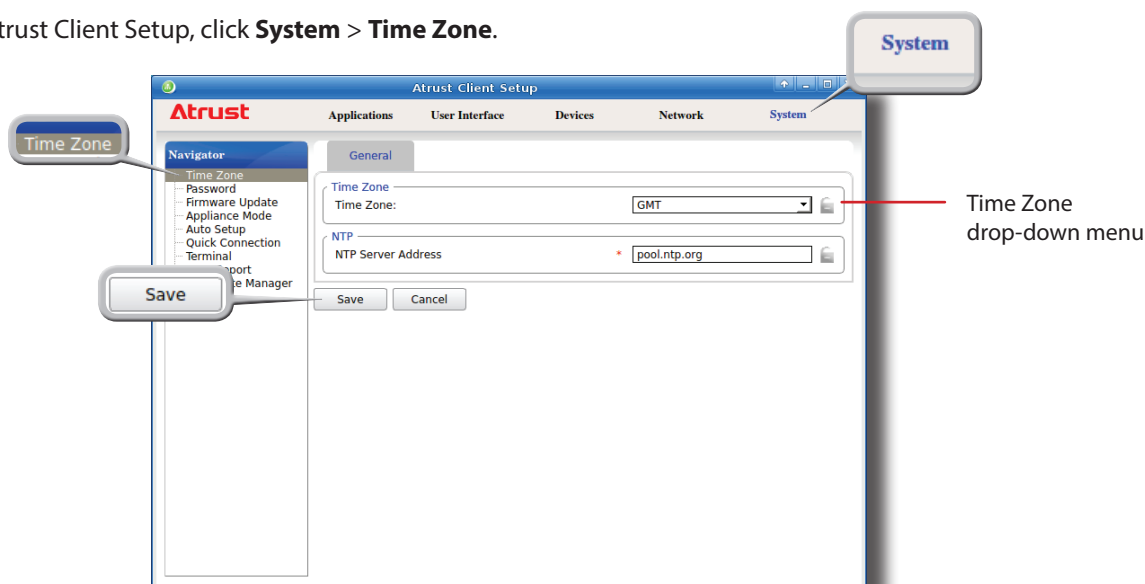


3. Click the Time Zone drop-down menu to select the desired time zone.
4. Click **Save** to apply, and then close Atrust Client Setup.

### Topic 3: Returning to the Quick Connection Screen

To return to *Atrust Quick Connection screen* when on local Linux desktop, please double click **Atrust Quick Connection** on that desktop.


#### Local Linux Desktop

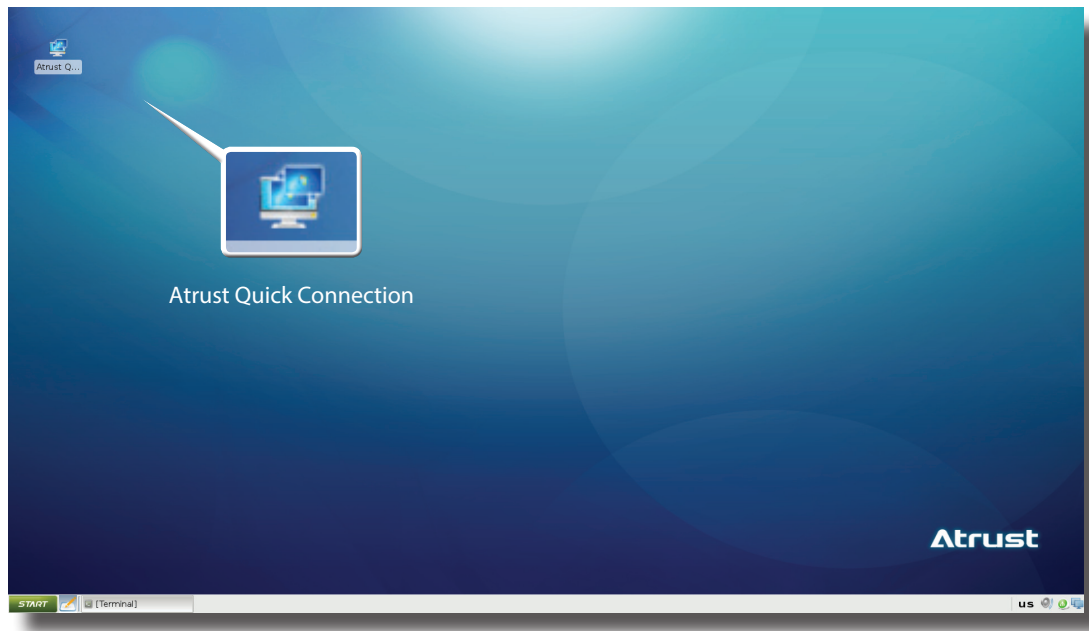

Topic 4: Accessing Desktops or Applications

Through Atrust Quick Connection screen, you can access three types of desktop virtualization services: **Remote Desktop**, **Citrix**, and **VMware View**.


Atrust Quick Connection Screen

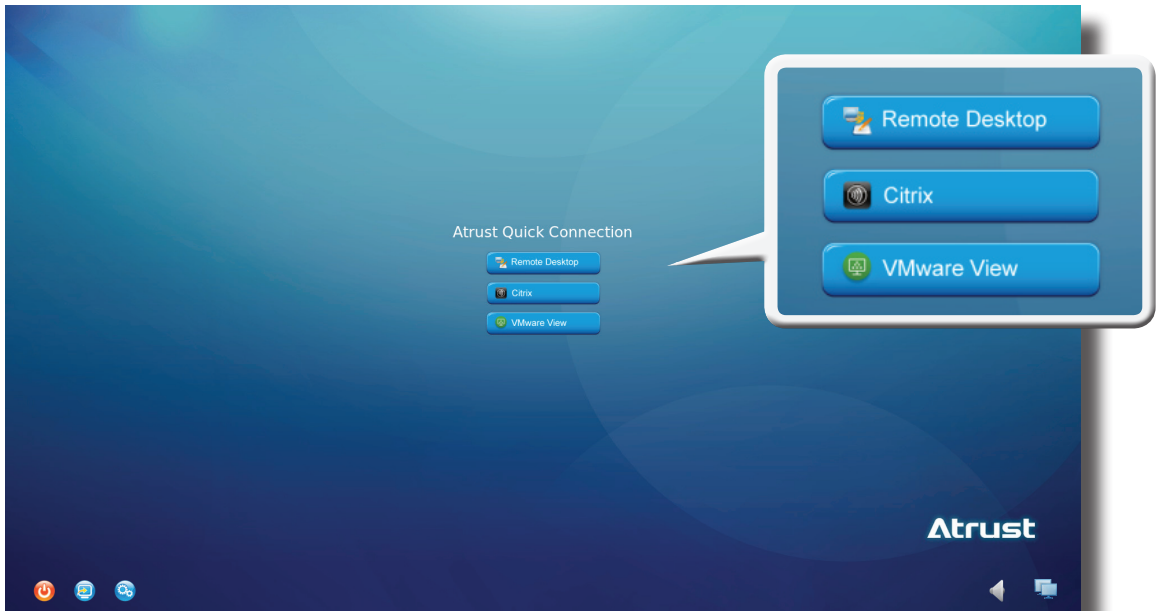


Icon	Description	Page
Remote Desktop	Click to access Microsoft Remote Desktop services.	22
Citrix	Click to access Citrix XenApp, XenDesktop, or VDI-in-a-Box services.	23
VMware View	Click to access VMware View or Horizon View services.	32

## Accessing Microsoft Remote Desktop Services

To access Microsoft Remote Desktop services, please do the following:

1. Click  **Remote Desktop** on Atrust Quick Connection screen (see the screen in [Topic 4](#)).
2. On the appeared window, type in the computer name or IP address of the server, user name, password, and domain (if any), and then click **Connect**.

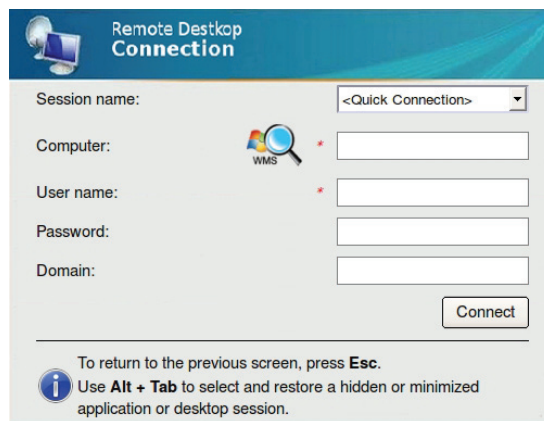


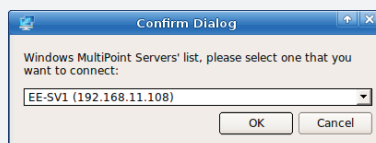
The image shows the 'Remote Desktop Connection' window. It has a title bar with a computer icon and the text 'Remote Desktop Connection'. Below the title bar, there are several input fields: 'Session name:' with a dropdown menu showing '<Quick Connection>', 'Computer:' with a magnifying glass icon and a red asterisk, 'User name:' with a red asterisk, 'Password:', and 'Domain:'. A 'Connect' button is at the bottom right. At the bottom of the window, there is an information icon and text: 'To return to the previous screen, press **Esc**. Use **Alt + Tab** to select and restore a hidden or minimized application or desktop session.'



### NOTE

- To discover available Windows MultiPoint Server systems over your network, please do the following:

1. Click  on the left of the Computer field.
2. Upon completion, a window appears with the search result.




3. Click the drop-down menu to select the desired system, and then click **OK**.
  4. The IP address of the selected system will appear in the Computer field.
- To return to *Atrust Quick Connection screen* (see the screen in [Topic 4](#)), press **Esc**.

3. The remote desktop will be displayed on the screen.


Accessing Citrix Services

Connecting to the Server

To connect to the server through which virtual desktops and applications are accessible, please do the following:

1. Click  Citrix on Atrust Quick Connection screen (see the screen in [Topic 4](#)).
2. On the appeared *Atrust Citrix Connection screen*, enter the IP address / URL / FQDN of the server, and then click **Log On**.

Atrust Citrix Connection Screen

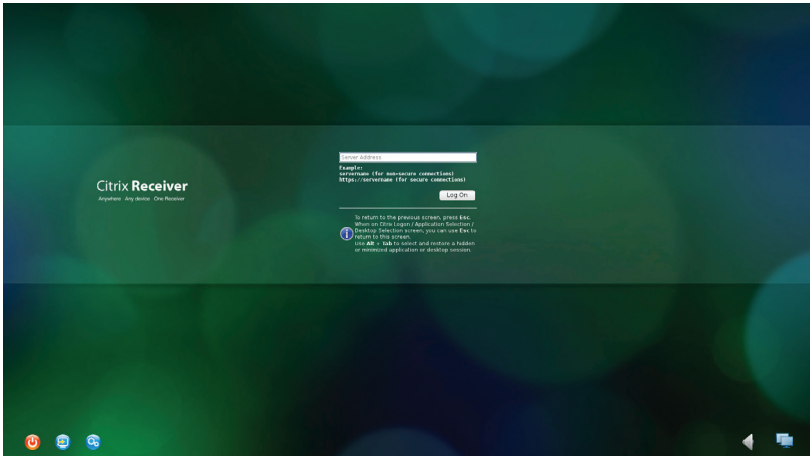

NOTE

- For newer versions of XenDesktop and XenApp, you may need to further specify the *sub-path* of the server. Refer to the following table for details:

Citrix Product	Component to Connect	Connection Address
XenApp 6.5 or earlier	Web Interface	IP / URL / FQDN
XenDesktop 5.6 or earlier	Web Interface	IP / URL / FQDN
XenApp and XenDesktop 7.5	StoreFront	IP / URL / FQDN <b>plus sub-path</b>
		<b>For example —</b> <b>FQDN:</b> X75.CTX.poc <b>Sub-path:</b> /Citrix/StoreWeb (default) <b>Connection Address:</b> X75.CTX.poc/Citrix/StoreWeb

- FQDN is the acronym of Fully Qualified Domain Name.
- To return to *Atrust Quick Connection screen* (see the screen in [Topic 4](#)), press **Esc**.

### Logging On to Citrix Services

When connected to the server, the **Citrix Logon screen** appears. The appeared screen and required credentials for Citrix services may vary with the service type and version.



#### NOTE


- A warning message “This Connection is Untrusted” might appear. Consult the IT administrator for details and ensure the connection is secure **first**. To import a security certificate, please refer to section “4.2.14 Importing Certificates for Remote Computers” on page 63. To bypass, click **I Understand the Risks > Add Exception > Confirm Security Exception**.

The following are some examples of Citrix Logon screens.

#### XenDesktop 5.6 Platinum:

##### Citrix Logon Screen

Type the required  
user name, password,  
and then click  
**Log On** to access  
virtual desktops.

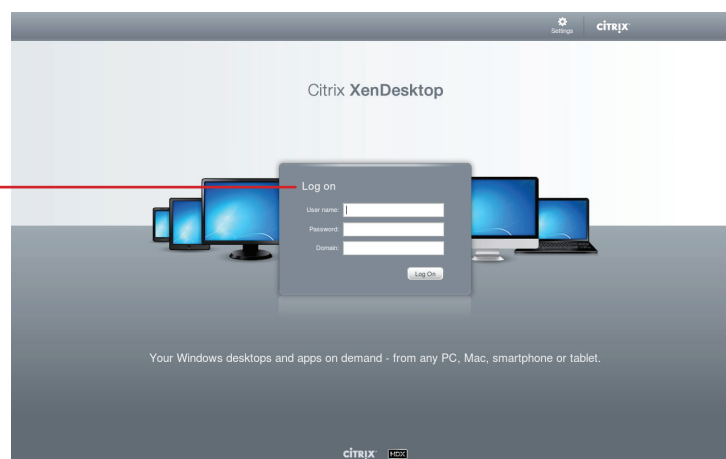


#### NOTE

- To return to Atrust Quick Connection screen, press **Esc**.

## XenApp 6.0 Fundamentals:

### Citrix Logon Screen

Type the required user name, password, domain, and then click **Log On** to access virtual applications.

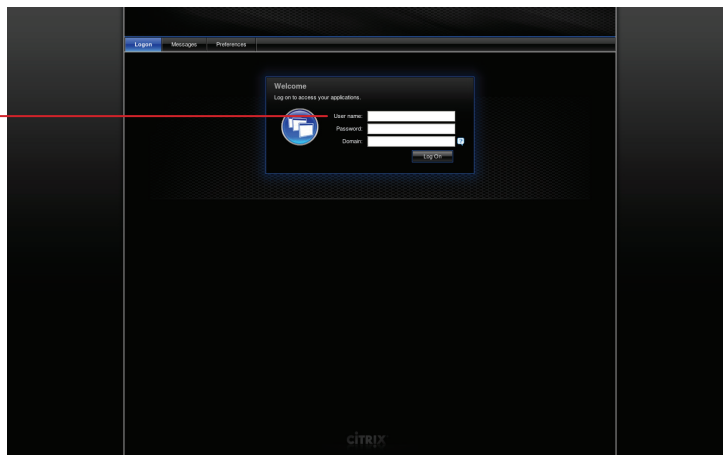


#### NOTE

- To return to Atrust Quick Connection screen, press **Esc**.
- If your XenApp doesn't belong to any domain, type the computer name of the server in the Domain field.

## XenApp 6.5 Platinum:

### Citrix Logon Screen

Type the required user name, password, domain, and then click **Log On** to access virtual applications.

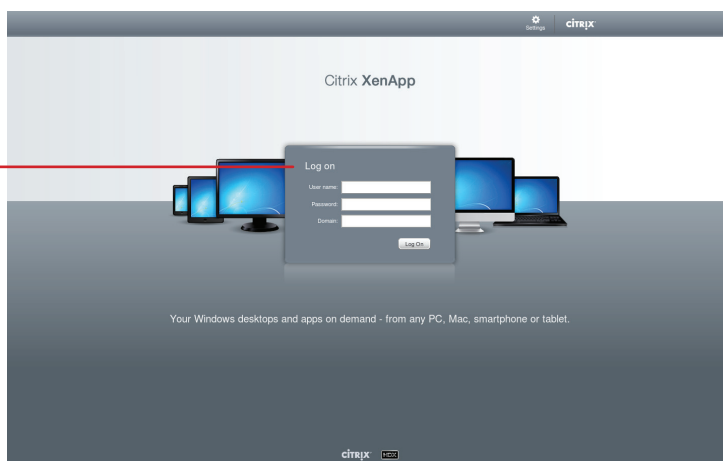


#### NOTE

- To return to Atrust Quick Connection screen, press **Esc**.
- If your XenApp doesn't belong to any domain, type the computer name of the server in the Domain field.

**VDI-in-a-Box:**

**Citrix Logon Screen**

Type the required user name, password, and then click **Log On** to access virtual desktops.

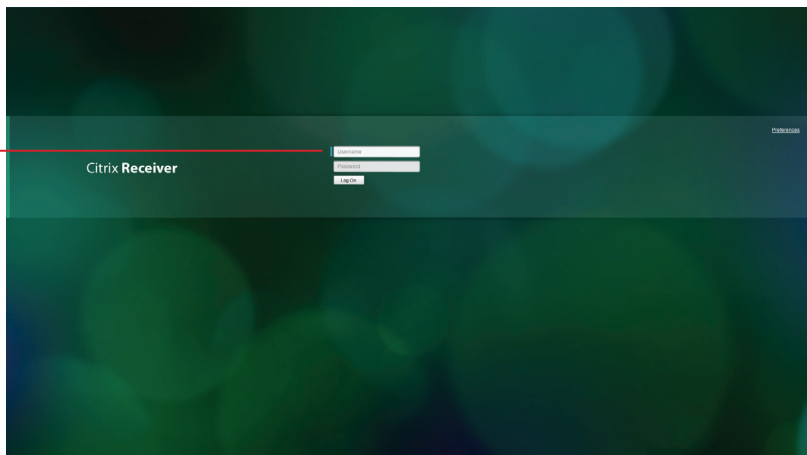


**NOTE**

- To return to Atrust Quick Connection screen, press **Esc**.

**XenApp and XenDesktop 7.5 Platinum:**

**Citrix Logon Screen**

Type the required user name, password, and then click **Log On** to access virtual desktops or applications

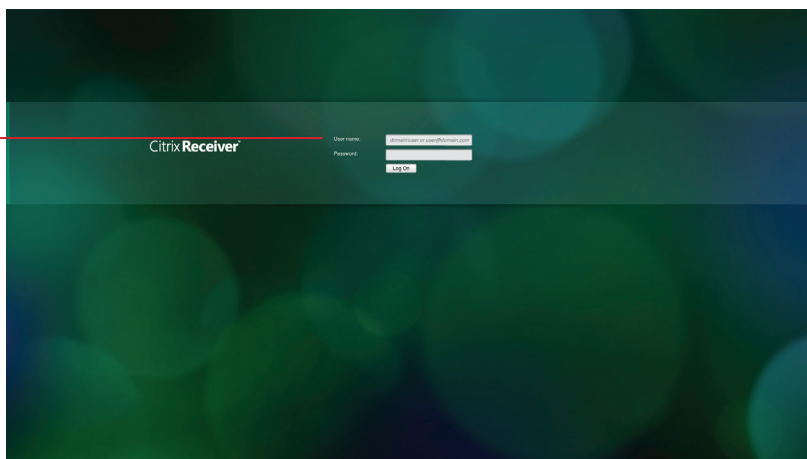

**NOTE**

- To return to Atrust Quick Connection screen, press **Esc**.



### Accessing Virtual Desktops and Applications

You will enter the **Desktop Selection** or **Application Selection screen** after login. On the screen you can click to select the desired desktop or application(s).



#### NOTE

- You might enter the virtual desktop directly if only one type of virtual desktop is assigned to the provided credentials.



#### TIP


- Use **Alt + Tab** to select and restore a hidden or minimized application or desktop.

The following are some examples of Selection screens and delivered desktops and applications.

#### XenDesktop 5.6 Platinum:

1. The **Desktop Selection screen** appears after login.

#### Desktop Selection Screen

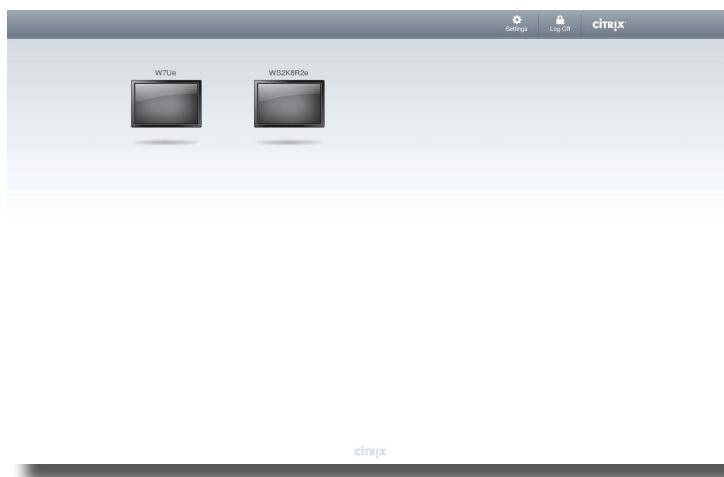

2. Click to select the desired desktop.
3. The selected virtual desktop will be displayed on the screen.


## Virtual Desktop Example: Windows 7 Ultimate



### XenApp 6.5 Platinum:

1. The *Application Selection screen* appears after login.


### Application Selection Screen

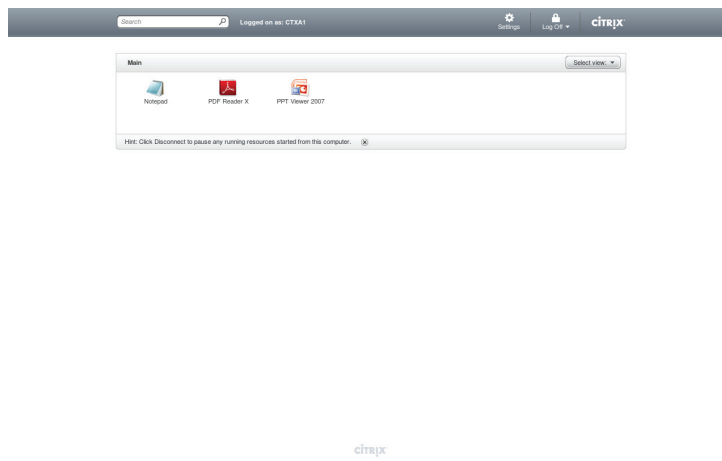

2. Click to select the desired application(s).
3. The selected application(s) will be displayed on the screen.

## Virtual Application Examples

### PowerPoint Viewer, Adobe Reader, and Notepad

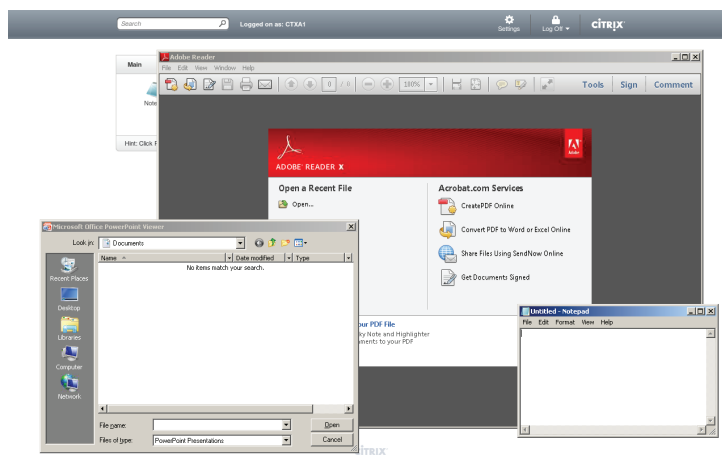


#### NOTE

- Clicking on Application Selection screen will bring the screen to the front and leave all launched application windows hidden behind. Use **Alt + Tab** to select and restore a hidden or minimized application window.
- Exiting a virtual desktop or application will return to the *Desktop Selection* or *Application Selection screen*. On the screen, you can:
  - ✧ Click to launch another virtual desktop if any or to launch other applications.
  - ✧ Click **Log Off** on the top of the screen to return to the *Citrix Logon screen*.
  - ✧ Press **Esc** to return to *Atrust Quick Connection screen* directly.

## XenApp and XenDesktop 7.5 Platinum:

1. The *Application Selection / Desktop Selection screen* appears after logon.

### Application Selection Screen

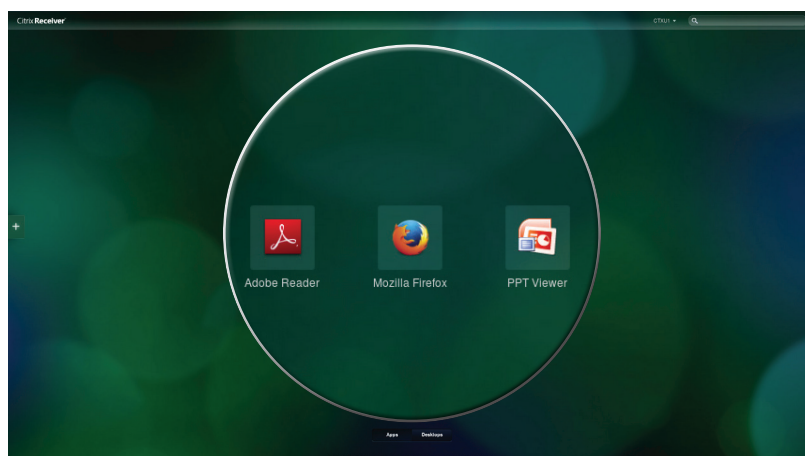


You might see this screen when you log in to XenApp 7.5 for first time. Just click to add your favorite apps from a list.




Two buttons may be available for your to switch between **Application** and **Desktop Selection screen**, depending on your server-side deployment.

### Desktop Selection Screen

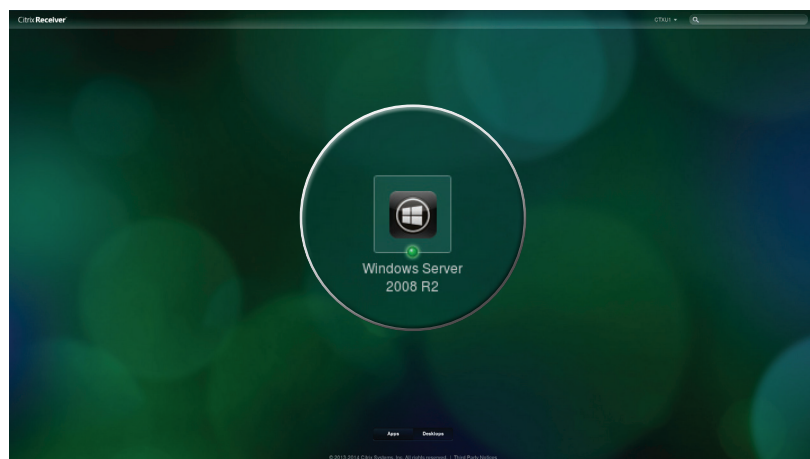


2. Click to select the desired application(s) or desktop.
3. The selected application(s) or desktop will be displayed on the screen.

## Virtual Desktop Example: Windows Server 2008 R2

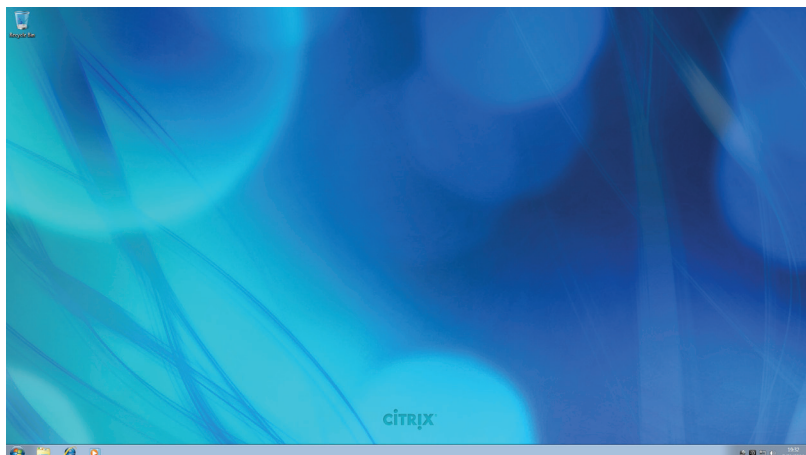

## Virtual Application Examples Adobe Reader, Mozilla Firefox, and PowerPoint Viewer

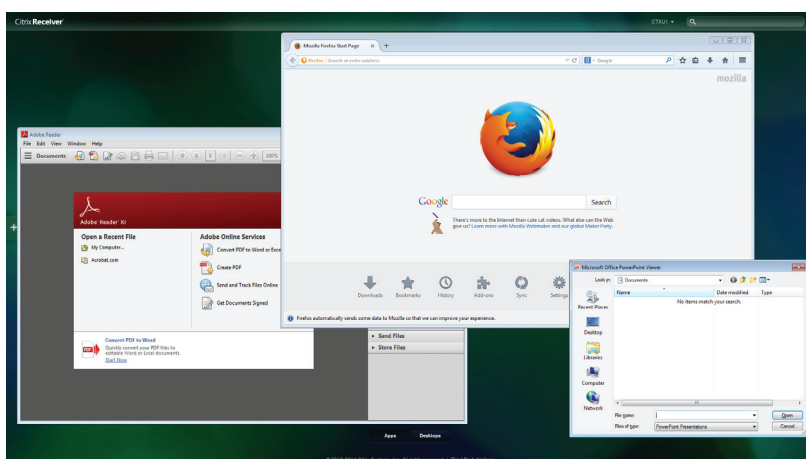


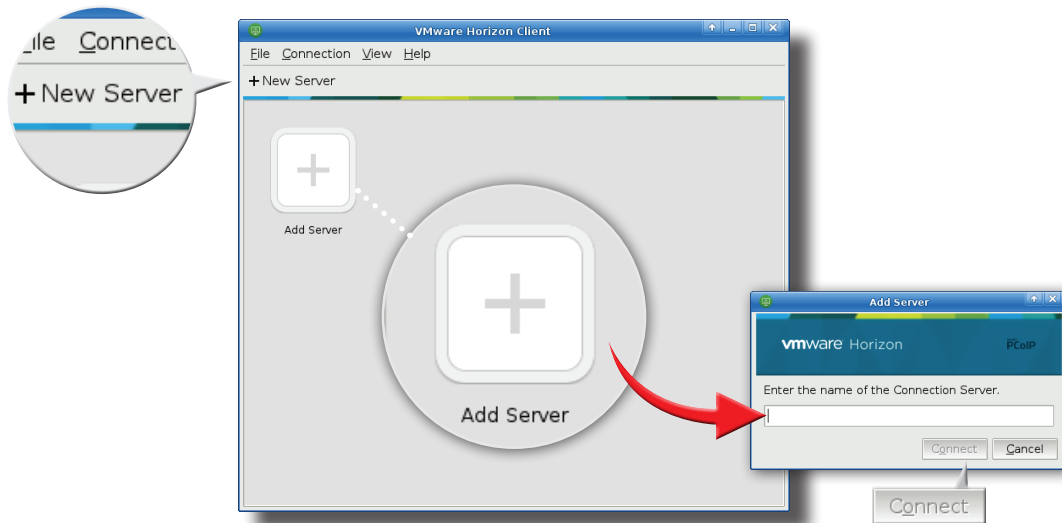
### NOTE

- Clicking on Application Selection screen will bring the screen to the front and leave all launched application windows hidden behind. Use **Alt + Tab** to select and restore a hidden or minimized application window.
- Exiting a virtual desktop or application will return to the **Desktop Selection** or **Application Selection screen**. On the screen, you can:
  - Click to launch another virtual desktop if any or to launch other applications.
  - Click **Log Off** on the top of the screen to return to the **Citrix Logon screen**.
  - Press **Esc** to return to **Atrust Quick Connection screen** directly.

## Accessing VMware View or Horizon View Services

To access VMware View or Horizon View services, please do the following:


1. Click  on Atrust Quick Connection screen (see the screen in [Topic 4](#)).
2. On the opened window, double-click **Add Server** icon or click **New Server** in the top-left corner. A window appears prompting for the name or IP address of the VMware View Connection Server.
3. Enter the required information, and then click **Connect**.



### NOTE

- To return to *Atrust Quick Connection screen* (see the screen in [Topic 4](#)), close the opened window.


4. A Welcome window might appear, click **OK** to continue.
5. A window appears prompting for the credentials. Enter your user name, password, click the Domain drop-down menu to select the domain, and then click **OK**.

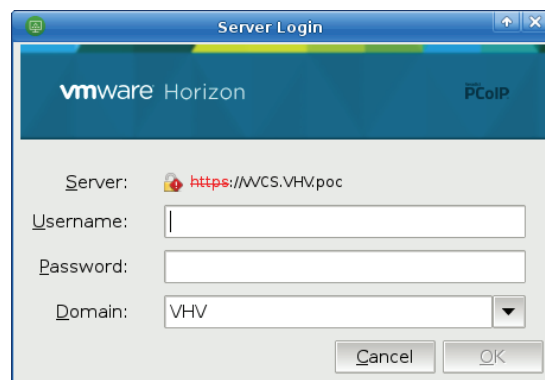


**NOTE**

- A window might appear with a certificate message about the remote server. Consult the IT administrator for details and ensure the connection is secure **first**. To import a security certificate, please refer to section “4.2.14 Importing Certificates for Remote Computers” on page 63. To bypass, click **Connect Insecurely**.

6. The Desktop and Application list appears with available desktops and/or applications for the provided credentials. Double click to select the desired desktop or application.

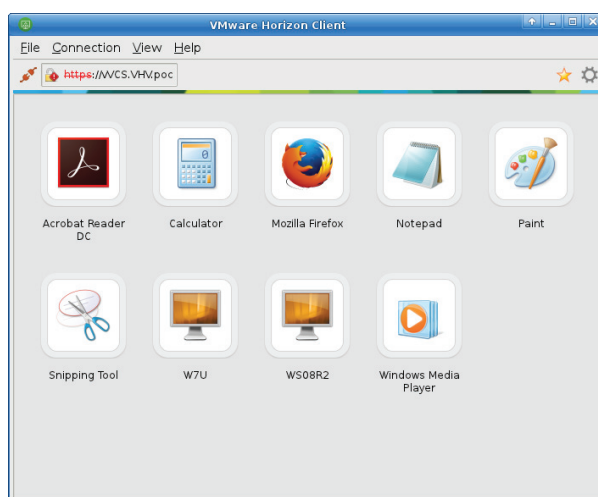


7. The virtual desktop or application will be displayed on the screen.

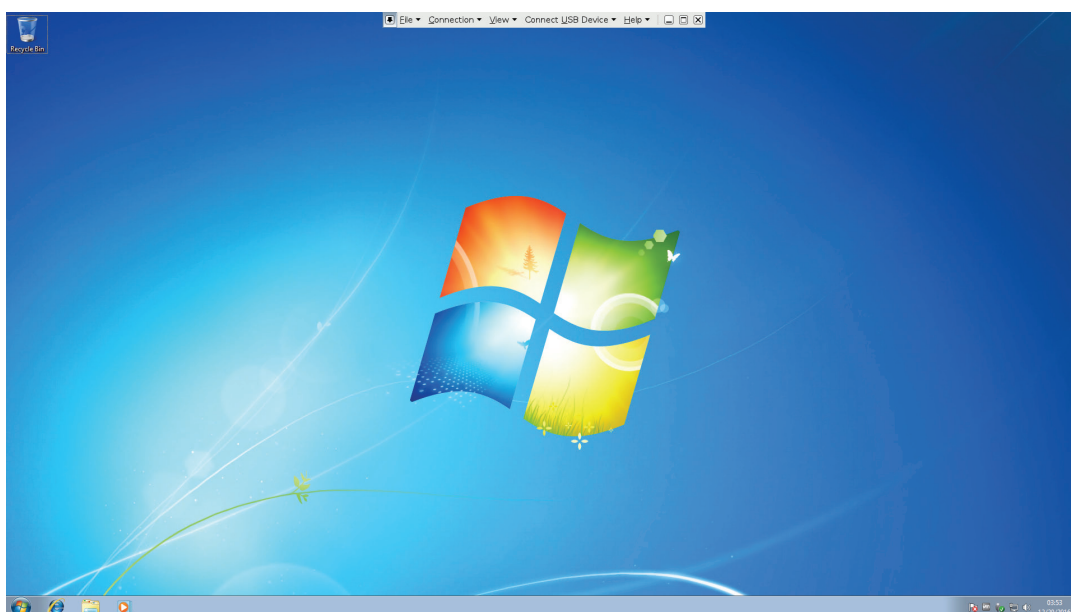**Virtual Desktop Example**  
Windows 7 Ultimate




## Virtual Application Examples (VMware Horizon 6 with View) Adobe Reader, Windows Media Player, Mozilla Firefox, and Calculator

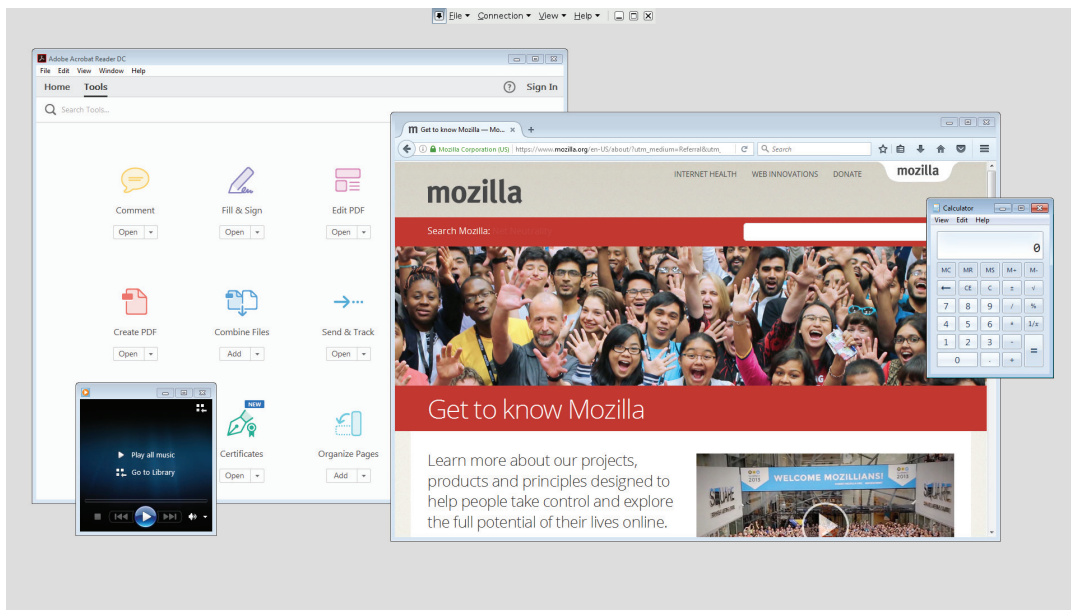


### NOTE

- Your desktop or application will be displayed in full screen. You can:
  - Click **File > Return to Desktop and Application List** on the top tool bar to recall the Desktop and Application list.

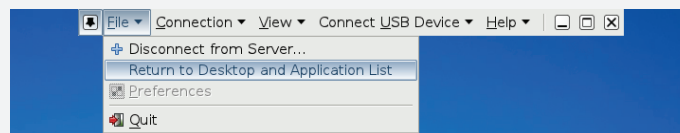

- Click **View** on the top tool bar to switch to a virtual desktop or application.

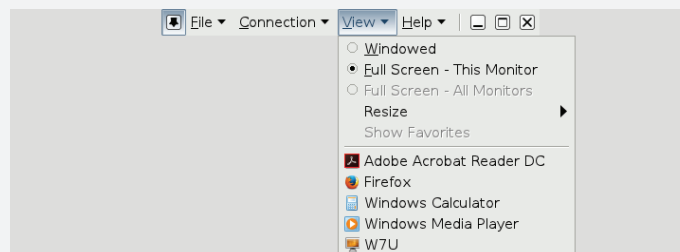



# 4

---

## Configuring Client Settings

This chapter provides instructions on how to configure advanced settings and customize your t66 with Atrust Client Setup.

<b>4.1 Atrust Client Setup</b>	
Interface overview	37
Available settings at a glance	38
<b>4.2 Configuring System Settings</b>	
System tab overview	39
Available settings at a glance	40
<b>4.3 Configuring User Interface Settings</b>	
User Interface tab overview	69
Available settings at a glance	70
<b>4.4 Configuring External Device Settings</b>	
Devices tab overview	80
Available settings at a glance	81
<b>4.5 Configuring Network Settings</b>	
Network tab overview	88
Available settings at a glance	89
<b>4.6 Configuring Service Access Settings</b>	
Applications tab overview	112
Available settings at a glance	113




## 4.1 Atrust Client Setup


Your t66 comes with Atrust Client Setup, the built-in local client management console to help you configure client settings and customize your t66.

### 4.1.1 Interface Overview

To access Atrust Client Setup on your t66, please do the following:

1. On Atrust Quick Connection screen, click the **Setup**  icon to launch Atrust Client Setup.
2. The Atrust Client Setup window appears.

#### Interface Overview

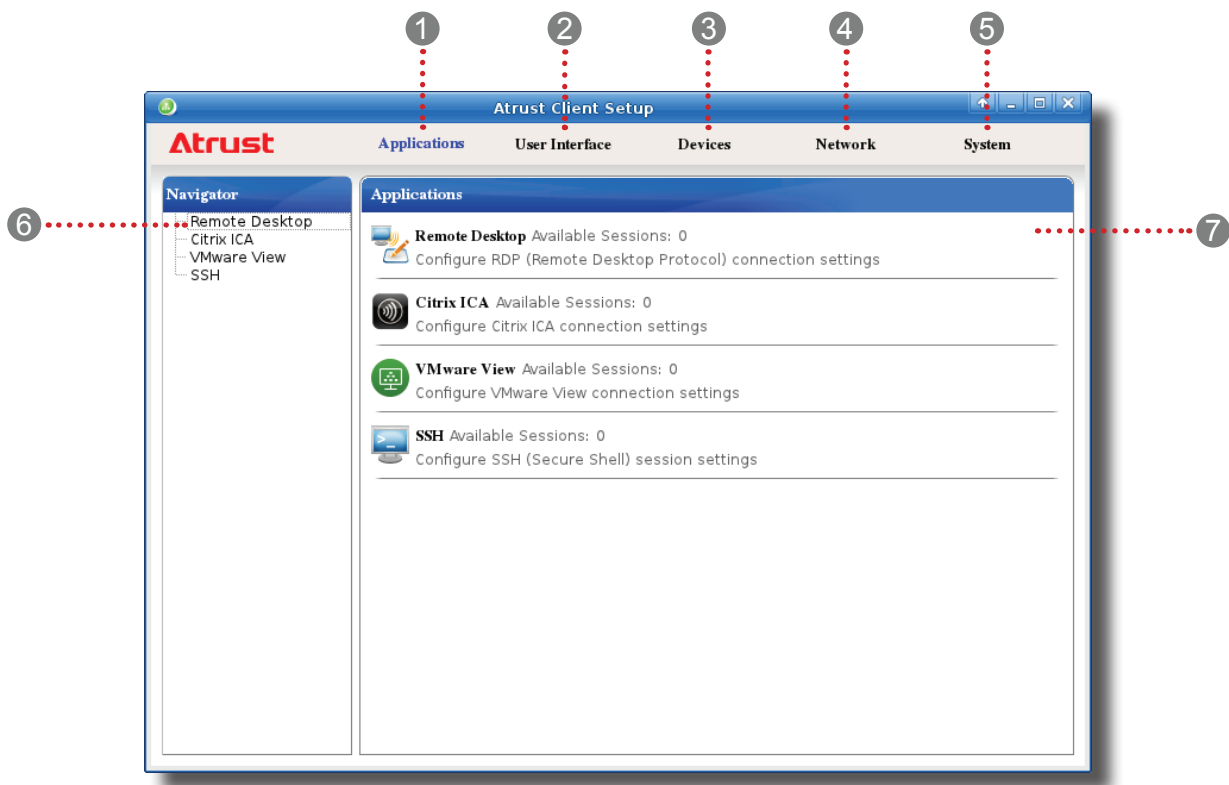

#### Interface Elements

No.	Name	Description
1	Applications tab	Click to configure settings for service access through the client.
2	User Interface tab	Click to configure settings for the user interface of the client.
3	Devices tab	Click to configure settings for external devices of the client.
4	Network tab	Click to configure settings for the connectivity of the client to networks and servers.
5	System tab	Click to configure settings for the operation and maintenance of the client.
6	Navigation area	Click to select a setting item under a selected tab or to select a setting entry under a selected setting item.
7	Configuration area	Configures setting values when a setting item or entry is selected.

### 4.1.2 Client Settings at a Glance

The following table provides a brief description of each setting item under five main setting categories.

Tab	Setting Item	Section	Page
System	<ul style="list-style-type: none"> <li>• Configuring time zone and time server</li> <li>• Configuring passwords</li> <li>• Configuring remote assistance settings</li> <li>• Updating firmware</li> <li>• Enabling/Disabling the Appliance mode</li> <li>• Enabling Auto Setup</li> <li>• Enabling/Disabling Quick Connection</li> <li>• Enabling/Disabling the execution of the text-based (command-line) functions</li> <li>• Collecting event logs, capturing related screens, and then uploading files for error reporting</li> <li>• Importing certificates for remote computers</li> <li>• Enabling/Disabling Auto Registration</li> <li>• Viewing system information</li> </ul>	4.2 Configuring System Settings	39
User Interface	<ul style="list-style-type: none"> <li>• Configuring display settings</li> <li>• Customizing desktop and system language</li> <li>• Hiding/Showing Quick Access shortcuts</li> <li>• Using a custom wallpaper</li> <li>• Adjusting keyboard settings</li> <li>• Adjusting mouse settings</li> <li>• Configuring screensaver settings</li> </ul>	4.3 Configuring User Interface Settings	69
Devices	<ul style="list-style-type: none"> <li>• Configuring settings for USB storage devices</li> <li>• Configuring settings for audio devices</li> <li>• Configuring settings for local/network printers</li> </ul>	4.4 Configuring External Device Settings	80
Network	<ul style="list-style-type: none"> <li>• Configuring wired network settings</li> <li>• Enabling/Disabling Wake On LAN</li> <li>• Configuring VPN settings</li> <li>• Creating the mapping of IP addresses to the names of host servers</li> <li>• Creating the Failover Cluster list</li> <li>• Changing the host name of your client</li> <li>• Configuring wireless network settings</li> <li>• Configuring proxy settings for Web-based access to services</li> </ul>	4.5 Configuring Network Settings	88
Applications	<ul style="list-style-type: none"> <li>• Configuring Microsoft RDP connection settings</li> <li>• Configuring Citrix ICA connection settings</li> <li>• Configuring VMware View connection settings</li> <li>• Configuring SSH connection settings</li> </ul>	4.6 Configuring Service Access Settings	112

## 4.2 Configuring System Settings

### 4.2.1 System Tab Overview












**System** tab enables you to configure settings for the operation and maintenance of clients. To access available settings of **System** tab, click the tab on Atrust Client Setup.

System Tab Overview



Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>System</b> tab.
2	Configuration area	Configures setting values when a setting item or entry is selected.

## 4.2.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
System	Time Zone		Click to configure the time zone and time server for your t66.	4.2.3	41
	Password		Click to configure the access privileges of Atrust Client Setup for t66 users.	4.2.4	42
			Click to configure settings for remote assistance.	4.2.5	44
	Firmware Update		Click to update firmware through the network. This feature is applicable to the client only when the client is managed by the remote Atrust Device Manager console.	4.2.6	46
	Appliance Mode		Click to enable/disable the Appliance mode to allow/disallow the automatic RDP / ICA / View sessions. In Appliance mode, the client starts up directly with the desired RDP / ICA / View session and performs the configured action after exiting the session.	4.2.7	48
	Auto Setup		Click to enable Auto Setup to allow the client to get its preset configuration on startup and enter the desired user environment automatically.	4.2.8	52
	Quick Connection		Click to enable/disable the Quick Connection mode after system startup.	4.2.9	52
				4.2.10	55
	Terminal		Click to enable/disable the execution of the text-based (command-line) functions.	4.2.11	59
	Error Report		Click to collect error log and launch the screen capturing program for error reporting.	4.2.12	60
			Click to upload files to a specified FTP server for error reporting.	4.2.13	62
	Certificate Manager		Click to import or manage certificates for remote computers.	4.2.14	63
	Advanced		Click to configure advanced settings such as Auto Registration.	4.2.15	67
	System Information		Click to view system information.	4.2.16	68



### NOTE


- Atrust Device Manager is a remote and mass client management console, helping you remotely manage a large number of endpoint devices in a desktop virtualization infrastructure. For more information about Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

### 4.2.3 Configuring Time Zone and Time Server

The Time Zone setting allows you to configure the desired time zone and time server to get the accurate system time for your t66.

To set the desired time zone and time server, please do the following:

1. On Atrust Client Setup, click **System** > **Time Zone**.

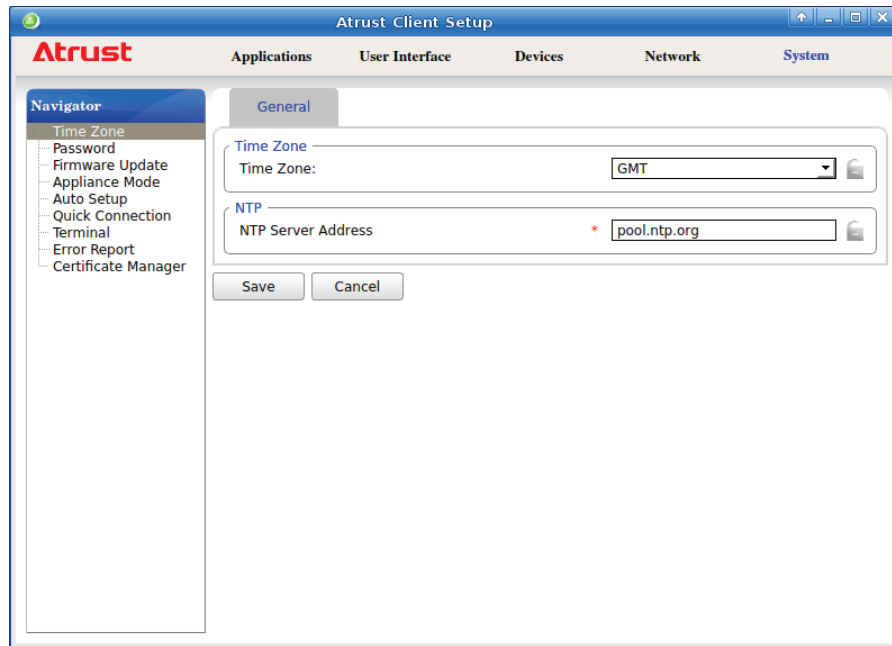

2. Under the Time Zone section, click the drop-down menu to select the desired time zone.
3. Under the NTP (Network Time Protocol) section, use the default or type in the desired time server.



#### NOTE

- The IP address of the default time server is **pool.ntp.org**. For more information on the default, please refer to the website for the NTP Pool Project at [www.pool.ntp.org](http://www.pool.ntp.org).
- Ensure the connectivity of your t66 to the network or Internet in order to get accurate time from the time server.

4. Click **Save** to apply.

#### 4.2.4 Configuring the Access Privileges and Passwords of Atrust Client Setup

You can configure the access privileges of Atrust Client Setup for t66 users by the Password setting.




#### NOTE

- All t66 users are allowed to access Atrust Client Setup by factory default. You can make changes as desired using this setting.


#### Setting Access Privileges and Password Only for Administrators

To set access privileges and password only for administrators, please do the following:

1. On Atrust Client Setup, click **System** > **Password**.

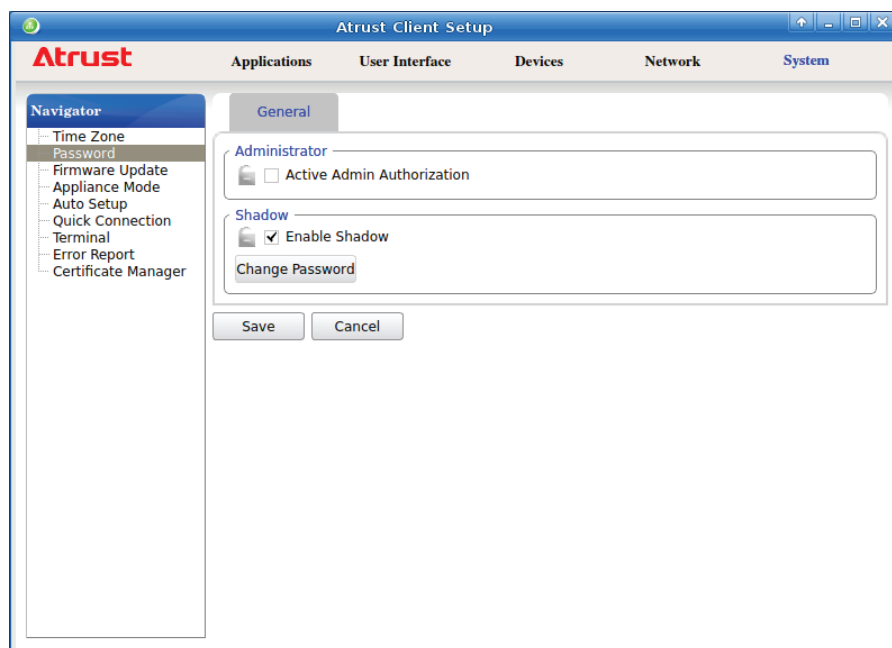

2. Under the Administrator section, click to check **Active Admin Authorization**.
3. The access privileges for administrators are granted and a window appears for you to set the password.

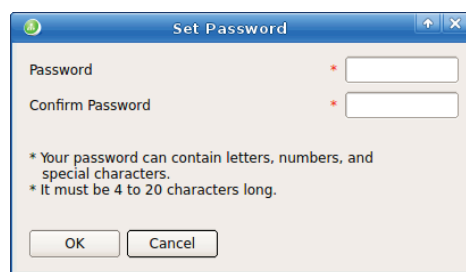


4. Type in the desired password, and then click **OK** to confirm.
5. Click **Save** to save all the changes.



### Setting Access Privileges and Password Also for Standard Users

To set access privileges and password also for standard users, please do the following:


1. On Atrust Client Setup, click **System > Password**.
2. Under the User section, click to check **Active User Authorization**.

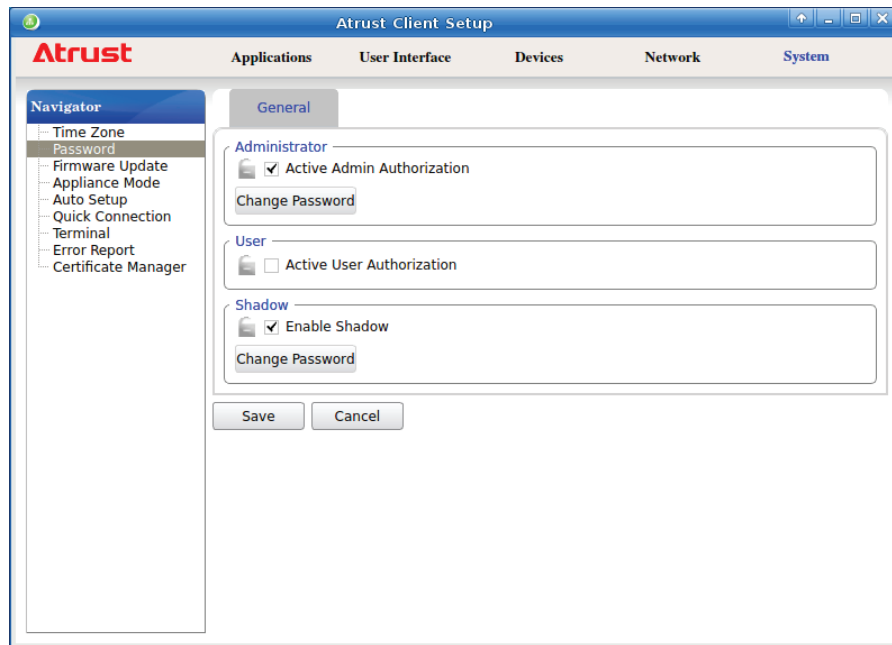

#### NOTE

- The User section appears only when **Active Admin Authorization** is checked.

3. The access privileges for standard users are granted and a window appears for you to set the password.

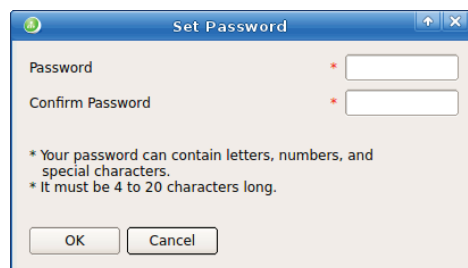

4. Type in the desired password, and then click **OK** to confirm.
5. Click **Save** to save all the changes.

### 4.2.5 Configuring Shadow Settings for Remote Assistance

The Shadow feature allows an administrator to remotely assist client users in resolving problems or configuring local settings. When this feature is enabled, an administrator can monitor and control a client from a remote computer just like a local user.




#### NOTE

- To use the Shadow feature on a remote computer, you need to install the Atrust Device Manager console and Java software on that computer, and add your t66 into a managed group under Atrust Device Manager. For details, please refer to the User's Manual for Atrust Device Manager.

To enable the Shadow feature and set the password for remote assistance, please do the following:

1. On Atrust Client Setup, click **System > Password**.

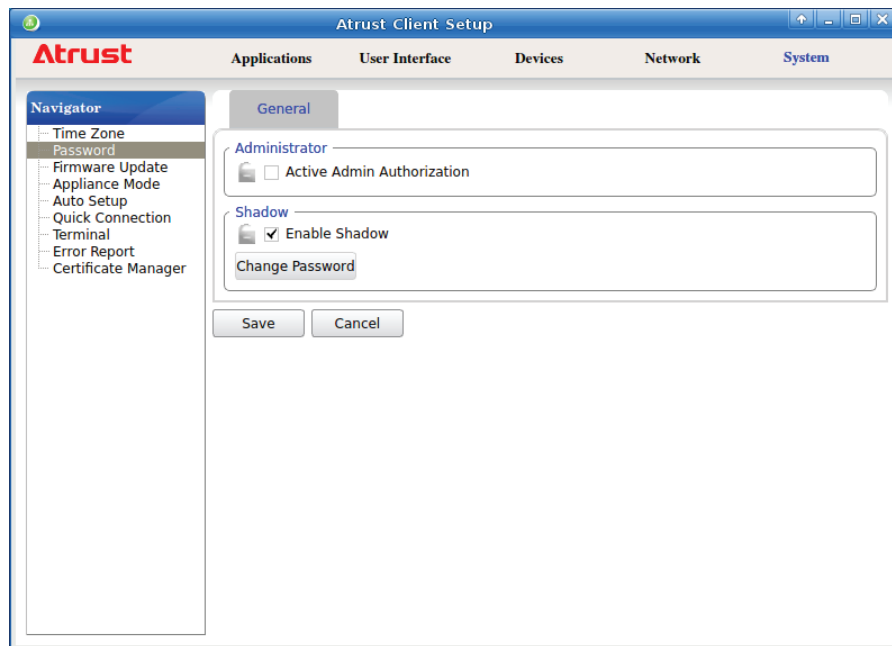


2. Under the Shadow section, click to check **Enable Shadow** if it's not checked.



#### NOTE

- By default, the Shadow feature is enabled. Click **Change Password**, and then follow the next step to set your password.


3. The Shadow feature is enabled and a window appears for you to set the password for remote assistance.

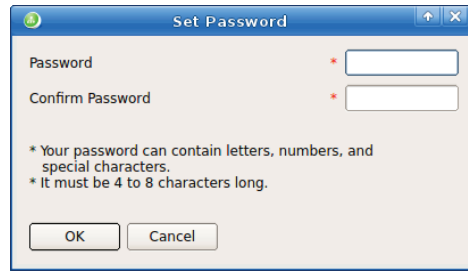**NOTE**

- On a remote computer, an administrator will need this password to use the Shadow feature (remote assistance) with the Atrust Device Manager console. For more information, please refer to the User's Manual of Atrust Device Manager.

4. Type in the desired password, and then click **OK** to confirm.
5. Click **Save** to save all the changes.

**NOTE**

- When the Shadow feature is performed from a remote Atrust Device Manager, on the target client, an icon  appears on the Taskbar of the local Linux desktop and a notification pops up in the bottom-right corner. If you are under the Quick Connection mode (the default for t66 thin clients), a notification would pop up in the upper-left corner on Atrust Quick Connection screen.

#### 4.2.6 Updating Firmware from the Management Computer

**Update Firmware** allows client users to update firmware from its management computer.




#### NOTE


- Ensure that your t66 has been added into a managed group under Atrust Device Manager installed on a remote computer, and that you have imported client firmware files into Atrust Device Manager. These are prerequisites of this feature.
- For more information on firmware update and Atrust Device Manager, please refer to the User Manual for Atrust Device Manager.

To update firmware from the management computer, please do the following:

1. On Atrust Client Setup, click **System > Firmware Update**.

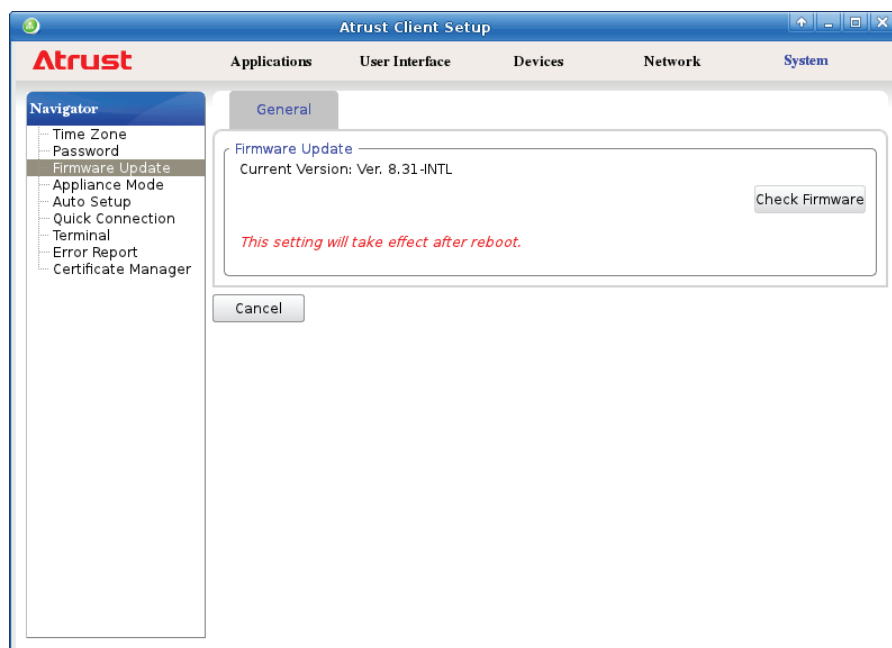


2. Under the Firmware Update section, click **Check Firmware**.
3. Upon completion, a window appears notifying you that the Firmware list has been loaded.



4. Click **Yes** to continue.

- Click the drop-down menus to select the desired firmware version and other update options.

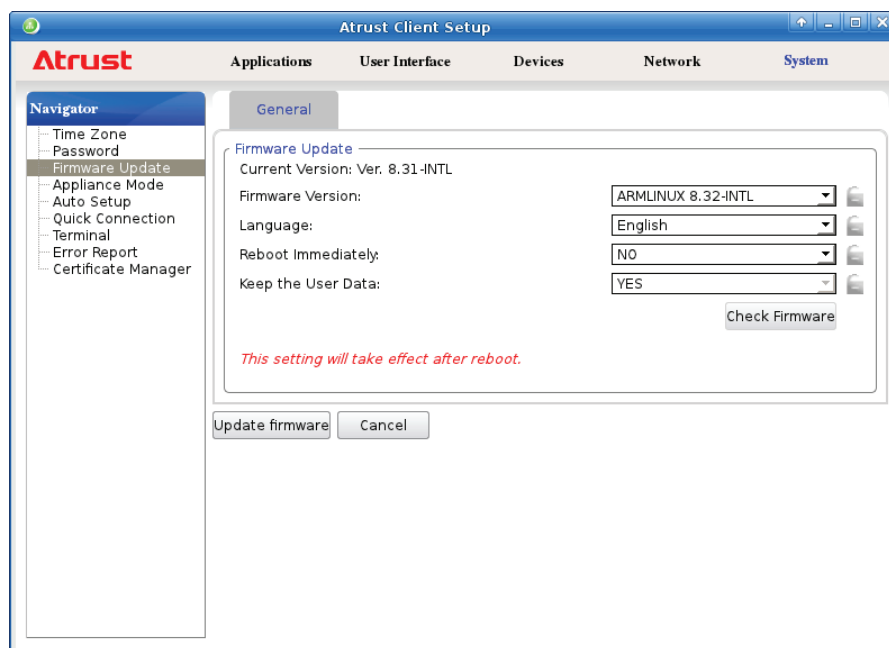

Firmware Update Options	
Item	Description
Firmware Version	Click to select the desired firmware version.
Language	Click to select the interface language of the system, including the Atrust Client Setup console. <b>NOTE:</b> Available languages may vary with the selected firmware version.
Reboot immediately	Click to choose whether to restart the system immediately for firmware update or manually restart the system later.
Keep the user data	Click to choose if to keep the setting values under Atrust Client Setup. <b>NOTE:</b> If <b>Yes</b> is selected, all setting values under Atrust Client Setup will remain unchanged after firmware update. If <b>No</b> is selected, all setting values will be restored to the factory default. This option may not be available on your system. <b>NOTE:</b> If the client is managed by Atrust Device Manager and here <b>No</b> is selected, Atrust Device Manager will fail to manage the client after firmware update. For more information on Atrust Device Manager, please refer to the User's Manual for Atrust Device Manager.

- Click **Update firmware** to confirm your selections. The system will start updating its firmware after restart.

### 4.2.7 Enabling or Disabling the Appliance Mode

The Appliance mode allows your t66 to start up directly with the desired Microsoft Remote Desktop, Citrix ICA, VMware View or Horizon View session. Under the Appliance mode, users will feel as if they were using a standalone desktop computer; the underlying client operating system, Atrustr ARM Linux, is hidden from the very beginning.



#### NOTE

- There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:

No.	Mode	Description
1	Appliance	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul>
2	Autostart	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"> <li>• Returning to the local desktop</li> <li>• Re-launching a new session</li> <li>• Restarting the thin client</li> <li>• Turning off the thin client</li> </ul>
3	Quick Connection	<p><b>The default.</b> The client will enter Atrustr Quick Connection screen after system startup.</p>

- For more information on these modes, please refer to sections:
  - ✧ 4.2.9 on page 52 and 3.1 on page 17 (Quick Connection mode)
  - ✧ 4.2.7 on page 48 (Appliance mode)
  - ✧ 4.6.5 on page 129 (Autostart mode for RDP sessions)
  - ✧ 4.6.11 on page 168 (Autostart mode for ICA sessions)
  - ✧ 4.6.14 on page 201 (Autostart mode for View sessions)

## Enabling the Appliance Mode

To enable the Appliance mode, please do the following:



### NOTE


- Ensure that you have configured the connection settings for the desired Microsoft Remote Desktop, Citrix ICA, VMware View or Horizon View session under **Applications** tab. You need to specify which service type and connection settings entry will be used under the Appliance mode. For detailed instructions, please see sections:
  - ✧ "4.6.3 Configuring Basic RDP Connection Settings" on page 114
  - ✧ "4.6.6 Configuring Basic ICA Connection Settings" on page 145
  - ✧ "4.6.12 Configuring Basic VMware View Connection Settings" on page 197



### NOTE


- Please note that the Autostart mode also enables the client to start up directly with an RDP / ICA / View session and provides more configuration flexibility than the Appliance mode. For detailed information on the Autostart mode, please refer to the following sections:
  - ✧ "4.6.5 Configuring Advanced RDP Connection Settings" on page 129
  - ✧ "4.6.11 Configuring Advanced ICA Connection Settings" on page 168
  - ✧ "4.6.14 Configuring Advanced View Connection Settings" on page 201

1. On Atrust Client Setup, click **System > Appliance Mode**.

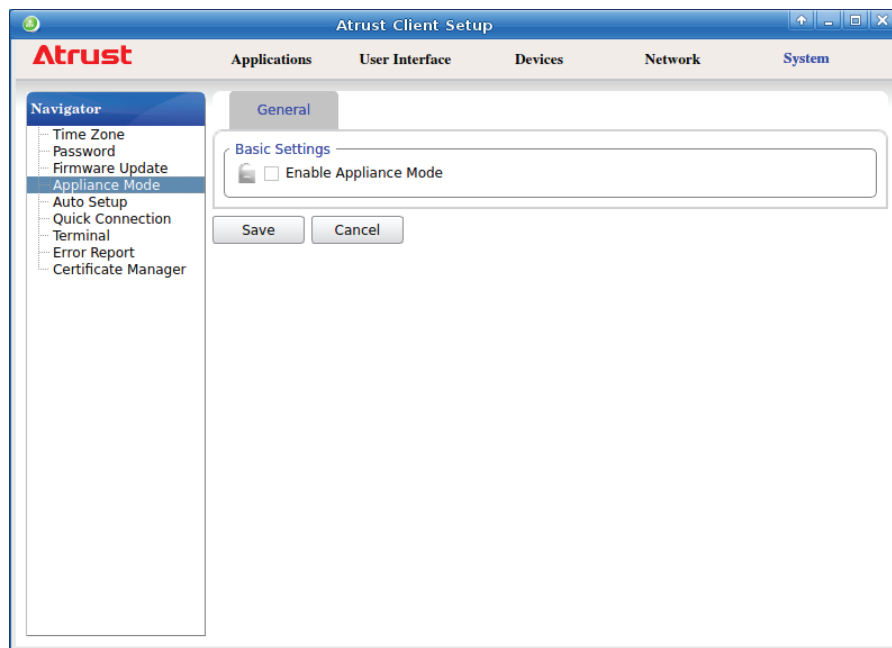

2. Click to check **Enable Appliance Mode**.

3. Other settings of the Appliance mode appear.

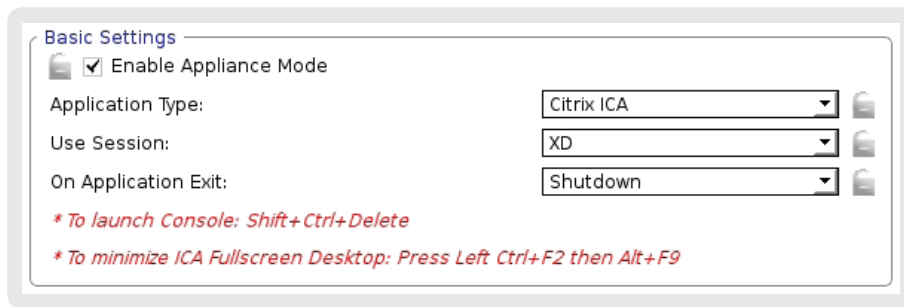

**Basic Settings**

☒ Enable Appliance Mode

Application Type: Citrix ICA


Use Session: XD

On Application Exit: Shutdown

*\* To launch Console: Shift+Ctrl+Delete*

*\* To minimize ICA Fullscreen Desktop: Press Left Ctrl+F2 then Alt+F9*

4. Click drop-down menus to select the application (or service) type: **Citrix ICA**, **Remote Desktop**, or **VMware View**, the specific service available in that type, and the desired action after exiting a session.

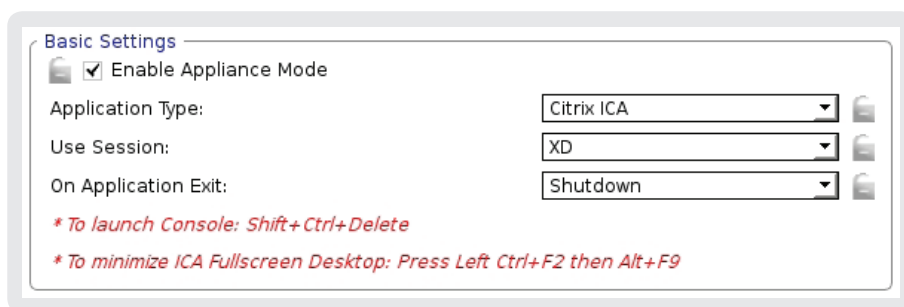

**Basic Settings**

☒ Enable Appliance Mode


Application Type: Citrix ICA

Use Session: XD

On Application Exit: Shutdown

*\* To launch Console: Shift+Ctrl+Delete*

*\* To minimize ICA Fullscreen Desktop: Press Left Ctrl+F2 then Alt+F9*

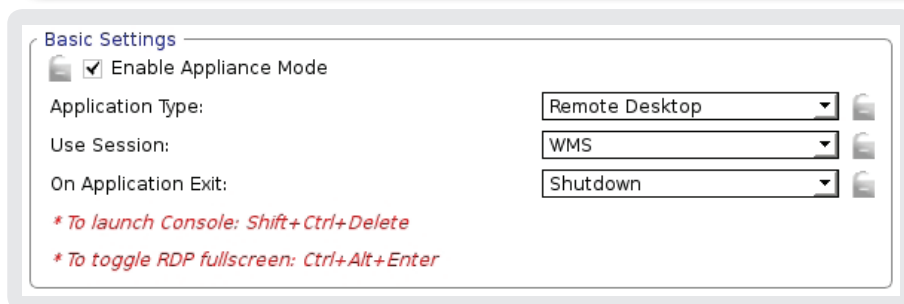

**Basic Settings**

☒ Enable Appliance Mode


Application Type: Remote Desktop

Use Session: WMS

On Application Exit: Shutdown

*\* To launch Console: Shift+Ctrl+Delete*

*\* To toggle RDP fullscreen: Ctrl+Alt+Enter*

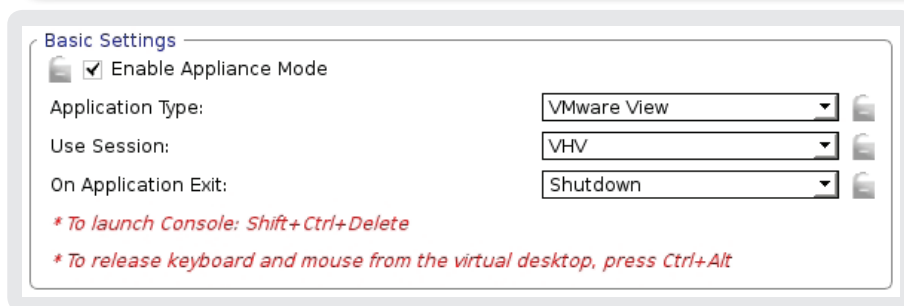

**Basic Settings**

☒ Enable Appliance Mode

Application Type: VMware View

Use Session: VHV

On Application Exit: Shutdown

*\* To launch Console: Shift+Ctrl+Delete*

*\* To release keyboard and mouse from the virtual desktop, press Ctrl+Alt*



#### NOTE

- No matter which Resolution option you choose for the selected RDP / ICA / View service, RDP / ICA / View sessions under the Appliance mode will always use the Full Screen mode to display the remote/virtual desktop.



5. Click **Save** to confirm your selections.
6. The system will enter the Appliance mode after restart.

**NOTE**

- To disable the Appliance mode or to access Atrust Client Setup under the Appliance mode, please refer to "Disabling the Appliance Mode" on page 51.

**Disabling the Appliance Mode**

To disable the Appliance mode, please do the following:

1. Under the Appliance mode, exit the Full Screen mode of the RDP / ICA session, or release the keyboard and mouse from the View session (virtual desktop):
  - To exit the Full Screen mode of the RDP session, press **Ctrl + Alt + Enter**, and then minimize the session window.
  - To exit the Full Screen mode of the ICA session, press **Ctrl + F2**, and then **Alt + F9**.
  - To release the keyboard and mouse from the View session (virtual desktop), press **Ctrl + Alt**.

**NOTE**

- Please note that the View session (virtual desktop) will remain on the background after you release the keyboard and mouse from the View session (virtual desktop).

2. Click **Ctrl + Shift + Del** to launch Atrust Client Setup.

**NOTE**

- You cannot access the Taskbar of the client operating system (Atrust ARM Linux) under the Appliance mode.

3. On Atrust Client Setup, click **System > Appliance Mode**.
4. Click to uncheck **Enable Appliance Mode**, and then click **Save** to apply the change.
5. Return to the current RDP / ICA / View session:
  - To return to the current RDP / ICA session, use **Alt + Tab** (press and hold **Alt**, and then press **Tab** to switch between different items) to select and restore the current RDP / ICA session.
  - To return to the current View session, click any place of the View session (virtual desktop) on the background.
6. Log off from the current RDP / ICA / View session.
7. The client will shut down then. Restart your client manually.

#### 4.2.8 Enabling or Disabling Auto Setup

Auto Setup allows your thin client to get its preset configuration on startup and enter the desired user environment automatically. Its operation requires Auto Setup environment and network connectivity, except for enabling Auto Setup on the client side. For details, please refer to User's Guide for Auto Setup.

**NOTE**

- To disable Auto Setup after your thin client got its preset configuration, reset your client. Please refer to "A.1 Resetting Your t66 to the Factory Default" on page 211.

#### 4.2.9 Enabling or Disabling the Quick Connection Mode

The Quick Connection mode enables you to enter the Atrust Quick Connection screen after system startup. This setting is enabled by default.

**NOTE**

- For detailed instructions on how to use your t66 under the Quick Connection mode, please refer to section "3.1 Learning the Basics" on page 17.
- There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:

No.	Mode	Description
1	Appliance	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
2	Autostart	<p>The client will start up directly with the desired RDP / ICA / View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.




**NOTE**

- To use the Quick Connection mode, ensure that both the Appliance and Autostart modes are disabled. By default, your t66 is in the Quick Connection mode, and both the Appliance and Autostart modes are disabled. However, if either of two modes are enabled, the Quick Connection mode will fail to work.
- For more information on the Appliance mode, please refer to section “4.2.7 Enabling or Disabling the Appliance Mode” on page 48.
- For more information on the Autostart mode, please refer to the following sections:
  - ✧ “4.6.5 Configuring Advanced RDP Connection Settings” on page 129
  - ✧ “4.6.11 Configuring Advanced ICA Connection Settings” on page 168
  - ✧ “4.6.14 Configuring Advanced View Connection Settings” on page 201

To enable/disable the Quick Connection mode, please do the following:

1. On Atrust Client Setup, click **System > Quick Connection**.

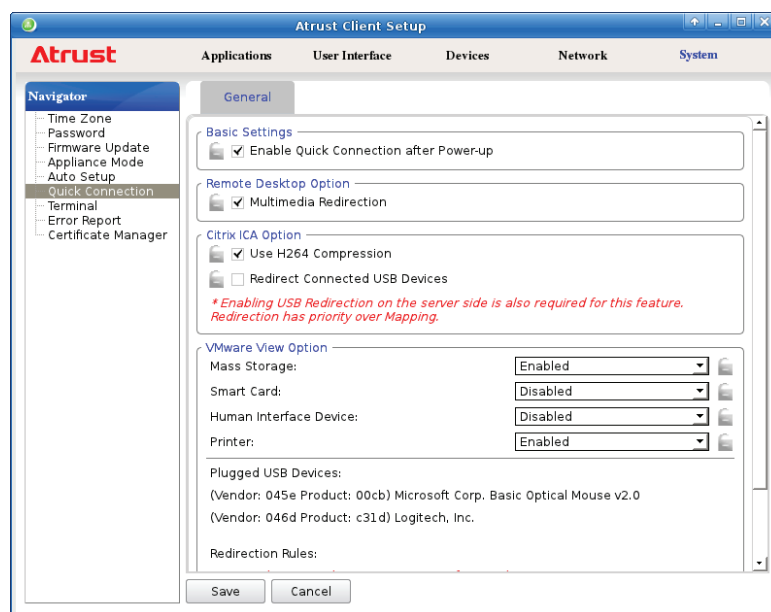

2. Click to check/uncheck **Enable Quick Connection after Power-up** to enable/disable the Quick Connection mode, and then click **Save** to apply the change.



**NOTE**

- For advanced Quick Connection settings, please refer to the next section (4.2.10).

3. Switch shortcuts are also added to or removed from the START menu and local Linux desktop as shown below.



4.2.10 Configuring Advanced Quick Connection Settings

You are allowed to configure advanced Quick Connection settings for Remote Desktop, Citrix ICA, and VMware View sessions through **System > Quick Connections** on Atrust Client Setup.

Advanced Quick Connection Settings for Remote Desktop Sessions

To configure advanced Quick Connection settings for Remote Desktop sessions, please refer to the table below:

Remote Desktop Option

 ☒ Multimedia Redirection

Remote Desktop Option	
Item	Description
Multimedia Redirection	<p>Check/Uncheck to enable/disable multimedia redirection.</p> <p>When enabled, the client receives original compressed multimedia streams and decodes locally for display. This feature increases the load on the client, but saves server resources, decreases the bandwidth usage, and improves audio and video playback experiences.</p> <p>It's enabled by default.</p>

Advanced Quick Connection Settings for Citrix ICA Sessions

To configure advanced Quick Connection settings for Citrix ICA sessions, please refer to the table below:

Citrix ICA Option

 ☒ Use H264 Compression

Citrix ICA Option	
Item	Description
Use H264 Compression	<p>Check to enable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.</p>

 ☐ Redirect Connected USB Devices

*\* All connected USB devices will be redirected unless more specific settings are specified below.*

*\* Enabling USB Redirection on the server side is also required for this feature.*

Citrix ICA Option	
Item	Description
Redirect Connected USB Devices	<p>Check to enable redirection for connected USB devices in Quick Connection mode. All connected USB devices will be redirected unless more specific settings are specified below.</p>

Use of USB Storage Devices: 

Mapping

Use of USB Printers: 

Mapping

Citrix ICA Option	
Item	Description
Use of USB Storage Devices	Click to select how to use USB storage devices in ICA sessions. Three options are available: <b>Mapping</b> , <b>Redirection</b> , and <b>Disabled</b> .
Use of USB Printers	Click to select how to use USB printers in ICA sessions. Three options are available: <b>Mapping</b> , <b>Redirection</b> , and <b>Disabled</b> .

Plugged USB Devices: 

1

(Vendor: 046d Product: c31d) Logitech, Inc.

(Vendor: 045e Product: 00cb) Microsoft Corp. Basic Optical Mouse v2.0

Redirection Rules: 

2

*\* Use redirection rules to manage specific USB devices.*

*\* Maximum number of rules: 10*

Allow

 Vendor ID:  Product ID: 

Add

Citrix ICA Option	
Item	Description
Redirection Rules	Create redirection rules on <div>2</div> to manage specific USB devices with information on <div>1</div> .

**NOTE**

- All attached USB devices will be listed under *Plugged USB Devices* (


1

) with vender and product information needed for creating rules.


## Advanced Quick Connection Settings for VMware View Sessions

To configure advanced Quick Connection settings for VMware View sessions, please do the following:

1. On Atrust Client Setup, click **System** > **Quick Connection**.

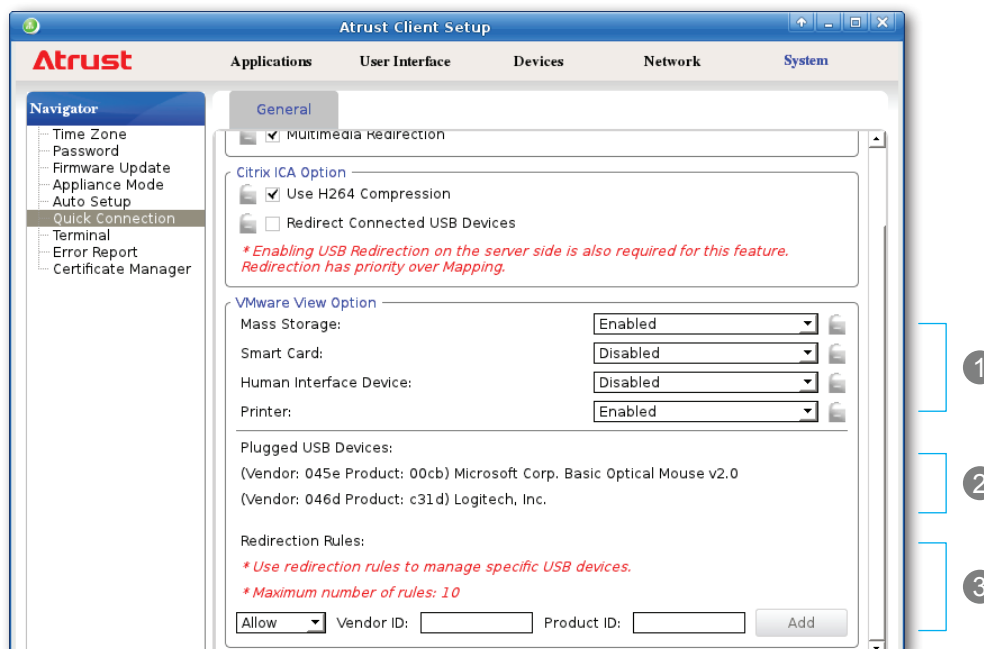

2. Click drop-down menus to configure **Generic Settings** (1) for mass storage devices, smart cards, human interface devices, and printers. Two options are available: **Enabled** or **Disabled**.

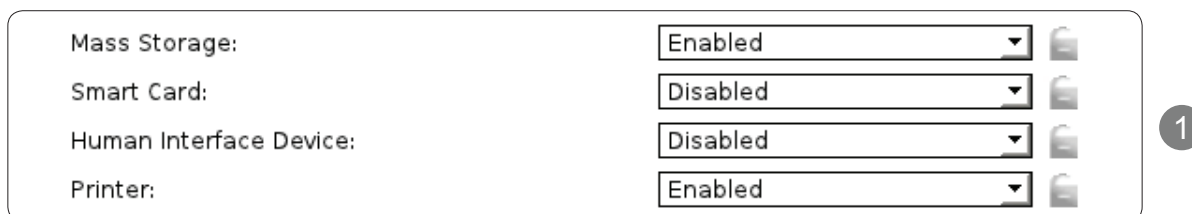

3. Use **Redirection Rules** (3) to manage specific USB devices:

Plugged USB Devices: (2)

(Vendor: 045e Product: 00cb) Microsoft Corp. Basic Optical Mouse v2.0

(Vendor: 046d Product: c31d) Logitech, Inc.

Redirection Rules: (3)

*\* Use redirection rules to manage specific USB devices.*

*\* Maximum number of rules: 10*

Allow ▾

Vendor ID:

Product ID:

Add

- Refer to (2) to fill in the Vendor and Product IDs for a specific device, click the drop-down menu to select **Allow** or **Deny**.
- Click **Add** on the right to add a rule on (3).



**NOTE**

- All attached USB devices will be listed under **Plugged USB Devices** (2) with vendor and product information needed for creating rules.
- **Redirection Rules** (3) have priority over **Generic Settings** (1).


4. Click **Save** to apply.




#### 4.2.11 Enabling or Disabling the Command-line Functions

To enable/disable the execution of the text-based (command-line) functions, please do the following:

1. On Atrust Client Setup, click **System** > **Terminal**.

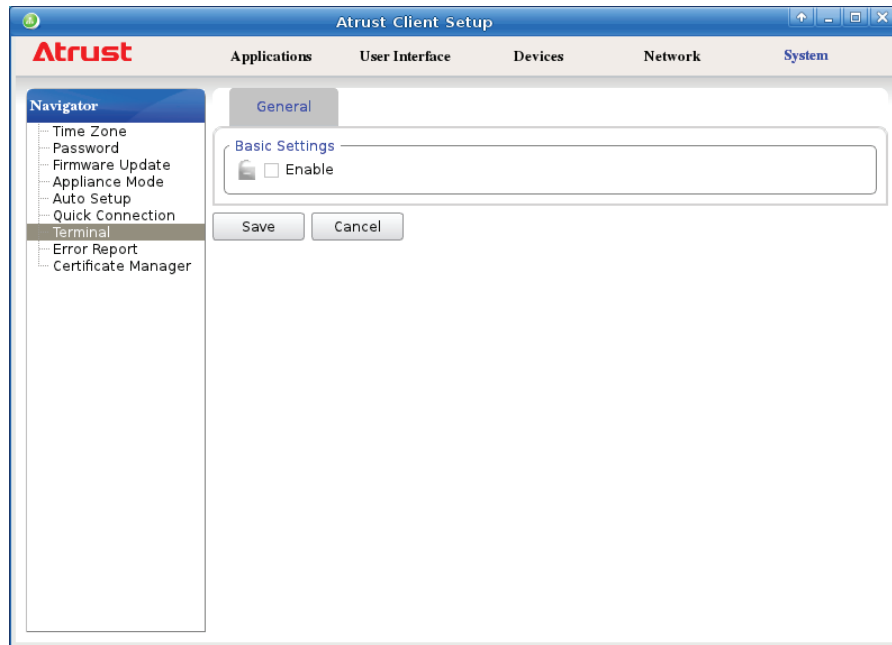

2. Click to check/uncheck **Enable** to allow/disallow the execution of the command-line functions.
3. Click **Save** to confirm your change.
4. The shortcut appears/disappears on the Start menu for access.



#### NOTE

- On the local Linux desktop, click **START** > **Settings** > **Terminal** to open the Terminal window.

#### 4.2.12 Collecting Event Logs and Capturing Related Screens

The **Error Report** feature allows you to collect event logs and capture related screens for error reporting.

##### Collecting Event Logs

To collect event logs of your t66, please do the following:

1. Plug a USB flash drive into your t66.



##### NOTE


- This USB flash drive will be used for storing the event logs of your t66.
- Ensure that you have enabled the access and automount of USB storage devices. For detailed instructions, please refer to section "4.4.3 Configuring Settings for USB Storage Devices" on page 81.




##### WARNING

- Please note that files saved on the local desktop will be deleted after restart.

2. On **Atrust Client Setup**, click **System > Error Report**.

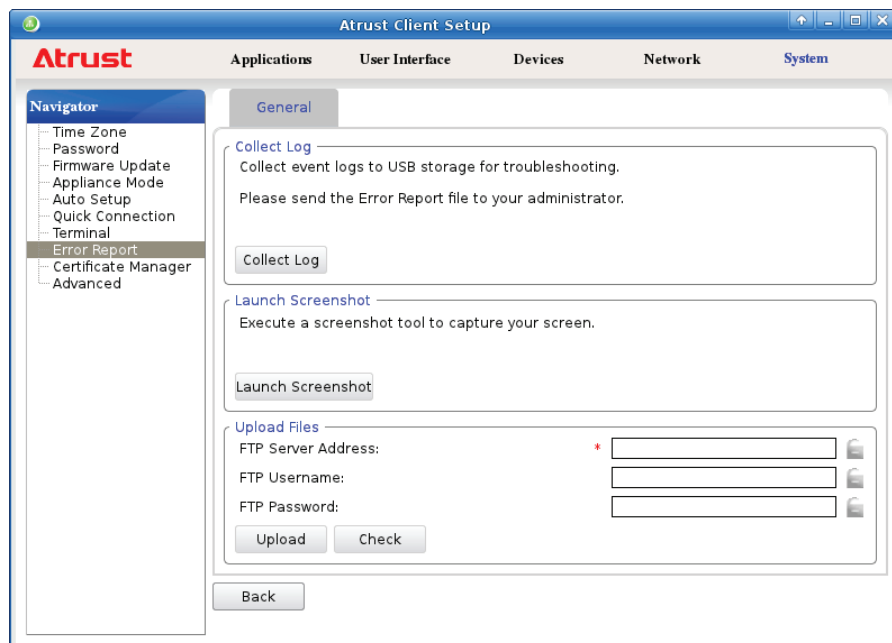


3. Click **Collect Log**. A window appears prompting you to choose where to save the log file set (named **events.tar.gz**). The attached USB flash drive is the default location if attached. Click **Save** to apply.

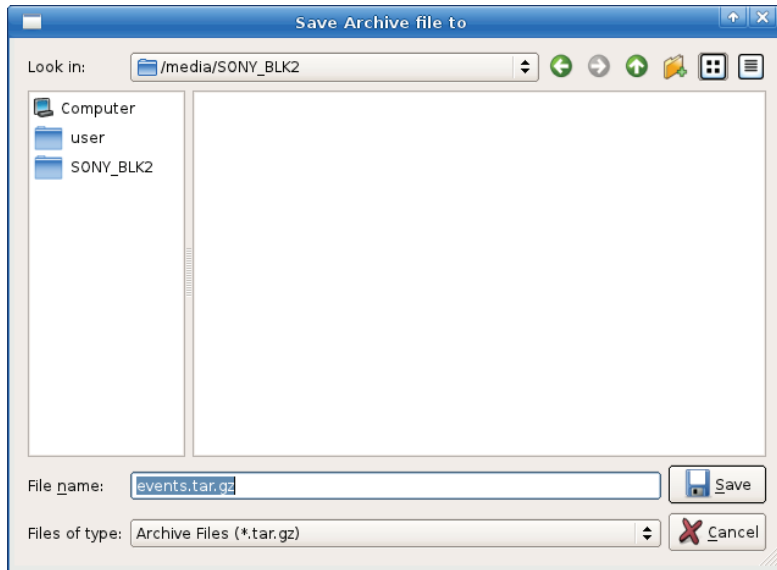

### **Capturing Error-Related Screens**

To capture error-related screens of your t66, please do the following:

1. On Atrust Client Setup, click **System > Error Report**.
2. Click **Launch Snapshot** to open the screen capturing program.

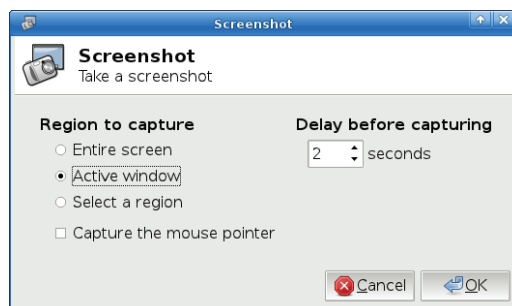

3. Configure screen capturing settings directly on the opened window if needed, and then click **OK** to capture the desired screen.



#### **TIP**


- It's recommended to set the delay time before capturing to at least 2 seconds to reserve time for switching to the desired screen or window.
- It's recommended to save the captured screens in the same USB flash drive where the event logs were saved. Click the Save in drop-down menu to select that USB flash drive.
- Please note that files saved on the local desktop will be deleted after restart.

### 4.2.13 Uploading Files for Error Reporting


You can upload files to a specified FTP server for error reporting.

To upload files to an FTP server, please do the following:

1. On Atrust Client Setup, click **System > Error Report**.

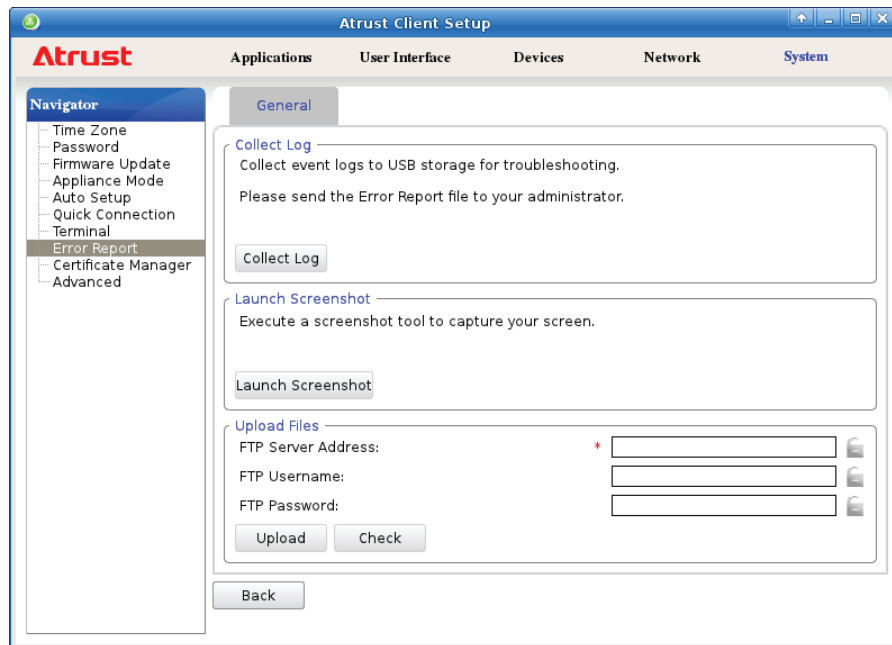

2. Under the Upload Files section, type the IP address of the FTP server and credentials, click **Upload** to select and upload files to that FTP server.

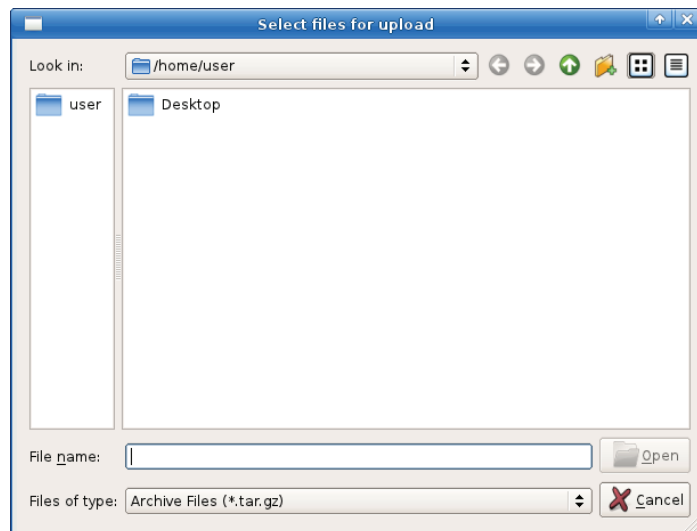

#### TIP

- You can check the validity of the IP address and credentials first through the **Check** button.

#### 4.2.14 Importing Certificates for Remote Computers

You can import certificates for remote computers through:

- A local device (from a USB storage device)
- The network (from a remote computer or the management console)




#### NOTE

- The available management console for t66 is Atrust Device Manager, a remote and group management console for multiple thin clients. For more information, please refer to the User's Manual for Atrust Device Manager.


#### *Importing certificates through a USB storage device*

To import certificates for remote computers through a USB storage device, please do the following:


1. Copy your certificates to a USB storage device, and then connect this storage device to your t66.
2. On Atrust Client Setup, click **System > Certificate Manager**.
3. Click **Add** on the top of the Certificate list.

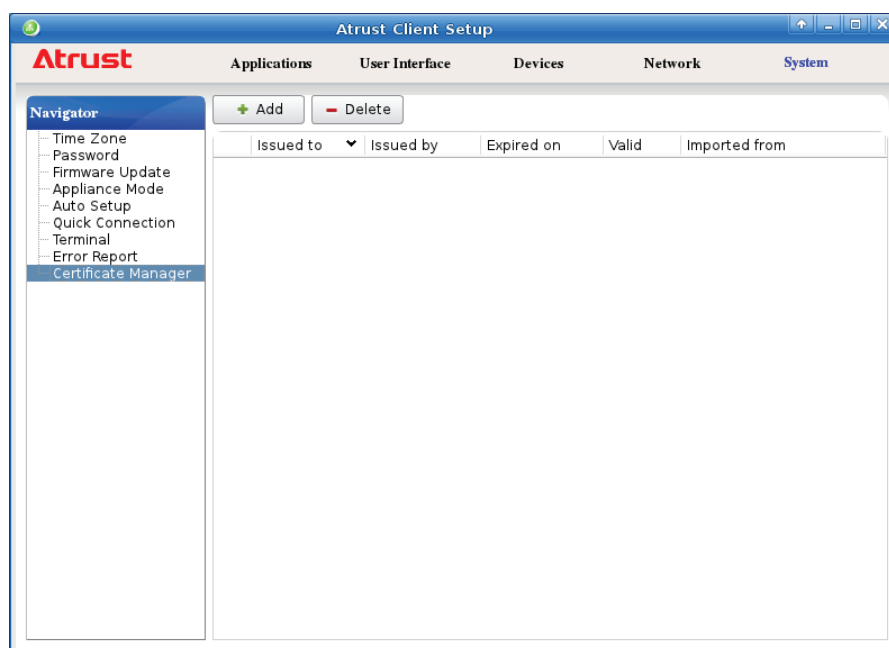

- In the From File section, click **Browse** to locate the desired certificate file, and then click **Open** to confirm.

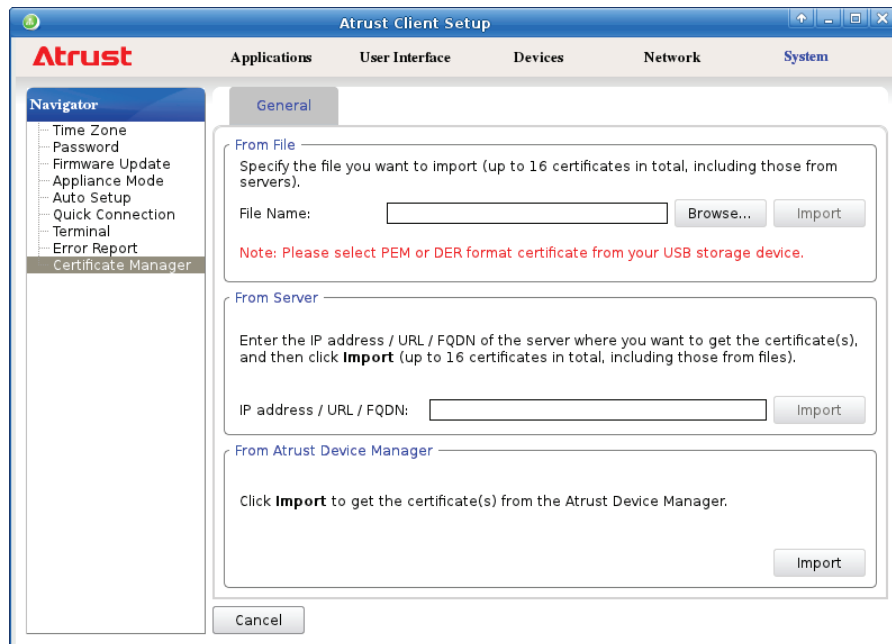


- Click **Import** to start importing the certificate.
- On completion, the certificate is shown in the Certificate list.

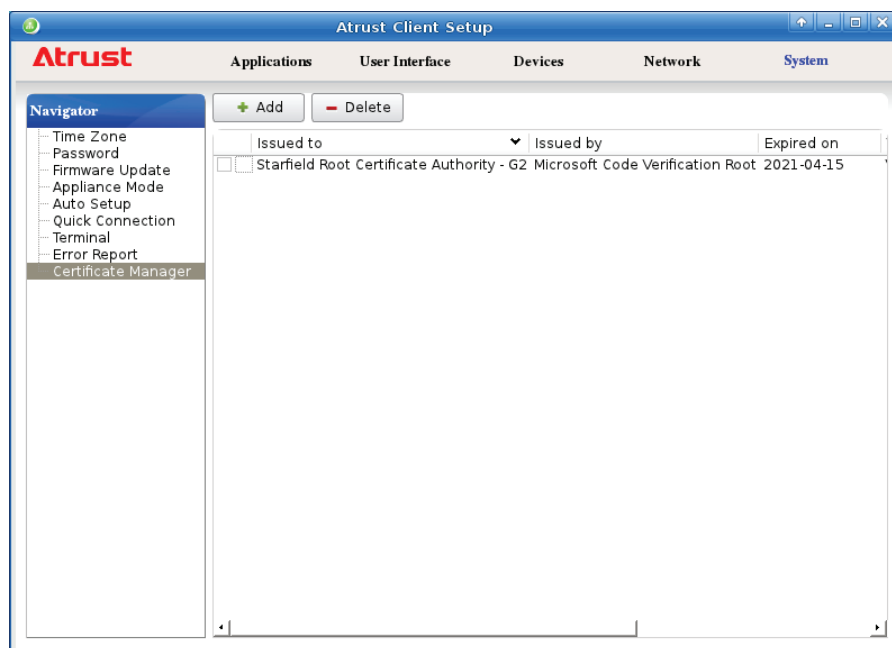


### Importing certificates from remote computers through the network

To import the certificate from a remote computer through the network, please do the following:

1. On Atrust Client Setup, click **System > Certificate Manager**.
2. Click **Add** on the top of the Certificate list.
3. In the From Server section, type the IP address / URL / FQDN of the remote computer, and then click **Import**.

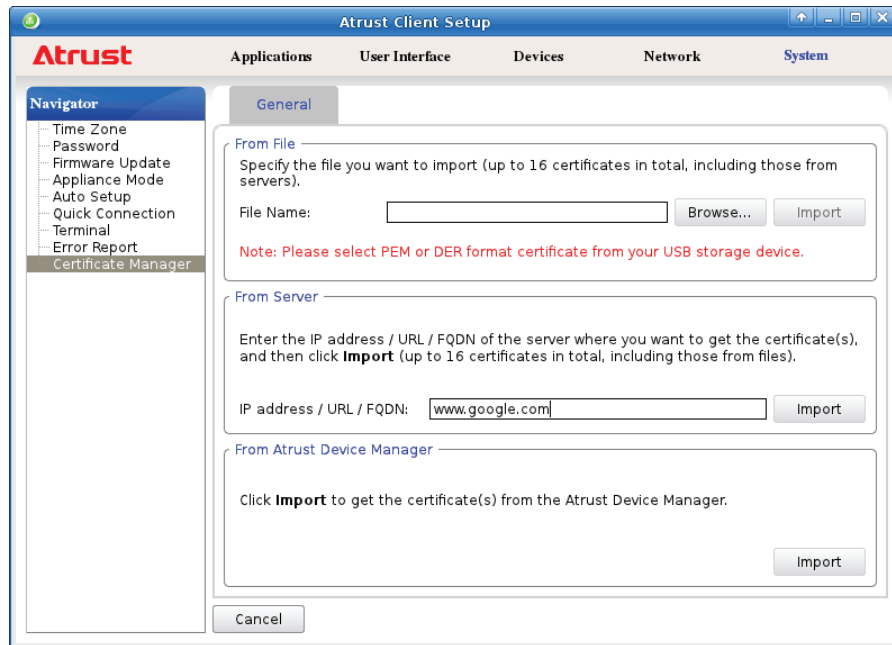

4. On completion, the certificate is shown in the Certificate list.

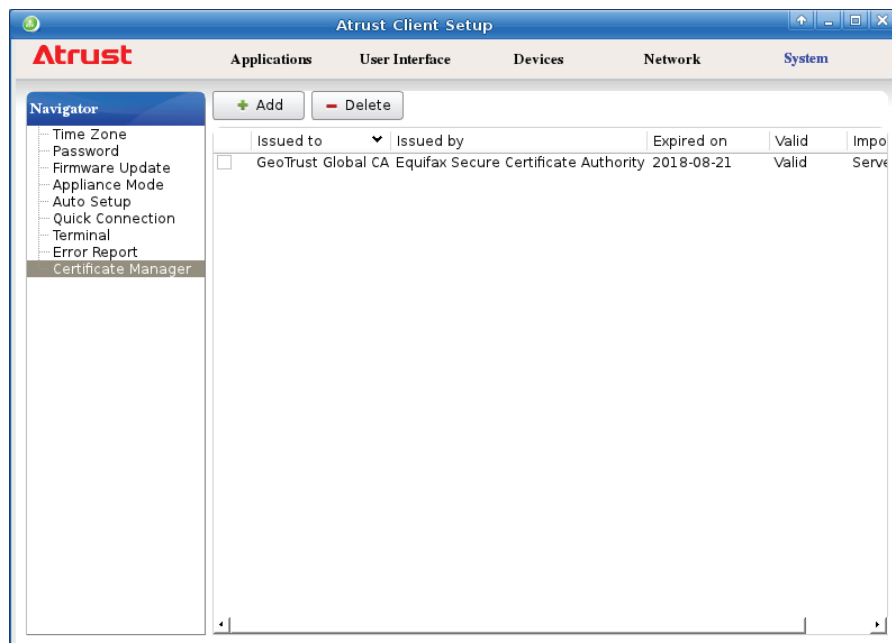

### Importing certificates from Atrust Device Manager through the network


To import certificates from Atrust Device Manager through the network, please do the following:



#### NOTE

- Before proceeding, ensure that (1) your thin client has been added into a managed group in the management console, that is, Atrust Device Manager, and that (2) you have imported certificates into the management console.

1. On Atrust Client Setup, click **System** > **Certificate Manager**.
2. Click **Add** on the top of the Certificate list.
3. In the From Atrust Device Manager section, click **Import** to start importing all certificates available in the management console.
4. On completion, the certificates are shown in the Certificate list.

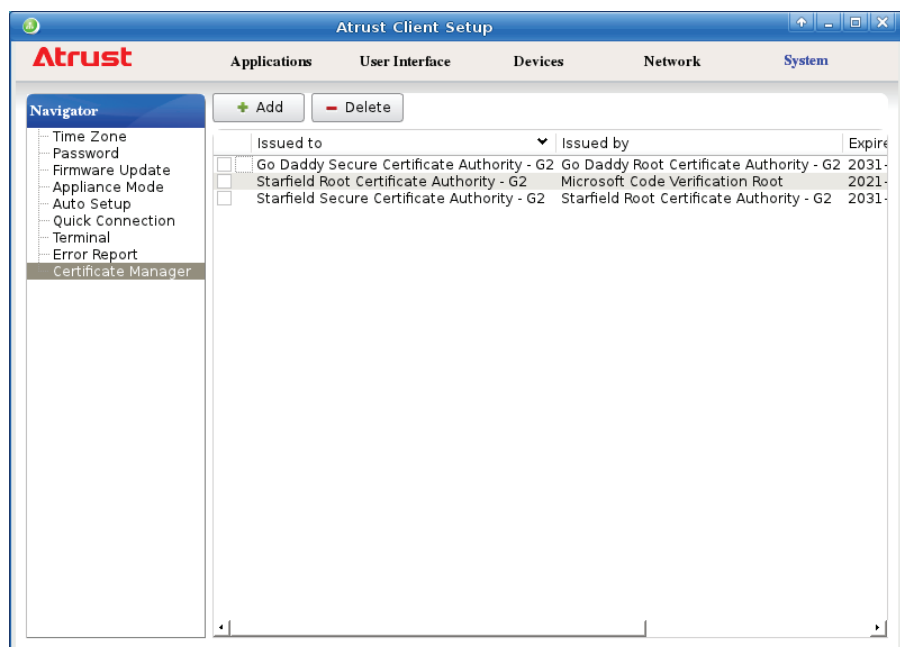



#### 4.2.15 Enabling or Disabling Auto Registration

Auto Registration allows that thin clients automatically register with Atrust Device Manager when they are online and then become managed by Atrust Device Manager.




##### NOTE

- For this feature to work, Auto Registration must be enabled on both sides: thin clients and target Atrust Device Manager. In addition, some configurations on DHCP or DNS server over your network are required. For details, please refer to the User's Manual for Atrust Device Manager.
- By default, Auto Registration is enabled on thin client side, disabled Atrust Device Manager.

To enable or disable Auto Registration on your thin client, please do the following:

1. On Atrust Client Setup, click **System > Advanced**.
2. Check / Uncheck to **Enable Auto Registration** to enable / disable Auto Registration.


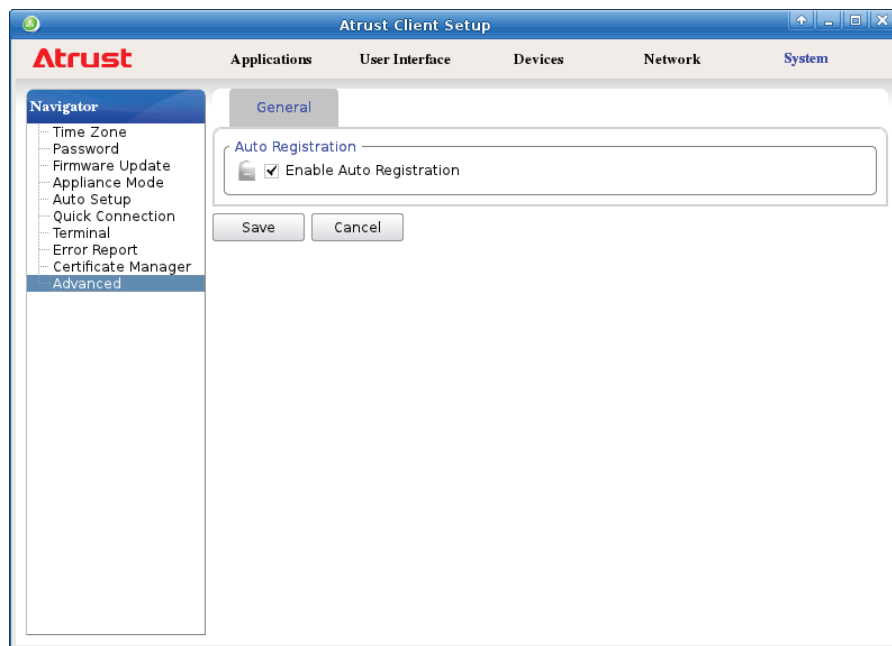


3. Click **Save** to apply.

#### 4.2.16 Viewing System Information

To view system information, please do the following:

1. On Atrust Client Setup, click **System** > **System Information**.
2. Click **System** / **Network** to view information about the system or networking.

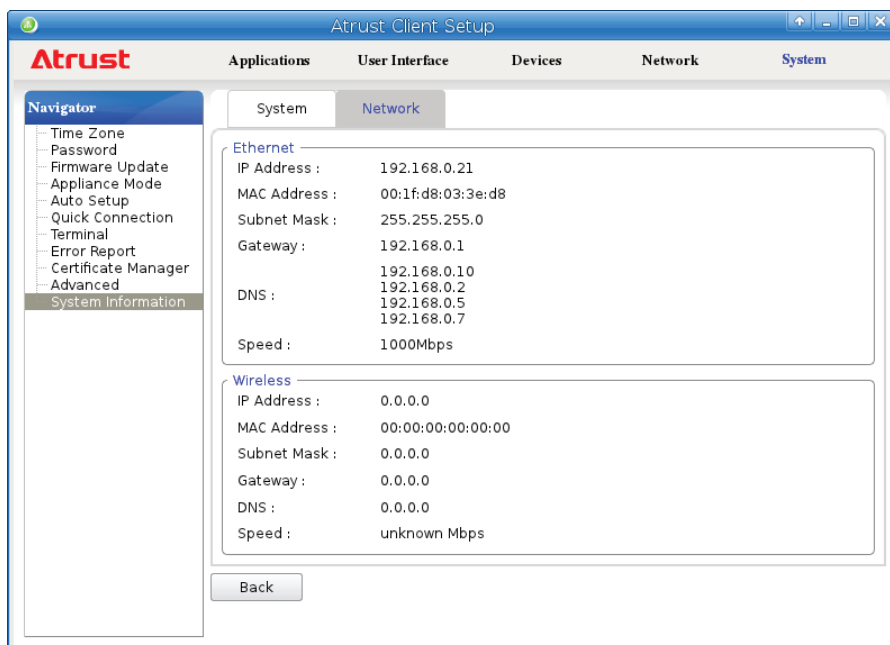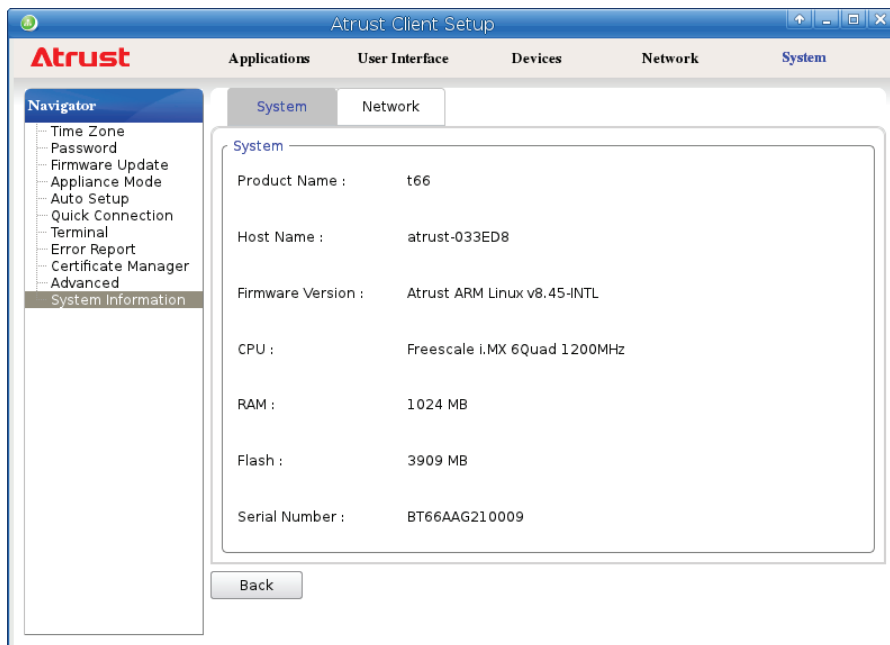


### 4.3 Configuring User Interface Settings

#### 4.3.1 User Interface Tab Overview



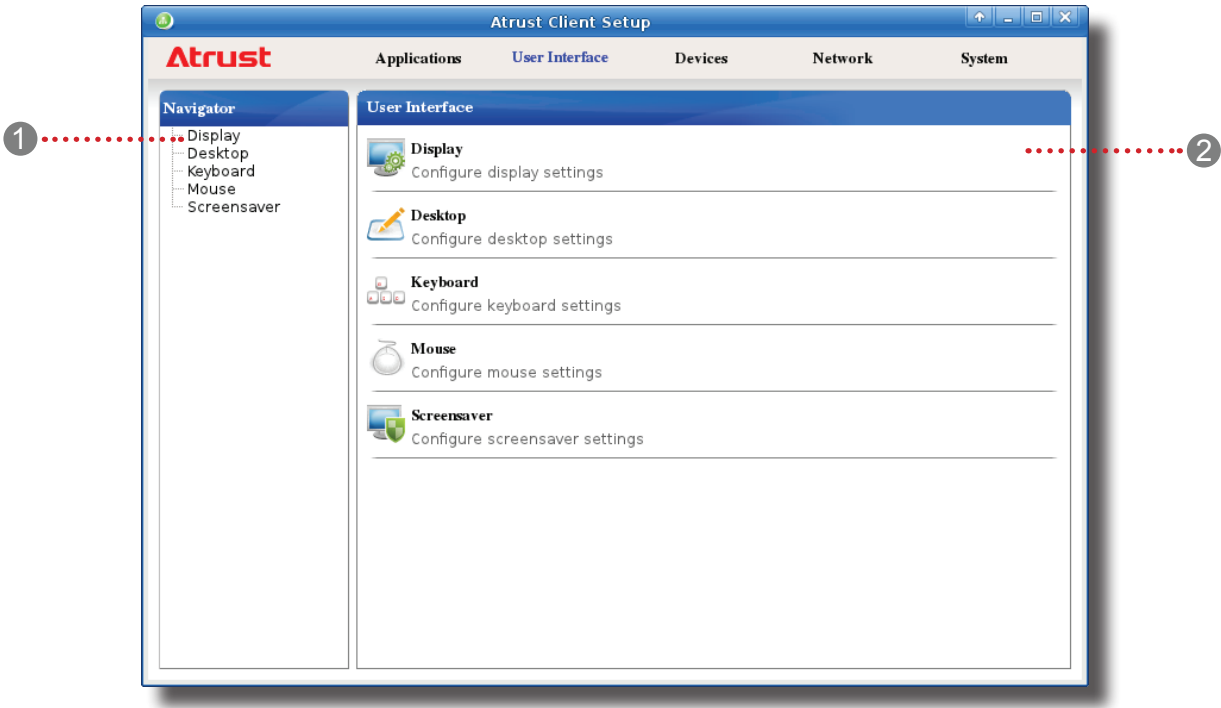


**User Interface** tab enables you to configure settings for the user interface of clients. To access available settings of **User Interface** tab, click the tab on Atrust Client Setup.

User Interface Tab Overview



Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>User Interface</b> tab.
2	Configuration area	Configures setting values when a setting item or entry is selected.


### 4.3.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
User Interface	Display		Click to configure display settings.	4.3.3	70
	Desktop		Click to customize desktop and system language.	4.3.4 4.3.5 4.3.6	72 74 75
	Keyboard		Click to adjust keyboard settings.	4.3.7	76
	Mouse		Click to adjust mouse settings.	4.3.8	78
	Screensaver		Click to configure screensaver settings.	4.3.9	79

### 4.3.3 Configuring Display Settings

To configure display settings for your t66, please do the following:

1. On Atrust Client Setup, click **User Interface > Display**.

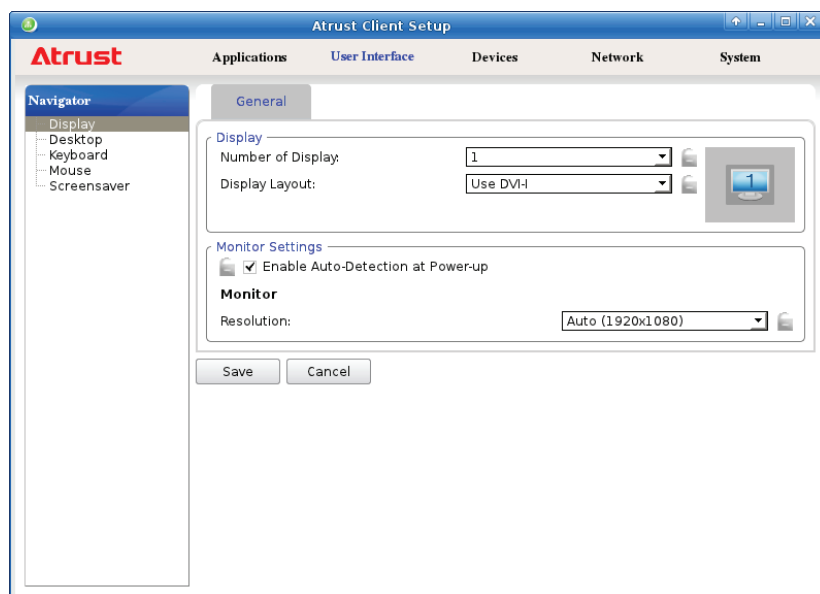

2. Click drop-down menus to select the number of attached display(s), arrangement of displays, display mode for multiple displays, and resolution. Refer to the following table to select appropriate setting values.



#### NOTE


- The available setting items vary with the model and selected number of display(s).

Display							
Item	Description						
Number of Display	<p>For t66, only one option is available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>1</td><td>One display is attached.</td></tr> </table>	Option	Description	1	One display is attached.		
Option	Description						
1	One display is attached.						
Display Layout	<p>For t66, only one option is available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Use DVI-I</td><td>Use the display that is attached to the DVI-I port.</td></tr> </table> <p><b>NOTE:</b> t66 is equipped with the single display interface: DVI-I port.</p>	Option	Description	Use DVI-I	Use the display that is attached to the DVI-I port.		
Option	Description						
Use DVI-I	Use the display that is attached to the DVI-I port.						
Display Mode	<p>This item is available only when <b>2</b> is selected in the Number of Display drop-down menu:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Extend</td><td>One display is used as the extended display of the other.</td></tr> <tr> <td>Clone</td><td>Two displays have the same display content.</td></tr> </table> <p><b>NOTE:</b> t66 is equipped with the single display interface: DVI-I port.</p>	Option	Description	Extend	One display is used as the extended display of the other.	Clone	Two displays have the same display content.
Option	Description						
Extend	One display is used as the extended display of the other.						
Clone	Two displays have the same display content.						
Monitor Settings							
Item	Description						
Enable Auto-Detection at Power-up	<p>Check/Uncheck to enable/disable the automatic detection of the attached monitor(s) when the client is powered on.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Enabled</td><td>Automatic detection of the attached monitor(s) is enabled. The system would set an appropriate resolution for the attached monitor(s) when the client is powered on.</td></tr> <tr> <td>Disabled</td><td>Automatic detection of the attached monitor(s) is disabled. All resolutions supported by the client will be listed in the Resolution drop-down menu when <b>Auto-Detection at Power-up</b> is disabled. Please note that some resolutions may not be applicable to your monitor(s).</td></tr> </table>	Option	Description	Enabled	Automatic detection of the attached monitor(s) is enabled. The system would set an appropriate resolution for the attached monitor(s) when the client is powered on.	Disabled	Automatic detection of the attached monitor(s) is disabled. All resolutions supported by the client will be listed in the Resolution drop-down menu when <b>Auto-Detection at Power-up</b> is disabled. Please note that some resolutions may not be applicable to your monitor(s).
Option	Description						
Enabled	Automatic detection of the attached monitor(s) is enabled. The system would set an appropriate resolution for the attached monitor(s) when the client is powered on.						
Disabled	Automatic detection of the attached monitor(s) is disabled. All resolutions supported by the client will be listed in the Resolution drop-down menu when <b>Auto-Detection at Power-up</b> is disabled. Please note that some resolutions may not be applicable to your monitor(s).						
Monitor Resolution	<p>Use this item to set an appropriate resolution for the attached display.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Auto</td><td>This option is available only when <b>Enable Auto-Detection at Power-up</b> is selected.</td></tr> <tr> <td>Other options</td><td>Select the desired resolution from the Resolution drop-down menu for the attached display.</td></tr> </table> <p><b>NOTE:</b> All resolutions supported by the client will be listed in the Resolution drop-down menu when <b>Auto-Detection at Power-up</b> is disabled. Please note that some resolutions may not be applicable to your monitor(s).</p>	Option	Description	Auto	This option is available only when <b>Enable Auto-Detection at Power-up</b> is selected.	Other options	Select the desired resolution from the Resolution drop-down menu for the attached display.
Option	Description						
Auto	This option is available only when <b>Enable Auto-Detection at Power-up</b> is selected.						
Other options	Select the desired resolution from the Resolution drop-down menu for the attached display.						

#### 4.3.4 Customizing Desktop and System Language Settings




To customize desktop and system language settings for your t66, please do the following:

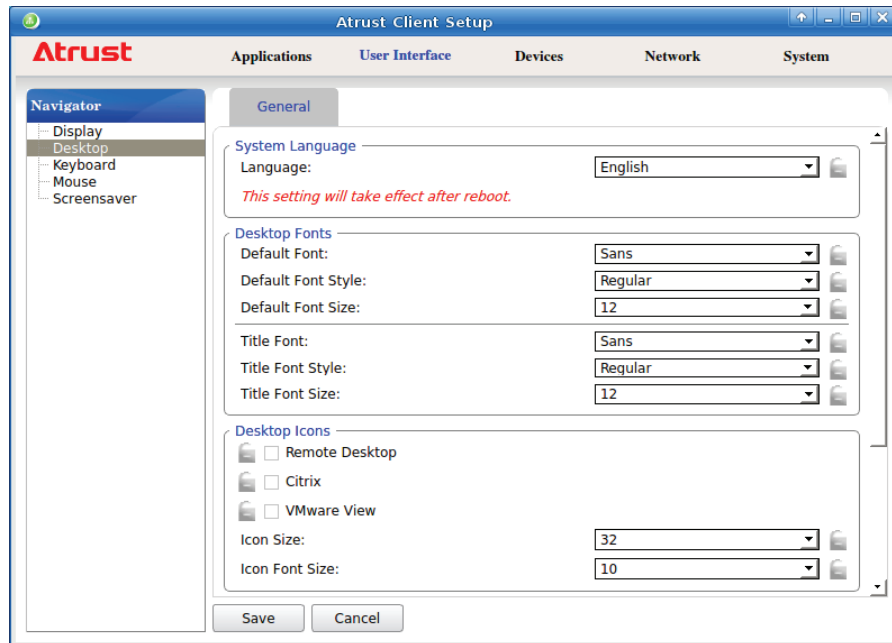1. On Atrust Client Setup, click **User Interface > Desktop**.



2. Click drop-down menus or tick/untick checkboxes to choose desired settings. Refer to the following table for a description of each setting item.

System Language	
Item	Description
Language	<p>Click the drop-down menu to select the system language.</p> <p><b>NOTE:</b> Available languages may vary with the firmware version of your device.  <b>NOTE:</b> You need to restart the system for the change to take effect.</p>
Desktop Fonts	
Item	Description
Default Font	<p>Click the drop-down menus to select the desired font, its style and size used for the user interface of the operating system, such as menus, options on menus, text labels for desktop shortcuts, tabs on program windows etc.</p> <p><b>NOTE:</b> Your changes will not apply to the titles of opened windows, the Atrust Client Setup console, and the System Information window (<b>START &gt; System Settings &gt; System Information</b>).</p>
Default Font Style	
Default Font Size	
Title Font	<p>Click the drop-down menus to select the desired font, its style and size used for the titles of the opened windows.</p>
Title Font Style	
Title Font Size	

Desktop Icons													
Item	Description												
Remote Desktop	<p>Check/Uncheck to show/hide shortcuts <b>Remote Desktop</b>  on the START menu and local Linux desktop for service quick access.</p> <p>For more information, please refer to section "4.3.5 Hiding or Showing Quick Access Shortcuts" on page 74.</p>												
Citrix	<p>Check/Uncheck to show/hide shortcuts <b>Citrix</b>  on the START menu and local Linux desktop for service quick access.</p> <p>For more information, please refer to section "4.3.5 Hiding or Showing Quick Access Shortcuts" on page 74.</p>												
VMware View	<p>Check/Uncheck to show/hide desktop shortcuts <b>VMware View</b>  on the START menu and local Linux desktop for service quick access.</p> <p>For more information, please refer to section "4.3.5 Hiding or Showing Quick Access Shortcuts" on page 74.</p>												
Icon Size	Click the drop-down menu to select the desired size of desktop icons/shortcuts.												
Icon Font Size	Click the drop-down menu to select the desired text label size of desktop icons/shortcuts.												
Desktop Background													
Item	Description												
Enable Desktop Wallpaper	<p>Check/Uncheck to enable/disable the use of Atrust wallpaper.</p> <p><b>NOTE:</b> If disabled, the solid color background (dark blue) will be used.</p>												
Enable Custom Wallpaper	<p>Check/Uncheck to enable/disable the use of a custom wallpaper. More settings appear when checked.</p> <p>For details, please refer to "Using a Custom Wallpaper" on page 75.</p>												
Download From													
Custom Wallpaper File													
Wallpaper Style	<p>Click the drop-down menu to select the way to apply the wallpaper. Five options are available: <b>Centered</b>, <b>Tiled</b>, <b>Stretched</b>, <b>Scaled</b>, and <b>Zoomed</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Centered</td><td>Centers the original image on the screen.</td></tr> <tr> <td>Tiled</td><td>Tiles the screen with the original image.</td></tr> <tr> <td>Stretched</td><td>Centers and extends/shrinks the image to fit the screen.</td></tr> <tr> <td>Scaled</td><td>Centers and sizes the image proportionally to fit the screen until the top-bottom or left-right sides fit the screen.</td></tr> <tr> <td>Zoomed</td><td>Centers and sizes the image proportionally to fill the screen.</td></tr> </table> <p><b>NOTE:</b> Depending on the size of the connected display, two options might have the same effect.</p>	Option	Description	Centered	Centers the original image on the screen.	Tiled	Tiles the screen with the original image.	Stretched	Centers and extends/shrinks the image to fit the screen.	Scaled	Centers and sizes the image proportionally to fit the screen until the top-bottom or left-right sides fit the screen.	Zoomed	Centers and sizes the image proportionally to fill the screen.
Option	Description												
Centered	Centers the original image on the screen.												
Tiled	Tiles the screen with the original image.												
Stretched	Centers and extends/shrinks the image to fit the screen.												
Scaled	Centers and sizes the image proportionally to fit the screen until the top-bottom or left-right sides fit the screen.												
Zoomed	Centers and sizes the image proportionally to fill the screen.												
Wallpaper	Click the drop-down menu to select the color of Atrust wallpaper. Four colors are available: <b>Green</b> , <b>Blue</b> , <b>Orange</b> , and <b>Cyan</b> .												

3. Click **Save** to apply.

### 4.3.5 Hiding or Showing Quick Access Shortcuts


When the Quick Connection mode is disabled, the switch shortcuts Atrust Quick Connection on the START menu and local Linux desktop will be hidden.



In case you want to access services quickly when the Quick Connection mode is *disabled*, you can choose to show Quick Access shortcuts **Remote Desktop** / **Citrix** / **VMware View** on the START menu and local Linux desktop. These shortcuts enable you to access services quickly when the Quick Connection mode is disabled. They're hidden by default.


To show/hide shortcuts **Remote Desktop** / **Citrix** / **VMware View** on the START menu and local Linux desktop, please do the following:

1. On Atrust Client Setup, click **User Interface** > **Desktop**.

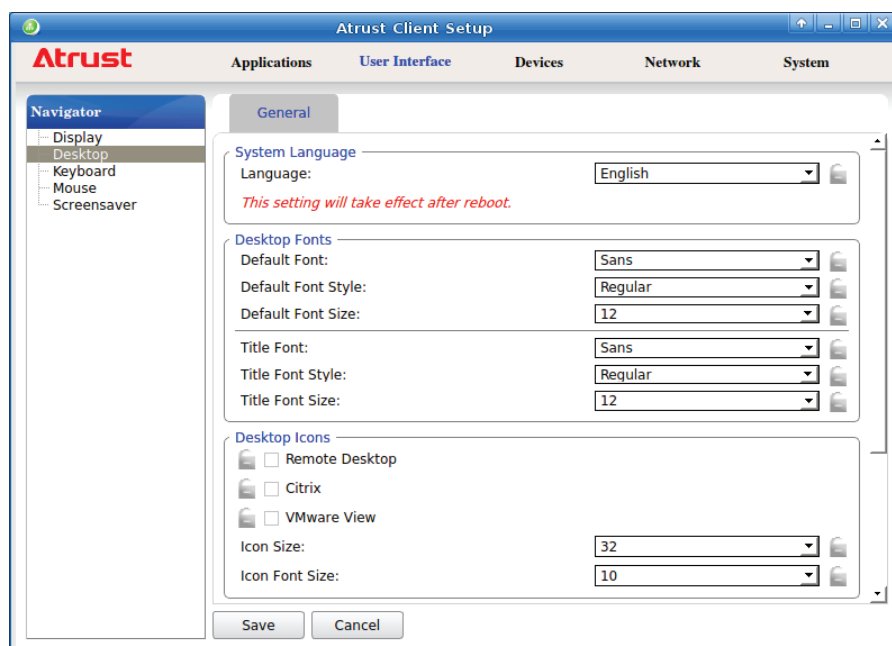




2. Click to check/uncheck **Remote Desktop** / **Citrix** / **VMware View** in the Desktop Icons section to show/hide the quick access shortcuts **Remote Desktop** / **Citrix** / **VMware View** on the START menu and local Linux desktop.
3. Click **Save** to apply the change.
4. The selected shortcuts will be shown/hidden.

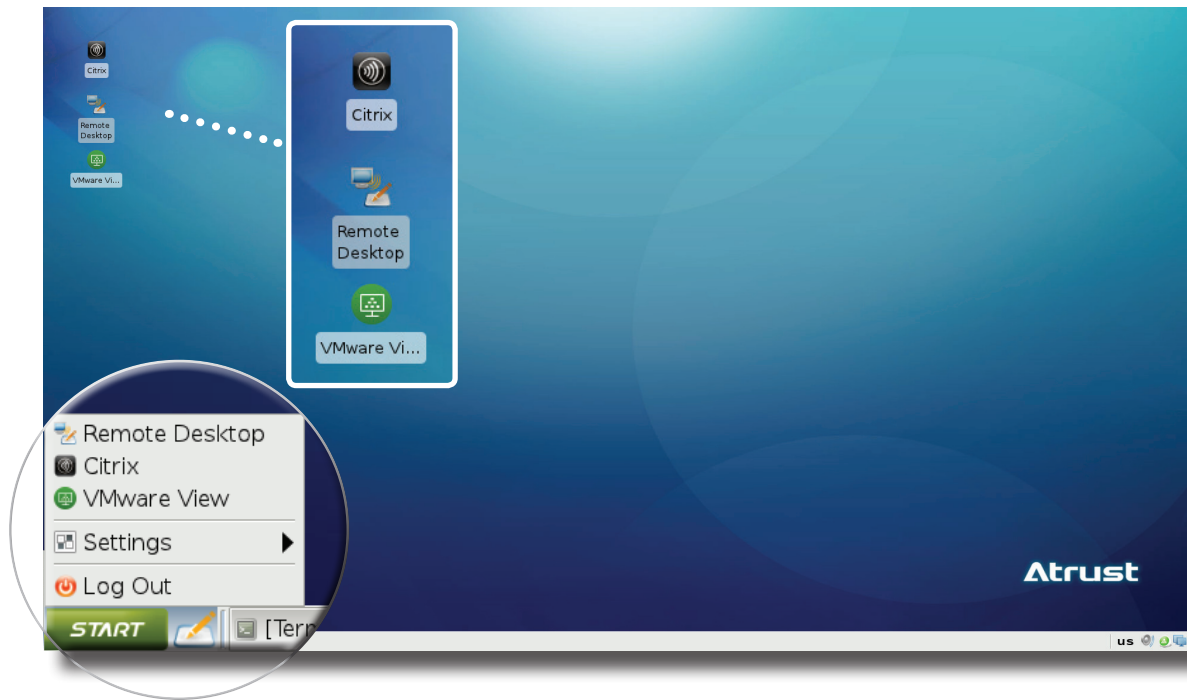

### 4.3.6 Using a Custom Wallpaper

To use a custom wallpaper, please do the following:

1. On Atrust Client Setup, click **User Interface** > **Desktop**.

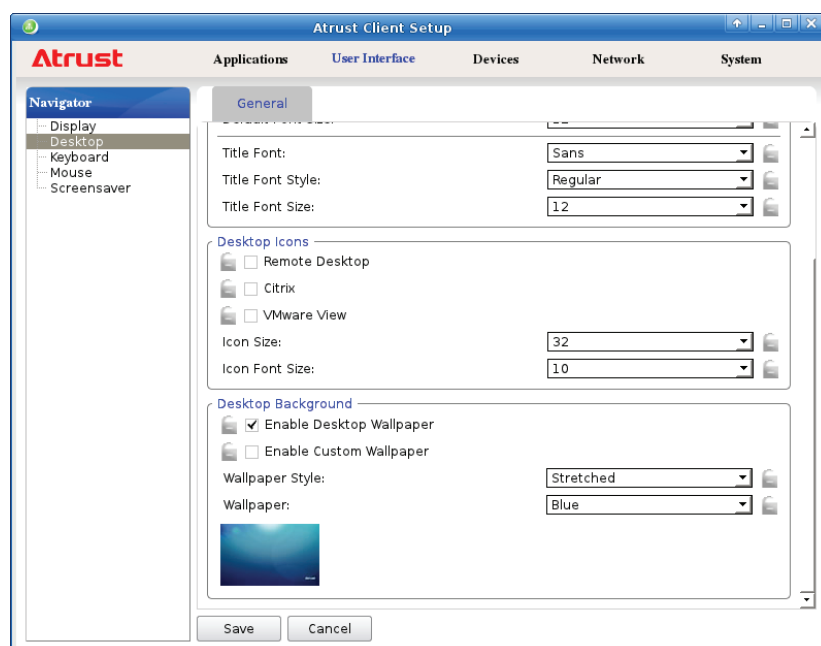

2. Check or Uncheck **Enable Custom Wallpaper** to enable or disable the use of a custom wallpaper.
3. Select the way to apply the wallpaper and where to download or get the image file. Three options are available to get the wallpaper: **Auto Setup**, **Device Manager**, and **File**.



#### NOTE

- If **Auto Setup** is selected, your thin client must be in Auto Setup environment and be well-configured for that environment. Please see “Enabling or Disabling Auto Setup” on page 52 for more information.
- If **Device Manager** is selected, your thin client must be managed by Atrust Device Manager. For details, please refer to the User’s Manual for Atrust Device Manager.

4. Provide other information if required.



#### NOTE


- If **File** is selected, you need to specify where to get the image file locally, for example, a locally attached USB flash drive.
- The maximum allowed size of a custom wallpaper file is 5 MB.

5. Click **Save** to confirm.

### 4.3.7 Adjusting Keyboard Settings

To adjust keyboard settings for your t66, please do the following:

1. On Atrust Client Setup, click **User Interface > Keyboard**.

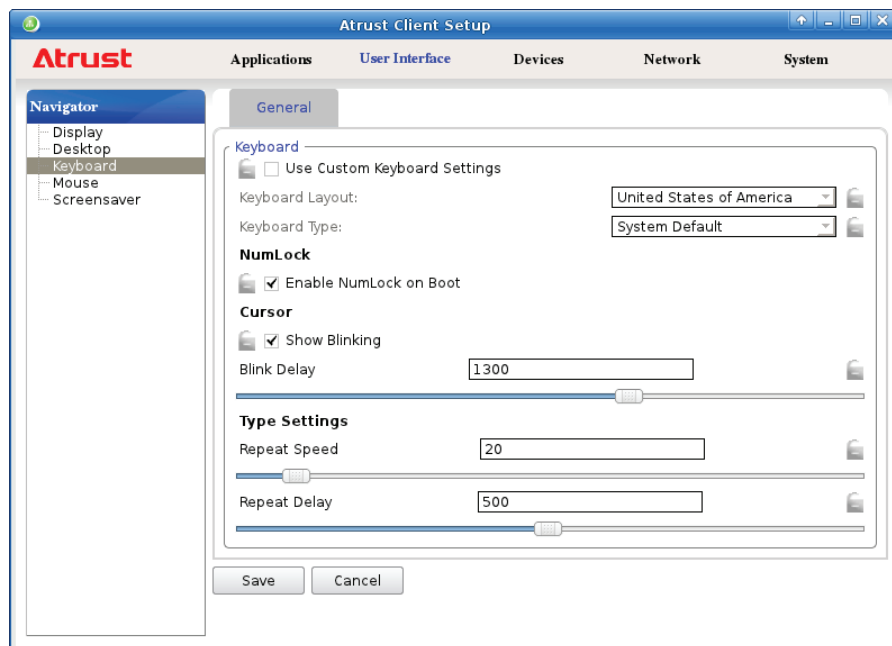


- Click drop-down menus, tick/untick checkboxes, or move sliders to choose desired setting values. Refer to the following table for a description of each setting item.

Keyboard		
Item		Description
Use Custom Keyboard Settings		Check/Uncheck to enable/disable the use of custom keyboard settings.  <b>NOTE:</b> You are allowed to set the keyboard layout and type only when this setting is enabled.
Keyboard Layout		Click the drop-down menu to select the desired keyboard layout.
Keyboard Type		Click the drop-down menu to select the desired keyboard type.
Enable NumLock on Boot		Check/Uncheck to enable/disable the NumLock key after system startup.
Cursor	Show Blinking	Check/Uncheck to enable/disable the cursor blinking (local desktop only).
	Blink Delay	Move the slider to select the blink delay between each occurrence of cursor.
Type Settings	Repeat Speed	Move the slider to select the character repeat rate when a key is held down.
	Repeat Delay	Move the slider to select the character repeat delay between its each occurrence.



#### TIP

- Hang your mouse over the Up/Down arrow to quickly scroll up/down the Keyboard Layout list.

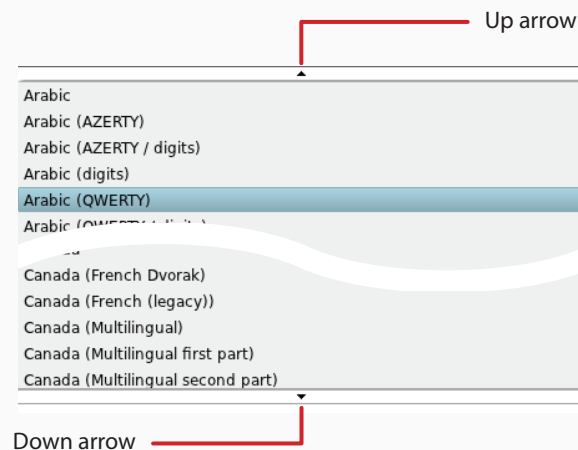


- To fine-tune a setting value, click its slider, and then use the Right/Left key to increase/decrease the value by 1 or the Page Up/Page Down key to increase/decrease by 10.

- Click **Save** to apply.

4.3.8 Configuring Mouse Settings

To configure mouse settings for your t66, please do the following:

- 1. On Atrust Client Setup, click **User Interface > Mouse**.

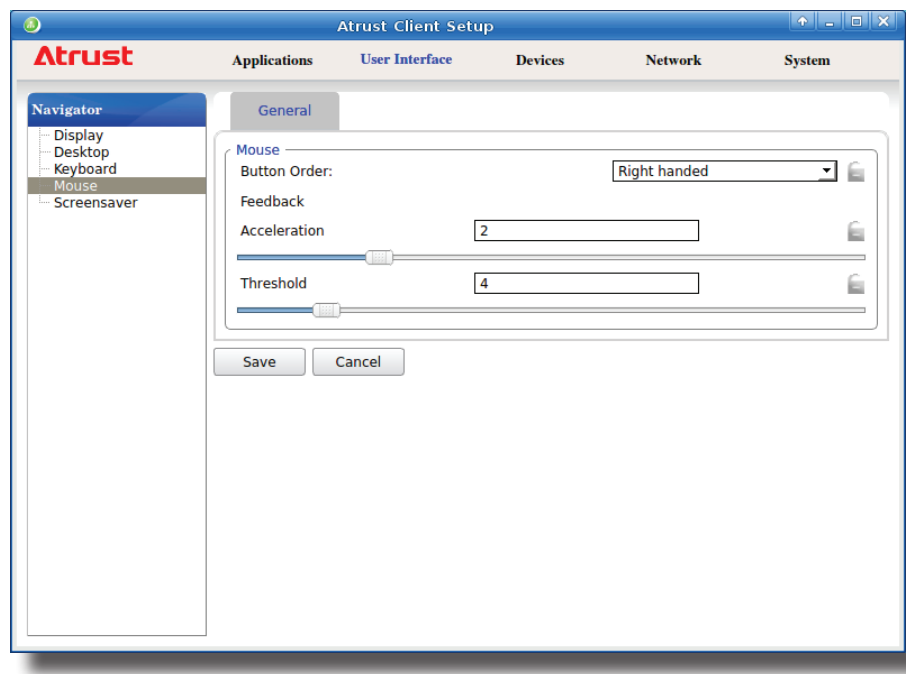


- 2. Click the drop-down menu or move sliders to choose desired setting values. Refer to the following table for a description of each setting item.

Mouse		
Item		Description
Button Order		Click the drop-down menu to switch mouse buttons for right-hand/left-hand use.
Feedback	Acceleration	Move the slider to select the rate at which the mouse increases speed while moving.
	Threshold	Move the slider to select the moved distance (pixels) after which the mouse starts to accelerate.

### 4.3.9 Configuring Screensaver Settings

To configure screensaver settings for your t66, please do the following:

1. On Atrust Client Setup, click **User Interface > Screensaver**.

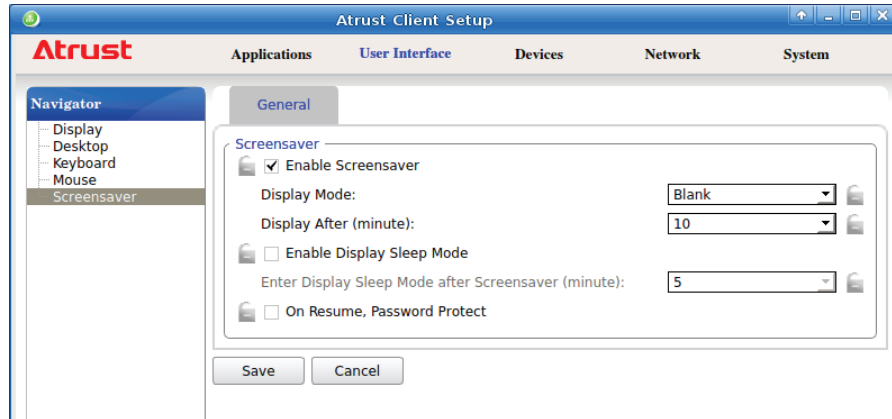

2. Click drop-down menus or tick/untick checkboxes to choose desired settings.

Screensaver							
Item	Description						
Enable Screensaver	Check/Uncheck to enable/disable Screensaver.						
Display Mode	<p>Click to select the display mode of the screensaver. Two options are available: <b>Blank</b> and <b>Logo</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Blank</td><td>Displays a black screen.</td></tr> <tr> <td>Logo</td><td>Displays the Atrust floating logo.</td></tr> </table>	Option	Description	Blank	Displays a black screen.	Logo	Displays the Atrust floating logo.
Option	Description						
Blank	Displays a black screen.						
Logo	Displays the Atrust floating logo.						
Display After (minute)	Click to select the wait time for screensaver.						
Enable Display Sleep Mode	Check to turn off (i.e. stop sending signals to) the display to maximize the energy savings.						
Enter Display Sleep Mode after Screensaver (minute)	Click to select when to turn off (i.e. stop sending signals to) the display after Screensaver starts.						
On Resume, Password Protect	Check/Uncheck to resume with/without a password.						



#### TIP

- While setting wait time for screensaver, you can hang your mouse over the Up/ Down arrow to quickly scroll up/down the Minute list.


3. Click **Save** to apply.

## 4.4 Configuring External Device Settings

### 4.4.1 Devices Tab Overview




**Devices** tab enables you to configure settings for external devices of clients. To access available settings of **Devices** tab, click the tab on Atrust Client Setup.

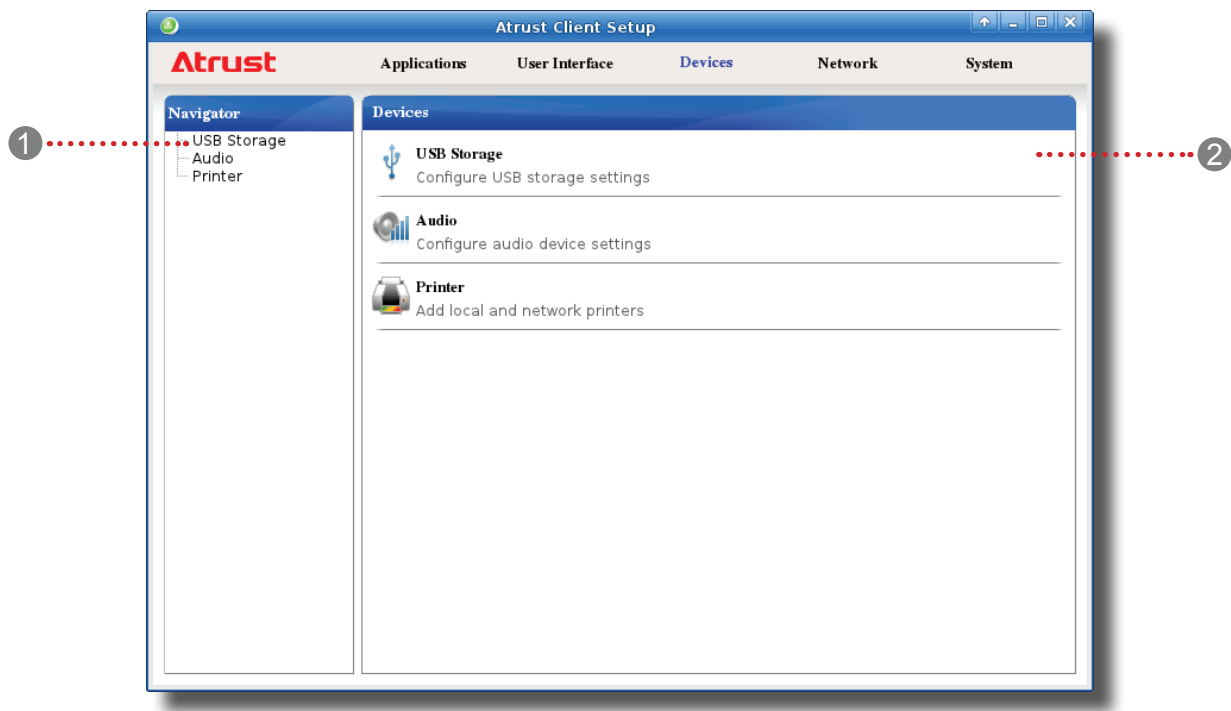Devices Tab Overview



Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>Devices</b> tab or to select a setting entry under a selected setting item.
2	Configuration area	Configures setting values when a setting item or entry is selected.

#### 4.4.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Devices	USB Storage		Click to configure settings for USB storage devices.	4.4.3 4.4.4	81 82
	Audio		Click to configure settings for audio devices.	4.4.5	83
	Printer		Click to add local or network printers.	4.4.6 4.4.7	84 87

#### 4.4.3 Configuring Settings for USB Storage Devices


To configure settings for USB storage devices, please do the following:



##### NOTE

- To access locally attached USB storage devices in a local or virtual session, you need to configure appropriate settings under this setting item.

1. On Atrust Client Setup, click **Devices** > **USB Storage**.

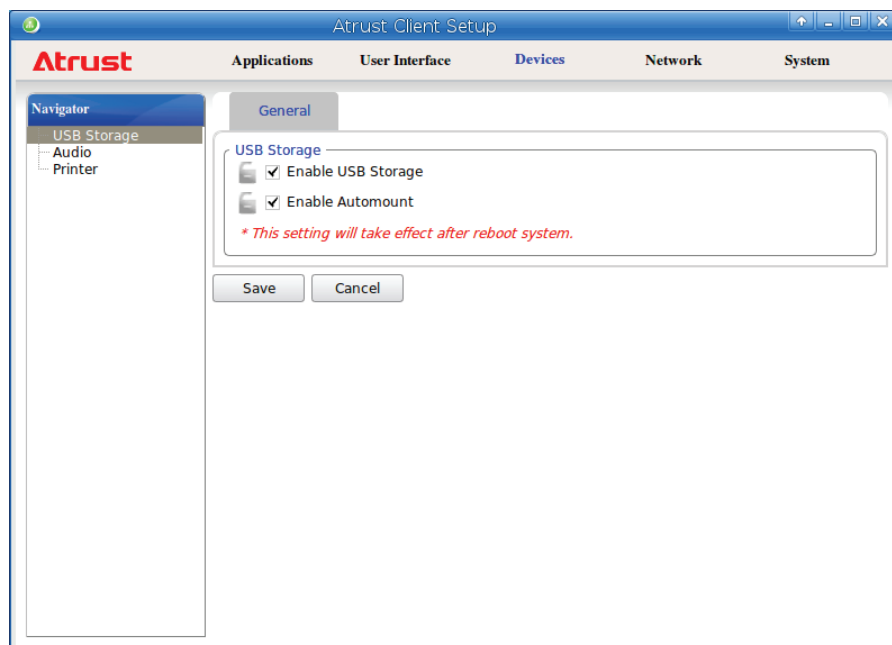

2. Tick/untick the checkboxes to choose the desired settings.

Settings for USB Storage Devices	
Item	Description
Enable USB Storage	<p>Tick/Untick this checkbox to allow/disallow the access of USB storage devices.</p> <p><b>NOTE:</b> To use the locally attached USB storage devices in an RDP / ICA / View session, the mapping of local USB storage devices must be enabled in this session's RDP / ICA / View connection settings. For detailed instructions and more related settings, please refer to sections:</p> <p>"4.6.5 Configuring Advanced RDP Connection Settings" on page 129  "4.6.11 Configuring Advanced ICA Connection Settings" on page 168  "4.6.14 Configuring Advanced View Connection Settings" on page 201</p>
Enable Automount	<p>Tick/Untick this checkbox to enable/disable the automount of USB storage devices.</p> <p><b>NOTE:</b> If this setting is disabled, users need to manually mount the attached USB storage devices. For detailed instructions, please refer to section "4.4.4 Manually Mount and Eject Attached USB Storage Devices" on page 82.</p>

3. Click **Save** to save your change.



**NOTE**

- For your changes to take effect, you need to restart your system.

#### 4.4.4 Manually Mount and Eject Attached USB Storage Devices



To mount/eject an attached USB storage device, please do the following:



**NOTE**

- If **Enable Automount** is checked (see section "4.4.3 Configuring Settings for USB Storage Devices" on page 81), then an attached USB storage device will be mounted automatically.

1. Right click the desktop icon of the attached USB storage device.
2. A popup menu appears.

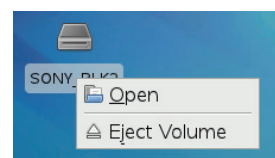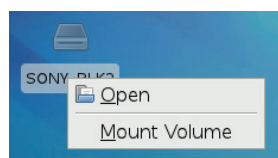

3. Click to select **Mount Volume/Eject Volume** to mount\unmount the attached USB storage device.



#### 4.4.5 Disabling or Enabling Attached Audio Devices


To disable/enable attached audio devices, please do the following:



##### NOTE

- If you disable locally attached audio devices, client users are not allowed to perform audio playback or recording with these devices in an RDP / ICA / View session.
- To perform audio playback or recording with local audio devices in an RDP / ICA / View session, you need to enable locally attached audio devices here (the **Audio** setting item under **Devices** tab) and configure audio related settings in the RDP / ICA / View connection settings. For detailed instructions, please refer to sections:
  - ✧ "4.6.5 Configuring Advanced RDP Connection Settings" on page 129
  - ✧ "4.6.11 Configuring Advanced ICA Connection Settings" on page 168
  - ✧ "4.6.14 Configuring Advanced View Connection Settings" on page 201

1. On Atrust Client Setup, click **Devices** > **Audio**.

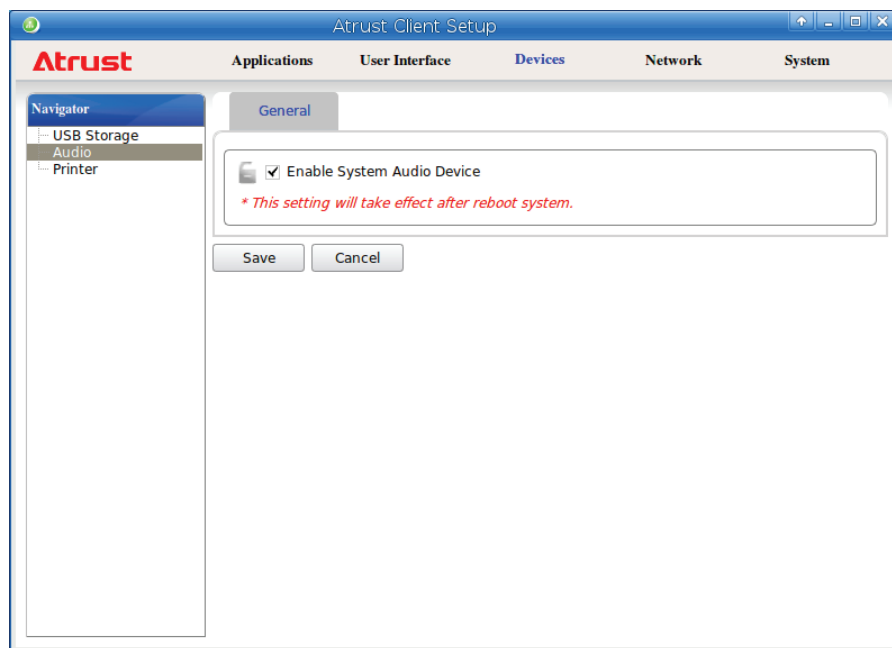

2. Click to check/uncheck **Enable System Audio Device**.
3. Click **Save** to confirm your selection.




##### NOTE

- The change will not take effect until t66 has been restarted.


#### 4.4.6 Adding a Local Printer

To add a local printer for your t66, please do the following:

1. Connect the desired printer to your t66 and turn on the printer.
2. On Atrust Client Setup, click **Devices** > **Printer**.

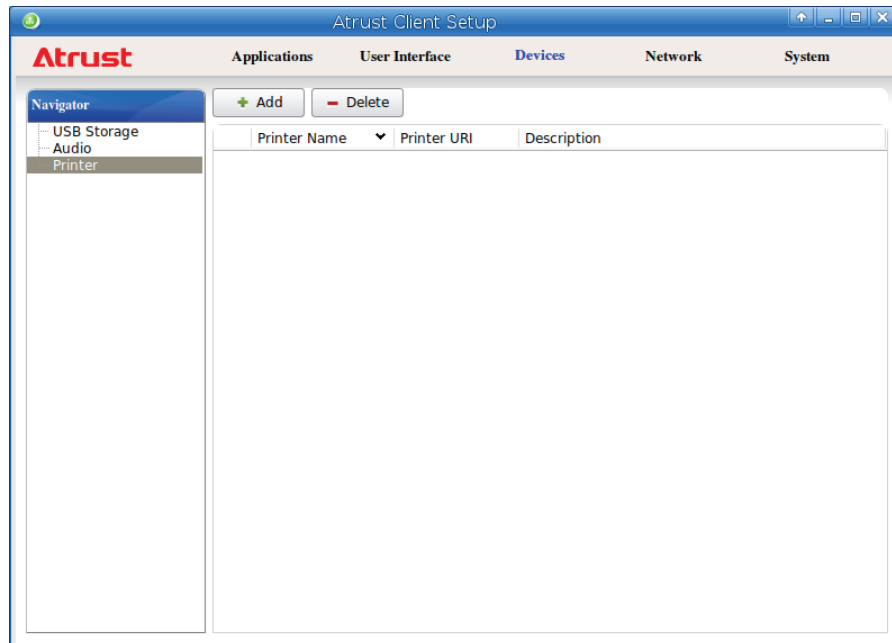


3. Click **Add** on the top of the Printer list.
4. The system automatically start searching for available local printers.
5. Upon completion, the discovered local printers will be listed on the Printer Port drop-down menu.
6. Click the Printer Port drop-down menu to select the desired local printer.



7. Fields in the Add Printer section will automatically change to fit the type of the selected printer.

8. A field for the selected printer appears and the printer URI (Uniform Resource Identifier) data is automatically filled out in the field.

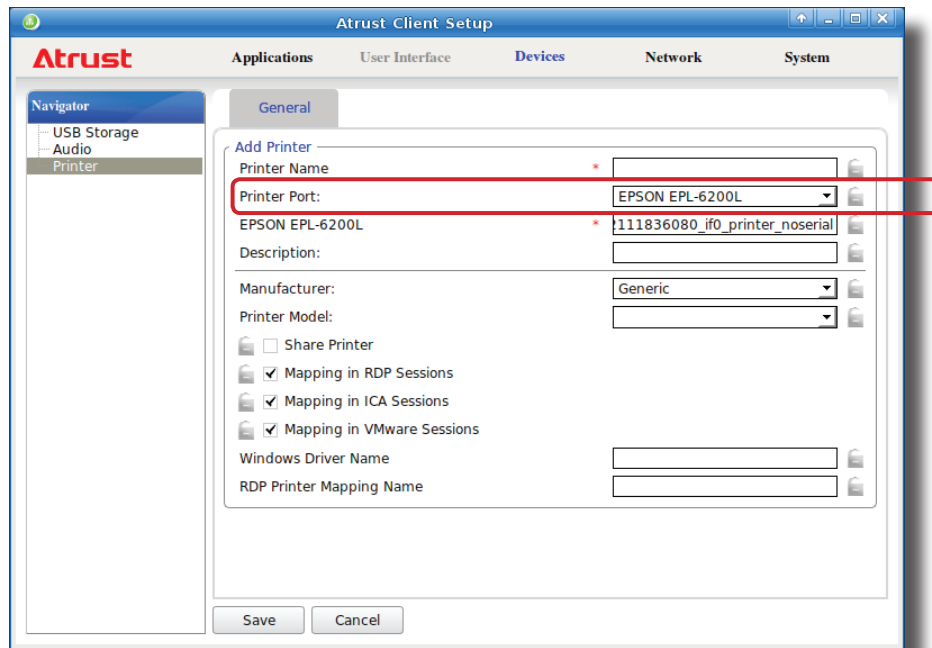

**NOTE**

- A URI (Uniform Resource Identifier) is a sequence of characters that is used to identify a resource on the Internet.

9. Click the Manufacturer and Printer Model drop-down menus to select the manufacturer and model for the attached local printer.



**NOTE**

- For the printer to operate normally, you need to specify the correct information in these two fields. Otherwise, the printer would fail to work.


10. Refer to the following table to configure desired settings.



**NOTE**

- You may need to provide the Windows driver name for your printer. For details, please refer to descriptions in the table.


11. Type the desired printer name, and then click **Save** to apply.

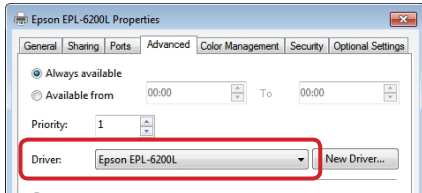Settings for Printers	
Item	Description
Share Printer	<p>Check/Uncheck to share the printer.</p> <p>Once <b>Share Printer</b> is checked, other computers in the same network segment will be allowed to use the printer.</p> <p>To add this shared printer for use on other computers, please do the following:</p> <ol style="list-style-type: none"> <li>1. For computers running a Windows Server operating system, such as Windows Server 2008 R2, please add the <b>Internet Printing Client</b> feature first (Click <b>Start</b> &gt; <b>All Programs</b> &gt; <b>Administrative Tools</b> &gt; <b>Server Manager</b> &gt; <b>Action</b> &gt; <b>Add Features</b> &gt; <b>Internet Printing Client</b>, follow the wizard to complete the task, and then restart your system).</li> <li>2. Click <b>Start</b> &gt; <b>Devices and Printers</b> &gt; <b>Add a printer</b> &gt; <b>Add a network, wireless or Bluetooth printer</b>.</li> <li>3. Click <b>Stop</b> to cancel the automatic printer search, and then click <b>The printer that I want isn't listed</b>.</li> <li>4. Under <b>Select a shared printer by name</b>, enter <code>http://IP address of your t66:631/printers/Printer Name</code>.</li> </ol> <p><b>NOTE:</b> For example, if a printer is locally attached to your t66 and is added as a local printer through Atrust Client Setup with the printer name <b>EPS</b>, and the IP address of your t66 is 192.168.50.146. Here you should enter: <b>http://192.168.50.146:631/printers/EPS</b></p> <ol style="list-style-type: none"> <li>5. Click <b>Next</b> to continue.</li> <li>6. Select the manufacturer and model of the printer, and then click <b>OK</b> to install the correct driver.</li> <li>7. Upon completion, a success message appears. Click <b>Next</b> to continue.</li> <li>8. On the appeared page, click <b>Print a test page</b> to test the printer.</li> <li>9. Click <b>Finish</b> to apply. The printer is added to the Printers and Faxes list.</li> </ol>
Mapping in RDP Sessions	Check/Uncheck to enable/disable the locally connected printer in an RDP session.
Mapping in ICA Sessions	Check/Uncheck to enable/disable the locally connected printer in an ICA session.
Mapping in VMware Sessions	Check/Uncheck to enable/disable the locally connected printer in a View session.
Windows Driver Name	<p>Keep this field blank, if the printer works well in a session. In case that the printer fails to work, filling in this field may solve the problem.</p> <p>To find out the required information, please do the following:</p> <ol style="list-style-type: none"> <li>1. Attach the printer to a computer running a Windows OS, complete the required installation, and ensure the printer works well.</li> <li>2. Click <b>Start</b> &gt; <b>Devices and Printers</b>, and then, in the opened window, right click the printer to open a popup menu.</li> <li>3. On the popup menu, click to select <b>Printer properties</b>.</li> <li>4. In the opened window, click <b>Advanced</b>. The driver name is shown.</li> </ol> 
RDP Printer Mapping Name (for RDP sessions only)	Type in the desired printer name in a session (Windows desktop). If this field remains blank, the name you typed in the Printer Name field will be used.

#### 4.4.7 Adding a Network Printer

To add a network printer for your t66, please do the following:

1. Ensure that your t66 is connected to the network and the desired network printer is turned on.
2. On Atrust Client Setup, click **Devices > Printer**.
3. Click **Add** on the top of the Printer list.
4. The system automatically starts searching for available local printers. Upon completion, the discovered local printers will be listed on the Printer Port drop-down menu.
5. Click the Printer Port drop-down menu to select the desired network printer. Three types of network printers are available: **TCP Network Printer**, **LPD Network Printer**, and **IPP Network Printer**.



6. Fields in the Add Printer section will automatically change to fit the type of the selected printer.
7. Type in the IP address of the network printer in the TCP Printer Server, LPD Printer Server, or IPP URI field.

**Add Printer**

Printer Name \*

Printer Port:

TCP Print Server \*

TCP Port

Description:

**Add Printer**

Printer Name \*

Printer Port:

LPD Print Server \*

LPD Queue Name

Description:

**Add Printer**

Printer Name \*

Printer Port:

IPP URI \*

Description:


8. Click the Manufacturer and Printer Model drop-down menus to select the manufacturer and model for the desired network printer.
9. Refer to the table on page 86 to configure other printer settings, and then click **Save** to apply.

## 4.5 Configuring Network Settings

### 4.5.1 Network Tab Overview





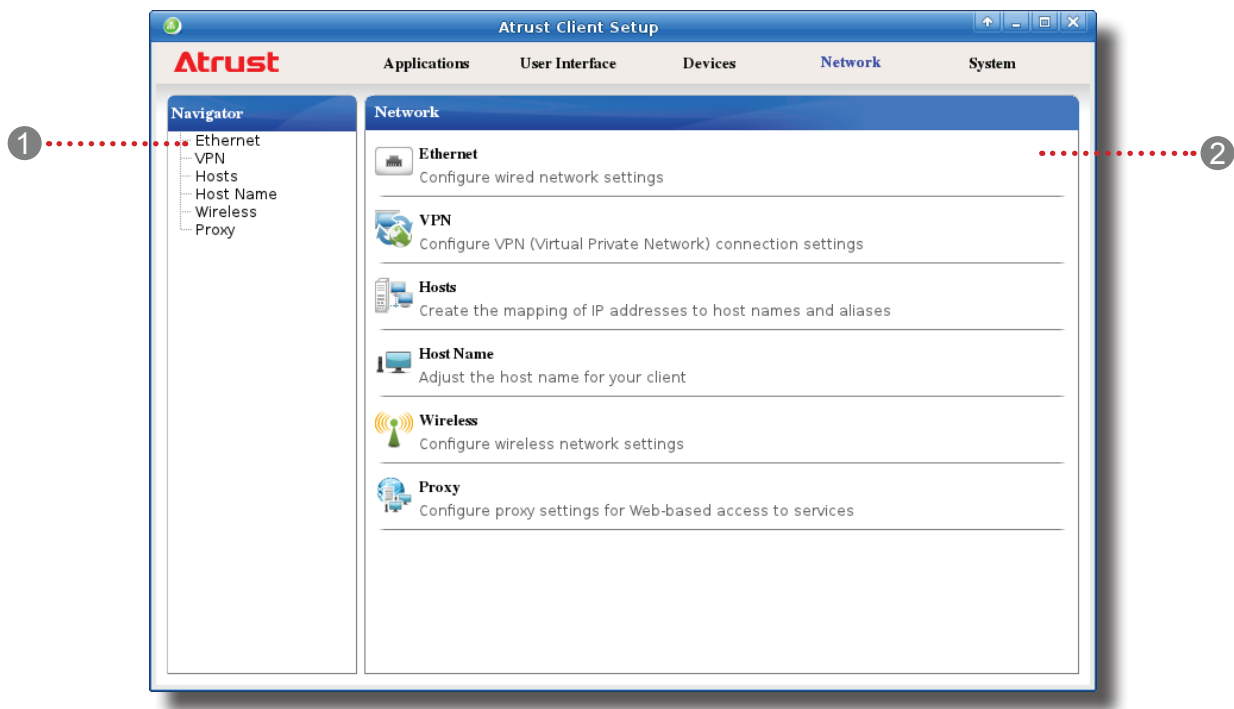

**Network** tab enables you to configure network settings for clients. To access available settings of **Network** tab, click the tab on Atrust Client Setup.

Network Tab Overview



Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>Network</b> tab or to select a setting entry under a selected setting item.
2	Configuration area	Configures setting values when a setting item or entry is selected.

## 4.5.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Network	Ethernet		Click to configure wired network settings.	4.5.3 4.5.4	90 93
	VPN		Click to configure VPN (Virtual Private Network) connection settings and create a VPN connection.	4.5.5 4.5.6	94 98
	Hosts		Click to create the mapping of IP addresses to the names of host servers and create the Failover Cluster list.	4.5.7 4.5.8	99 101
	Host Name		Click to change the host name of your thin client.	4.5.9	103
	Wireless		Click to configure wireless network settings and create a wireless connection.	4.5.10 4.5.11 4.5.12 4.5.13	104 105 106 109
	Proxy		Click to configure proxy settings for Web-based access to services.	4.5.14	110


### 4.5.3 Configuring Wired Network Settings

The **Ethernet** setting enables you to configure the wired network settings for your t66 thin client.

#### **Enabling or Disabling the Ethernet Network Interface**

To enable/disable the Ethernet network interface, please do the following:

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under Interface section, check/uncheck **Enable** to enable/disable the Ethernet network interface.

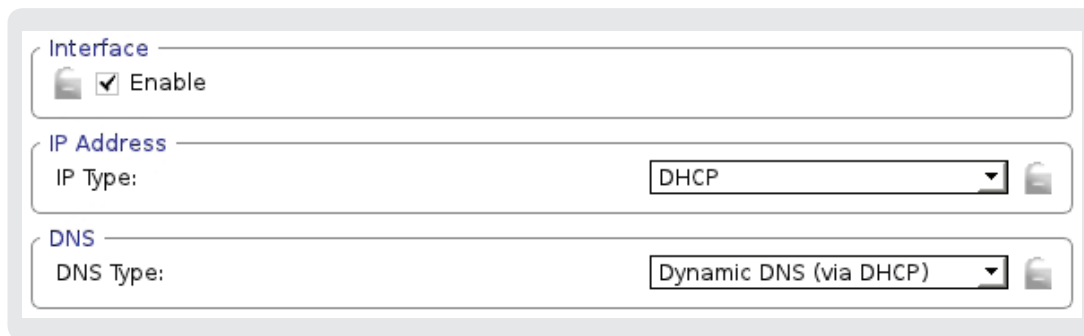

The screenshot shows the Ethernet configuration window. The 'Interface' section has an 'Enable' checkbox that is checked. The 'IP Address' section has a dropdown menu for 'IP Type' currently set to 'DHCP'. The 'DNS' section has a dropdown menu for 'DNS Type' currently set to 'Dynamic DNS (via DHCP)'.

3. Click **Save** to apply.

#### **Using a Dynamic IP Address**

To use a dynamic IP address, please do the following:

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under the IP address section, click the drop-down menu to select **DHCP** for the IP type field.



#### **NOTE**

- If **DHCP** is selected, the DHCP server over the network will automatically assign an IP address to your t66 thin client. This is the default setting.

3. Click **Save** to apply.

#### **Using a Static IP Address**

To use a static IP address, please do the following:




#### **NOTE**

- It's recommended to use a dynamic IP address for your t66 thin client in a corporate network environment.

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under the IP address section, click the drop-down menu to select **Static IP** for the IP type field.
3. The IP address, Subnet mask, and Gateway fields appear in the IP address section.



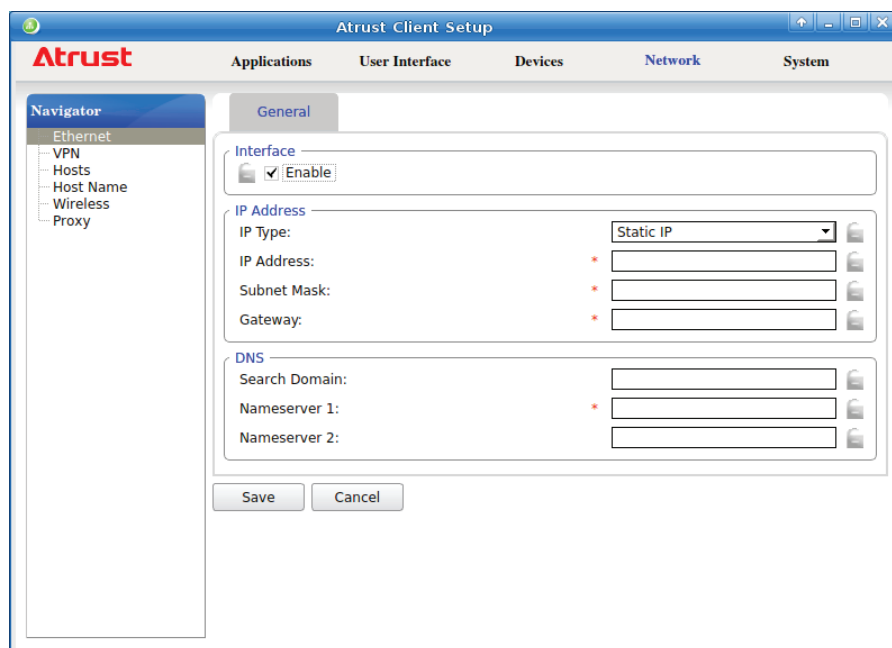

4. Type in the IP address, subnet mask, and gateway for your t66 thin client.

**IP address**

IP type: Static IP

IP address: \* 192.168.12.88

Subnet mask: \* 255.255.255.0

Gateway: \* 192.168.12.254



#### NOTE

- Consult your network administrator for a free IP address and other required data about the network to which your t66 connects. The red asterisks indicate the required fields.

5. Click **Save** to apply.



#### NOTE

- You need to further specify DNS server addresses manually if you choose to use a static IP address.

### Obtaining DNS Server Addresses Automatically

To obtain DNS Server addresses automatically, please do the following:



#### NOTE

- You cannot obtain DNS server addresses automatically through the DHCP server if you choose not to get the IP address via the DHCP server.

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under the DNS section, click the drop-down menu to select **Dynamic DNS (via DHCP)** for the DNS type field.
3. Click **Save** to apply.

### Specifying DNS Server Addresses Manually


To specify DNS Server addresses manually, please do the following:

1. On Atrust Client Setup, click **Network > Ethernet**.
2. Under the DNS section, click the drop-down menu to select **Manual setting**.
3. The **Search domain**, **Nameserver 1**, and **Nameserver 2** fields appear in the DNS section.



#### NOTE

- If you choose to use a static IP address for your t66 thin client, then you need to specify DNS server addresses manually. In this case, the DNS type field will not appear for you to select **Manual setting** or **Dynamic DNS (via DHCP)**.

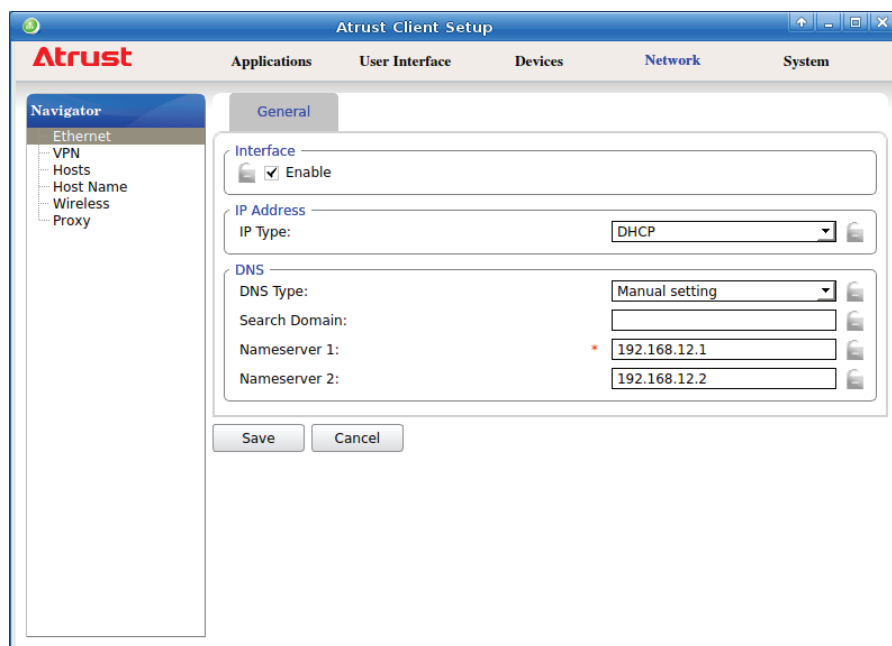

4. Type in the preferred DNS server address in the Nameserver 1 field and the alternate DNS server address in the Nameserver 2 field if any.



**NOTE**

- Specifying a domain name in the Search Domain field will enable your system to discover a computer in that domain simply with its computer name rather than its FQDN (Fully Qualified Domain Name).


5. Click **Save** to apply.

#### 4.5.4 Enabling or Disabling Wake On LAN

Your thin client supports Wake On LAN, enabling you to wake it up remotely with Atrust Device Manager, the client management console developed by Atrust.

To enable/disable Wake On LAN, please do the following:

1. On Atrust Client Setup, click **Network > Ethernet**.

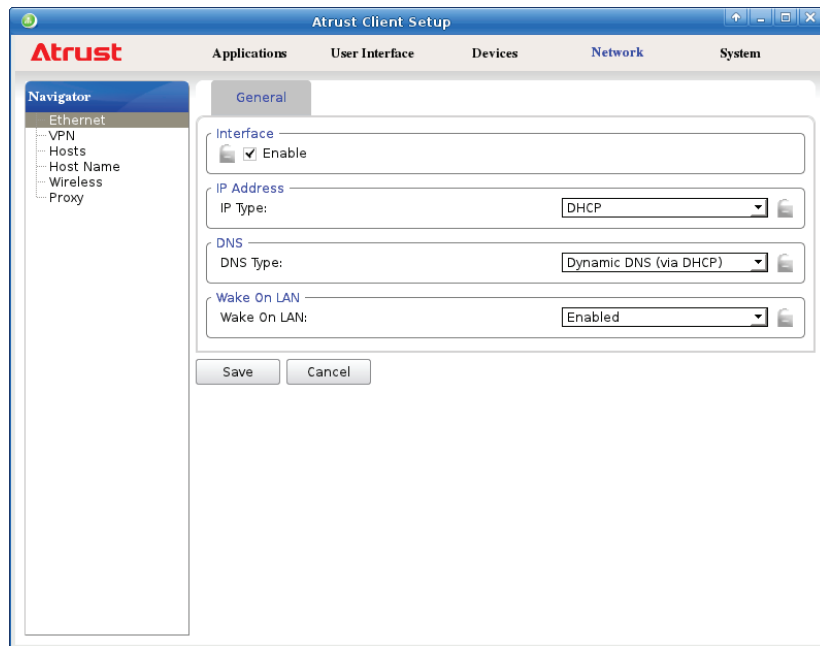

2. Click the drop-down menu to enable/disable Wake On LAN.



**NOTE**

- It's enabled by default.

#### 4.5.5 Establishing and Stopping a VPN connection

The **VPN** setting enables you to establish/stop a virtual private network connection for your t66 thin client.




#### NOTE

- The **VPN** setting also allows you to configure and manage virtual private network settings. For instructions on how to configure and manage virtual private network settings, please refer to section “4.5.6 Configuring Virtual Private Network Settings” on page 98.

#### Adding a Virtual Private Network

To add a virtual private network, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.

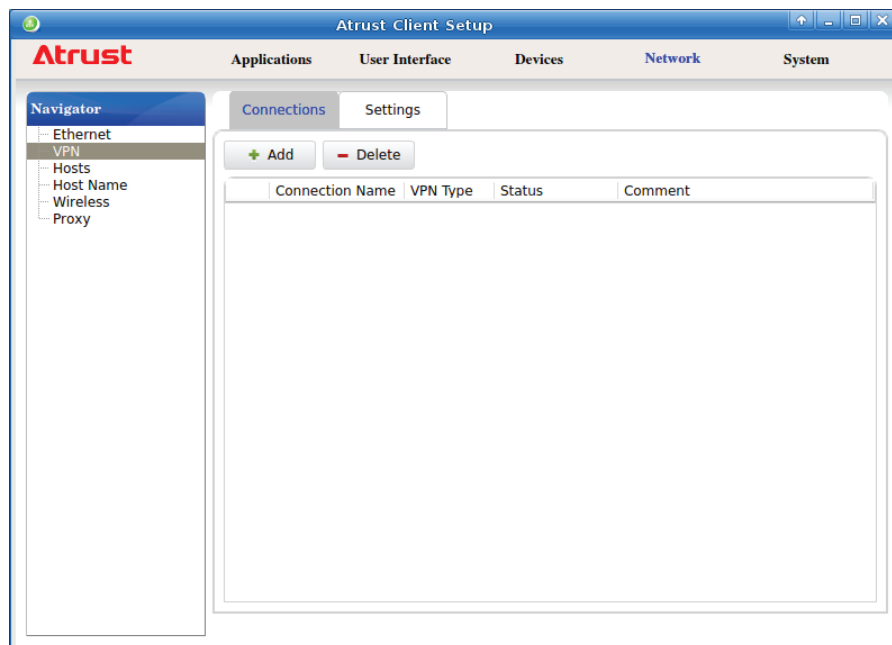


#### NOTE

- If you haven't created any entry, the Virtual Private Network list will be empty.

2. Click **Add** on the top of the Virtual Private Network list.

- On **General** tab, click the drop-down menu to select the desired VPN type. Three types are available: **PPTP**, **L2TP**, and **Cisco AnyConnect**.

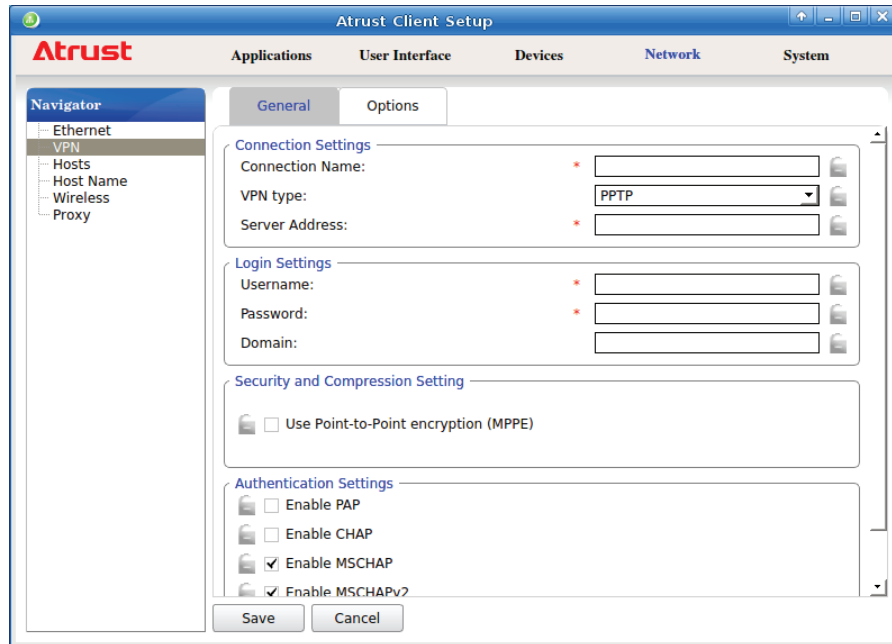

**NOTE**

- The setting items will vary with the selected VPN type.

- Type in or click drop-down menus to provide information about configuration and authentication.



**NOTE**


- Consult your network administrator for required information on configuration and authentication.

- On **Options** tab, configure the DNS-related settings if needed.
- Click **Save** to add the virtual private network.

### ***Establishing a Virtual Private Network Connection***


To establish a virtual private network connection for your t66 thin client, please do the following:


- On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.

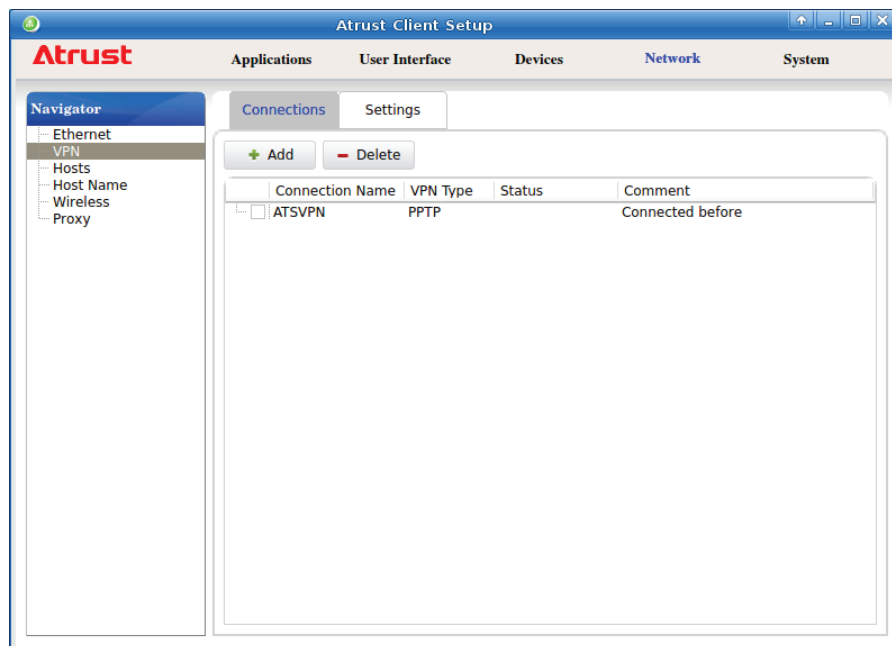

#### NOTE


- If you haven't created any entry, the Virtual Private Network list will be empty. For instructions on adding a virtual private network, please see the preceding topic.

- Click to check the desired virtual private network. The Connect  button then appears on the top of the Virtual Private Network list.

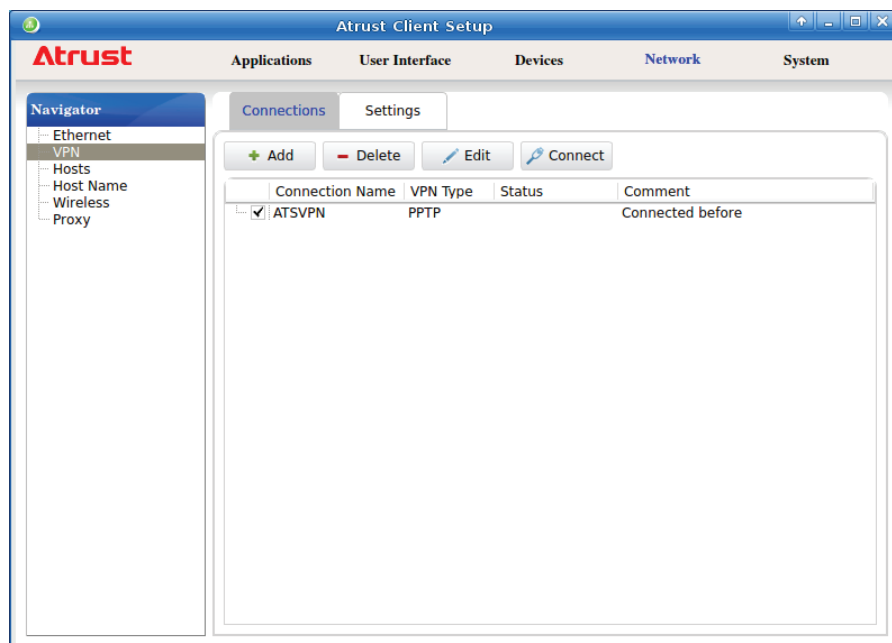


- Click **Connect** to create a virtual private network connection through the selected network entry.

4. Upon completion, the Status column of the virtual private network will show **connected**.

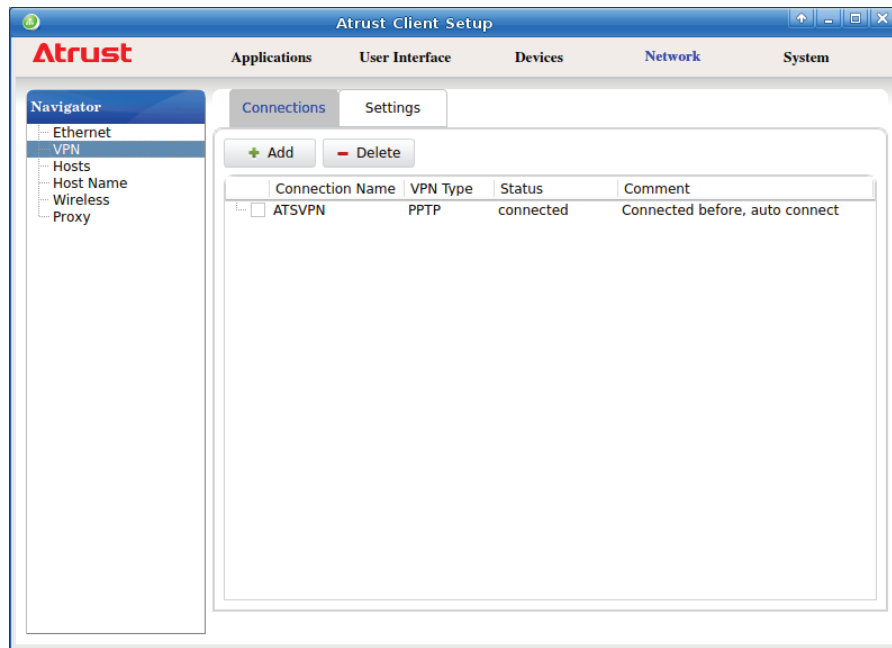

### ***Stopping a Virtual Private Network Connection***

To stop a virtual private network connection, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.
2. Click to check the desired virtual private network. The Disconnect  Disconnect button appears on the top of the Virtual Private Network list.
3. Click **Disconnect** to stop the virtual private network connection.

### ***Deleting a Virtual Private Network***


To delete a virtual private network, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.
2. Click to check the desired virtual private network.
3. Click **Delete** to remove the selected virtual private network.

#### 4.5.6 Configuring Virtual Private Network Settings

##### *Adjusting Connection settings for a Virtual Private Network*


To adjust connection settings for a virtual private network, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN** to open the Virtual Private Network list.
2. Click to check the desired virtual private network. The Edit  button appears on the top of the Virtual Private Network list.
3. Click **Edit** to adjust the settings, and then click **Save** to apply.

##### *Configuring General Settings for Virtual Private Network Connections*

To configure general settings for virtual private network connections, please do the following:

1. On Atrust Client Setup, click **Network** > **VPN**, and then click **Settings** sub-tab.

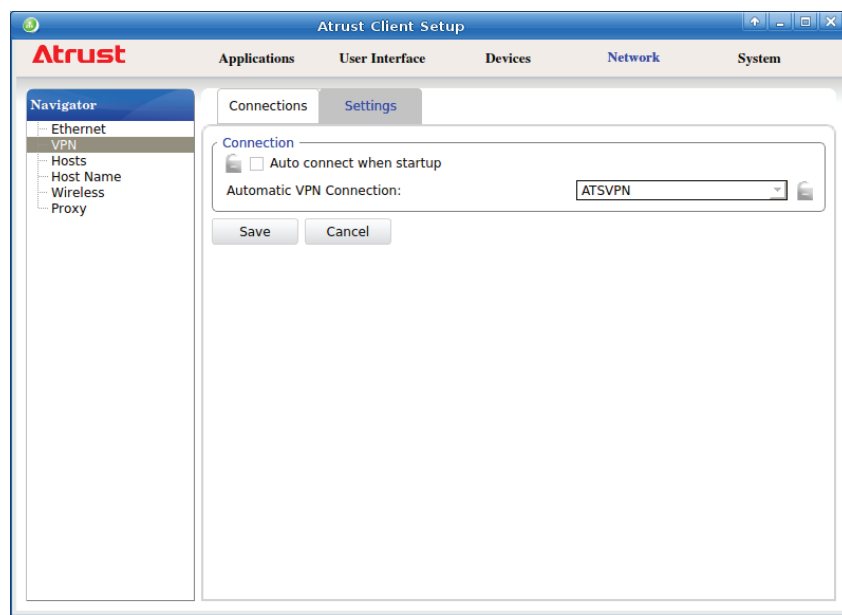

2. Under the Connection section, click to check/uncheck **Auto connect when startup** to allow/disallow automatic virtual private network connection after system startup. When this feature is enabled, select the desired virtual private network through the drop-down menu.




### 4.5.7 Creating the Mapping of IP Addresses to Names of Hosts

Atrust Client Setup allows you to use the name or alias of a host instead of its IP address wherever you need to specify an IP address while configuring client settings. To use this feature, first you need to create the mapping of IP addresses to names or aliases of hosts.

#### **Creating the Mapping List**

To create the mapping of IP addresses to names or aliases, please do the following:

1. On Atrust Client Setup, click **Network** > **Hosts** to open the Host list.

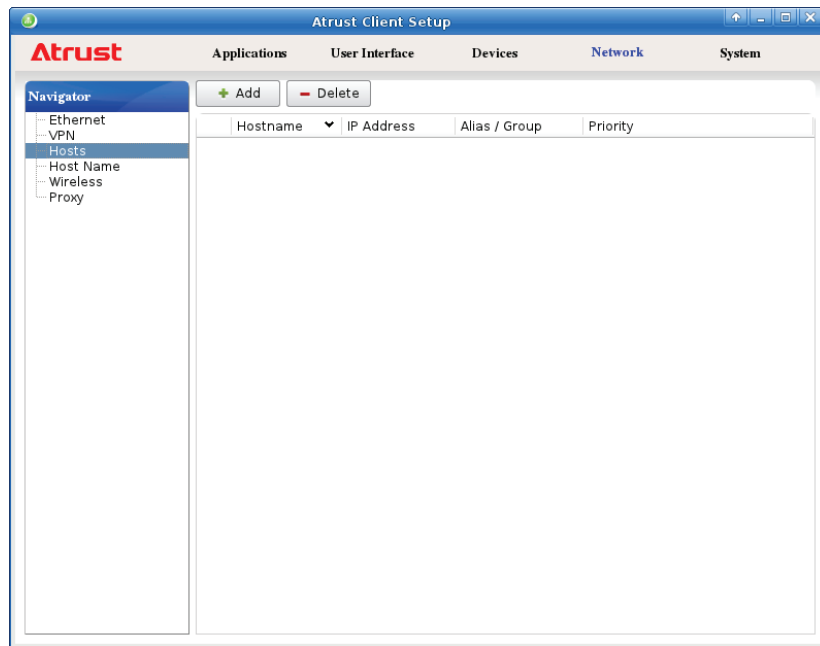

2. Click **Add** to start adding a new host entry.
3. Type in the name, IP address, alias of a host, leave the Priority field blank, and then click **Save** to apply.

**Hosts Table Settings**


Hostname:	*	ADM1	
IP Address:	*	192.168.7.21	
Alias / Group:		ADM	
Priority:		1	



#### **NOTE**

- If your host belongs to a domain, please don't enter the FQDN (Fully Qualified Domain Name) or **full** computer name in the Hostname field. Enter **only** the computer name of the host in this required field.
- You need to type a number in the Priority field **only when** creating a Failover Cluster list to allow host failover feature. For details, please refer to "4.5.8 Configuring the Failover Cluster List" on page 101.

- The newly added entry appears in the Host list.

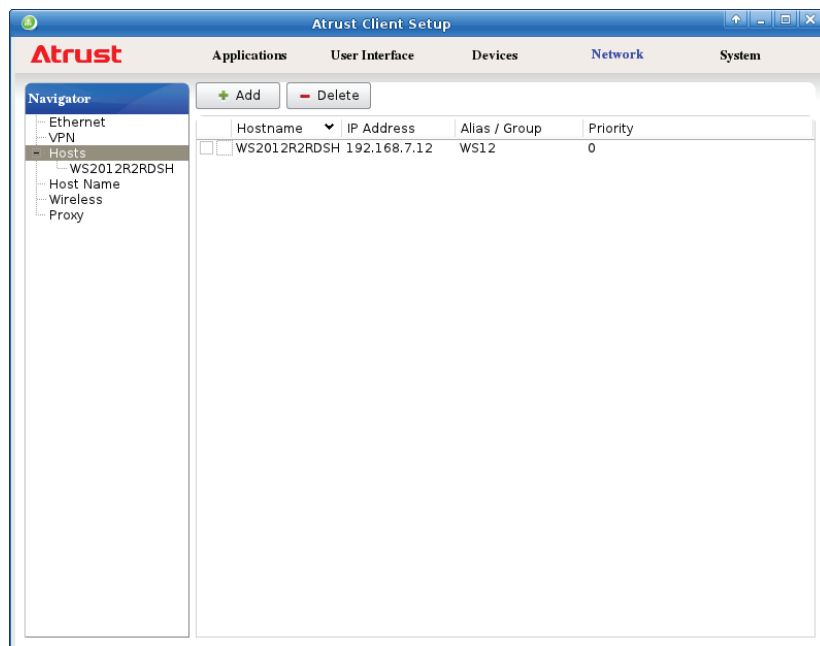

- Repeat steps 2 through 3 to add another new entry.
- Now you can use the name or alias of a host instead of its IP address wherever you need to specify an IP address on Atrust Client Setup while configuring client settings.

### Managing the Mapping List

To manage the Mapping list, please do the following:

- On Atrust Client Setup, click **Network** > **Hosts** to open the Host list.
- Select to manage entries on the Host list.
  - To adjust the settings of an entry, double click the entry, or check off an entry, and then click the **Edit** button on the top of the Mapping list.
  - To delete an entry, check off the entry, and then click **Delete** on the top of the Mapping list.
  - To delete multiple entries, check off all the desired entries, and then click **Delete**. A window appears prompting for confirmation. Click **Yes** to confirm.


#### 4.5.8 Configuring the Failover Cluster List

Atrust Client Setup allows you to create the Failover Cluster list, maintaining the high availability of services from that group of servers (failover cluster).

##### **Creating the Failover Cluster List**

To create a Failover Cluster list, please do the following:

1. On Atrust Client Setup, click **Network** > **Hosts** to open the Host list.

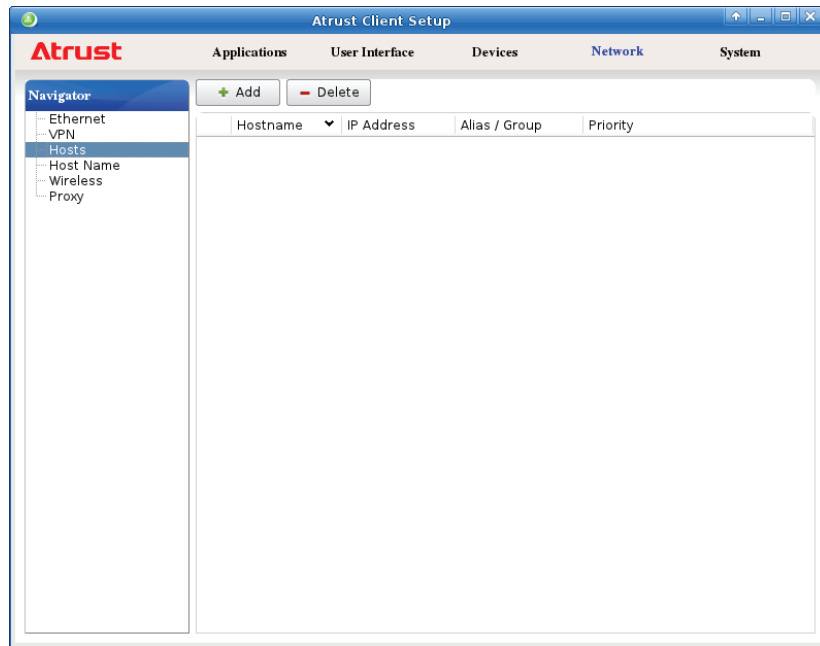

2. Click **Add** to start adding a new host entry.
3. Type in the name, IP address, alias and also cluster (group) name, priority order in the cluster (group), and then click **Save** to apply.

**Hosts Table Settings**


Hostname:	*	<input type="text" value="ADM1"/>	
IP Address:	*	<input type="text" value="192.168.7.21"/>	
Alias / Group:		<input type="text" value="ADM"/>	
Priority:		<input type="text" value="1"/>	



##### **NOTE**

- If your host belongs to a domain, please don't enter the FQDN (Fully Qualified Domain Name) or **full** computer name in the Hostname field. Enter *only* the computer name of the host in this required field.

4. Repeat steps 2 though 3 to add another new entry.
5. All added entries appear on the Host list.

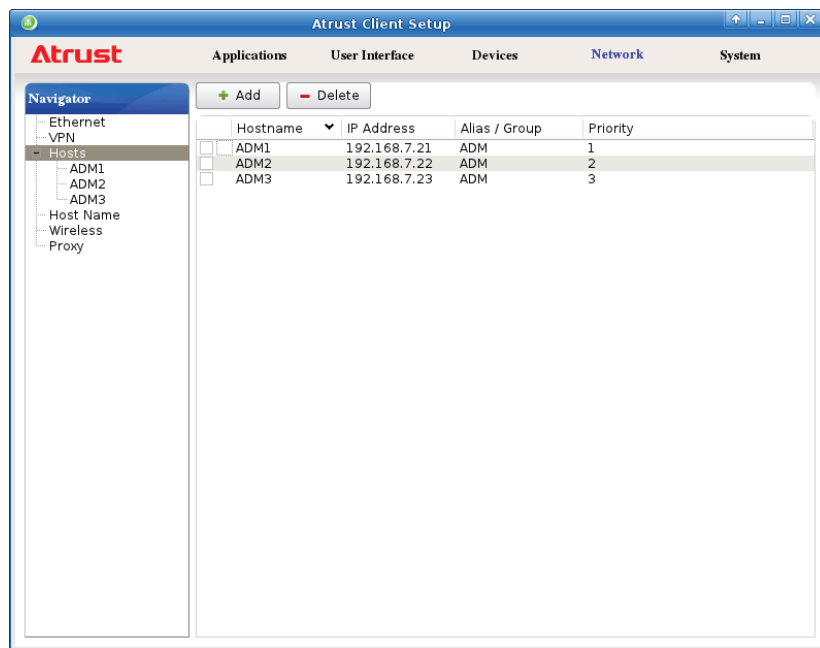

6. Your t66 will follow the given priority order while connecting to this failover cluster (group).

	Hostname ▼	IP Address	Alias / Group	Priority
<input type="checkbox"/>	ADM1	192.168.7.21	ADM	1
<input type="checkbox"/>	ADM2	192.168.7.22	ADM	2
<input type="checkbox"/>	ADM3	192.168.7.23	ADM	3

### Managing the Failover Cluster List


To manage the Host list, please do the following:

1. On Atrust Client Setup, click **Network** > **Hosts** to open the Host list.
2. Select to manage entries on the Host list.
  - To adjust the settings of an entry, double click the entry, or check off an entry, and then click the **Edit** button on the top of the Host list.
  - To delete an entry, check off the entry, and then click **Delete** on the top of the Host list.
  - To delete multiple entries, check off all the desired entries, and then click **Delete**. A window appears prompting for confirmation. Click **Yes** to confirm.

#### 4.5.9 Changing the Host Name of Your Thin Client

To change the host name of your thin client, please do the following:

1. On Atrust Client Setup, click **Network > Host Name**.
2. Change the default host name of your thin client.

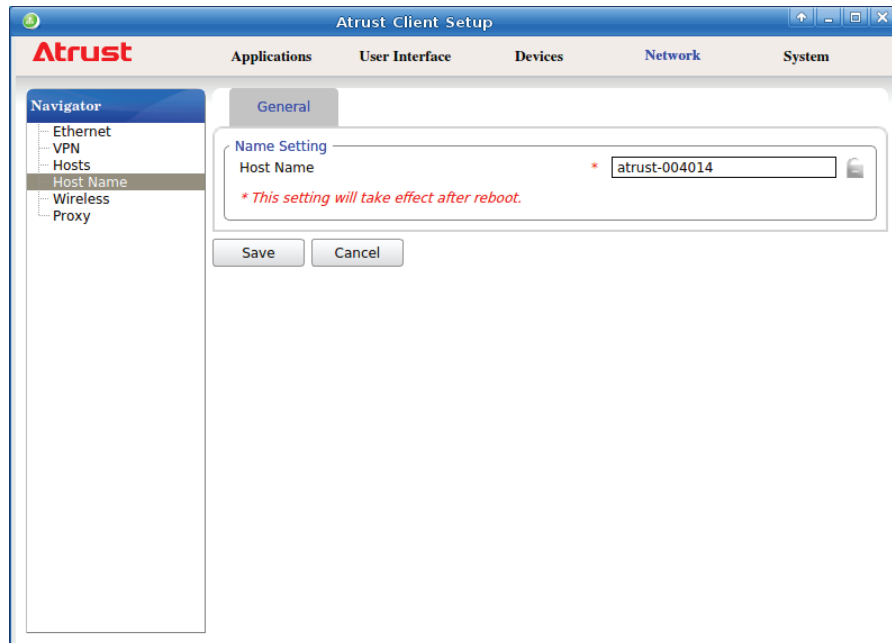

3. Click **Save** to confirm.
4. A restart is required for the change to take effect.

#### 4.5.10 Enabling or Disabling the Wireless Interface


To enable or disable the wireless interface, please do the following:



##### NOTE

- By default, the wireless interface is **enabled**. But before you can access available wireless networks, you need to install an external and USB-based wireless network adapter for your t66. Ensure that you have set up the required adapter.
- Your t66 package may not include a wireless network adapter (**optional**). Please contact your dealer for compatible adapters if needed. It's recommended to check with your dealer **first** if you plan to purchase one by yourself.

1. On Atrust Client Setup, click **Network** > **Wireless**, and then click **Wireless** sub-tab.

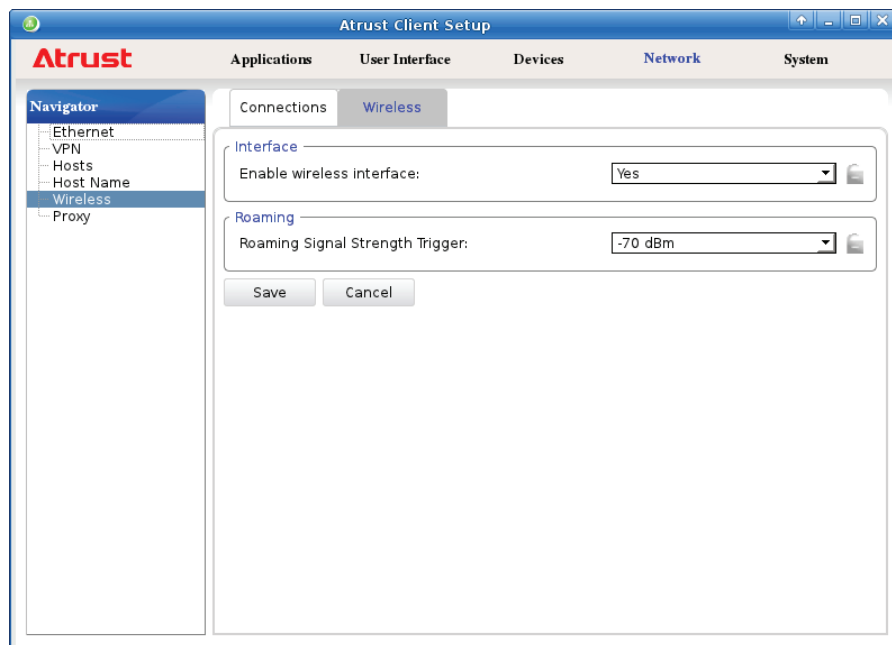


2. Under the Interface section, click the drop-down menu to enable / disable the wireless network interface.
3. Click **Save** to apply.

#### 4.5.11 Configuring the Trigger Threshold for Roaming

To configure the roaming trigger threshold for your wireless connection, please do the following:

1. On Atrust Client Setup, click **Network > Wireless**, and then click **Wireless** sub-tab.

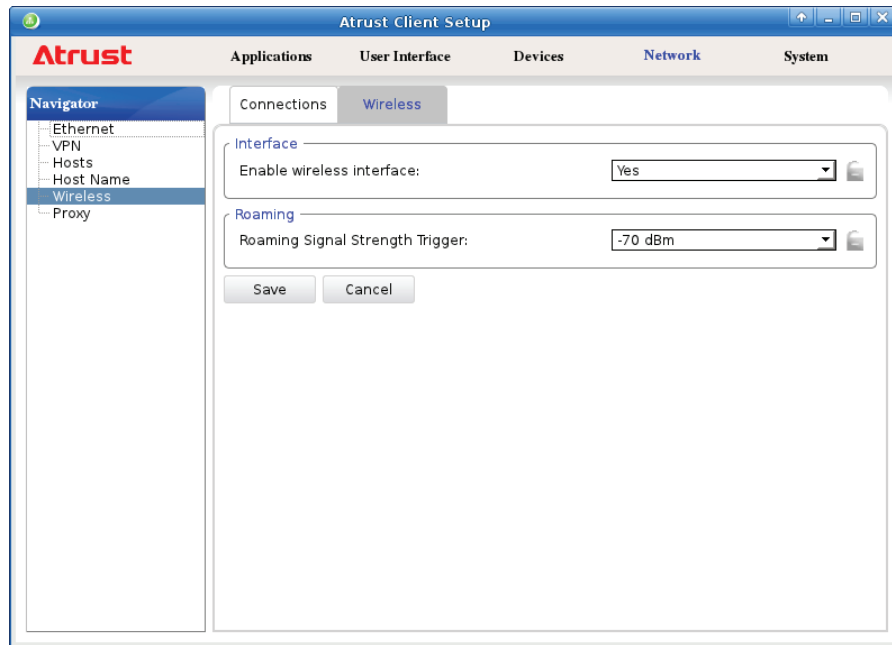

2. Under the Roaming section, click the drop-down menu to choose the desired trigger threshold.



#### NOTE

- To disable wireless roaming, you can choose **No roaming** here.

3. Click **Save** to apply.

#### 4.5.12 Establishing and Stopping a Wireless Connection




##### NOTE

- Before you can access available wireless networks, you need to install an external and USB-based wireless network adapter for your t66. Ensure that you have set up the required wireless network adapter.
- Your t66 package may not include a wireless network adapter (*optional*). Please contact your dealer for compatible adapters if needed. It's recommended to check with your dealer *first* if you plan to purchase one by yourself.

#### Establishing a Wireless Network Connection


To establish a wireless network connection for your t66 thin client, please do the following:

1. On Atrust Client Setup, click **Network** > **Wireless** to open the Wireless Network list.

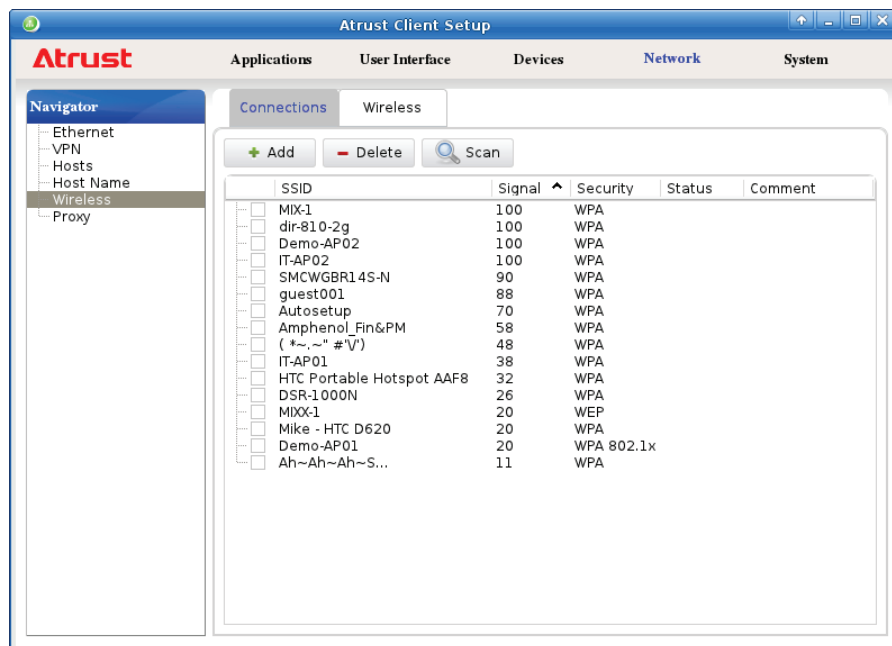


##### NOTE

- Your t66 will perform network discovery *once* and specify all available wireless networks. To refresh, click **Scan** on the top of the Wireless Network list.

2. Click to check the desired wireless network. The Connect  button then appears on the top of the Wireless Network list.



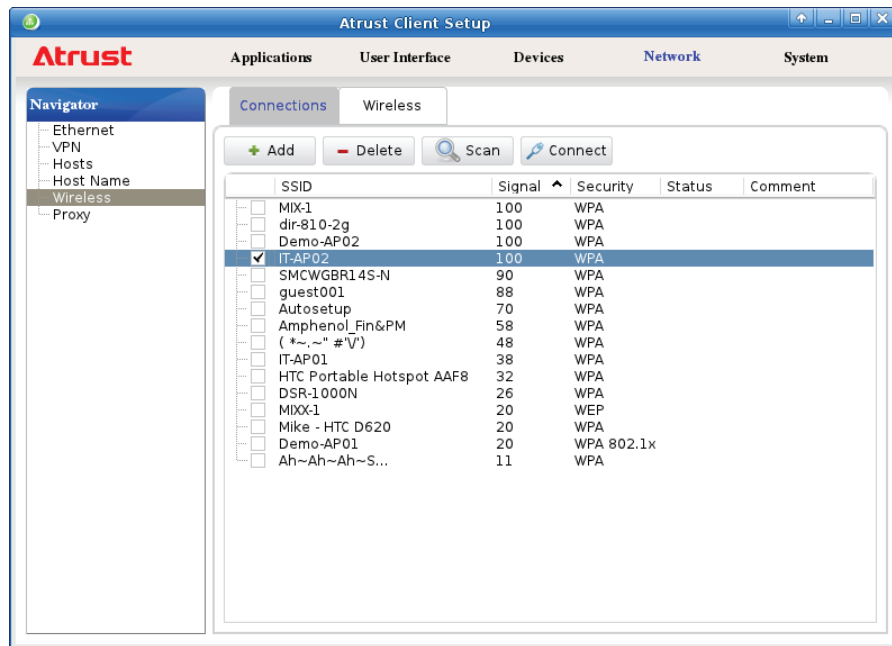


- Click **Connect** to create a wireless network connection through the selected wireless network.
- A window appears prompting for confirmation or authentication.



#### NOTE


- If you ever accessed this wireless network before, the password will be automatically recorded for future access. In this case, you don't need to provide the password again; you only need to confirm the establishment of a wireless connection.
- Consult your network administrator for required information on authentication.

- Type in the required password, and then click **Connect** to continue. Or, click **OK** to confirm the establishment of a wireless connection.
- Upon completion, the Status column of the wireless network will show **connected**.

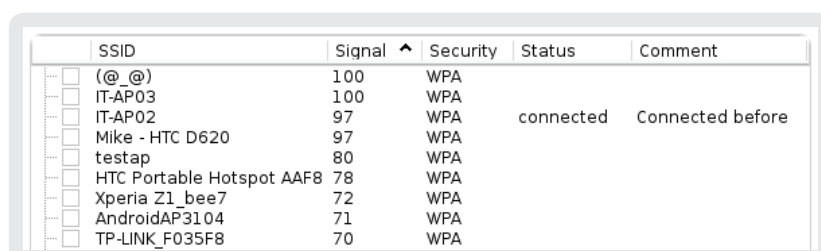

### Stopping a Wireless Network Connection

To stop a wireless network connection, please do the following:

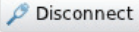1. On Atrust Client Setup, click **Network > Wireless** to open the Wireless Network list.
2. Click to check the desired wireless network. The Disconnect  button appears on the top of the Wireless Network list.
3. Click **Disconnect** to stop the wireless network connection.

### Adding a Wireless Network

In case that you cannot find the desired wireless network in the Wireless Network list, you can manually add it.

To add a wireless network to the Wireless Network list, please do the following:

1. On Atrust Client Setup, click **Network > Wireless** to open the Wireless Network list.
2. Click **Add** on the top of the Wireless Network list.
3. On the opened window, type the wireless network name (SSID), select the used wireless security method, and then provide the required information.



4. Click **Connect** to create a wireless connection.



#### NOTE

- For instructions on how to configure the IP address settings, please refer to section "4.5.3 Configuring Wired Network Settings" on page 90.
- The default is to use a dynamic IP address assigned by the DHCP server.

5. Upon completion, the added wireless network will be shown on the Wireless Network list and **connected** will be shown on its Status column.

### Deleting a Wireless Network

To delete a wireless network, please do the following:

1. On Atrust Client Setup, click **Network > Wireless** to open the Wireless Network list.
2. Click to check the desired wireless network, and then click **Delete** to remove the selected wireless network.




#### NOTE


- Your t66 detects available wireless networks automatically and put the discovered networks on the Wireless Network list. A deleted wireless network may therefore appear again on the list, but the connection settings, including the stored authentication data, will be removed.

### 4.5.13 Configuring Wireless Connection Settings

#### *Adjusting Connection settings for a Wireless Network*

To adjust connection settings for a wireless network, please do the following:

1. On Atrust Client Setup, click **Network** > **Wireless** to open the Wireless Network list.
2. Click to check the desired wireless network which is currently connected. The Edit  button appears on the top of the Wireless Network list.
3. Click **Edit** to adjust the settings:

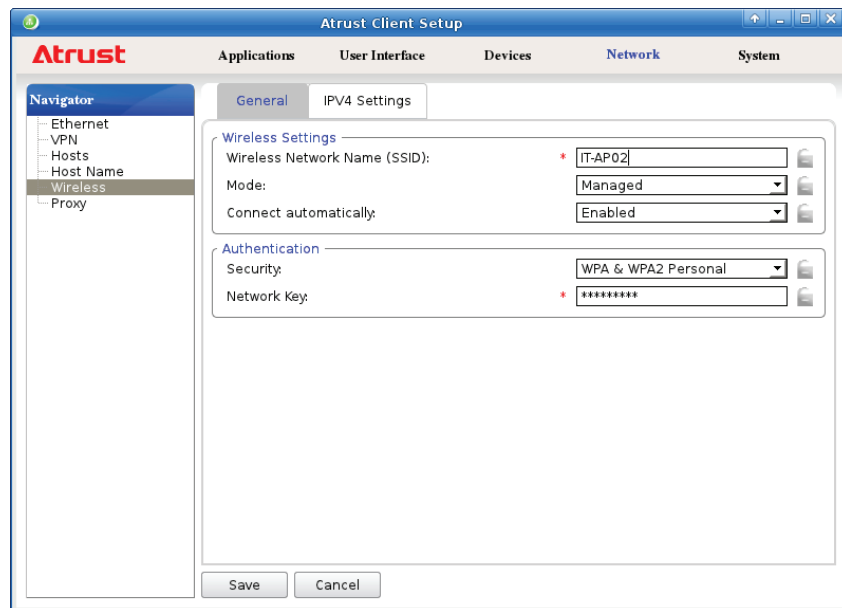

- On the General tab, click the drop-down menu to configure the automatic connection when this wireless network is in range and other connection settings.



#### **NOTE**

- By default, your client will connect to a wireless network automatically if it ever connected to that network successfully.

- On the IPV4 Settings tab, click the drop-down menu or type values in fields to configure IP settings.



#### **NOTE**

- For instructions on how to configure connection settings on the General tab, please see section “4.5.12 Establishing and Stopping a Wireless Connection” on page 106. For instructions on how to configure IP address settings on the IPV4 Settings tab, please see section “4.5.3 Configuring Wired Network Settings” on page 90.

4. Click **Save** to apply.

#### 4.5.14 Configuring Proxy Settings for Web-based Access to Services

To configure proxy settings for Web-based access to services, please do the following:



##### NOTE


- Settings available here are only applicable to services that use Web-based access, such as (Microsoft) Remote Web Access and (Citrix) Web Logon connection types.

1. On Atrust Client Setup, click **Network > Proxy**.
2. Click the Mode drop-down menu to select the desired configuration mode. Four modes are available: **No Proxy**, **Auto-detect proxy settings**, **Manual proxy configuration**, and **Auto proxy configuration**.



##### NOTE

- The setting items will vary with the selected mode.

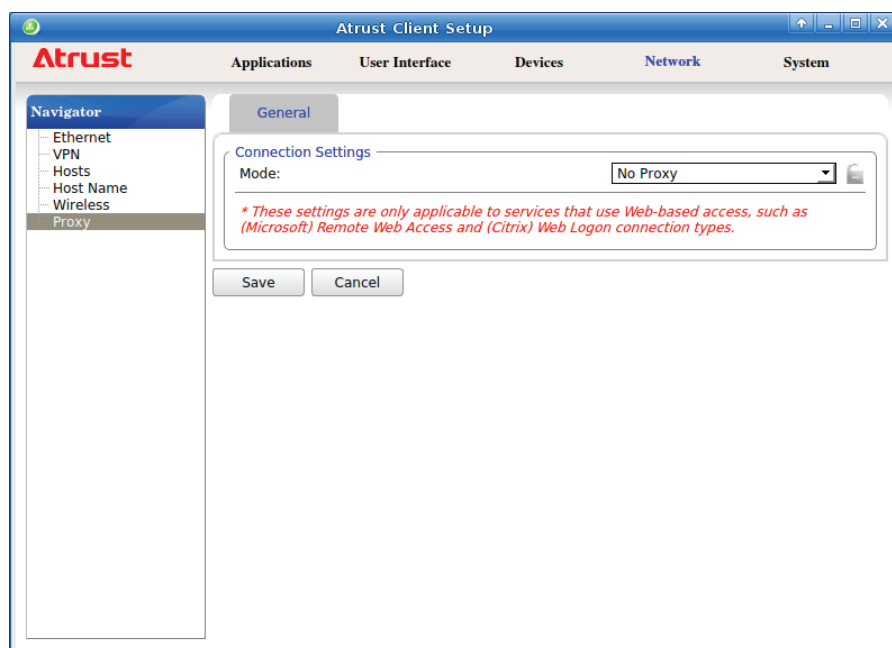

3. Provide the data as required. Please refer to the following table for a description of each setting item.

Connection Settings	
Item	Description
Mode	Click to select the desired proxy configuration mode.
	ModeDescription
	No ProxyDon't use any proxy server.
	Auto-detect proxy settingsDetects the proxy settings for your network automatically.
	Manual proxy configurationConfigures the proxy settings manually.
	Auto proxy configurationLoads proxy settings automatically through the connection to a proxy configuration file.
Mode: Manual proxy configuration	
HTTP Proxy	Provides the IP address of your HTTP proxy server.
Port	Provides the port number which your HTTP proxy server uses.
No Proxy for	Provides No Proxy list. Don't use any proxy server while connecting to the specified URLs.
Mode: Auto proxy configuration	
URL	Provides the URL of a proxy configuration file where proxy settings can be loaded through the network.

## 4.6 Configuring Service Access Settings

### 4.6.1 Applications Tab Overview





**Applications** tab enables you to configure settings for service access on clients. To access available settings of **Applications** tab, click the tab on Atrust Client Setup.

Applications Tab Overview




Interface Elements		
No.	Name	Description
1	Navigation area	Click to select a setting item under <b>Applications</b> tab or to select a setting entry under a selected setting item.
2	Configuration area	Configures setting values when a setting item or entry is selected.

## 4.6.2 Available Settings at a Glance

Tab	Setting	Icon	Description	Section	Page
Applications	Remote Desktop		Click to configure RDP (Remote Desktop Protocol) connection settings and create shortcuts on the local desktop and START menu for Remote Desktop sessions.	4.6.3 4.6.4 4.6.5	114 123 129
	Citrix ICA		Click to configure ICA (Independent Computing Architecture) connection settings and create shortcuts on the local desktop and START menu for ICA sessions.	4.6.6 4.6.7 4.6.8 4.6.9 4.6.10 4.6.11	145 158 159 160 161 168
	VMware View		Click to configure VMware View connection settings and create shortcuts on the local desktop and START menu for View sessions.	4.6.12 4.6.13 4.6.14	197 199 201
	SSH		Click to configure SSH (Secure SHell) connection settings and create shortcuts on the local desktop and START menu for SSH sessions.	4.6.15 4.6.16	205 207

4.6.3 Configuring Basic RDP Connection Settings

The **Remote Desktop** setting allows you to configure RDP (Remote Desktop Protocol) connection settings and create shortcuts on the local desktop and START menu for service access. You can access remote desktops or applications for work simply through these shortcuts.

 **NOTE**

- For more information on Microsoft Remote Desktop services, please visit Microsoft website at [www.microsoft.com](http://www.microsoft.com).

Three connection types are available:


Connection Type	Description	Page
Remote Desktop	Select to access remote desktop/application services.	115
Remote Web Access	Select to access remote application services through a Web browser.	117
Web Feed	Select to access remote application services through published desktop shortcuts.	119



### Connection Type: Remote Desktop

To quickly configure RDP connection settings for the Remote Desktop connection type, please do the following:


1. On Atrust Client Setup, Click **Applications > Remote Desktop**.
2. The RDP Connection list appears in the Configuration area.

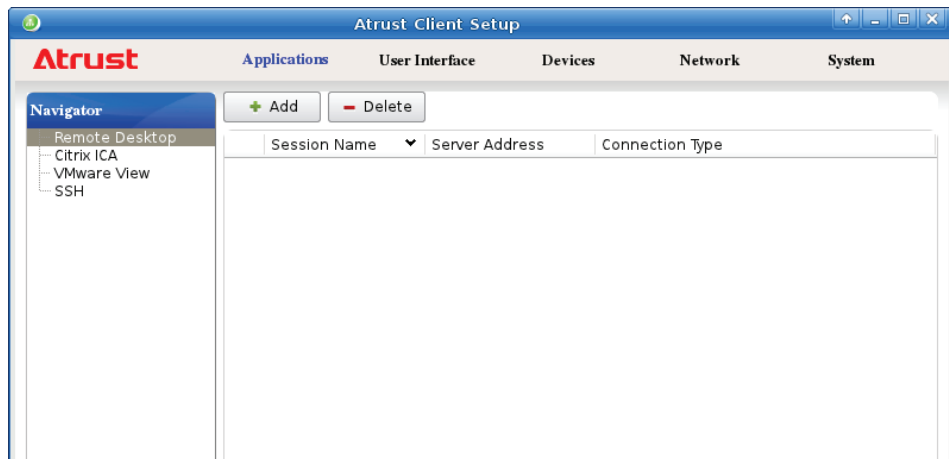

#### NOTE

- If you haven't created any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

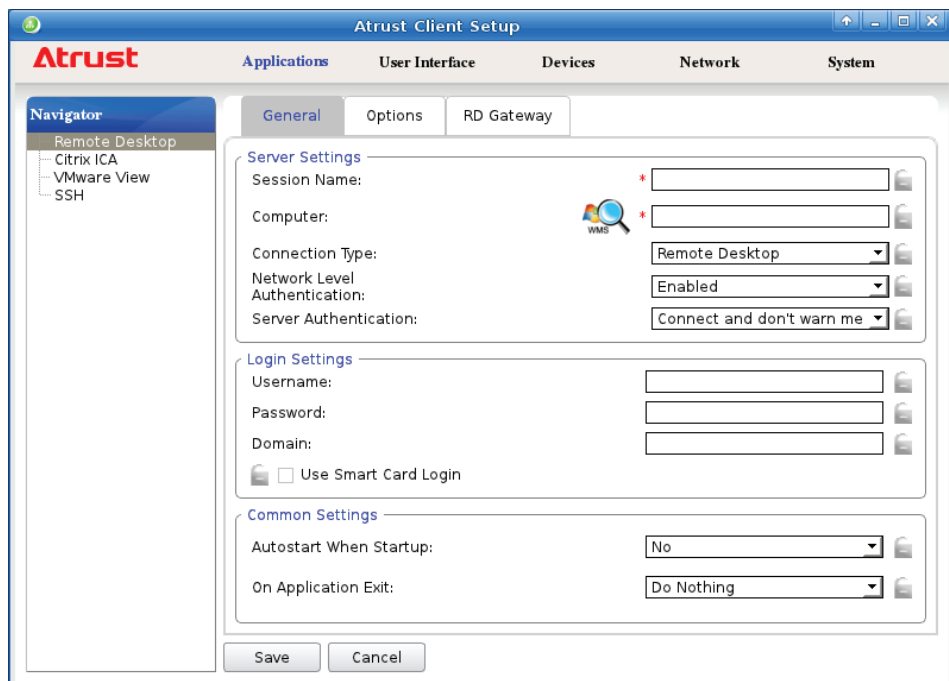

4. On **General** sub-tab, type in the session name and the server/virtual machine address under the Server Settings section.




**NOTE**

- The red asterisks indicate the required fields.
- The remote service-hosted computer can be a physical server or a virtual machine. Please visit Microsoft's websites at [www.microsoft.com](http://www.microsoft.com) or [support.microsoft.com](http://support.microsoft.com) for more information.
- t66 supports up to two Remote Desktop sessions at the same time.
- t66 can only run one RemoteFX-enabled session at a time. The second is not allowed. The default for an RDP connection is RemoteFX enabled. To adjust the setting, please refer to section "4.6.5 Configuring Advanced RDP Connection Settings" on page 129.
- Windows® RemoteFX™ is the new technology that offers a rich user experience over a network for remote desktop users.



**NOTE**

- To create an entry of RDP connection settings for MultiPoint™ Remote Desktop sessions, please do the following:
  1. In the Server Settings section, click  to start discovering MultiPoint™ Server systems over your network.
  2. In the opened window, click the drop-down menu to select the desired server, and then click **OK** to confirm.
  3. The name and IP address of the selected server will be filled out in the corresponding fields automatically.
- The default session name will be the name of the selected MultiPoint host server, but you still can change the default.
- Windows® MultiPoint™ Server is a shared resource technology. This Windows-based operating system enables a host server to power multiple and independent stations, allowing users to share the computing power of one single server. Based on this operating system, Atrust offers a complete solution including both servers and clients. For more information, please visit our website at [www.atrustcorp.com](http://www.atrustcorp.com).

5. Click **Save** to add this RDP connection entry.

6. The shortcuts for Remote Desktop services are automatically created on the local desktop and START menu.



**NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced RDP connection settings for service access. For more information on other available settings, please refer to section "4.6.5 Configuring Advanced RDP Connection Settings" on page 129.

### Connection Type: Remote Web Access


To quickly configure RDP connection settings for the Remote Web Access connection type, please do the following:



#### NOTE

- Atrust t66 supports only RD Web Access based on Windows Sever 2012 R2; Windows Server 2008 R2 based is not supported.


1. On Atrust Client Setup, Click **Applications** > **Remote Desktop**.
2. The RDP Connection list appears in the Configuration area.

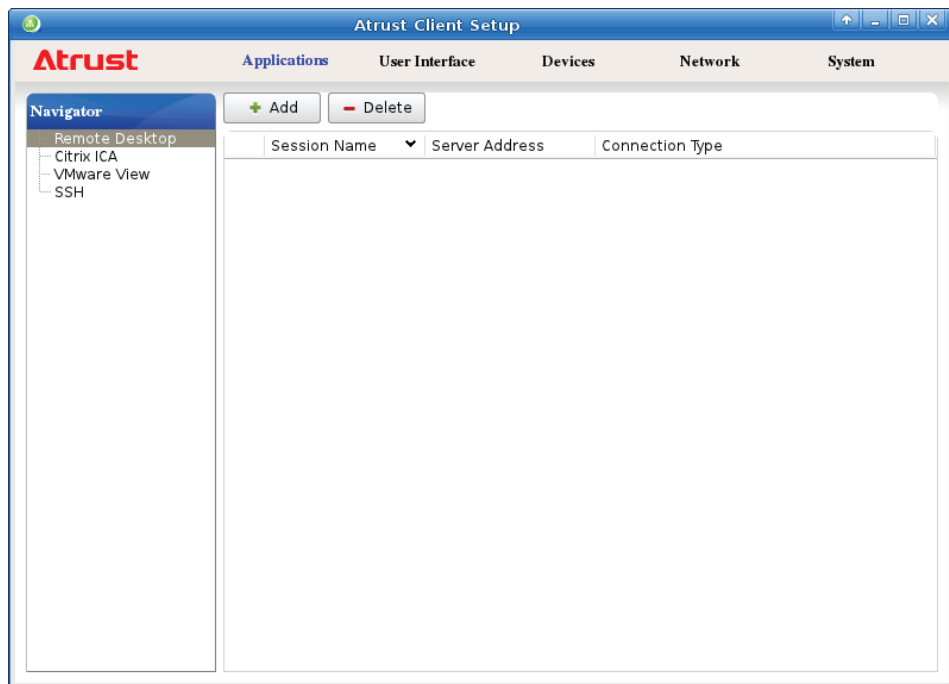


#### NOTE

- If you haven't created any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

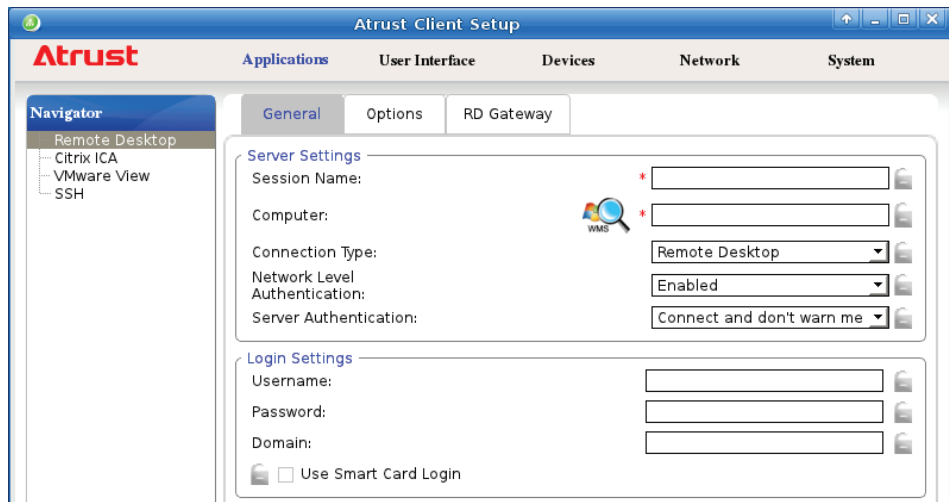

4. On **General** sub-tab, click the Connection Type drop-down menu to select **Remote Web Access**.

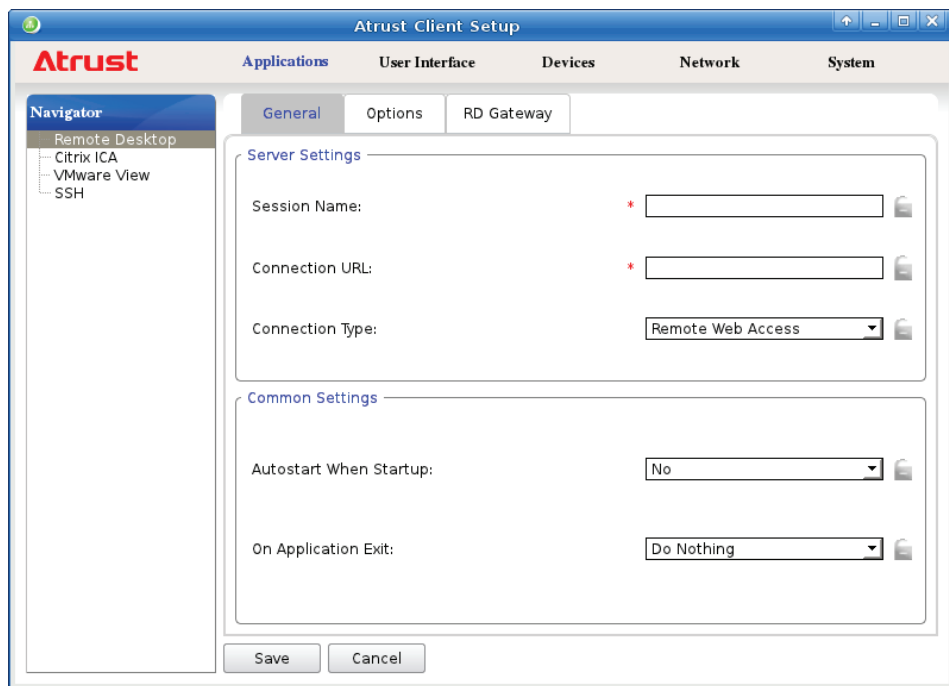

5. Type in the session name and connection URL through which Web-based remote applications is accessible.



**NOTE**

- The red asterisks indicate the required fields.
- Consult your IT administrator about the appropriate connection URL.

6. Click **Save** to add this RDP connection entry.
7. The shortcuts for Remote Web Access are automatically created on the local desktop and START menu.

### Connection Type: Web Feed


To quickly configure RDP connection settings for the Web Feed connection type, please do the following:



#### NOTE

- Atrust t66 supports only RD Web Feed based on Windows Sever 2012 R2; Windows Server 2008 R2 based is not supported.


1. On Atrust Client Setup, Click **Applications** > **Remote Desktop**.
2. The RDP Connection list appears in the Configuration area.

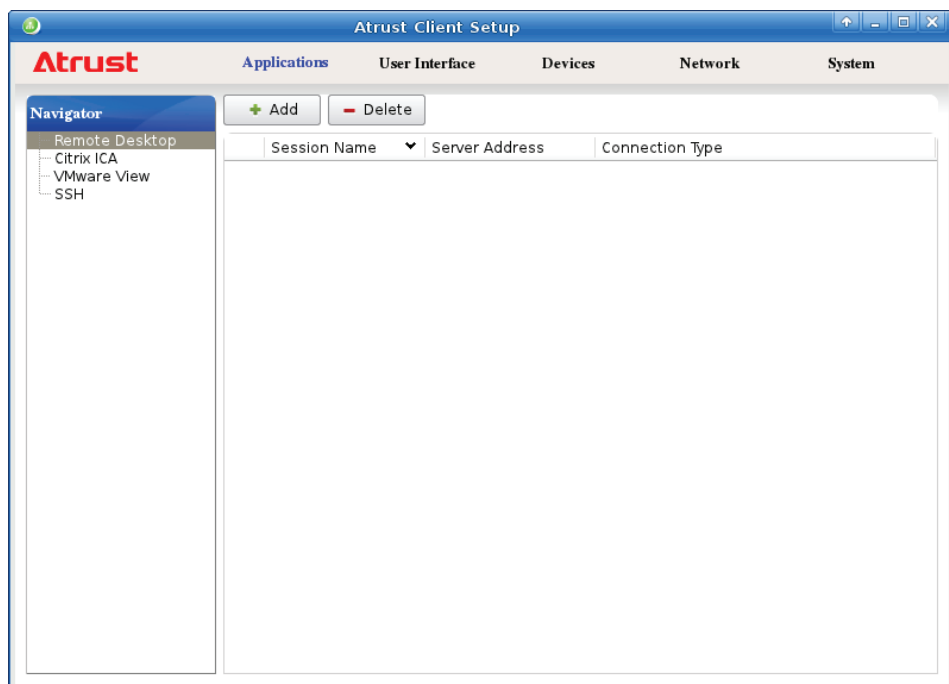


#### NOTE

- If you haven't created any entry, the RDP Connection list will be empty.

3. Click **Add** on the top of the RDP Connection list to create a new entry of RDP connection.

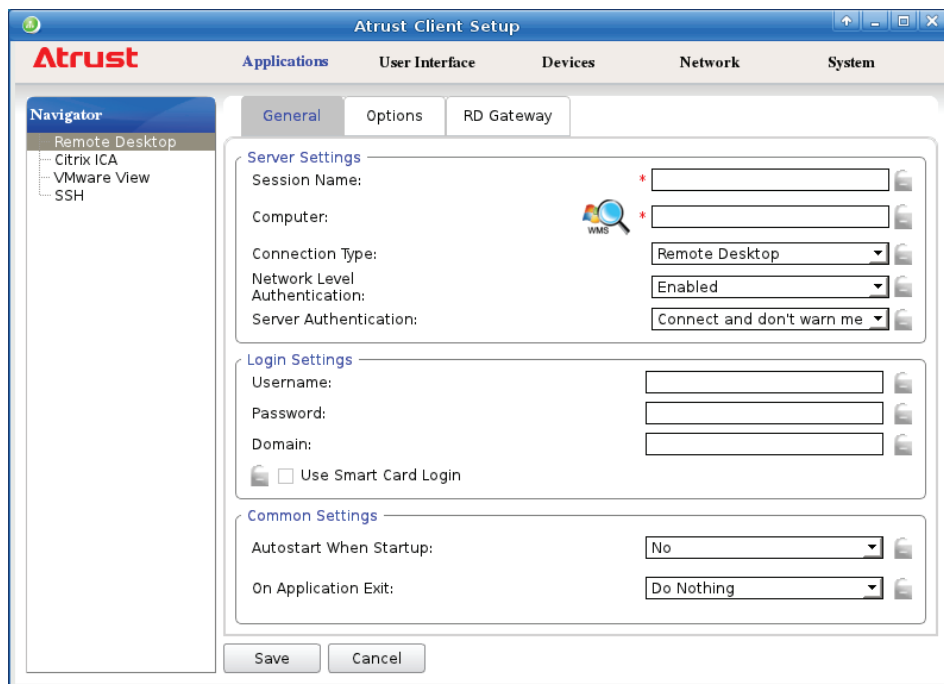

4. On **General** sub-tab, click the Connection Type drop-down menu to select **Web Feed**.

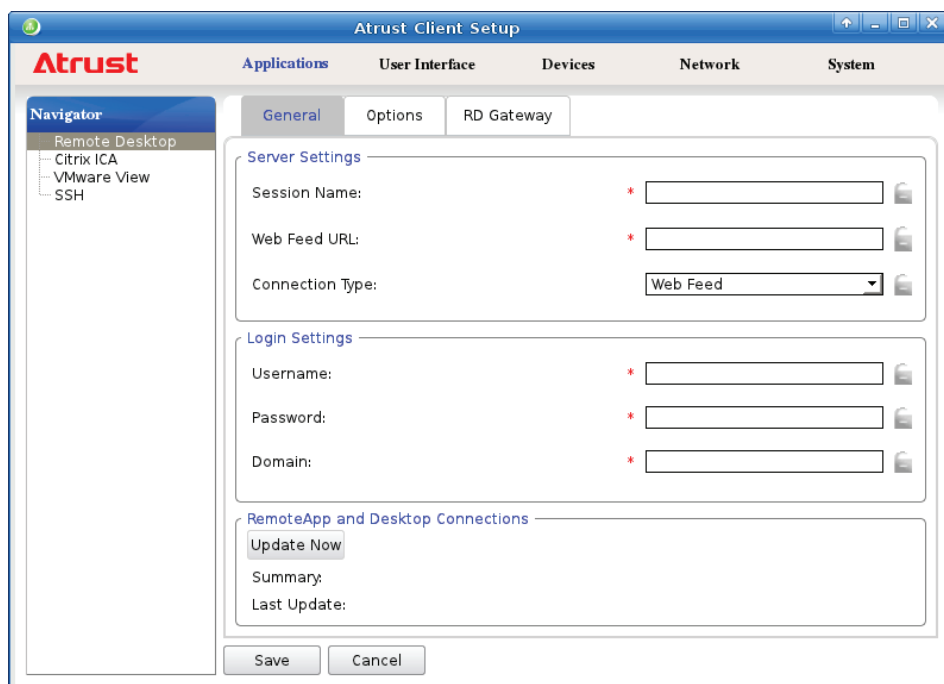

5. Type in the session name, Web Feed URL through which remote applications is accessible, and your credentials for Web Feed.



#### NOTE

- The red asterisks indicate the required fields.
- Consult your IT administrator about the appropriate Web Feed URL.

- Click **Update Now** in the RemoteApp and Desktop Connections section. After completion, the result will be shown as below in that section.

RemoteApp and Desktop Connections

Update Now


Summary: 3 applications, 0 desktops  
Last Update: Mon Jun 30 2014 10:13:16




#### NOTE

- You can and need to use **Update Now** to refresh the Web Feed summary if there are newly published applications. Otherwise, new applications will not be accessible.

- Click **Save** to add this RDP connection entry.
- A folder named **Work Resources** with access shortcuts will be automatically created on the local desktop.

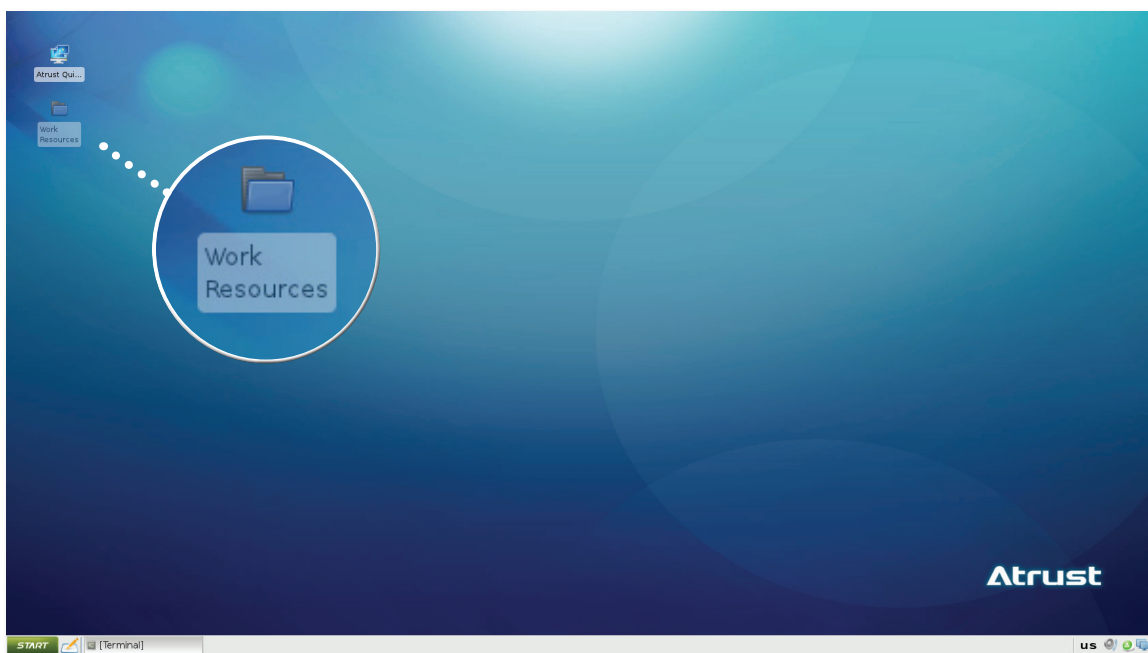

9. Access shortcuts for available applications can be found in that folder.

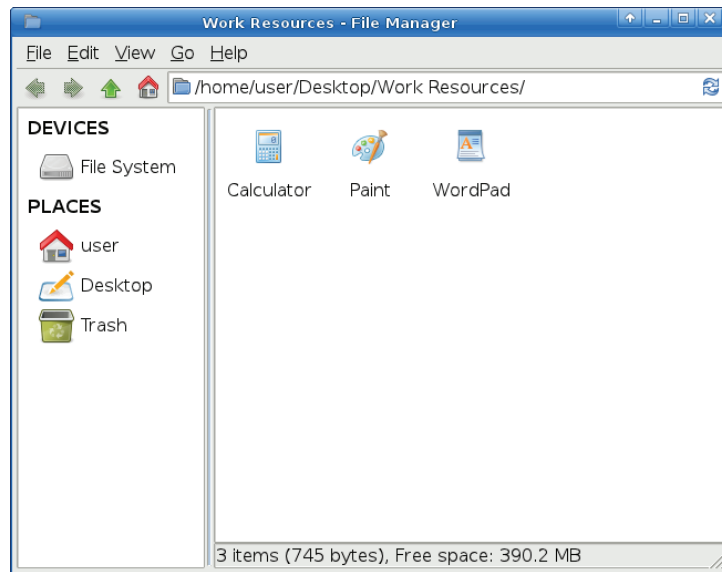

**NOTE**

- You need to use **Update Now** described in Step 6 to refresh the Web Feed if there are newly published applications. Otherwise, new applications will not be shown.




#### 4.6.4 Accessing Remote Desktop Services

##### **Connection Type: Remote Desktop**


To access remote desktops, please do the following:

1. Double click the created shortcut on the desktop.
2. Follow the on-screen instructions and provide required credentials if needed.
3. The remote desktop will be displayed on the screen.


##### **Example: Windows MultiPoint Server 2012**

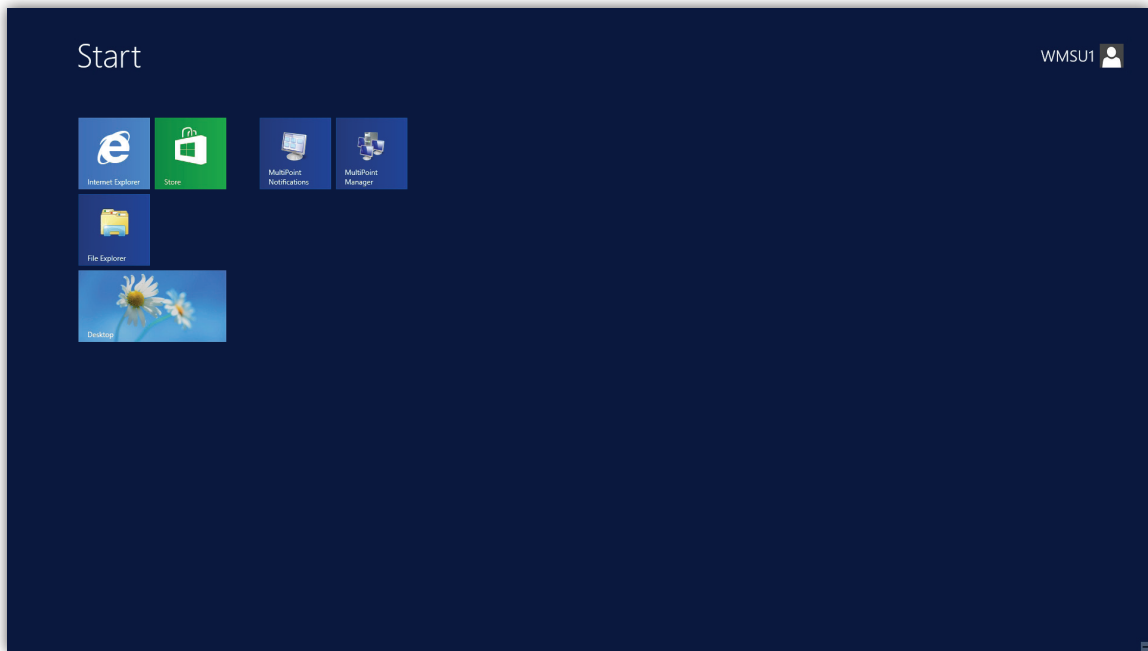

##### **Example: Windows Server 2012**

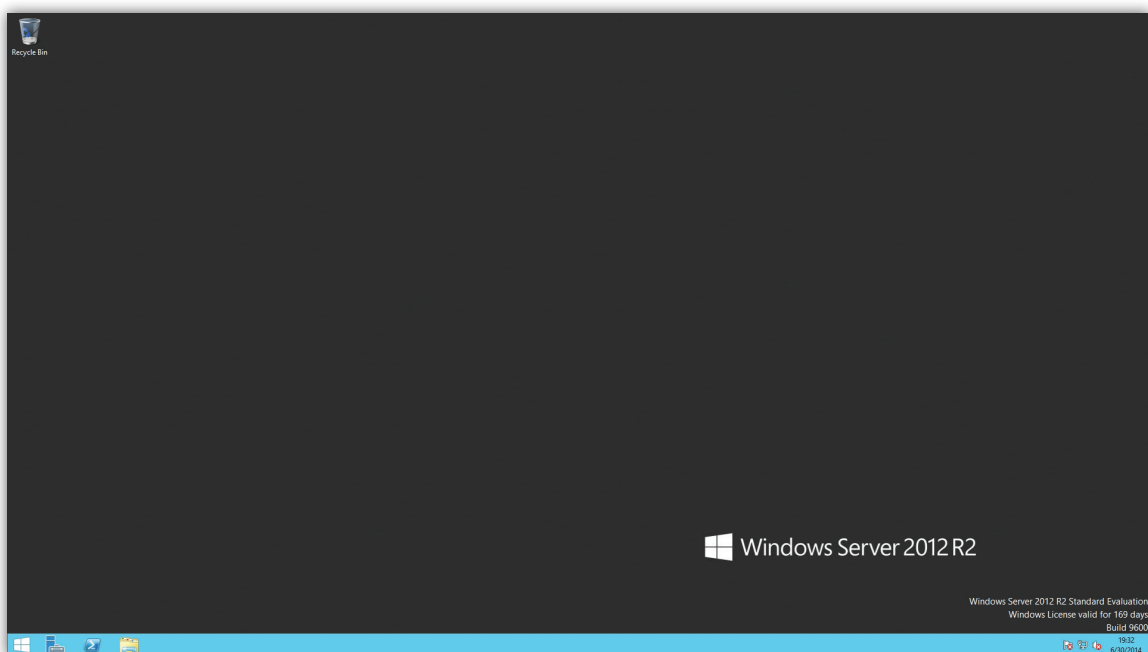

### Example: Windows 8 Enterprise

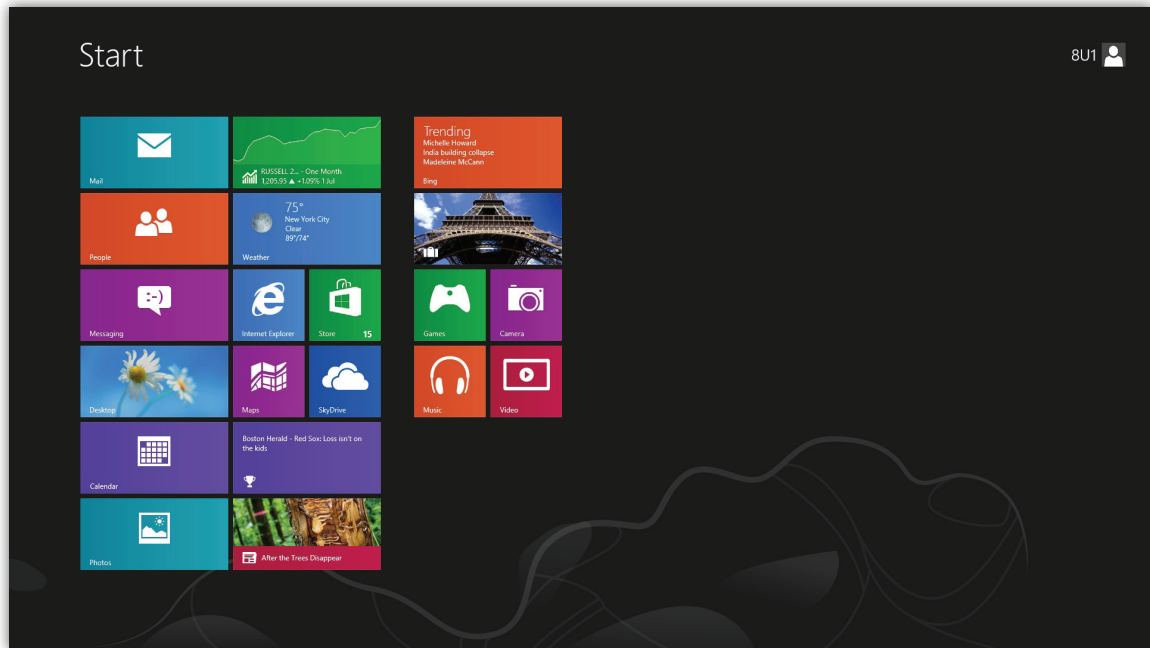


#### NOTE

- The connection type of Remote Desktop also allows you to launch **application-only** sessions; only a specific application is launched rather than a full desktop. For details, please refer to section "4.6.5 Configuring Advanced RDP Connection Settings" on page 129.

### **Connection Type: Remote Web Access**

To access remote applications, please do the following:

1. Double click the created shortcut on the desktop.
2. A window appears prompting for credentials.

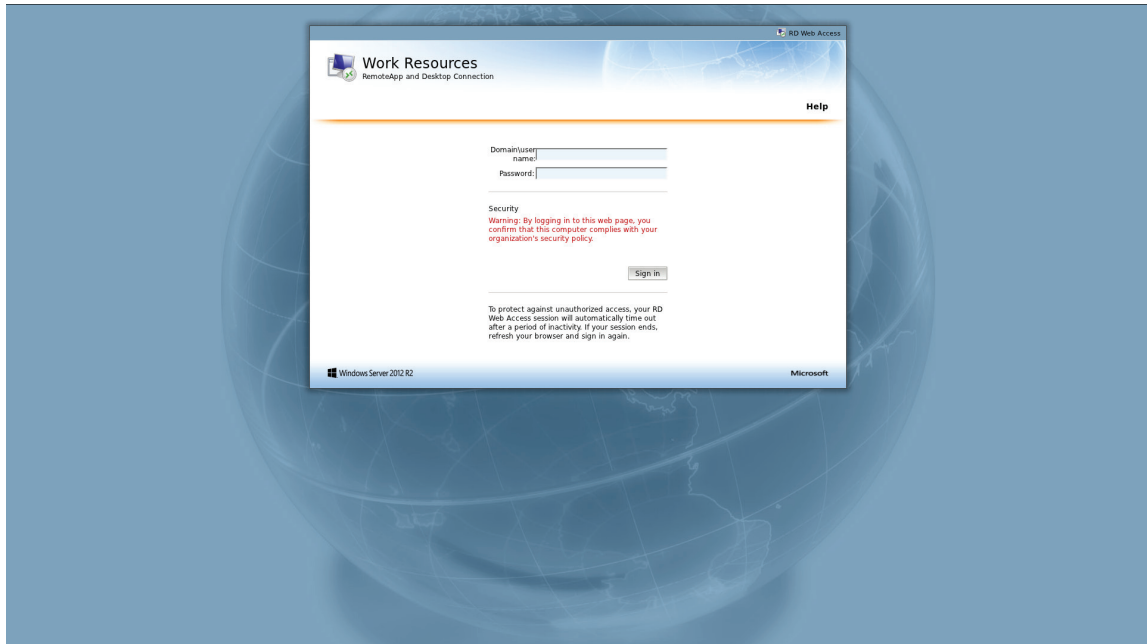

#### **NOTE**

- A warning message “This Connection is Untrusted” might appear. Consult the IT administrator for details and ensure the connection is secure **first**. To import a security certificate, please refer to section “4.2.14 Importing Certificates for Remote Computers” on page 63. To bypass, click **I Understand the Risks > Add Exception > Confirm Security Exception**.




#### **TIP**

- To **exit** this Logon screen or other screens and return to the local desktop, please press **Alt + F4** or **Esc**.

3. Provide your credentials, and then click **Sign in**.

4. Access shortcuts will be shown on the screen.

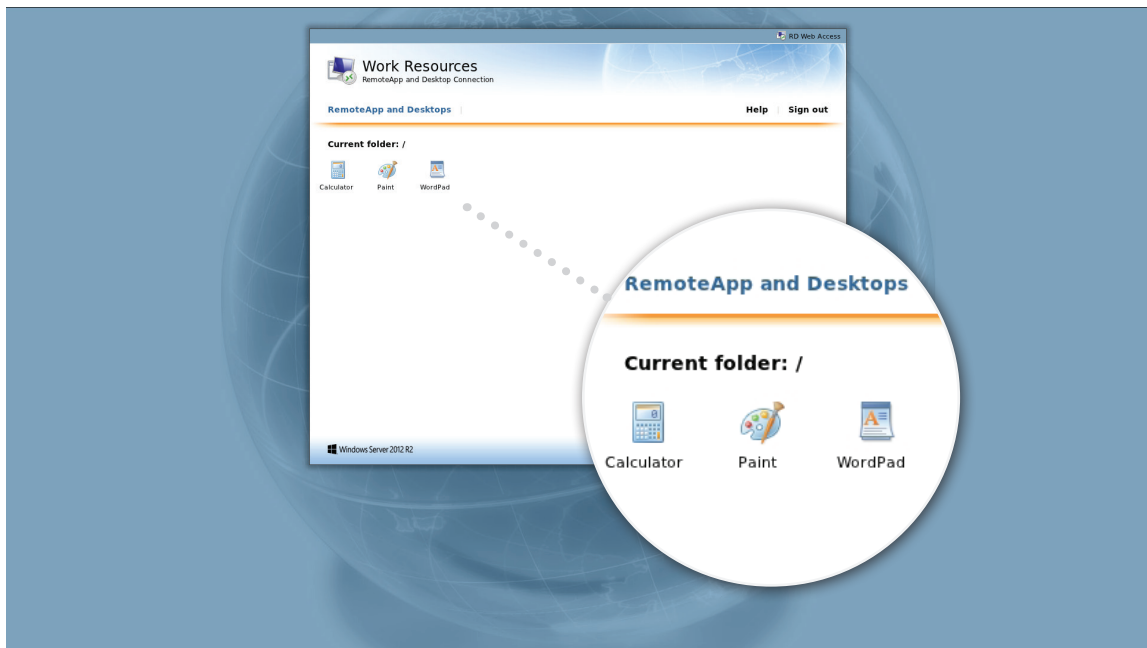

5. Click or Double-click to select the desired application.  
6. A window appears prompting for credentials.



7. Provide your credentials, and then click **OK** to launch the selected application.




**TIP**


- Use **Alt + Tab** to select and restore a hidden or minimized application or desktop.

### Connection Type: Web Feed

1. Double click **Work Resources** folder on the local desktop.

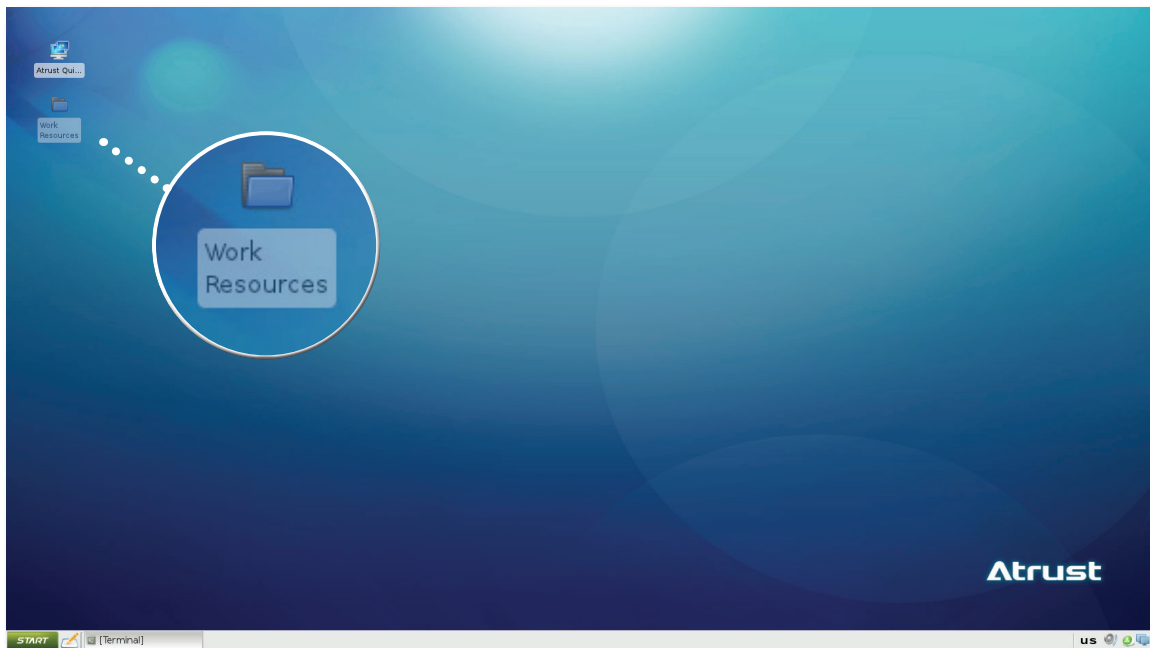

2. Access shortcuts for available applications can be found in that folder.

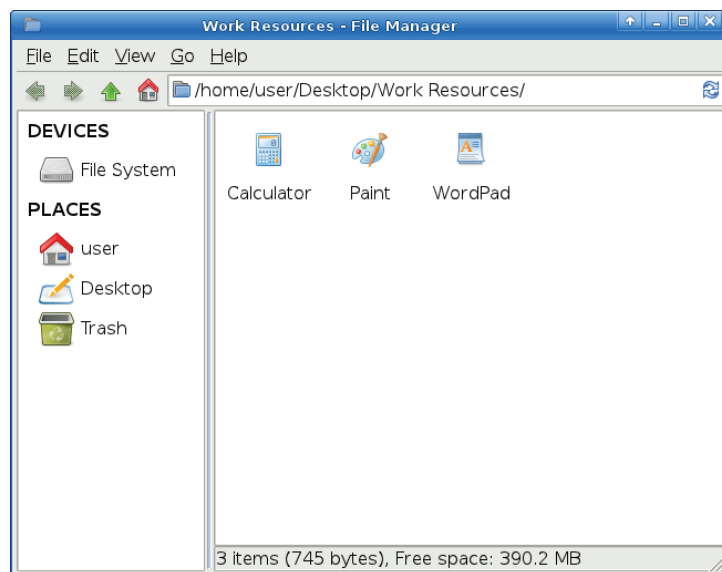

3. Double-click to select the desired application.


4. A window appears prompting for credentials.



5. Provide your credentials, and then click **OK** to launch the selected application.

## Remote Application Examples

### Mozilla Firefox and Calculator

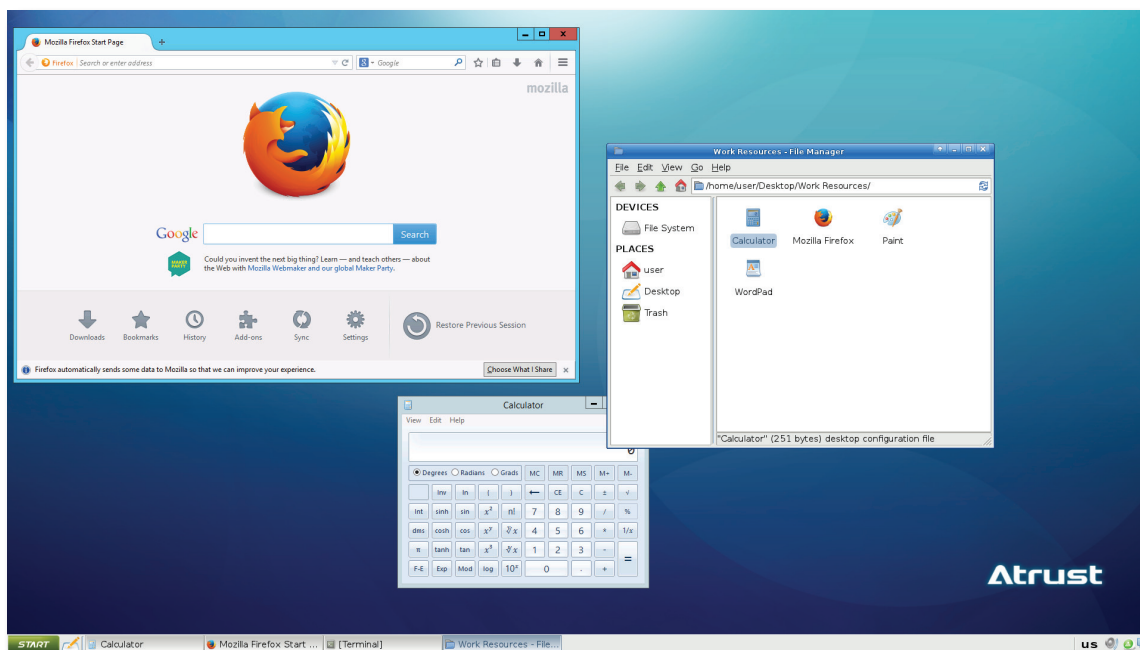

### 4.6.5 Configuring Advanced RDP Connection Settings

The tables below provide a description of each setting item for RDP connections. Please refer to these tables to configure advanced settings and customize shortcuts on local desktop and START menu for service access.



#### NOTE

- Please note that available settings vary with the selected connection type.

#### Settings for the Connection Type of Remote Desktop



#### NOTE

- For descriptions of settings for the connection type of Remote Web Access, please refer to “Settings for the Connection Type of Remote Web Access” on page 137.
- For descriptions of settings for the connection type of Web Feed, please refer to “Settings for the Connection Type of Web Feed” on page 140.

#### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for Remote Desktop sessions.								
Computer	Type in the IP address of the server where to deliver a Remote Desktop session.								
Connection Type	<p>This table only provides descriptions for available settings when <b>Remote Desktop</b> is selected.</p> <p>Three connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Remote Desktop</td><td>Select to access remote desktop/application services.</td></tr> <tr> <td>Remote Web Access</td><td>Select to access remote application services through a Web browser (Mozilla Firefox).</td></tr> <tr> <td>Web Feed</td><td>Select to access remote application services through published desktop shortcuts.</td></tr> </table>	Option	Description	Remote Desktop	Select to access remote desktop/application services.	Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).	Web Feed	Select to access remote application services through published desktop shortcuts.
Option	Description								
Remote Desktop	Select to access remote desktop/application services.								
Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).								
Web Feed	Select to access remote application services through published desktop shortcuts.								
Network Level Authentication	<p>Select to enable/disable Network Level Authentication.</p> <p><b>NOTE:</b> Network Level Authentication is the authentication method used to enhance the server security by requiring that the user be authenticated before the logon screen is displayed and a session is created. This is a more secure authentication method that can help protect the remote computer from malicious users and software.</p>								


Server Authentication	<p>Select what to do next if the client cannot verify the identity of the remote computer. Three options are available: <b>Connect and don't warn me</b>, <b>Warn me</b>, and <b>Do not connect</b>.</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Connect and don't warn me</td><td>Connects anyway without any warning.</td></tr> <tr> <td>Warn me</td><td>Warns and allows users to choose whether to connect or not.</td></tr> <tr> <td>Do not connect</td><td>Disallows the connection.</td></tr> </tbody> </table> <p><b>NOTE:</b> To import certificates for remote computers, please refer to section "4.2.14 Importing Certificates for Remote Computers" on page 63.</p>	Option	Description	Connect and don't warn me	Connects anyway without any warning.	Warn me	Warns and allows users to choose whether to connect or not.	Do not connect	Disallows the connection.
Option	Description								
Connect and don't warn me	Connects anyway without any warning.								
Warn me	Warns and allows users to choose whether to connect or not.								
Do not connect	Disallows the connection.								
<b>Login Settings</b>									
<b>Item</b>	<b>Description</b>								
Username	Type in the user/account name used for authentication.								
Password	Type in the password of the user account used for authentication.								
Domain	<p>Type in the domain of the server.</p> <p><b>NOTE:</b> Domain is a collection of computers on a network that share a common database and security policy. Leave this field blank if the server doesn't belong to any domain.</p>								
Use Smart Card Login	Check to enable logon with a smart card.								



Common Settings													
Item	Description												
Autostart When Startup	Select whether to open a Remote Desktop session automatically or not when t66 is started up (Autostart mode).												
	<b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:												
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td>1</td><td>Appliance</td><td><p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p><p>Available actions include:</p><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr></table>	No.	Mode	Description	1	Appliance	<p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>						
	No.	Mode	Description										
1	Appliance	<p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>											
2	Autostart	<p>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>											
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.											
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.												
On Application Exit	Select what to do when a Remote Desktop session is ended. Five options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Force-Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .												
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Do Nothing</td><td>Returns to the t66 local Linux desktop.</td></tr><tr><td>Restart Application</td><td>Opens a Remote Desktop session again.</td></tr><tr><td>Force-Restart Application</td><td>Opens a Remote Desktop session again and skips any messages in-between.</td></tr><tr><td>Reboot</td><td>Restarts your t66.</td></tr><tr><td>Shutdown</td><td>Turns off your t66.</td></tr></table>	Option	Description	Do Nothing	Returns to the t66 local Linux desktop.	Restart Application	Opens a Remote Desktop session again.	Force-Restart Application	Opens a Remote Desktop session again and skips any messages in-between.	Reboot	Restarts your t66.	Shutdown	Turns off your t66.
	Option	Description											
	Do Nothing	Returns to the t66 local Linux desktop.											
	Restart Application	Opens a Remote Desktop session again.											
	Force-Restart Application	Opens a Remote Desktop session again and skips any messages in-between.											
	Reboot	Restarts your t66.											
Shutdown	Turns off your t66.												

## Options Sub-tab

Programs											
Item	Description										
Start the following program on connection	<p>Click the drop-down menu to enable or disable the Application mode. Use this option to select the session type. Two remote session types are available:</p> <ul style="list-style-type: none"> <li>Remote Desktop (when the Application mode is disabled)</li> <li>Remote Application (when the Application mode is enabled)</li> </ul> <p><b>NOTE:</b> Remote Application sessions are Remote sessions used to access only specific applications.</p>										
Start in the following folder	<p>Type in the location of the desired application (on the host server) if <b>Start the following program on connection</b> is enabled.</p> <p><b>NOTE:</b> Before you can open a Remote Application session, you need to add the desired application to the RemoteApp Programs list with RemoteApp Manager on the host server. For detailed instructions on how to add a desired application to the RemoteApp Programs list on the server, please visit Microsoft's website at <a href="http://www.microsoft.com">www.microsoft.com</a>.</p>										
Program path and file name	Type in the name of the desired application if <b>Start the following program on connection</b> is enabled.										
Window Settings											
Item	Description										
Color Depth	<p>Click the drop-down menu to select the desired color depth for a Remote Desktop session. Five options are available: <b>Automatic</b>, <b>15 Bit</b>, <b>16 Bit</b>, <b>24 Bit</b>, and <b>32 Bit</b>.</p> <p><b>NOTE:</b> If RemoteFX is enabled, then no matter which color depth you choose here, 32 bit per pixel will be applied.</p> <p><b>NOTE:</b> The <b>Automatic</b> option uses the setting defined by the host server.</p> <p><b>NOTE:</b> You can configure the upper limit of the color depth for a Remote Desktop session on the host server. In this case, no matter which color depth you choose here, the value cannot exceed the defined limit.</p>										
Resolution	<p>Click the drop-down menu to select the desired display resolution on a Remote Desktop session. Four options are available: <b>Fullscreen</b>, <b>Large Window</b>, <b>Medium Window</b>, and <b>Small Window</b>.</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Fullscreen</td><td>Opens a Remote Desktop session in full screen with the same display resolution as the local desktop.</td></tr> <tr> <td>Large Window</td><td>Opens a Remote Desktop session in a large display resolution.</td></tr> <tr> <td>Medium Window</td><td>Opens a Remote Desktop session in a medium display resolution.</td></tr> <tr> <td>Small Window</td><td>Opens a Remote Desktop session in a small display resolution.</td></tr> </tbody> </table> <p><b>NOTE:</b> To configure the display resolution of the local desktop, please refer to section "4.3.3 Configuring Display Settings" on page 70.</p>	Option	Description	Fullscreen	Opens a Remote Desktop session in full screen with the same display resolution as the local desktop.	Large Window	Opens a Remote Desktop session in a large display resolution.	Medium Window	Opens a Remote Desktop session in a medium display resolution.	Small Window	Opens a Remote Desktop session in a small display resolution.
Option	Description										
Fullscreen	Opens a Remote Desktop session in full screen with the same display resolution as the local desktop.										
Large Window	Opens a Remote Desktop session in a large display resolution.										
Medium Window	Opens a Remote Desktop session in a medium display resolution.										
Small Window	Opens a Remote Desktop session in a small display resolution.										

Use Toolbar	<p>Click the drop-down menu to select whether to use the Atrust Toolbar on a Remote Desktop session. The tool bar allows you to adjust a session window size or suspend a session.</p> 
Cursor Auto-hide	<p>Click the drop-down menu to enable/disable the auto-hiding of the mouse cursor or pointer on inactivity in Remote Desktop sessions.</p>
Use RemoteFX	<p>Click the drop-down menu to disable/enable RemoteFX.</p> <p><b>NOTE:</b> Windows® RemoteFX™ is a new technology that offers a rich user experience over a network for remote desktop users.</p> <p><b>NOTE:</b> To enable the RemoteFX feature for Remote Desktop sessions on your t66 thin client, you still need to configure the host server. For detailed instructions on how to enable RemoteFX on a host server, please visit Microsoft Support website at <a href="http://support.microsoft.com">support.microsoft.com</a>.</p> <p><b>NOTE:</b> t66 supports up to two Remote Desktop sessions at the same time.</p> <p><b>NOTE:</b> t66 can only run one RemoteFX-enabled session at a time. The second is not allowed. The default for an RDP connection is enabled.</p>
Progressive Rendering	<p>Click the drop-down menu to disable/enable progressive rendering.</p> <p>When enabled, images and videos will be encoded and sent over progressively when the network bandwidth is limited. This new RemoteFX feature is supported by Windows Sever 2012 and Windows 8.</p> <p><b>NOTE:</b> This option is shown only when <b>Use RemoteFX</b> is enabled.</p>
Use Bulk Compression	<p>Click to enable/disable the bulk compression for the data traffic between the server and client.</p>
<b>Optimization Settings</b>	
<b>Item</b>	<b>Description</b>
Connection Quality	<p>Select the option that best describes the quality of your network connection. Three options are available: <b>LAN (Very Fast)</b>, <b>Broadband (Fast)</b>, and <b>Modem (Slow)</b>.</p> <p><b>NOTE:</b> Selection here will determine the defaults of items in this section as listed below.</p>
Desktop background	Check to use the desktop background.
Font smoothing	Check to use ClearType® technology to make fonts clear and smooth.
Show window contents while dragging	Check to show window contents while dragging a window.
Menu and window animation	Check to show menu and window animation.
Visual styles	Check to allow non-classic themes.
Persistent bitmap caching	Check to allow client-side cache of bitmaps for a session.

Connection Settings	
Item	Description
Multimedia Redirection	<p>Click the drop-down menu to disable/enable multimedia redirection.</p> <p>When enabled, the client receives original compressed multimedia streams and decodes locally for display. This feature increases the load on the client, but saves server resources, decreases the bandwidth usage, and improves audio and video playback experiences.</p>
USB Storage Mapping	<p>Click the drop-down menu to enable/disable USB storage mapping.</p> <p>When <b>Enable</b> is selected, users can access the local USB storage devices, such as a USB flash drive and memory card reader, in a Remote Desktop session.</p> <p><b>NOTE:</b> Atrust Client Setup also allows you to enable or disable the use of locally attached USB storage devices. You need to enable locally attached USB storage devices first in order to use them in a Remote Desktop session. The default is enabled.</p> <p><b>NOTE:</b> To configure the use of USB storage devices, please refer to section "4.4.3 Configuring Settings for USB Storage Devices" on page 81.</p>
Printer Mapping	<p>Click the drop-down menu to enable/disable printer mapping.</p> <p>When <b>Enable</b> is selected, users can access a local or network printer in a Remote Desktop session.</p> <p><b>NOTE:</b> You need to add a local or network printer for your t66 first, and then enable this feature here to use that printer in a Remote Desktop session.</p> <p><b>NOTE:</b> For detailed instructions on how to add a local or network printer for your t66, please refer to section "4.4.6 Adding a Local Printer" on page 84 or "4.4.7 Adding a Network Printer" on page 87.</p>
Serial Port Mapping	<p>Click the drop-down menu to enable/disable serial port mapping.</p> <p>When <b>Enable</b> is selected, users can access a serial device, such as a barcode scanner, in a Remote Desktop session.</p>
Parallel Port Mapping	<p>Click the drop-down menu to enable/disable parallel port mapping.</p> <p>When <b>Enable</b> is selected, users can access a parallel device, such as a printer or scanner, in a Remote Desktop session.</p>
Smart Card Mapping	<p>Click the drop-down menu to enable/disable smart card mapping.</p> <p>When <b>Enable</b> is selected, users can access smart cards through a smart card reader in a Remote Desktop session.</p>
Server Status Check	<p>Click the drop-down menu to enable/disable connection status check.</p> <p><b>NOTE:</b> Some servers deployed for remote sessions may not support connection status check. Enabling this feature would cause remote sessions disconnected. In this case, disable it to avoid disconnection.</p>

Local Resources Settings									
Item	Description								
Remote Audio Playback	Click the drop-down menu to configure the audio playback setting in a Remote Desktop session. Three options are available: <b>Play on this computer</b> , <b>Play on remote computer</b> , and <b>Do not play</b> .								
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Play on this computer</td><td>Allows audio playback in a Remote Desktop session using locally attached audio devices.</td></tr><tr><td>Play on remote computer</td><td>Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.</td></tr><tr><td>Do not play</td><td>Disables audio playback in a Remote Desktop session using locally attached audio devices.</td></tr></table>	Option	Description	Play on this computer	Allows audio playback in a Remote Desktop session using locally attached audio devices.	Play on remote computer	Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.	Do not play	Disables audio playback in a Remote Desktop session using locally attached audio devices.
	Option	Description							
	Play on this computer	Allows audio playback in a Remote Desktop session using locally attached audio devices.							
Play on remote computer	Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.								
Do not play	Disables audio playback in a Remote Desktop session using locally attached audio devices.								
Remote Audio Recording	Click the drop-down menu to configure the audio playback setting in a Remote Desktop session. Two options are available: <b>Recording from this computer</b> and <b>Do not record</b> .								
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Recording from this computer</td><td>Allows audio recording in a Remote Desktop session using locally attached audio devices.</td></tr><tr><td>Do not record</td><td>Disables audio recording in a Remote Desktop session using locally attached audio devices.</td></tr></table>	Option	Description	Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.	Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.		
	Option	Description							
	Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.							
Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.								

RemoteFX USB Redirection Settings	
Item	Description
Use RemoteFX USB Redirection	<p>Check/Uncheck to enable/disable locally attached USB devices in a Remote Desktop session (virtual machine based only).</p> <p><b>NOTE:</b> RemoteFX USB Redirection allows the redirection of USB devices into server-hosted virtual machines (with guest operating systems).</p> <p><b>NOTE:</b> RemoteFX USB Redirection is only applicable to the virtual machine based Remote Desktop service not to session based one. For more information, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p> <p>On the client side, please do the following to enable locally attached USB devices in a virtual machine based desktop:</p> <ol style="list-style-type: none"> <li>1. Ensure that the desired USB device has been connected to your t66.</li> <li>2. Ensure that RemoteFX is enabled on your t66 (see "Use RemoteFX" on page 133).</li> <li>3. Click to check <b>Use RemoteFX USB Redirection</b>.</li> <li>4. A new checkbox appears with the required device driver. Check to enable the driver.</li> <li>5. Click <b>Save</b> to apply.</li> </ol> <p><b>NOTE:</b> You also need to configure the host server and its guest OSs to enable RemoteFX USB Redirection in a Remote Desktop session. For instructions on server-side configuration, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p>

#### RD Gateway Sub-tab

Connection Settings	
Item	Description
Use RD Gateway server	Check/Uncheck to enable/disable the use of an RD Gateway server. When checked, the following two items in this table appear.
Server Name	Type the name of the RD Gateway server. Ask the network administrator for this information.
Use my Remote Desktop credentials for the RD Gateway	Check to use the same set of credentials for authenticating to both the Remote Desktop computer and the RD Gateway server.
Bypass RD Gateway for local address	Check to prevent traffic to and from local network addresses from being routed through the RD Gateway server. This could make your RDP connection faster.

## Settings for the Connection Type of Remote Web Access



### NOTE

- For descriptions of settings for the connection type of Remote Desktop, please refer to “Settings for the Connection Type of Remote Desktop” on page 129.
- For descriptions of settings for the connection type of Web Feed, please refer to “Settings for the Connection Type of Web Feed” on page 140.

### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for Remote Web Access sessions.								
Connection URL	Type in the URL of the server where to deliver Remote Web Access sessions.								
Connection Type	<p>This table only provides descriptions for available settings when <b>Remote Web Access</b> is selected.</p> <p>Three connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Remote Desktop</td><td>Select to access remote desktop/application services.</td></tr> <tr> <td>Remote Web Access</td><td>Select to access remote application services through a Web browser (Mozilla Firefox).</td></tr> <tr> <td>Web Feed</td><td>Select to access remote application services through published desktop shortcuts.</td></tr> </table>	Option	Description	Remote Desktop	Select to access remote desktop/application services.	Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).	Web Feed	Select to access remote application services through published desktop shortcuts.
Option	Description								
Remote Desktop	Select to access remote desktop/application services.								
Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).								
Web Feed	Select to access remote application services through published desktop shortcuts.								

Common Settings														
Item	Description													
Autostart When Startup	Select whether to open a Remote Web Access session automatically or not when t66 is started up (Autostart mode).													
	<b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:													
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="4">1</td><td rowspan="4">Appliance</td><td>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>		No.	Mode	Description	1	Appliance	The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>				
	No.	Mode	Description											
	1	Appliance	The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.											
Available actions include:														
<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>														
<table><tr><td rowspan="4">2</td><td rowspan="4">Autostart</td><td>The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>		2	Autostart	The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>								
2	Autostart			The client will start up directly with the desired Microsoft RDP session and perform the configured action after exiting the session.										
				Available actions include:										
				<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>										
<table><tr><td>3</td><td>Quick Connection</td><td><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>		3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.										
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.												
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.													
On Application Exit	Select what to do when a Remote Web Access session is ended. Five options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Force-Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .													
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Do Nothing</td><td>Returns to the t66 local Linux desktop.</td></tr><tr><td>Restart Application</td><td>Opens a Remote Web Access session again.</td></tr><tr><td>Force-Restart Application</td><td>Opens a Remote Web Access session again and skips any messages in-between.</td></tr><tr><td>Reboot</td><td>Restarts your t66.</td></tr><tr><td>Shutdown</td><td>Turns off your t66.</td></tr></table>		Option	Description	Do Nothing	Returns to the t66 local Linux desktop.	Restart Application	Opens a Remote Web Access session again.	Force-Restart Application	Opens a Remote Web Access session again and skips any messages in-between.	Reboot	Restarts your t66.	Shutdown	Turns off your t66.
	Option	Description												
	Do Nothing	Returns to the t66 local Linux desktop.												
	Restart Application	Opens a Remote Web Access session again.												
	Force-Restart Application	Opens a Remote Web Access session again and skips any messages in-between.												
	Reboot	Restarts your t66.												
Shutdown	Turns off your t66.													



## Options Sub-tab

Optimization Settings	
Item	Description
Desktop background	Check to use the desktop background.
Font smoothing	Check to use ClearType® technology to make fonts clear and smooth.
Show window contents while dragging	Check to show window contents while dragging a window.
Menu and window animation	Check to show menu and window animation.
Visual styles	Check to allow non-classic themes.
Persistent bitmap caching	Check to allow client-side cache of bitmaps for a session.

## RD Gateway Sub-tab



### NOTE

- No options are available under the **RD Gateway** sub-tab in the connection type of Remote Web Access.

### Settings for the Connection Type of Web Feed



#### NOTE

- For descriptions of settings for the connection type of Remote Desktop, please refer to “Settings for the Connection Type of Remote Desktop” on page 129.
- For descriptions of settings for the connection type of Remote Web Access, please refer to “Settings for the Connection Type of Remote Web Access” on page 137.

#### General Sub-tab

Server Settings									
Item	Description								
Session Name	Type in the name for Web Feed sessions.								
Web Feed URL	Type in the URL of the server where to deliver Web Feed sessions.								
Connection Type	<p>This table only provides descriptions for available settings when <b>Web Feed</b> is selected.</p> <p>Three connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Remote Desktop</td><td>Select to access remote desktop/application services.</td></tr> <tr> <td>Remote Web Access</td><td>Select to access remote application services through a Web browser (Mozilla Firefox).</td></tr> <tr> <td>Web Feed</td><td>Select to access remote application services through published desktop shortcuts.</td></tr> </table>	Option	Description	Remote Desktop	Select to access remote desktop/application services.	Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).	Web Feed	Select to access remote application services through published desktop shortcuts.
Option	Description								
Remote Desktop	Select to access remote desktop/application services.								
Remote Web Access	Select to access remote application services through a Web browser (Mozilla Firefox).								
Web Feed	Select to access remote application services through published desktop shortcuts.								
Login Settings									
Item	Description								
Username	Type in the user/account name used for authentication.								
Password	Type in the password of the user account used for authentication.								
Domain	Type in the domain of the server.								
RemoteApp and Desktop Connections									
Item	Description								
Update Now	Click to fetch and update the published applications list from the server.								

Options Sub-tab

Window Settings	
Item	Description
Color Depth	<p>Click the drop-down menu to select the desired color depth for a Remote Desktop session. Five options are available: <b>Automatic</b>, <b>15 Bit</b>, <b>16 Bit</b>, <b>24 Bit</b>, and <b>32 Bit</b>.</p> <p><b>NOTE:</b> If RemoteFX is enabled, then no matter which color depth you choose here, 32 bit per pixel will be applied.</p> <p><b>NOTE:</b> The <b>Automatic</b> option uses the setting defined by the host server.</p> <p><b>NOTE:</b> You can configure the upper limit of the color depth for a Remote Desktop session on the host server. In this case, no matter which color depth you choose here, the value cannot exceed the defined limit.</p>
Cursor Auto-hide	Click the drop-down menu to enable/disable the auto-hiding of the mouse cursor or pointer on inactivity in Remote Desktop sessions.
Use RemoteFX	<p>Click the drop-down menu to disable/enable RemoteFX.</p> <p><b>NOTE:</b> Windows® RemoteFX™ is a technology that offers a rich user experience over a network for remote desktop users.</p> <p><b>NOTE:</b> To enable the RemoteFX feature for Remote Desktop sessions on your t66 thin client, you still need to configure the host server. For detailed instructions on how to enable RemoteFX on a host server, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p>
Use Bulk Compression	Click to enable/disable the bulk compression for the data traffic between the server and client.
Optimization Settings	
Item	Description
Desktop background	Check to use the desktop background.
Font smoothing	Check to use ClearType® technology to make fonts clear and smooth.
Show window contents while dragging	Check to show window contents while dragging a window.
Menu and window animation	Check to show menu and window animation.
Visual styles	Check to allow non-classic themes.
Persistent bitmap caching	Check to allow client-side cache of bitmaps for a session.

Connection Settings	
Item	Description
USB Storage Mapping	<p>Click the drop-down menu to enable/disable USB storage mapping.</p> <p>When <b>Enable</b> is selected, users can access the local USB storage devices, such as a USB flash drive and memory card reader, in a Remote Desktop session.</p> <p><b>NOTE:</b> Atrust Client Setup also allows you to enable or disable the use of locally attached USB storage devices. You need to enable locally attached USB storage devices first in order to use them in a Remote Desktop session. The default is enabled.</p> <p><b>NOTE:</b> To configure the use of USB storage devices, please refer to section "4.4.3 Configuring Settings for USB Storage Devices" on page 81.</p>
Printer Mapping	<p>Click the drop-down menu to enable/disable printer mapping.</p> <p>When <b>Enable</b> is selected, users can access a local or network printer in a Remote Desktop session.</p> <p><b>NOTE:</b> You need to add a local or network printer for your t66 first, and then enable this feature here to use that printer in a Remote Desktop session.</p> <p><b>NOTE:</b> For detailed instructions on how to add a local or network printer for your t66, please refer to section "4.4.6 Adding a Local Printer" on page 84 or "4.4.7 Adding a Network Printer" on page 87.</p>
Serial Port Mapping	<p>Click the drop-down menu to enable/disable serial port mapping.</p> <p>When <b>Enable</b> is selected, users can access a serial device, such as a barcode scanner, in a Remote Desktop session.</p>
Parallel Port Mapping	<p>Click the drop-down menu to enable/disable parallel port mapping.</p> <p>When <b>Enable</b> is selected, users can access a parallel device, such as a printer or scanner, in a Remote Desktop session.</p>
Smart Card Mapping	<p>Click the drop-down menu to enable/disable smart card mapping.</p> <p>When <b>Enable</b> is selected, users can access smart cards through a smart card reader in a Remote Desktop session.</p>
Server Status Check	<p>Click the drop-down menu to enable/disable connection status check.</p> <p><b>NOTE:</b> Some servers deployed for remote sessions may not support connection status check. Enabling this feature would cause remote sessions disconnected. In this case, disable it to avoid disconnection.</p>

Local Resources Settings									
Item	Description								
Remote Audio Playback	Click the drop-down menu to configure the audio playback setting in a Remote Desktop session. Three options are available: <b>Play on this computer</b> , <b>Play on remote computer</b> , and <b>Do not play</b> .								
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Play on this computer</td><td>Allows audio playback in a Remote Desktop session using locally attached audio devices.</td></tr><tr><td>Play on remote computer</td><td>Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.</td></tr><tr><td>Do not play</td><td>Disables audio playback in a Remote Desktop session using locally attached audio devices.</td></tr></table>	Option	Description	Play on this computer	Allows audio playback in a Remote Desktop session using locally attached audio devices.	Play on remote computer	Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.	Do not play	Disables audio playback in a Remote Desktop session using locally attached audio devices.
	Option	Description							
	Play on this computer	Allows audio playback in a Remote Desktop session using locally attached audio devices.							
Play on remote computer	Allows audio playback in a Remote Desktop session using audio devices attached to the remote computer.								
Do not play	Disables audio playback in a Remote Desktop session using locally attached audio devices.								
Remote Audio Recording	Click the drop-down menu to configure the audio playback setting in a Remote Desktop session. Two options are available: <b>Recording from this computer</b> and <b>Do not record</b> .								
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Recording from this computer</td><td>Allows audio recording in a Remote Desktop session using locally attached audio devices.</td></tr><tr><td>Do not record</td><td>Disables audio recording in a Remote Desktop session using locally attached audio devices.</td></tr></table>	Option	Description	Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.	Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.		
	Option	Description							
	Recording from this computer	Allows audio recording in a Remote Desktop session using locally attached audio devices.							
Do not record	Disables audio recording in a Remote Desktop session using locally attached audio devices.								

RemoteFX USB Redirection Settings	
Item	Description
Use RemoteFX USB Redirection	<p>Check/Uncheck to enable/disable locally attached USB devices in a Remote Desktop session (virtual machine based only).</p> <p><b>NOTE:</b> RemoteFX USB Redirection allows the redirection of USB devices into server-hosted virtual machines (with guest operating systems).</p> <p><b>NOTE:</b> RemoteFX USB Redirection is only applicable to the virtual machine based Remote Desktop service not to session based one. For more information, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p> <p>On the client side, please do the following to enable locally attached USB devices in a virtual machine based desktop:</p> <ol style="list-style-type: none"> <li>1. Ensure that the desired USB device has been connected to your t66.</li> <li>2. Ensure that RemoteFX is enabled on your t66 (see "Use RemoteFX" on page 133).</li> <li>3. Click to check <b>Use RemoteFX USB Redirection</b>.</li> <li>4. A new checkbox appears with the required device driver. Check to enable the driver.</li> <li>5. Click <b>Save</b> to apply.</li> </ol> <p><b>NOTE:</b> You also need to configure the host server and its guest OSs to enable RemoteFX USB Redirection in a Remote Desktop session. For instructions on server-side configuration, please visit Microsoft Support website at <a href="https://support.microsoft.com">support.microsoft.com</a>.</p>

#### RD Gateway Sub-tab



#### NOTE

- No options are available under the **Options sub-tab** in the connection type of Web Feed.

### 4.6.6 Configuring Basic ICA Connection Settings

The **Citrix ICA** setting allows you to configure ICA connections for Citrix services and create shortcuts on the local desktop and START menu for service access. You can access virtual desktops and applications for work simply through these shortcuts.



#### NOTE

- For more information on Citrix desktop virtualization solutions, please visit Citrix website at [www.citrix.com](http://www.citrix.com) or Citrix Knowledge Center at [support.citrix.com](http://support.citrix.com).

Six connection types are available:

Connection Type	Description	Page
Web Logon	Select to access desktop/application services through a Web browser.	146
StoreFront	Select to access desktop/application services through a StoreFront.	148
VDI-in-a-Box	Select to access desktop services through VDI-in-a-Box.	150
XenDesktop	Select to access desktop services through an earlier version of XenDesktop.	152
XenApp	Select to access application services through an earlier version of XenApp.	154
Server Connection	Select to access service delivery servers (XenApp servers only).	156



#### NOTE


- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

### Connection Type: Web Logon

To quickly configure ICA connection settings for the Web Logon connection type, please do the following:

1. On Atrust Client Setup, click **Applications > Citrix ICA**.
2. The available ICA Connection list appears in the Configuration area.

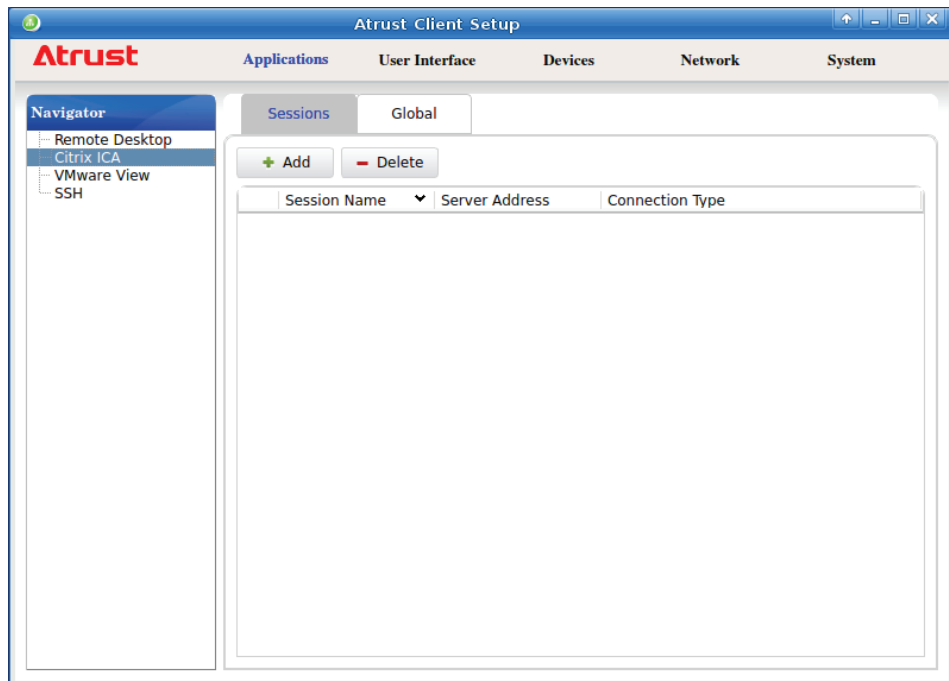


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

3. Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.



4. On **General** sub-tab, leave the connection type as **Web Logon** as default, and then type in the desired session name and the IP address / URL / FQDN of the server through which Citrix services are accessible.

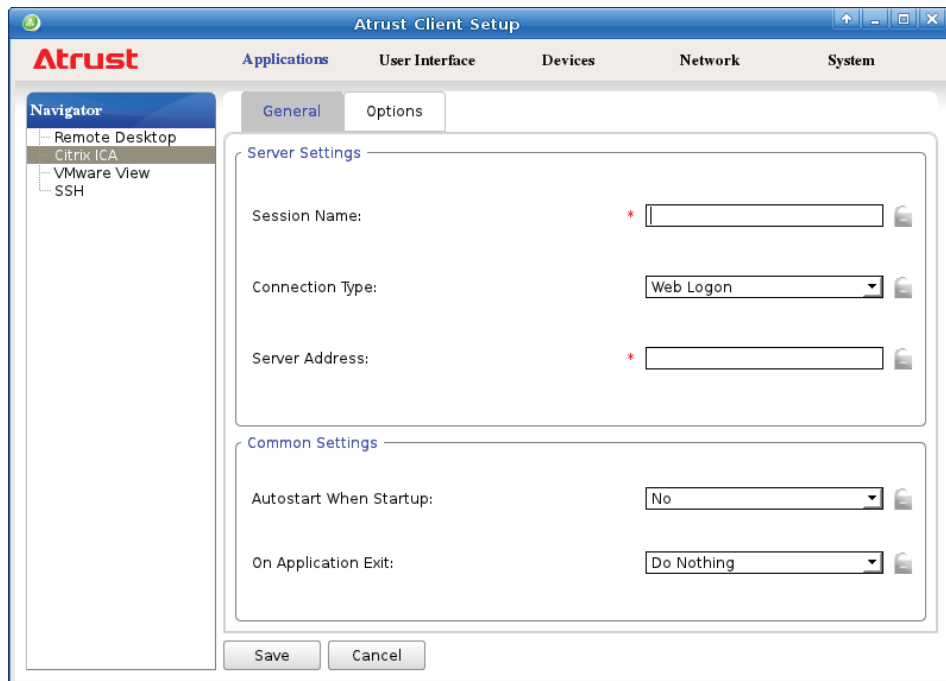

#### NOTE

- For newer versions of XenDesktop and XenApp, you may need to further specify the *sub-path* of the server. Refer to the following table for details:

Citrix Product	Component to Connect	Connection Address
XenApp 6.5 or earlier	Web Interface	IP / URL / FQDN
XenDesktop 5.6 or earlier	Web Interface	IP / URL / FQDN
XenApp and XenDesktop 7.5	StoreFront	IP / URL / FQDN <b>plus sub-path</b>
		<b>For example –</b> <b>FQDN:</b> X75.CTX.poc <b>Sub-path:</b> /Citrix/StoreWeb (default) <b>Connection Address:</b> X75.CTX.poc/Citrix/StoreWeb

- FQDN is the acronym of Fully Qualified Domain Name.

5. Click **Save** to add this ICA connection entry. The access shortcuts are automatically created on the local desktop and START menu.



#### NOTE

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 168.

### Connection Type: StoreFront

To quickly configure ICA connection settings for the connection type of StoreFront, please do the following:




#### NOTE

- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

- On Atrust Client Setup, Click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.

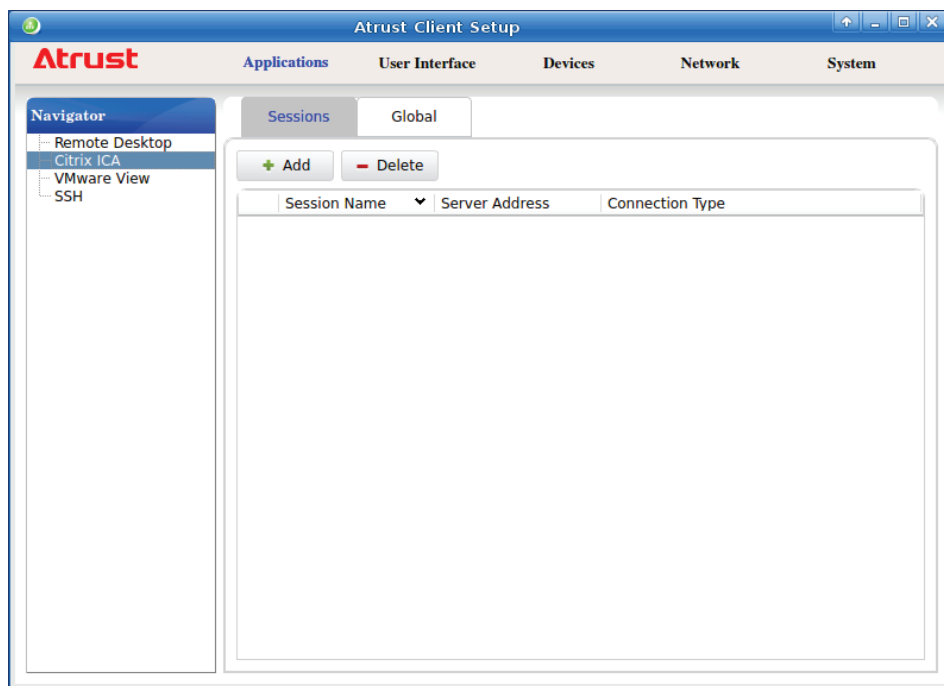


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.


- On **General** sub-tab, click the Connection Type drop-down menu to select **StoreFront**.

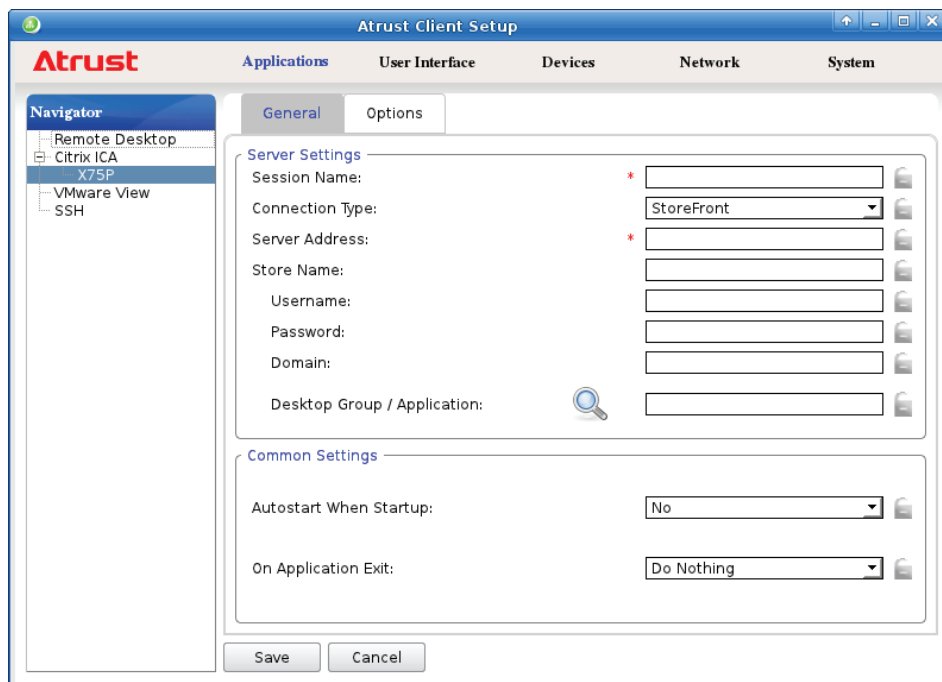

- Type the session name, the IP address / URL / FQDN of the server through which virtual applications/ desktops are accessible, and the store name used when you configure your Citrix StoreFront.



**NOTE**

- You can use the Search icon  to help you discover available desktop groups or applications for a given set of credentials.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



**NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 168.

### Connection Type: VDI-in-a-Box

To quickly configure ICA connection settings for the connection type of VDI-in-a-Box, please do the following:




#### NOTE

- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

- On Atrust Client Setup, Click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.

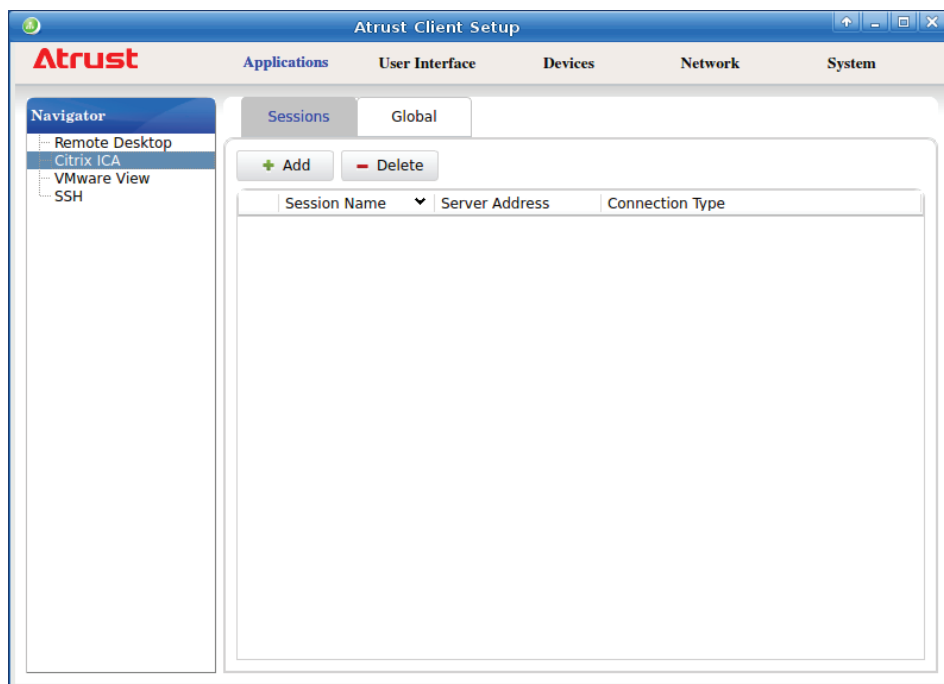


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.


- On **General** sub-tab, click the Connection Type drop-down menu to select **VDI-in-a-Box**.

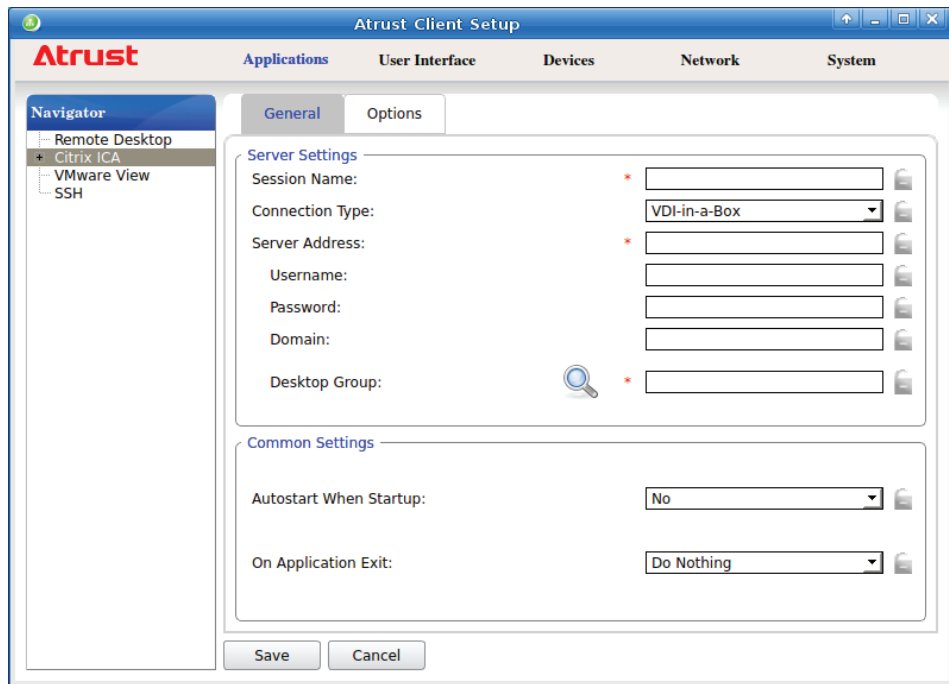

- Type the session name, the IP address / URL / FQDN of the server through which virtual desktops are accessible, and the name of the desktop group.



**NOTE**

- You can use the Search icon  to help you discover available desktop groups for a given set of credentials.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



**NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 168.

### Connection Type: XenDesktop

To quickly configure ICA connection settings for the connection type of XenDesktop, please do the following:




#### NOTE

- You can refer to the following table for Citrix products and recommended connection types:

Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

- On Atrust Client Setup, click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.

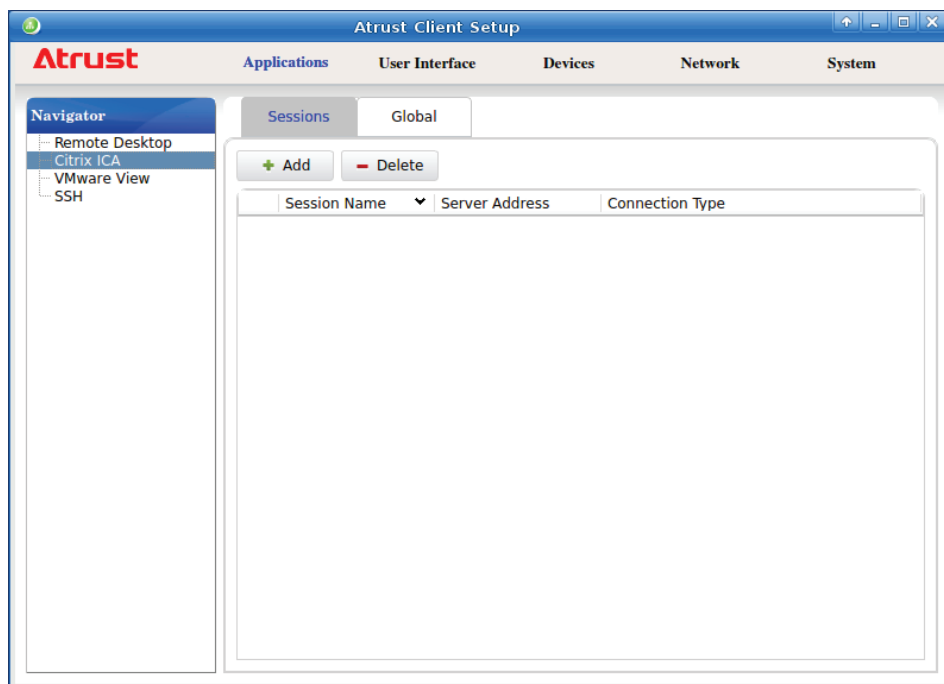


#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.


- On **General** sub-tab, click the Connection Type drop-down menu to select **XenDesktop**.

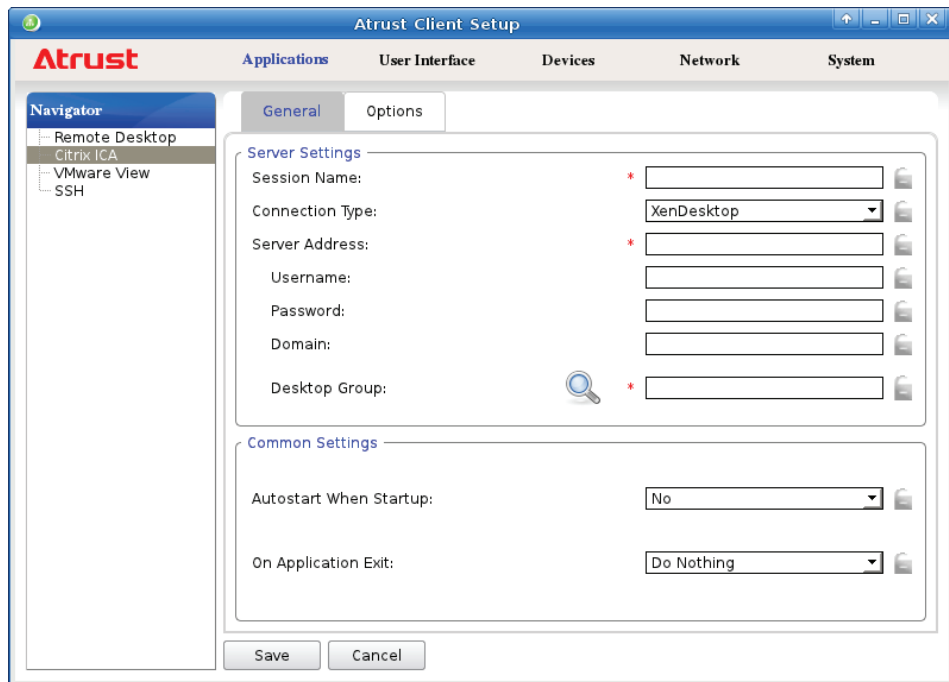

- Type the session name, the IP address / URL / FQDN of the server through which virtual desktops are accessible, and the desired desktop group.



**NOTE**

- You can use the Search icon  to help you discover available desktop groups for a given set of credentials.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



**NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 168.

### Connection Type: XenApp

To quickly configure ICA connection settings for the connection type of XenApp, please do the following:



#### NOTE

- You can refer to the following table for Citrix products and recommended connection types:


Citrix Product	Recommended Connection Type
XenApp 6.5 or earlier	XenApp / Web Logon
XenDesktop 5.6 or earlier	XenDesktop / Web Logon
XenApp and XenDesktop 7.5	StoreFront / Web Logon
VDI-in-a-Box	VDI-in-a-Box / Web Logon

- On Atrust Client Setup, click **Applications** > **Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.



#### NOTE


- If you haven't created any entry, the ICA Connection list will be empty.

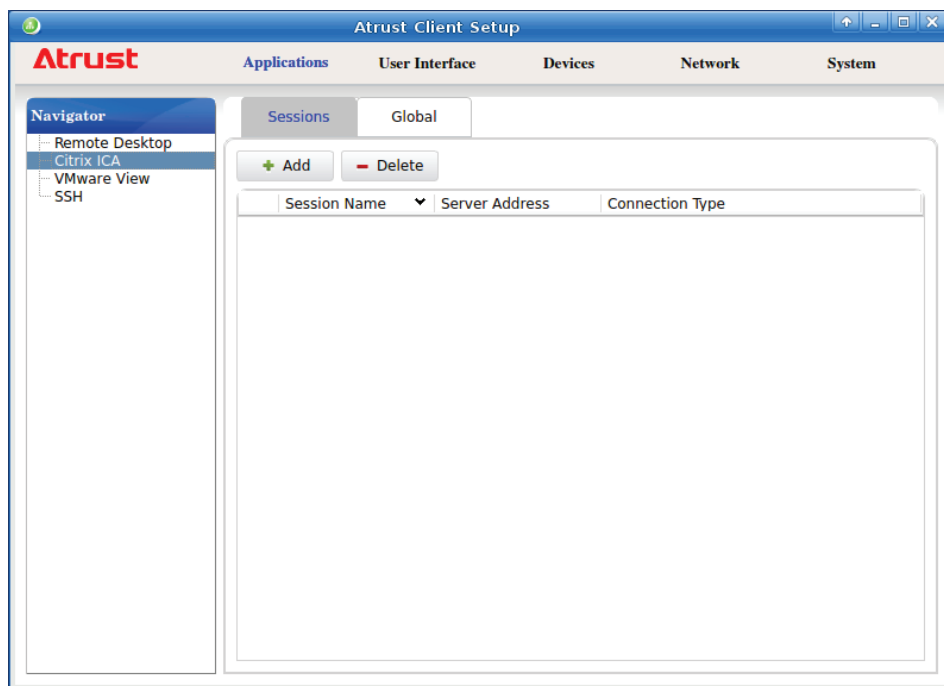

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.



- On **General** sub-tab, click the Connection Type drop-down menu to select **XenApp**.

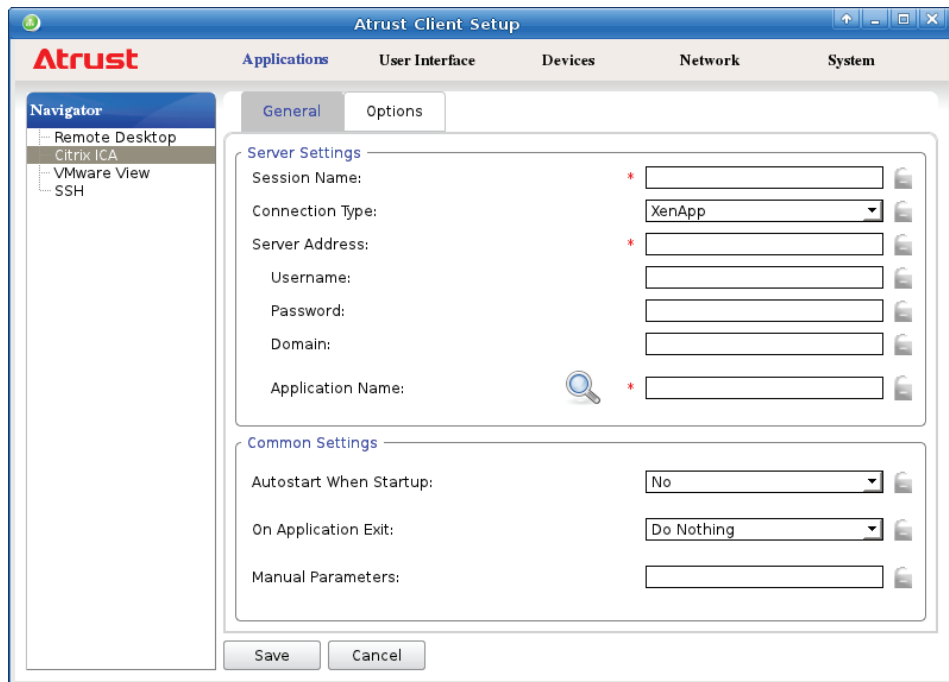

- Type the session name, the IP address / URL / FQDN of the XenApp server, and the desired application name.




**NOTE**

- You may need to provide the ***XML port number*** as well for your server address (for example, XA65P.CTX.poc:**8080**), depending on your server-side configuration.



**NOTE**

- You can use the Search icon  to help you discover available applications for a given set of credentials.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



**NOTE**

- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 168.

### Connection Type: Server Connection

To quickly configure ICA connection settings for the connection type of Server Connection, please do the following:



#### NOTE


- This connection type is used to connect to XenApp server for *administration* and supports *only XenApp 6.5 and earlier*.

- On Atrust Client Setup, click **Applications > Citrix ICA**.
- The available ICA Connection list appears in the Configuration area.




#### NOTE

- If you haven't created any entry, the ICA Connection list will be empty.

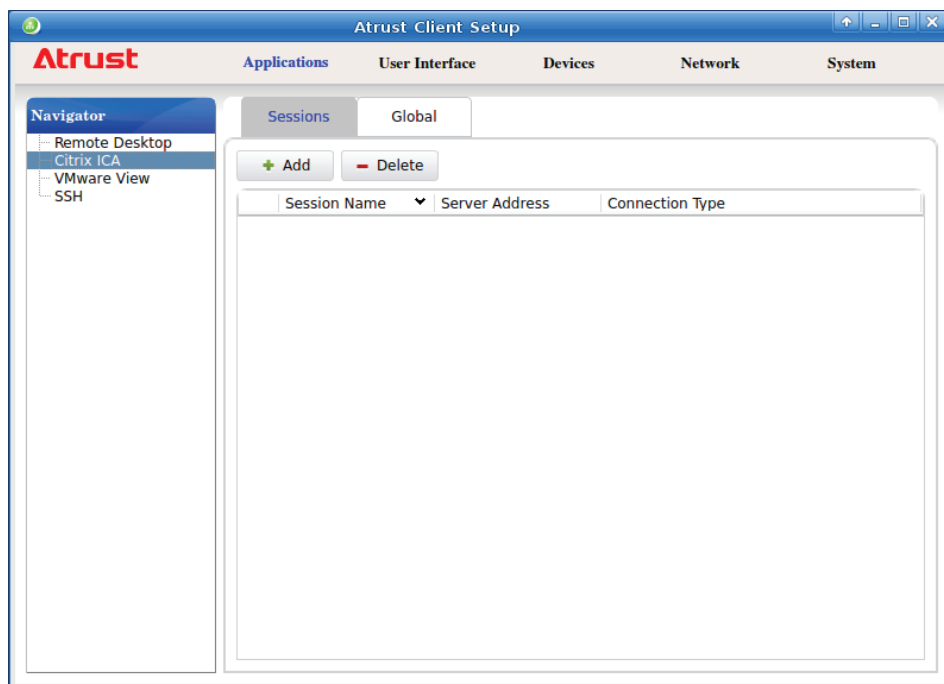

- Click **Add** on the top of the ICA Connection list to create a new entry of ICA connection.

- On **General** sub-tab, click the Connection Type drop-down menu to select **Server Connection**.

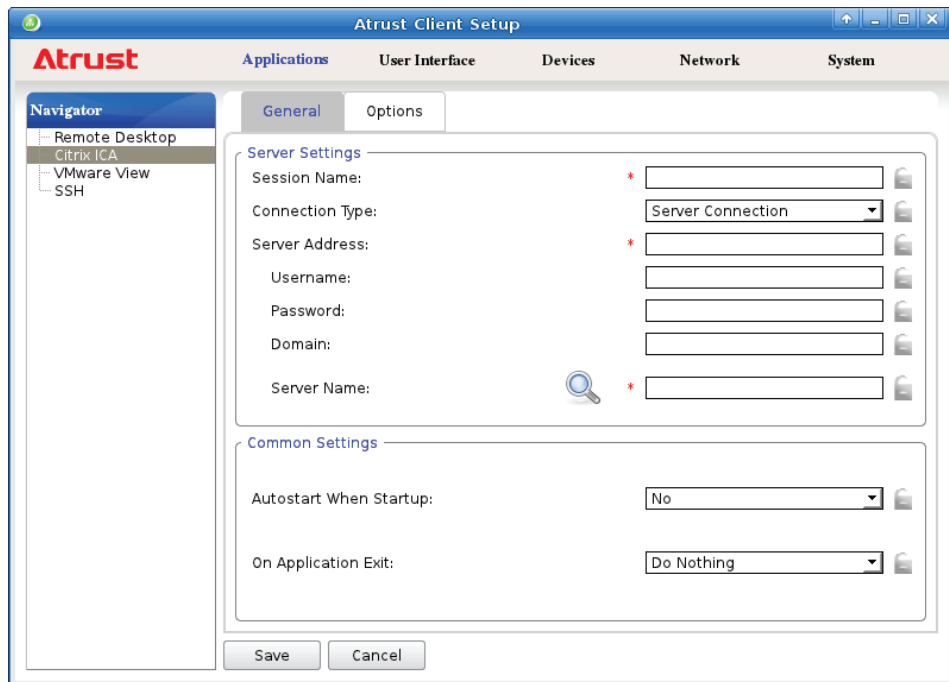

- Type the session name, the server address, and the name of the server.




**NOTE**

- You may need to provide the **XML port number** as well for your server address (for example, 192.168.77.10:**8080**), depending on your server-side configuration.



**NOTE**

- Only connections to XenApp servers are supported by this connection type.
- You can use the Search icon  to help you detect the server name.

- Click **Save** to confirm. The customized access shortcuts are automatically created on the local desktop and START menu.



**NOTE**


- Depending on your plan of service delivery and the configuration of your server(s), you may need to configure other advanced ICA connection settings for service access. For more information on other available settings, please refer to section "4.6.11 Configuring Advanced ICA Connection Settings" on page 168.

#### 4.6.7 Switching the Citrix Receiver Version

Two versions of Citrix Receiver are switchable in case that an older version of Citrix Receiver is required for your Citrix environment.

To change the version of Citrix Receiver, please do the following:

1. On Atrust Client Setup, click **Applications > Citrix ICA > Global**.
2. Click the drop-down menu to select the desired Citrix Receiver version. Two options are available: **12.x** and **13.x**.

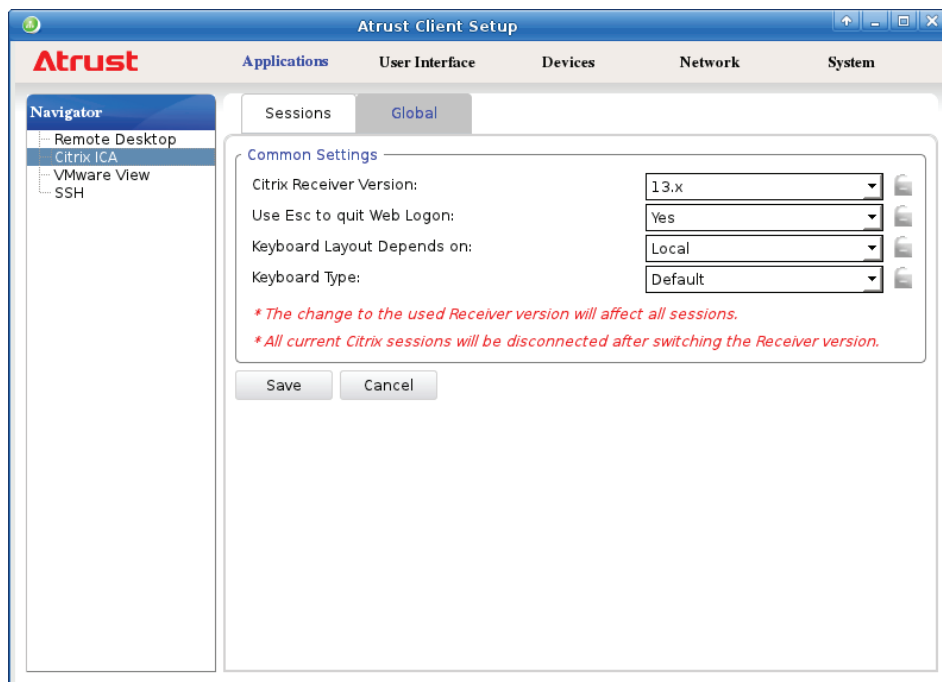

#### TIP

- The default Citrix Receiver version is **13.x**.
- You can refer to the following table for Citrix products and recommended Citrix Receiver version:

Citrix Product	Recommended Receiver Version
XenApp earlier than 6.5	12.x
XenDesktop earlier than 5.6	12.x
XenApp / XenDesktop 7.x or later	13.x

3. Click **Save** to apply.

#### 4.6.8 Enabling or Disabling Esc to Quit on the Web Logon Screen

You can choose whether to allow the use of **Esc** key to quit the Web Logon screen:

- If **Yes** is selected, you can use both **Esc** and **Alt + F4** to quit the Web Logon screen.
- If **No** is selected, only **Alt + F4** works.


To enable or disable Esc to Quit on the Web Logon screen, please do the following:



#### NOTE

- This is a global setting; the change will affect all Citrix connections.

1. On Atrust Client Setup, click **Applications > Citrix ICA > Global**.
2. Click the drop-down menu to select **Yes** or **No** to enable or disable Esc to Quit.

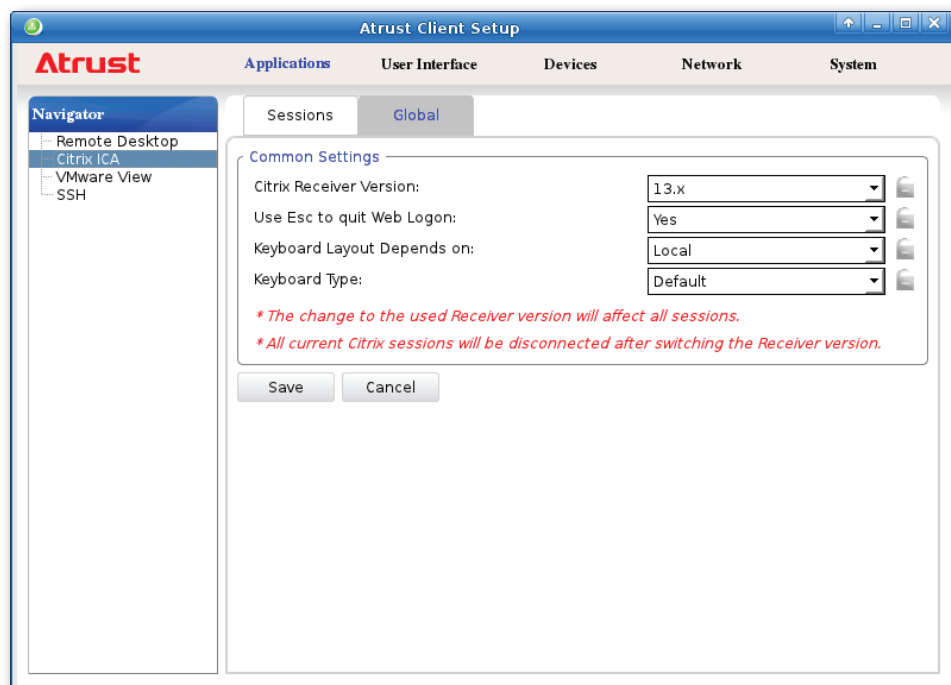


3. Click **Save** to apply.

#### 4.6.9 Configuring Keyboard Layout and Type for Citrix ICA Sessions

To set the used keyboard layout and type for all Citrix ICA sessions, please do the following:

1. On Atrust Client Setup, click **Applications > Citrix ICA > Global**.
2. Click drop-down menus to select what determines the keyboard layout and the desired keyboard type.

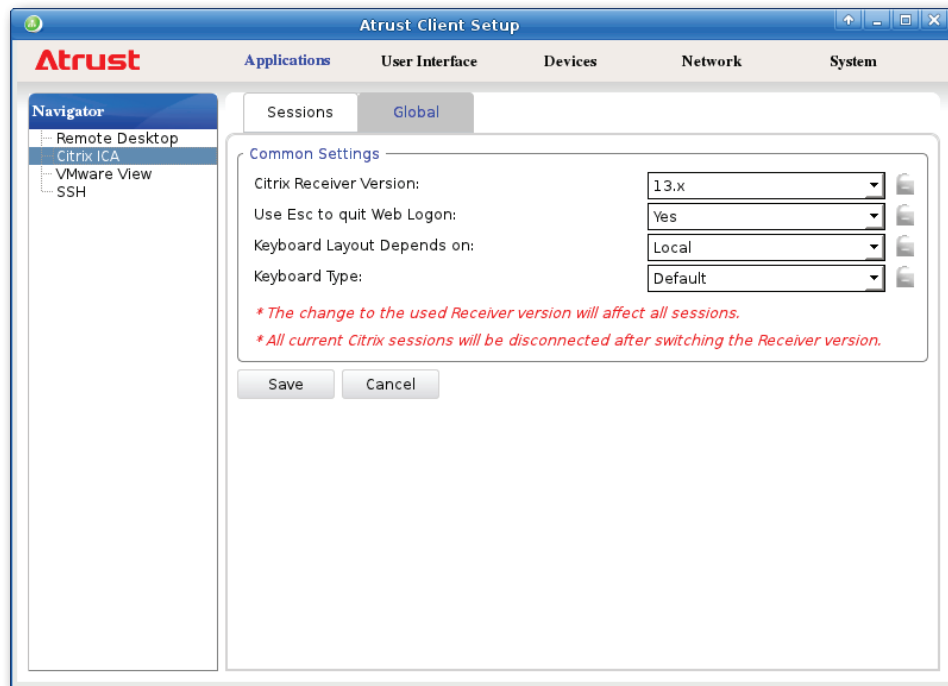

#### NOTE

- These are global settings; the changes will affect all ICA sessions.

3. Click **Save** to apply.

#### 4.6.10 Accessing Citrix Services

##### ***For Connection Types of StoreFront, VDI-in-a-Box, XenDesktop, XenApp, and Server Connection***

To access Citrix services, please do the following:


1. Double click the created (customized) shortcut on the desktop, and then provide your credentials if needed.
2. The desired desktop or application will be displayed on the screen.

##### ***For Connection Type of Web Logon***


To access Citrix services, please do the following:

1. Double click the created (customized) shortcut on the desktop.
2. The Web browser is launched in **full-screen** with the Citrix Logon screen.

#### **Citrix Logon Screen Example: XenApp 6.0 Fundamentals**

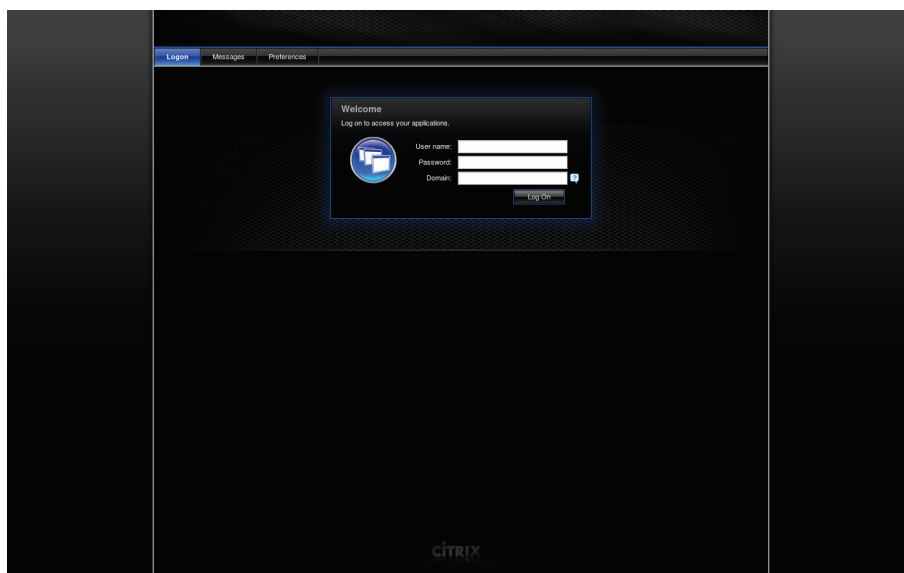


#### **Citrix Logon Screen Example: XenApp 6.5 Platinum**

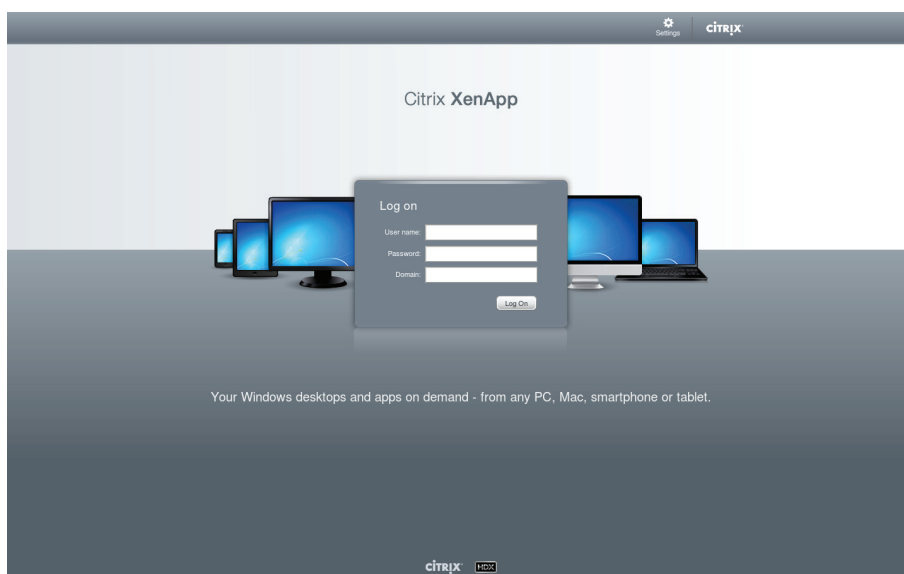

### Citrix Logon Screen Example: XenDesktop 5.6 Platinum




### Citrix Logon Screen Example: VDI-in-a-Box

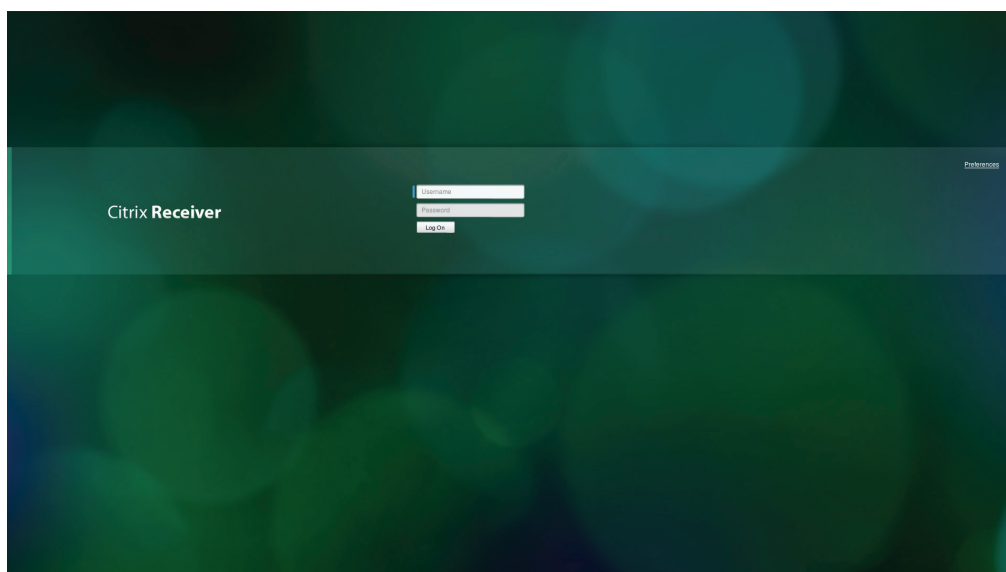



### Citrix Logon Screen Example: XenApp and XenDesktop 7.5 Platinum

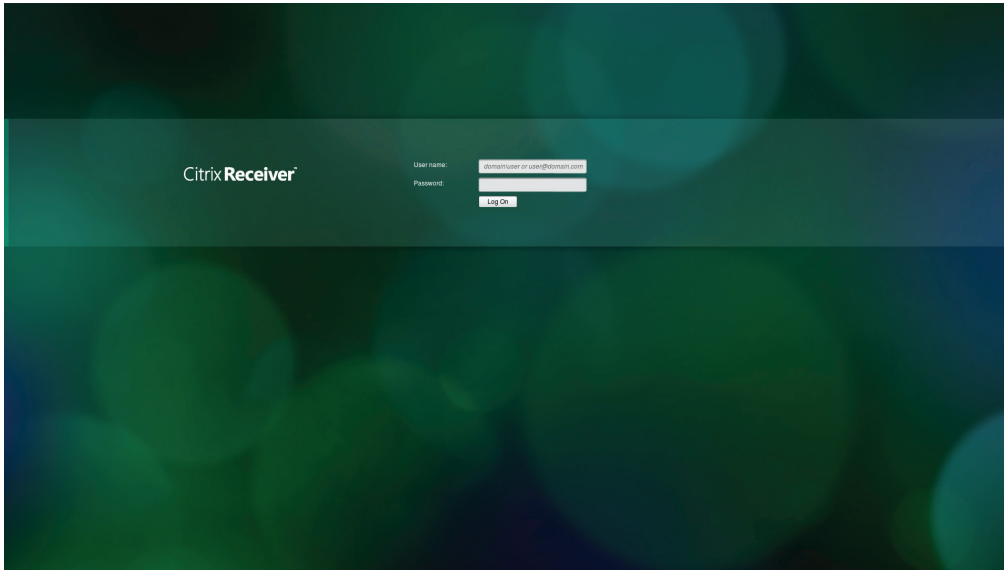

3. Type in the required credentials, and then click **Log On**.



#### **NOTE**

- If your XenApp doesn't belong to any domain, type in the server name in the Domain field instead.


4. On the Desktop or Application Selection screen, click to select the desired desktop or application(s).



**NOTE**

- You might enter the virtual desktop directly if only one type of virtual desktop is assigned to the provided credentials.


**Selection Screen Example: XenApp 6.5 Platinum**

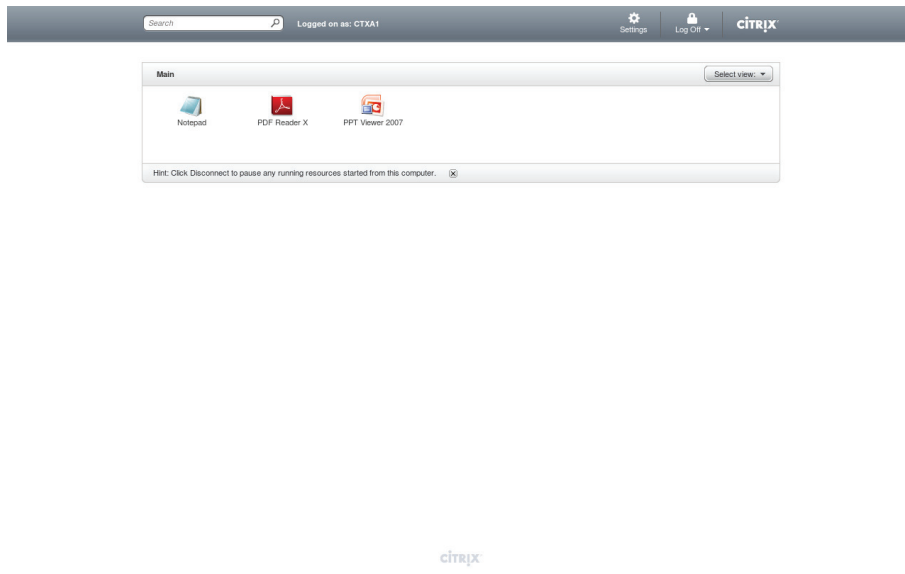


**Selection Screen Example: XenDesktop 5.6 Platinum**



### Selection Screen Example: XenApp 7.5 Platinum

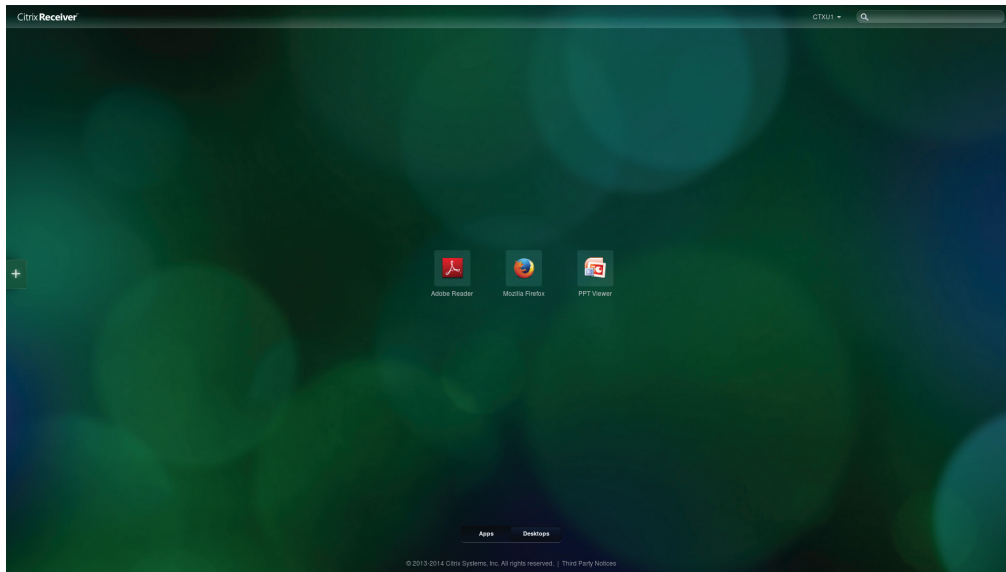


### Selection Screen Example: XenDesktop 7.5 Platinum

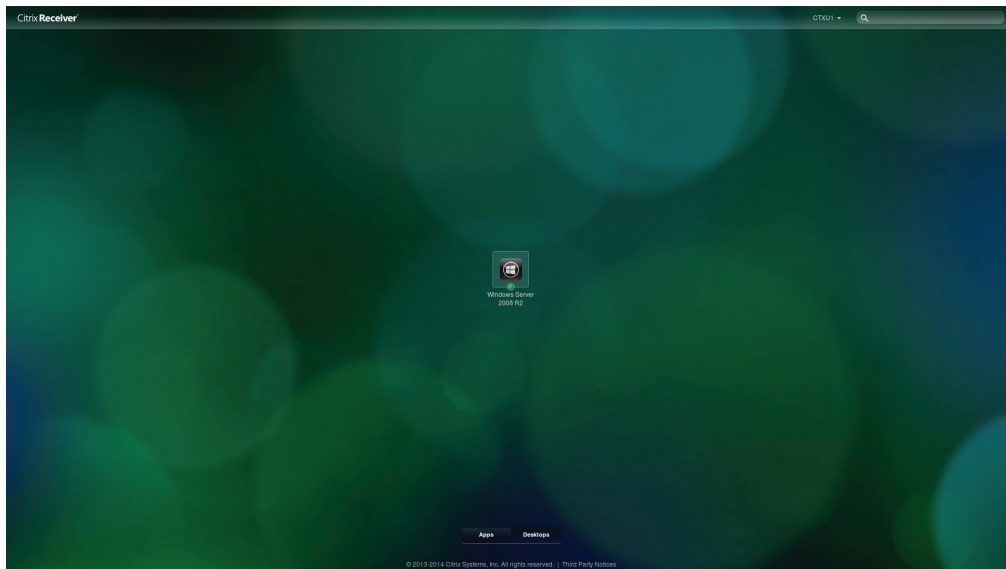


- The selected virtual desktop or application(s) will be displayed on the screen.

### Virtual Application Examples PowerPoint Viewer, Adobe Reader, and Notepad

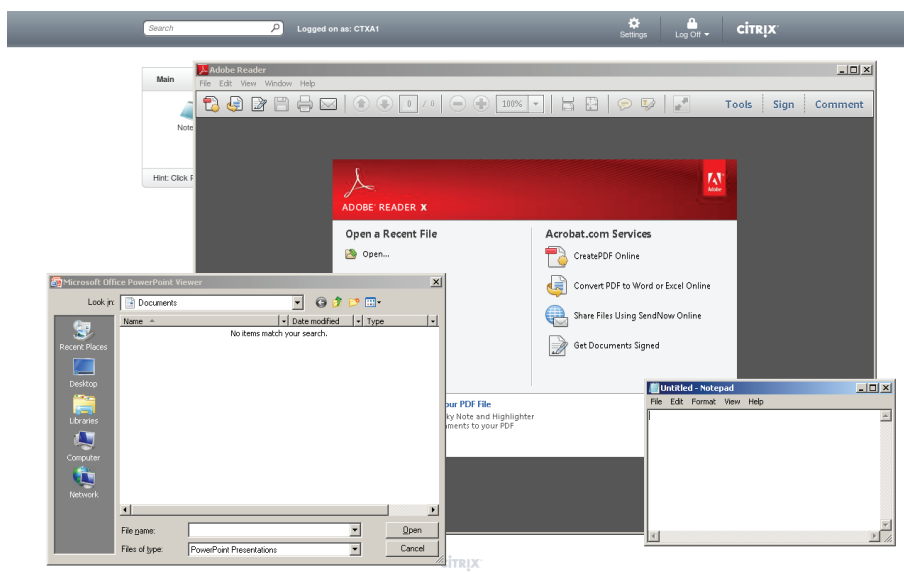


### Virtual Application Examples Adobe Reader, Mozilla Firefox, and PowerPoint Viewer

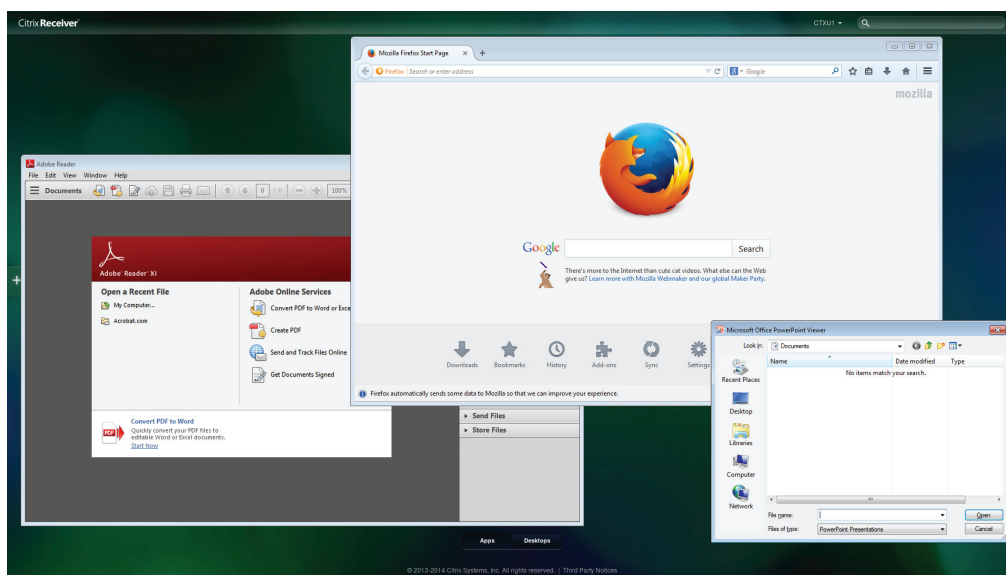

### Virtual Desktop Example Windows 7 Ultimate



### Virtual Desktop Example Windows Server 2008 R2

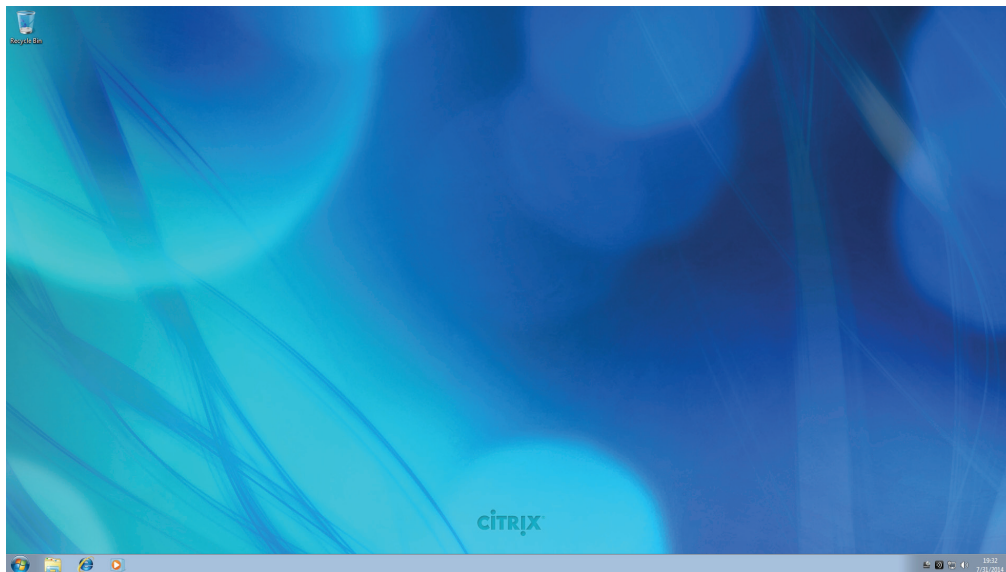

#### 4.6.11 Configuring Advanced ICA Connection Settings

The table below provides a description of each setting item for ICA connections. Please refer to this table to configure advanced settings and customize shortcuts on the local desktop and START menu for service access.



**NOTE**

- Please note that available settings vary depending on the selected connection type.

#### *Settings for the Connection Type of Web Logon*



**NOTE**

- For descriptions of available settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 172.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 177.
- For descriptions of settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 182.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 187.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 192.

General Sub-tab

Server Settings			
Item	Description		
Session Name	Type in the name of browser sessions for Citrix service access.		
Connection Type	This table only provides descriptions for available settings when <b>Web Logon</b> is selected.		
	Six connection types are available:		
	<b>Option</b>	<b>Description</b>	
	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	
	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	
	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	
	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	
	XenApp	Provides access to virtual applications for an earlier version of XenApp.	
	Server Connection	Provides access to servers for administration (XenApp servers only).	
	Refer to the table below for Citrix products and recommended connection types:		
<b>Citrix Product</b>	<b>Recommended Connection Type</b>		
XenApp 6.5 or earlier	XenApp / Web Logon		
XenDesktop 5.6 or earlier	XenDesktop / Web Logon		
XenApp and XenDesktop 7.5	StoreFront / Web Logon		
VDI-in-a-Box	VDI-in-a-Box / Web Logon		
Server Address	Type in the IP address / URL / FQDN of the server through which Citrix services are accessible.		
	Refer to the table below for details:		
	<b>Citrix Product</b>	<b>Component to Connect</b>	<b>Connection Address</b>
	XenApp 6.5 or earlier	Web Interface	IP / URL / FQDN
	XenDesktop 5.6 or earlier	Web Interface	IP / URL / FQDN
		IP / URL / FQDN <b>plus</b> <i>sub-path</i>	
XenApp and XenDesktop 7.5	StoreFront	<b>For example —</b> <b>FQDN:</b> X75.CTX.poc <b>Sub-path:</b> /Citrix/StoreWeb (default) <b>Connection Address:</b> X75.CTX.poc/Citrix/StoreWeb	

Common Settings											
Item	Description										
Autostart When Startup	Select whether to open a browser session for Citrix service access automatically or not when your t66 is started up (Autostart mode).										
	<b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:										
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="4">1</td><td rowspan="4">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>		
	No.	Mode	Description								
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.								
Available actions include:											
<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>											
<table><tr><td rowspan="4">2</td><td rowspan="4">Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>	2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>						
2			Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.							
				Available actions include:							
				<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>							
<table><tr><td>3</td><td>Quick Connection</td><td><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>	3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.								
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.									
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.										
On Application Exit	Select what to do when a browser session for Citrix service access is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .										
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Do Nothing</td><td>Returns to the Local Linux desktop.</td></tr><tr><td>Restart Application</td><td>Opens a browser session again for service access.</td></tr><tr><td>Reboot</td><td>Restarts your thin client.</td></tr><tr><td>Shutdown</td><td>Turns off your thin client.</td></tr></table>	Option	Description	Do Nothing	Returns to the Local Linux desktop.	Restart Application	Opens a browser session again for service access.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
	Option	Description									
	Do Nothing	Returns to the Local Linux desktop.									
	Restart Application	Opens a browser session again for service access.									
	Reboot	Restarts your thin client.									
Shutdown	Turns off your thin client.										



## Options Sub-tab

Device Mapping	
Item	Description
Mapping Local USB Storage	<p>Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.</p> <p><b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 81 for details.</p>
Mapping Local Serial Ports	<p>Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> This setting item is not applicable to your t66. However, if you use a serial-based barcode scanner, and attach it to your t66 with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a delivered application.</p>
Mapping local Printers	<p>Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.6 Adding a Local Printer" on page 84 for detailed instructions.</p>
Connection Settings	
Item	Description
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.
USB Redirection Settings	
Item	Description
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 55 for detailed instructions on these similar settings.
Printers	
Redirect Connected USB Devices	
Plugged USB Devices	
Redirection Rules	

## Settings for the Connection Type of StoreFront




### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 168.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 177.
- For descriptions of settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 182.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 187.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 192.

### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>StoreFront</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of the server through which virtual desktops or applications are accessible (where a StoreFront is hosted).																			
Store Name	Type in the store name used when you configure your Citrix StoreFront.																			
Username	Type in the user/account name used for authentication.																			
Password	Type in the password of the user account used for authentication.																			
Domain	Type in the domain name of the server.																			
Desktop Group / Application	Type in the name of a desktop group / application or use the Search icon  in front of the field to discover available desktop groups / applications.																			
Common Settings																				
Item	Description																			
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your t66 is started up (Autostart mode).																			
	<b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:																			
	<table><thead><tr><th>No.</th><th>Mode</th><th>Description</th></tr></thead><tbody><tr><td rowspan="4">1</td><td rowspan="4">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr><tr><td rowspan="4">2</td><td rowspan="4">Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:</td></tr><tr><td><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr><tr><td rowspan="2">3</td><td rowspan="2">Quick Connection</td><td><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</td></tr><tr><td></td></tr></tbody></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>		2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include:	<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>		3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.	
	No.	Mode	Description																	
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.																	
Available actions include:																				
<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>																				
2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.																		
		Available actions include:																		
		<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>																		
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.																		
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.																			

On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .	
	<b>Option</b>	<b>Description</b>
	Do Nothing	Returns to the Local Linux desktop.
	Restart Application	Opens an ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	This item is available only when <b>Regular Window</b> is selected. Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b> , <b>1280x1024</b> , <b>1024x768</b> , and <b>800x600</b> .
Window Mode	Click the drop-down menu to select the desired window mode. Two options are available: <b>Regular Window</b> and <b>Seamless Window</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session. <b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 81 for details.
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions. <b>NOTE:</b> This setting item is not applicable to your t66. However, if you use a serial-based barcode scanner, and attach it to your t66 with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a delivered application.

Mapping local Printers	<p>Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.6 Adding a Local Printer" on page 84 for detailed instructions.</p>								
<b>Connection Settings</b>									
<b>Item</b>	<b>Description</b>								
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>								
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.								
Enable Automatic Reconnect	Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.								
Number of Retries	Click the drop-down menu to select the number of retries, ranging from 1 to 10.								
Delay between Retries	Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.								
Enable Audio	Check/Uncheck to enable/disable sound in an ICA session.								
Audio Quality	<p>Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b>, <b>Medium Quality</b>, and <b>Low Quality</b>.</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>High Quality</td><td>Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.</td></tr> <tr> <td>Medium Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.</td></tr> <tr> <td>Low Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.</td></tr> </tbody> </table>	Option	Description	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.
Option	Description								
High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.								
Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.								
Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.								

Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.								
Windows Key Combination	<p>Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On the local computer</b>, <b>On the remote server</b>, and <b>In full screen mode only</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>On the local computer</td><td>Applies to the local desktop only.</td></tr> <tr> <td>On the remote server</td><td>Applies to the virtual desktop only.</td></tr> <tr> <td>In full screen mode only</td><td>Applies to the virtual desktop only when the desktop is running in the full-screen mode.</td></tr> </table>	Option	Description	On the local computer	Applies to the local desktop only.	On the remote server	Applies to the virtual desktop only.	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
Option	Description								
On the local computer	Applies to the local desktop only.								
On the remote server	Applies to the virtual desktop only.								
In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.								
<b>USB Redirection Settings</b>									
<b>Item</b>	<b>Description</b>								
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 55 for detailed instructions on these similar settings.								
Printers									
Redirect Connected USB Devices									
Plugged USB Devices									
Redirection Rules									

## Settings for the Connection Type of VDI-in-a-Box




### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 168.
- For descriptions of settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 172.
- For descriptions of settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 182.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 187.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 192.

### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>VDI-in-a-Box</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of the server through which virtual desktops are accessible.								
Username	Type in the user/account name used for authentication.								
Password	Type in the password of the user account used for authentication.								
Domain	Type in the domain name of the server.								
Desktop Group	Type in the name of the desktop group or the Search icon  in front of the field to discover available groups.								
Common Settings									
Item	Description								
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your t66 is started up (Autostart mode).								
	<b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:								
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="3">1</td><td rowspan="3">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	
	No.	Mode	Description						
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.						
Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>									
<table><tr><td rowspan="3">2</td><td rowspan="3">Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td></td></tr></table>	2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>					
2			Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.					
				Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>					
<table><tr><td>3</td><td>Quick Connection</td><td><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>	3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.						
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.							
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.								



On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .	
	<b>Option</b>	<b>Description</b>
	Do Nothing	Returns to the Local Linux desktop.
	Restart Application	Opens an ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b> , <b>1280x1024</b> , <b>1024x768</b> , and <b>800x600</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.  <b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 81 for details.
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> This setting item is not applicable to your t66. However, if you use a serial-based barcode scanner, and attach it to your t66 with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a virtual desktop.
Mapping local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.6 Adding a Local Printer" on page 84 for detailed instructions.

Connection Settings	
Item	Description
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.
Enable Automatic Reconnect	<p>Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.</p> <p><b>NOTE:</b> Automatic reconnecting (Auto Client Reconnect) may not work for a XenDesktop ICA session. This is a known issue. For more details, please visit Citrix websites at <a href="https://support.citrix.com">support.citrix.com</a> or <a href="https://www.citrix.com">www.citrix.com</a>.</p>
Number of Retries	Click the drop-down menu to select the number of retries, ranging from 1 to 10.
Delay between Retries	Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.
Enable Audio	Check/Uncheck to enable/disable sound in an ICA session.
Audio Quality	<p>Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b>, <b>Medium Quality</b>, and <b>Low Quality</b>.</p>

Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.								
Windows Key Combination	<p>Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On the local computer</b>, <b>On the remote server</b>, and <b>In full screen mode only</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>On the local computer</td><td>Applies to the local desktop only.</td></tr> <tr> <td>On the remote server</td><td>Applies to the virtual desktop only.</td></tr> <tr> <td>In full screen mode only</td><td>Applies to the virtual desktop only when the desktop is running in the full-screen mode.</td></tr> </table>	Option	Description	On the local computer	Applies to the local desktop only.	On the remote server	Applies to the virtual desktop only.	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
Option	Description								
On the local computer	Applies to the local desktop only.								
On the remote server	Applies to the virtual desktop only.								
In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.								
<b>USB Redirection Settings</b>									
<b>Item</b>	<b>Description</b>								
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 55 for detailed instructions on these similar settings.								
Printers									
Redirect Connected USB Devices									
Plugged USB Devices									
Redirection Rules									

### Settings for the Connection Type of XenDesktop




#### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 168.
- For descriptions of settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 172.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 177.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 187.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 192.

#### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>XenDesktop</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of the server through which virtual desktops are accessible (where a Web Interface is hosted).														
Username	Type in the user/account name used for authentication.														
Password	Type in the password of the user account used for authentication.														
Domain	Type in the domain name of the server.														
Desktop Group	Type in the name of the desktop group or use the Search icon  in front of the field to discover available desktop groups.														
Common Settings															
Item	Description														
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your t66 is started up (Autostart mode).														
	<b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:														
	<table><thead><tr><th>No.</th><th>Mode</th><th>Description</th></tr></thead><tbody><tr><td rowspan="2">1</td><td rowspan="2">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td rowspan="2">2</td><td rowspan="2">Autostart</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.</td></tr><tr><td>Available actions include:<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>3</td><td>Quick Connection</td><td><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</td></tr></tbody></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.	Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.
	No.	Mode	Description												
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.												
Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>															
2	Autostart	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.													
		Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>													
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.													
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.														

On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .	
	<b>Option</b>	<b>Description</b>
	Do Nothing	Returns to the Local Linux desktop.
	Restart Application	Opens an ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b> , <b>1280x1024</b> , <b>1024x768</b> , and <b>800x600</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.  <b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 81 for details.
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> This setting item is not applicable to your t66. However, if you use a serial-based barcode scanner, and attach it to your t66 with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a virtual desktop.
Mapping local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.6 Adding a Local Printer" on page 84 for detailed instructions.

Connection Settings									
Item	Description								
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>								
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.								
Enable Automatic Reconnect	<p>Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.</p> <p><b>NOTE:</b> Automatic reconnecting (Auto Client Reconnect) may not work for a XenDesktop ICA session. This is a known issue. For more details, please visit Citrix websites at <a href="https://support.citrix.com">support.citrix.com</a> or <a href="https://www.citrix.com">www.citrix.com</a>.</p>								
Number of Retries	Click the drop-down menu to select the number of retries, ranging from 1 to 10.								
Delay between Retries	Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.								
Enable Audio	Check/Uncheck to enable/disable sound in an ICA session.								
Audio Quality	<p>Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b>, <b>Medium Quality</b>, and <b>Low Quality</b>.</p>								
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>High Quality</td><td>Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.</td></tr><tr><td>Medium Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.</td></tr><tr><td>Low Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.</td></tr></table>	Option	Description	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.
	Option	Description							
	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.							
Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.								
Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.								

Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.								
Windows Key Combination	<p>Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On the local computer</b>, <b>On the remote server</b>, and <b>In full screen mode only</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>On the local computer</td><td>Applies to the local desktop only.</td></tr> <tr> <td>On the remote server</td><td>Applies to the virtual desktop only.</td></tr> <tr> <td>In full screen mode only</td><td>Applies to the virtual desktop only when the desktop is running in the full-screen mode.</td></tr> </table>	Option	Description	On the local computer	Applies to the local desktop only.	On the remote server	Applies to the virtual desktop only.	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
Option	Description								
On the local computer	Applies to the local desktop only.								
On the remote server	Applies to the virtual desktop only.								
In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.								
<b>USB Redirection Settings</b>									
<b>Item</b>	<b>Description</b>								
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 55 for detailed instructions on these similar settings.								
Printers									
Redirect Connected USB Devices									
Plugged USB Devices									
Redirection Rules									



## Settings for the Connection Type of XenApp




### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 168.
- For descriptions of settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 172.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 177.
- For descriptions of settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 182.
- For descriptions of settings for the connection type of Server Connection, please refer to “Settings for the Connection Type of Server Connection” on page 192.

### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>XenApp</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of a XenApp server.										
Username	Type in the user/account name used for authentication.										
Password	Type in the password of the user account used for authentication.										
Domain	Type in the domain name of the server.										
Application Name	Type in the application name or use the Search icon  in front of the field to discover available applications.										
Common Settings											
Item	Description										
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your t66 is started up (Autostart mode).  <b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:										
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="2">1</td><td rowspan="2">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include:<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include:<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>3</td><td>Quick Connection</td><td><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.
	No.	Mode	Description								
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>								
			The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>								
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.									
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.										

On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .
	<b>Option</b> <b>Description</b>
	Do NothingReturns to the Local Linux desktop.
	Restart ApplicationOpens an ICA session again.
	RebootRestarts your thin client.
	ShutdownTurns off your thin client.
Manual Parameters	Type in parameters for extended parameter passing.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	<p>This item is available only when <b>Regular Window</b> is selected.</p> <p>Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b>, <b>1280x1024</b>, <b>1024x768</b>, and <b>800x600</b>.</p>
Window Mode	Click the drop-down menu to select the desired window mode. Two options are available: <b>Regular Window</b> and <b>Seamless Window</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	<p>Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.</p> <p><b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 81 for details.</p>
Mapping Local Serial Ports	<p>Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> This setting item is not applicable to your t66. However, if you use a serial-based barcode scanner, and attach it to your t66 with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a delivered application.</p>

Mapping local Printers	<p>Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.</p> <p><b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.6 Adding a Local Printer" on page 84 for detailed instructions.</p>								
<b>Connection Settings</b>									
<b>Item</b>	<b>Description</b>								
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>								
Use H264 Compression	Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.								
Network Protocol	Click the drop-down menu to select the protocol(s) used for connection. Three options are available: <b>TCP/IP</b> , <b>TCP/IP + HTTP server location</b> , and <b>SSL/TLS + HTTPS server location</b> .								
Enable Automatic Reconnect	Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.								
Number of Retries	Click the drop-down menu to select the number of retries, ranging from 1 to 10.								
Delay between Retries	Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.								
Enable Audio	Check/Uncheck to enable/disable sound in an ICA session.								
Audio Quality	<p>Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b>, <b>Medium Quality</b>, and <b>Low Quality</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>High Quality</td><td>Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.</td></tr> <tr> <td>Medium Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.</td></tr> <tr> <td>Low Quality</td><td>Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.</td></tr> </table>	Option	Description	High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.	Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.	Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.
Option	Description								
High Quality	Allows endpoint devices to play a sound file at its native data transfer rate. This is recommended for connections where bandwidth is plentiful and sound quality is important.								
Medium Quality	Compresses any sounds sent to endpoint devices to a maximum of 64Kbps, resulting in a moderate decrease in the quality of the sound. This option is suitable for speeches and recommended for most LAN-based connections.								
Low Quality	Compresses any sounds sent to endpoint devices to a maximum of 16Kbps, resulting in a significant decrease in the quality of the sound. This option is suitable for low-bandwidth connections, allowing reasonable audio performance during a low-speed connection.								
Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.								

Windows Key Combination	Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On the local computer</b> , <b>On the remote server</b> , and <b>In full screen mode only</b> .	
	<b>Option</b>	<b>Description</b>
	On the local computer	Applies to the local desktop only.
	On the remote server	Applies to the virtual desktop only.
	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
<b>USB Redirection Settings</b>		
<b>Item</b>	<b>Description</b>	
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 55 for detailed instructions on these similar settings.	
Printers		
Redirect Connected USB Devices		
Plugged USB Devices		
Redirection Rules		

## Settings for the Connection Type of Server Connection



### NOTE

- For descriptions of available settings for the connection type of Web Logon, please refer to “Settings for the Connection Type of Web Logon” on page 168.
- For descriptions of settings for the connection type of StoreFront, please refer to “Settings for the Connection Type of StoreFront” on page 172.
- For descriptions of settings for the connection type of VDI-in-a-Box, please refer to “Settings for the Connection Type of VDI-in-a-Box” on page 177.
- For descriptions of settings for the connection type of XenDesktop, please refer to “Settings for the Connection Type of XenDesktop” on page 182.
- For descriptions of settings for the connection type of XenApp, please refer to “Settings for the Connection Type of XenApp” on page 187.

### General Sub-tab

Server Settings																									
Item	Description																								
Session Name	Type in the name for Citrix ICA sessions.																								
Connection Type	<p>This table only provides descriptions for available settings when <b>Server Connection</b> is selected.</p> <p>Six connection types are available:</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>Web Logon</td><td>Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).</td></tr> <tr> <td>StoreFront</td><td>Provides access to virtual desktops and applications through a StoreFront.</td></tr> <tr> <td>VDI-in-a-Box</td><td>Provides access to virtual desktops through VDI-in-a-Box.</td></tr> <tr> <td>XenDesktop</td><td>Provides access to virtual desktops for an earlier version of XenDesktop.</td></tr> <tr> <td>XenApp</td><td>Provides access to virtual applications for an earlier version of XenApp.</td></tr> <tr> <td>Server Connection</td><td>Provides access to servers for administration (XenApp servers only).</td></tr> </table> <p>Refer to the table below for Citrix products and recommended connection types:</p> <table> <tr> <th>Citrix Product</th><th>Recommended Connection Type</th></tr> <tr> <td>XenApp 6.5 or earlier</td><td>XenApp / Web Logon</td></tr> <tr> <td>XenDesktop 5.6 or earlier</td><td>XenDesktop / Web Logon</td></tr> <tr> <td>XenApp and XenDesktop 7.5</td><td>StoreFront / Web Logon</td></tr> <tr> <td>VDI-in-a-Box</td><td>VDI-in-a-Box / Web Logon</td></tr> </table>	Option	Description	Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).	StoreFront	Provides access to virtual desktops and applications through a StoreFront.	VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.	XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.	XenApp	Provides access to virtual applications for an earlier version of XenApp.	Server Connection	Provides access to servers for administration (XenApp servers only).	Citrix Product	Recommended Connection Type	XenApp 6.5 or earlier	XenApp / Web Logon	XenDesktop 5.6 or earlier	XenDesktop / Web Logon	XenApp and XenDesktop 7.5	StoreFront / Web Logon	VDI-in-a-Box	VDI-in-a-Box / Web Logon
Option	Description																								
Web Logon	Provides access to virtual desktops and applications through the interface of a Web browser (Mozilla Firefox).																								
StoreFront	Provides access to virtual desktops and applications through a StoreFront.																								
VDI-in-a-Box	Provides access to virtual desktops through VDI-in-a-Box.																								
XenDesktop	Provides access to virtual desktops for an earlier version of XenDesktop.																								
XenApp	Provides access to virtual applications for an earlier version of XenApp.																								
Server Connection	Provides access to servers for administration (XenApp servers only).																								
Citrix Product	Recommended Connection Type																								
XenApp 6.5 or earlier	XenApp / Web Logon																								
XenDesktop 5.6 or earlier	XenDesktop / Web Logon																								
XenApp and XenDesktop 7.5	StoreFront / Web Logon																								
VDI-in-a-Box	VDI-in-a-Box / Web Logon																								

Server Address	Type in the IP address / URL / FQDN of the XenApp server. <b>NOTE:</b> Server Connection only supports connections to XenApp servers.										
Username	Type in the user/account name used for authentication.										
Password	Type in the password of the user account used for authentication.										
Domain	Type in the domain name or the computer name if the server doesn't belong to any domain.										
Server Name	Type in the name of the server.										
Common Settings											
Item	Description										
Autostart When Startup	Select whether to open a Citrix ICA session automatically or not when your t66 is started up (Autostart mode).  <b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:										
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td rowspan="2">1</td><td rowspan="2">Appliance</td><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include:<ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include:<ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>3</td><td>Quick Connection</td><td><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>	No.	Mode	Description	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.
	No.	Mode	Description								
	1	Appliance	The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>								
			The client will start up directly with the desired Citrix ICA session and perform the configured action after exiting the session.  Available actions include: <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>								
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.									
	<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.										

On Application Exit	Select what to do when a Citrix ICA session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .	
	<b>Option</b>	<b>Description</b>
	Do Nothing	Returns to the Local Linux desktop.
	Restart Application	Opens an ICA session again.
	Reboot	Restarts your thin client.
	Shutdown	Turns off your thin client.

### Options Sub-tab

Window Settings	
Item	Description
Color Depth	Click the drop-down menu to select the desired color quality for a Citrix ICA session. Three options are available: <b>16 Bit</b> , <b>24 Bit</b> , and <b>Automatic</b> .
Window Size	Click the drop-down menu to select the desired window size of a Citrix ICA session. Four options are available: <b>Full Screen</b> , <b>1280x1024</b> , <b>1024x768</b> , and <b>800x600</b> .
Device Mapping	
Item	Description
Mapping Local USB Storage	Click the drop-down menu to enable/disable the mapping of the local USB drive(s) in a Citrix ICA session.  <b>NOTE:</b> You need to enable local USB storage drive(s) as well. See section "4.4.3 Configuring Settings for USB Storage Devices" on page 81 for details.
Mapping Local Serial Ports	Click the drop-down menu to enable/disable the mapping of the local serial device(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached serial device(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> This setting item is not applicable to your t66. However, if you use a serial-based barcode scanner, and attach it to your t66 with a serial-to-USB adapter, you need to enable this setting in order to use the local barcode scanner in a virtual server desktop.
Mapping local Printers	Click the drop-down menu to enable/disable the mapping of the local printer(s) in a Citrix ICA session. If <b>Yes</b> is selected, the locally attached printer(s) will become available in launched Citrix ICA sessions.  <b>NOTE:</b> To enable locally attached printer(s), please refer to section "4.4.6 Adding a Local Printer" on page 84 for detailed instructions.



Connection Settings	
Item	Description
Rendering Type	<p>Click the drop-down menu to select resources rendering on the endpoint or the server. Two options are available: <b>Server Rendering</b> and <b>Client Rendering</b>.</p> <p><b>NOTE:</b> The <b>Client Rendering</b> option may not be available on your system.</p>
Use H264 Compression	<p>Click to enable/disable H.264 compression support on the client, allowing session data are sent from the server side using H.264 format encoding.</p>
Network Protocol	<p>Click the drop-down menu to select the protocol(s) used for connection. Three options are available: <b>TCP/IP</b>, <b>TCP/IP + HTTP server location</b>, and <b>SSL/TLS + HTTPS server location</b>.</p>
Enable Automatic Reconnect	<p>Check/Uncheck to enable/disable automatic reconnecting after an ICA session was interrupted.</p> <p><b>NOTE:</b> Automatic reconnecting (Auto Client Reconnect) may not work for a XenDesktop ICA session. This is a known issue. For more details, please visit Citrix websites at <a href="http://support.citrix.com">support.citrix.com</a> or <a href="http://www.citrix.com">www.citrix.com</a>.</p>
Number of Retries	<p>Click the drop-down menu to select the number of retries, ranging from 1 to 10.</p>
Delay between Retries	<p>Click the drop-down menu to select the delay time between retries, ranging from 5 to 60 seconds.</p>
Enable Audio	<p>Check/Uncheck to enable/disable sound in an ICA session.</p>
Audio Quality	<p>Click the drop-down menu to choose the desired sound quality in an ICA session. Three options are available: <b>High Quality</b>, <b>Medium Quality</b>, and <b>Low Quality</b>.</p>

Enable Audio Input	Check/Uncheck to enable/disable audio input in an ICA session.								
Windows Key Combination	<p>Click the drop-down menu to select where to apply Windows key combinations. Three options are available: <b>On the local computer</b>, <b>On the remote server</b>, and <b>In full screen mode only</b>.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td>On the local computer</td><td>Applies to the local desktop only.</td></tr> <tr> <td>On the remote server</td><td>Applies to the virtual desktop only.</td></tr> <tr> <td>In full screen mode only</td><td>Applies to the virtual desktop only when the desktop is running in the full-screen mode.</td></tr> </table>	Option	Description	On the local computer	Applies to the local desktop only.	On the remote server	Applies to the virtual desktop only.	In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.
Option	Description								
On the local computer	Applies to the local desktop only.								
On the remote server	Applies to the virtual desktop only.								
In full screen mode only	Applies to the virtual desktop only when the desktop is running in the full-screen mode.								
<b>USB Redirection Settings</b>									
<b>Item</b>	<b>Description</b>								
USB Storage	Please refer to "Advanced Quick Connection Settings for Citrix ICA Sessions" on page 55 for detailed instructions on these similar settings.								
Printers									
Redirect Connected USB Devices									
Plugged USB Devices									
Redirection Rules									

#### 4.6.12 Configuring Basic VMware View Connection Settings

The **VMware View** setting enables you to configure View connection settings for VMware View or Horizon View desktop / application services and create shortcuts on the local desktop and START menu for service access. You can access on-demand desktop / application services for work simply through these shortcuts.




##### NOTE

- For more information on VMware desktop virtualization solutions, please visit VMware website at [www.vmware.com](http://www.vmware.com).

To quickly configure VMware View connection settings, please do the following:


1. On Atrust Client Setup, click **Applications > VMware View**.
2. The View Connection list appears in the Configuration area.

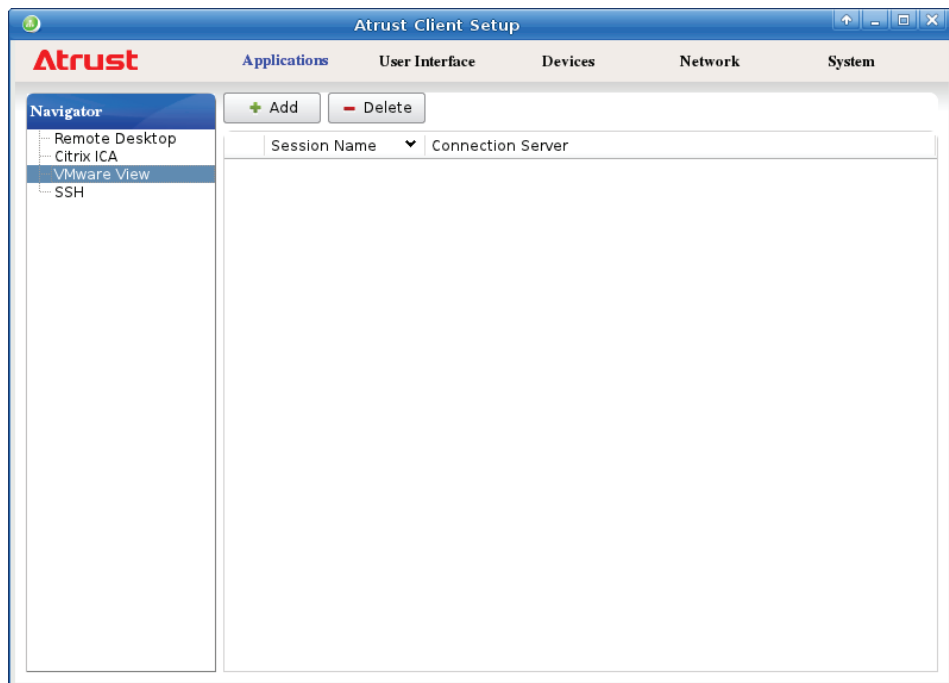

##### NOTE

- If you haven't created any entry, the View Connection list will be empty.

3. Click **Add** on the top of the View Connection list to add a new entry of View connection.

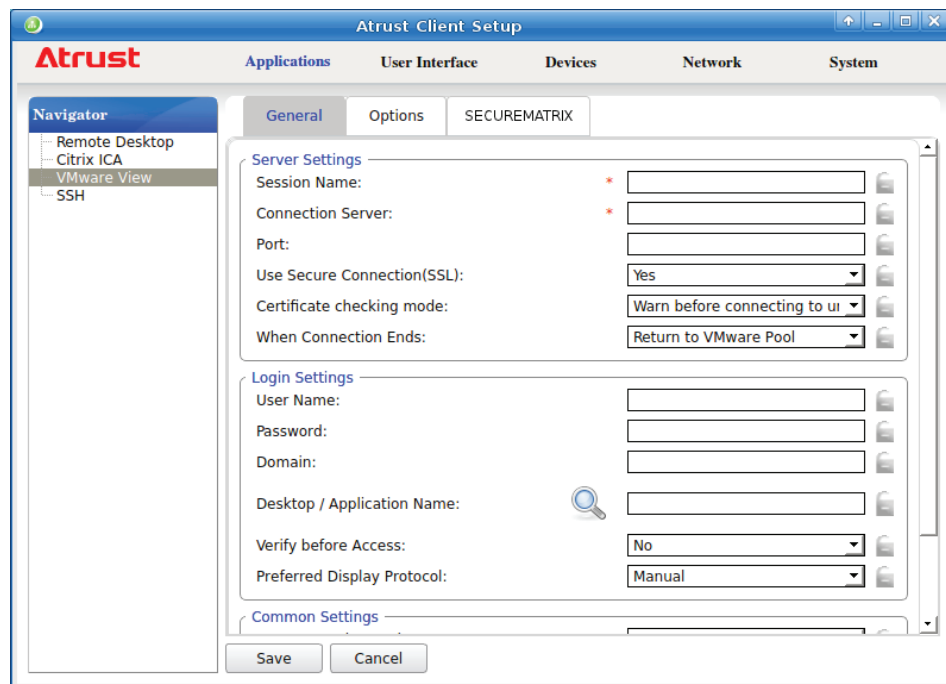

4. Type in the desired session name and the computer name or IP address of the View Connection Server, and then click **Save** to confirm.



#### NOTE

- These are the only required fields for the creation of a service access shortcut on the desktop. Other data can be provided during the period of service access. Depending on your needs, you might choose to type in more other data.

5. The new entry is added to the View Connection list and the access shortcuts are automatically created on the local desktop and START menu.

### 4.6.13 Accessing VMware View or Horizon View Services

To access VMware View or Horizon View services, please do the following:


1. Double click the created (customized) access shortcut on the desktop.




#### NOTE

- A window might appear with a certificate message about the remote server. Consult the IT administrator for details and ensure the connection is secure **first**. To import a security certificate, please refer to section “4.2.14 Importing Certificates for Remote Computers” on page 63. To bypass, click **Connect Insecurely**.

2. A Welcome window might appear. Click **OK** to continue.
3. A window appears prompting for the credentials. Enter your user name, password, click the Domain drop-down menu to select the domain, and then click **OK**.

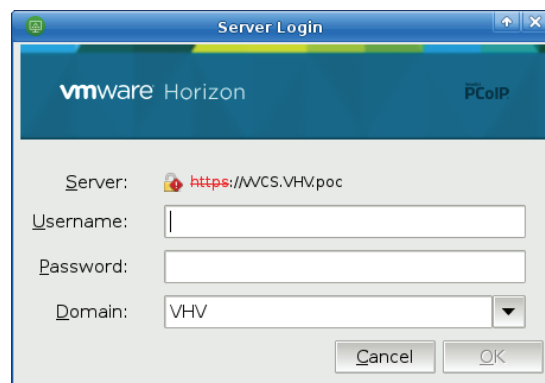

4. A window appears with available desktops and/or applications for the provided credentials.

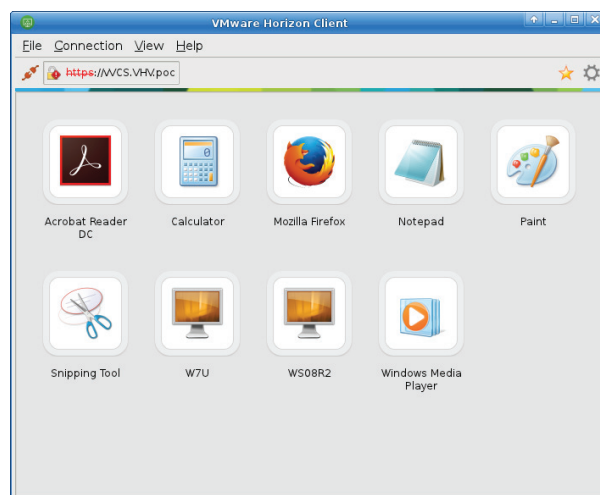


5. Double click to select the desired desktop or application.

6. The selected desktop or application will be displayed on the screen.




**NOTE**

- Your desktop or application will be displayed in full screen. You can:
  - ✧ Click **File > Return to Desktop and Application List** on the top tool bar to recall the Desktop and Application list.

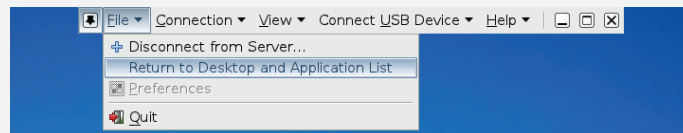


- ✧ Click **View** on the top tool bar to switch to a virtual desktop or application.

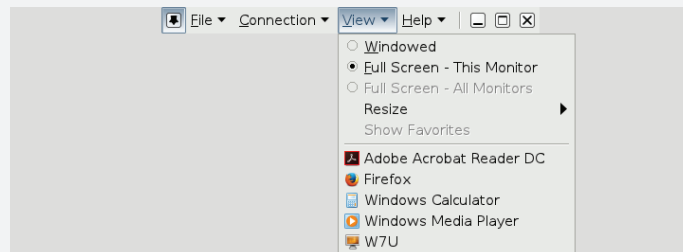

#### 4.6.14 Configuring Advanced View Connection Settings

The table below provides a description of each setting item for View connections. Please refer to this table to configure advanced settings and customize shortcuts on the local desktop and START menu for service access.

##### General Sub-tab

Server Settings		
Item	Description	
Session Name	Type in the name for VMware View or Horizon View sessions.	
Connection Server	Type in the computer name or IP address of the View Connection Server. <b>NOTE:</b> For more information on View Connection Server, please visit VMware website at <a href="http://www.vmware.com">www.vmware.com</a> .	
Port	Type in the port number used to communicate with the View Connection Server. To use the default value, simply leave it blank.	
Use Secure Connection (SSL)	Check/Uncheck to enable/disable secure connection.	
Certificate Checking Mode	Click the drop-down menu to select if to check server identity certificates and if to connect to untrusted servers. Three options are available: <b>Do not verify server identity certificates</b> , <b>Warn before connecting to untrusted servers</b> , and <b>Never connect to untrusted servers</b> .	
When Connection Ends	Click the drop-down menu to select what to do when the connection ends. Two options are available: <b>Return to VMware Pool</b> and <b>Quit VMware Client</b> .	
	Option	Description
	Return to VMware Pool	When the connection ends, return to the Desktop and Application list for given credentials.
	Quit VMware Client	When the connection ends, close VMware Client. To access virtual desktops and applications, you need to provide the credentials again.
Login Settings		
Item	Description	
Username	Type in the user name for authentication.	
Password	Type in the password for authentication.	
Domain	Type in the domain name of the View Connection Server.	
Desktop / Application Name	Type in the desktop / application name. Or, leave it blank for users to select one. <b>NOTE:</b> You can use the Search icon  to help you discover available desktops or applications for a given set of credentials.	

Verify before Access	<p>Click the drop-down menu to select whether to verify the entitlement to the virtual desktop or application provided in the previous setting item:</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Yes</td><td>Verify the entitlement to the virtual desktop or application provided in the previous setting item. Stop if the given credentials do not pass this verification.</td></tr> <tr> <td>No</td><td>If the given credentials are not entitled to the virtual desktop or application provided in the previous setting item, just ignore that error and provide the Desktop and Application list available for that credentials.</td></tr> </tbody> </table>	Option	Description	Yes	Verify the entitlement to the virtual desktop or application provided in the previous setting item. Stop if the given credentials do not pass this verification.	No	If the given credentials are not entitled to the virtual desktop or application provided in the previous setting item, just ignore that error and provide the Desktop and Application list available for that credentials.		
Option	Description								
Yes	Verify the entitlement to the virtual desktop or application provided in the previous setting item. Stop if the given credentials do not pass this verification.								
No	If the given credentials are not entitled to the virtual desktop or application provided in the previous setting item, just ignore that error and provide the Desktop and Application list available for that credentials.								
Preferred Display Protocol	<p>Click the drop-down menu to select the desired display protocol. Three options are available: <b>Manual</b>, <b>Microsoft RDP</b>, and <b>PCoIP</b>.</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Manual</td><td>Manually select the desired display protocol.</td></tr> <tr> <td>Microsoft RDP</td><td>Use Microsoft RDP as the display protocol.</td></tr> <tr> <td>PCoIP</td><td>Use VMware PCoIP as the display protocol.</td></tr> </tbody> </table>	Option	Description	Manual	Manually select the desired display protocol.	Microsoft RDP	Use Microsoft RDP as the display protocol.	PCoIP	Use VMware PCoIP as the display protocol.
Option	Description								
Manual	Manually select the desired display protocol.								
Microsoft RDP	Use Microsoft RDP as the display protocol.								
PCoIP	Use VMware PCoIP as the display protocol.								
<b>Common Settings</b>									
<b>Item</b>	<b>Description</b>								
Non-Interactive Mode	<p>Select <b>Yes</b> or <b>No</b> to allow or disallow the Non-Interactive mode. The default is to use the Non-Interactive mode.</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td>Yes</td><td>The Non-Interactive mode is used. Users are not allowed to re-select different settings if the settings have been specified in View connection settings.</td></tr> <tr> <td>No</td><td>The Interactive mode is used. Users are allowed to re-select different settings even if the settings have been specified in View connection settings.</td></tr> </tbody> </table>	Option	Description	Yes	The Non-Interactive mode is used. Users are not allowed to re-select different settings if the settings have been specified in View connection settings.	No	The Interactive mode is used. Users are allowed to re-select different settings even if the settings have been specified in View connection settings.		
Option	Description								
Yes	The Non-Interactive mode is used. Users are not allowed to re-select different settings if the settings have been specified in View connection settings.								
No	The Interactive mode is used. Users are allowed to re-select different settings even if the settings have been specified in View connection settings.								



Autostart When Startup	Select whether to open a VMware View or Horizon View session automatically or not when your t66 is started up (Autostart mode).													
	<b>NOTE:</b> There are three similar but different modes for your t66 and only one mode will take effect if all are enabled. Three modes and the order of priority are listed as follows:													
	<table><tr><th>No.</th><th>Mode</th><th>Description</th></tr><tr><td>1</td><td>Appliance</td><td><p>The client will start up directly with the desired VMware View session and perform the configured action after exiting the session.</p><p>Available actions include:</p><ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>2</td><td>Autostart</td><td><p>The client will start up directly with the desired VMware View or Horizon View session and perform the configured action after exiting the session.</p><p>Available actions include:</p><ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul></td></tr><tr><td>3</td><td>Quick Connection</td><td><b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.</td></tr></table>		No.	Mode	Description	1	Appliance	<p>The client will start up directly with the desired VMware View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	2	Autostart	<p>The client will start up directly with the desired VMware View or Horizon View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>	3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.
	No.	Mode	Description											
1	Appliance	<p>The client will start up directly with the desired VMware View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>												
2	Autostart	<p>The client will start up directly with the desired VMware View or Horizon View session and perform the configured action after exiting the session.</p> <p>Available actions include:</p> <ul style="list-style-type: none"><li>• Returning to the local desktop</li><li>• Re-launching a new session</li><li>• Restarting the thin client</li><li>• Turning off the thin client</li></ul>												
3	Quick Connection	<b>The default.</b> The client will enter Atrust Quick Connection screen after system startup.												
<b>NOTE:</b> To use the Autostart mode, ensure that the Appliance mode is disabled.														

On Application Exit	Select what to do when a VMware View or Horizon View session is ended. Four options are available: <b>Do Nothing</b> , <b>Restart Application</b> , <b>Reboot</b> , and <b>Shutdown</b> .											
	<table><tr><th>Option</th><th>Description</th></tr><tr><td>Do Nothing</td><td>Returns to the Windows Embedded desktop.</td></tr><tr><td>Restart Application</td><td>Opens a VMware View or Horizon View session again.</td></tr><tr><td>Reboot</td><td>Restarts your thin client.</td></tr><tr><td>Shutdown</td><td>Turns off your thin client.</td></tr></table>		Option	Description	Do Nothing	Returns to the Windows Embedded desktop.	Restart Application	Opens a VMware View or Horizon View session again.	Reboot	Restarts your thin client.	Shutdown	Turns off your thin client.
	Option	Description										
	Do Nothing	Returns to the Windows Embedded desktop.										
	Restart Application	Opens a VMware View or Horizon View session again.										
	Reboot	Restarts your thin client.										
Shutdown	Turns off your thin client.											

Options Sub-tab

Window Settings		
Item	Description	
Resolution	Click the drop-down menu to select the desired display size of a View session. Four options are available: <b>Full Screen</b> , <b>Multi Monitor</b> , <b>Large Window</b> , and <b>Small Window</b> .	
	Option	Description
	All Monitors	Opens the selected View session in multiple displays.
	Full Screen	Opens the selected View session in full screen.
	Large Window	Opens the selected View session in a large window.
	Small Window	Opens the selected View session in a small window.
	<b>NOTE:</b> Your t60 is only equipped with one VGA port. <b>All Monitors</b> is not available for t60.	
USB Redirection Settings		
Item	Description	
Mass Storage	Please refer to "Advanced Quick Connection Settings for VMware View Sessions" on page 57 for detailed instructions on these similar settings.	
Smart Card		
Human Interface Device		
Printer		
Plugged USB Devices		
Redirection Rules		
Microsoft RDP Protocol Only		
Item	Description	
Printer Mapping	Click the drop-down menu to enable/disable printer mapping when RDP protocol is used for VMware View connections.	
	When <b>Enable</b> is selected, users can access a local or network printer in a virtual desktop session.	
	<b>NOTE:</b> You need to add a local or network printer for your t66 first, and then enable this feature here to use that printer in a virtual desktop session.	
	<b>NOTE:</b> For detailed instructions on how to add a local or network printer for your t66, please refer to section "4.4.6 Adding a Local Printer" on page 84 or "4.4.7 Adding a Network Printer" on page 87.	




**NOTE**

- Please refer to "A.3 Using SECUREMATRIX Authentication for VMware Connections" on page 215 for descriptions of **SECUREMATRIX** sub-tab.

#### 4.6.15 Configuring SSH Connection Settings

To configure SSH (Secure SHell) connection settings, please do the following:


1. On Atrust Client Setup, click **Applications > SSH**.
2. The SSH Connection list appears in the Configuration area.

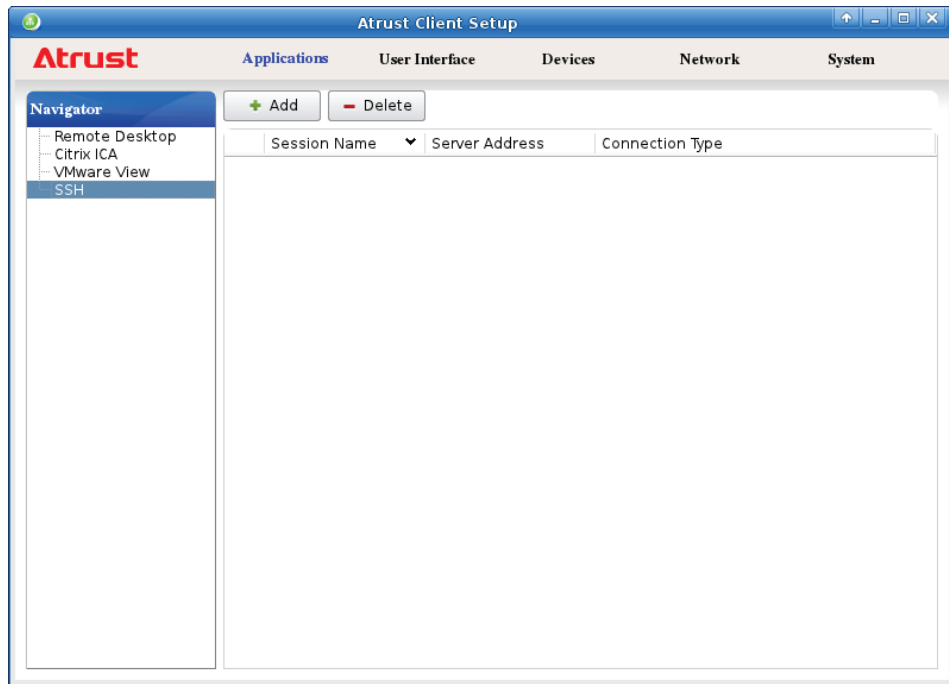


#### NOTE

- If you haven't created any entry, the SSH Connection list will be empty.

3. Click **Add** on the top of the SSH Connection list to add a new entry of SSH connection.

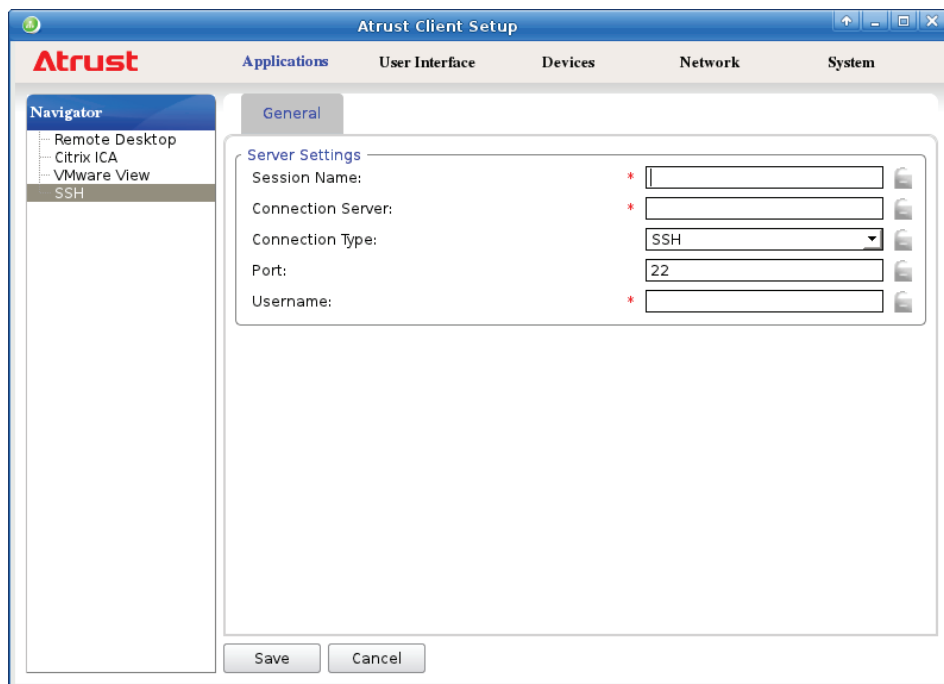

4. Click the drop-down menu to select the desired connection type. Two types are available: **SSH** and **Telnet**.
5. Type in the desired session name, the computer name or IP address of the remote server, the user name, and then click **Save** to confirm.
6. The new entry is added to the SSH Connection list and the access shortcuts are automatically created on the local desktop and START menu.

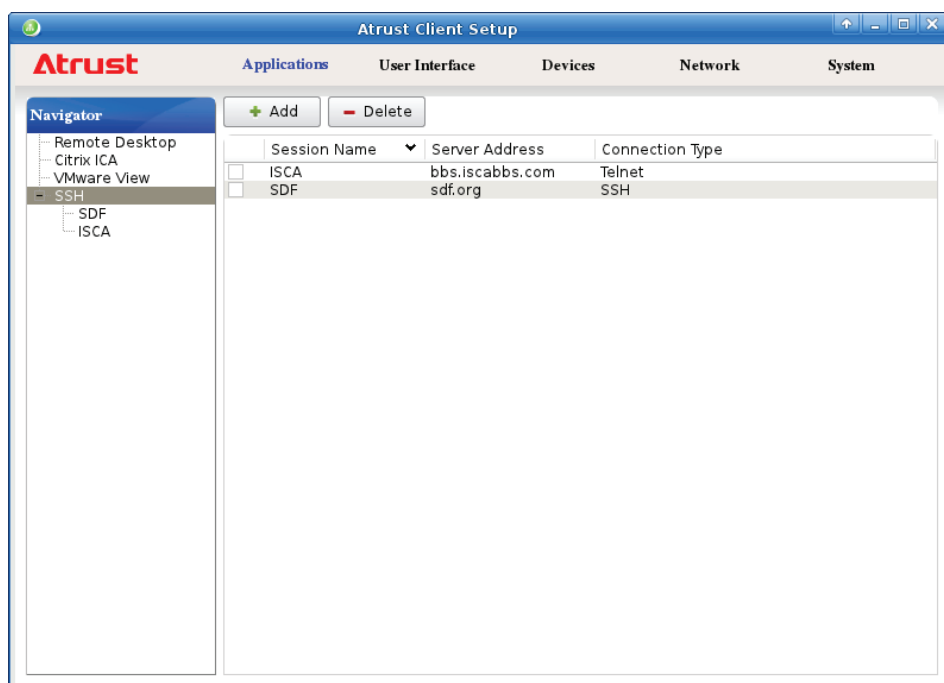


#### 4.6.16 Launching SSH and Telnet Sessions

To launch an SSH or Telnet session, please do the following:

1. Double click the created shortcut on the local desktop.
2. The SSH or Telnet session starts in the opened window.

##### Example: SSH Session

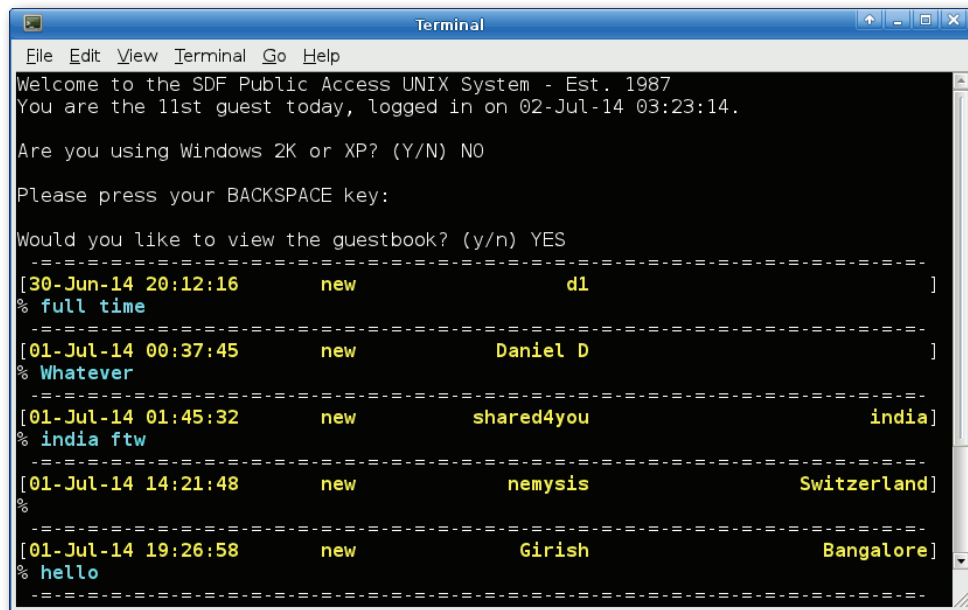

```

Terminal
File Edit View Terminal Go Help
Welcome to the SDF Public Access UNIX System - Est. 1987
You are the 11st guest today, logged in on 02-Jul-14 03:23:14.


Are you using Windows 2K or XP? (Y/N) NO

Please press your BACKSPACE key:

Would you like to view the guestbook? (y/n) YES
-----
[30-Jun-14 20:12:16      new      dl      ]
% full time
-----
[01-Jul-14 00:37:45      new      Daniel D      ]
% Whatever
-----
[01-Jul-14 01:45:32      new      shared4you      india]
% india ftw
-----
[01-Jul-14 14:21:48      new      nemysis      Switzerland]
%
-----
[01-Jul-14 19:26:58      new      Girish      Bangalore]
% hello
-----

```

##### Example: Telnet Session

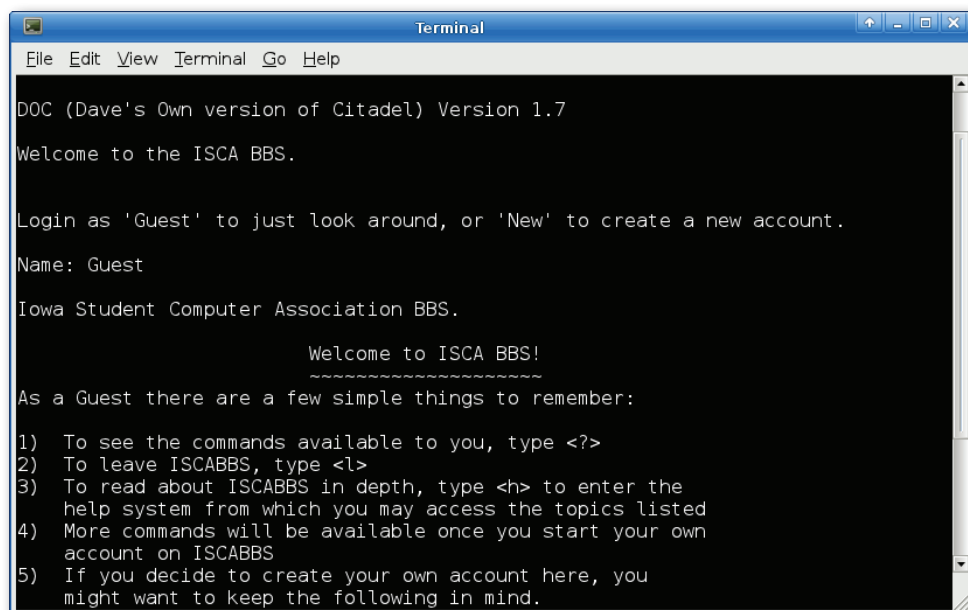

```

Terminal
File Edit View Terminal Go Help
DOC (Dave's Own version of Citadel) Version 1.7
Welcome to the ISCA BBS.

Login as 'Guest' to just look around, or 'New' to create a new account.
Name: Guest

Iowa Student Computer Association BBS.

      Welcome to ISCA BBS!
      ~~~~~
As a Guest there are a few simple things to remember:

1) To see the commands available to you, type <?>
2) To leave ISCA BBS, type <l>
3) To read about ISCA BBS in depth, type <h> to enter the
   help system from which you may access the topics listed
4) More commands will be available once you start your own
   account on ISCA BBS
5) If you decide to create your own account here, you
   might want to keep the following in mind.

```



# Appendices

This chapter provides instructions for the maintenance and upgrade of your t66 thin client.

## **A.1 Resetting Your t66 to the Factory Default**

How to restore factory default settings for your t66 211

## **A.2 Updating Firmware for Your t66 with a USB Flash Drive**

How to update firmware for your t66 with a USB flash drive 212

## **A.3 Using SECUREMATRIX Authentication for VMware Connections**

Enabling SECUREMATRIX authentication 215

Using SECUREMATRIX authentication 217

Changing your password pattern 220





## A.1 Resetting Your t66 to the Factory Default


To reset your t66 to the factory default, please do the following:



### WARNING

- Resetting your t66 to the factory default will erase all current settings in Atrust Client Setup and restore all settings to defaults.
- Settings and defaults are determined by installed firmware version. The default system language is determined and could be changed by the selection during installing/updating firmware. See A.2 on page 212 for more details.

- In Power-off state (the Power LED is off), connect a monitor to the client, and then long press the power button 6 to 8 seconds to enter Atrust Thin Client Menu.

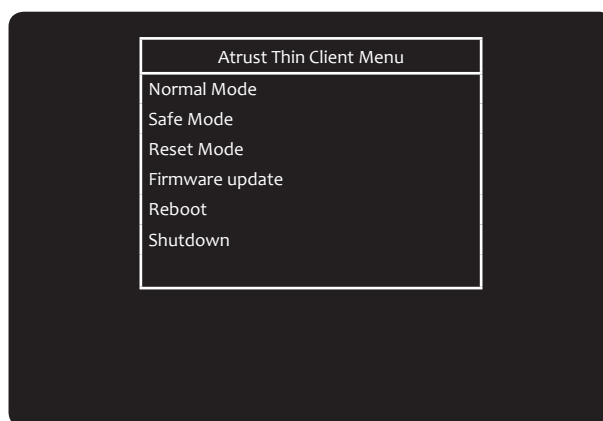

### NOTE

- You might need to wait about 15 seconds for this menu to appear on the screen.
- Six options are available on Atrust Thin Client Menu: **Normal Mode**, **Safe Mode**, **Reset Mode**, **Firmware update**, **Reboot**, and **Shutdown**. See the table below for the description of each option:

Menu Option	Description
Normal Mode	Boots up your t66 as the normal startup procedure.
Safe Mode	Clears and resets the current screen resolution setting.
Reset Mode	Resets your t66 to the factory default.
Firmware update	Updates firmware for your t66.
Reboot	Reboots your t66.
Shutdown	Shuts down your t66.

- Use arrow keys on the keyboard to select **Reset Mode**, and then press **Enter** on the keyboard to continue.
- A message appears prompting for confirmation. Click **y** on the keyboard to confirm.
- After completion, press **Enter** on the keyboard to restart your system.

## A.2 Updating Firmware for Your t66 with a USB Flash Drive

A simple picture of how to update the firmware for your t66 thin client can be given by two main steps:

**Step 1:** Prepare a USB flash drive for firmware update

**Step 2:** Update the firmware of your t66



### NOTE

- Please contact us to get the up-to-date firmware file for your t66.
- Before proceeding, please check the current firmware version and ensure you want to update it to a new one. To find out the current firmware version for your t66, please do the following:
  1. On the local Linux desktop of your t66, click **START > Settings > System Information**.
  2. The System Information window appears.
  3. The version of firmware of your t66 thin client is shown under the System tab.

### Step 1: Prepare the USB Flash Drive for Firmware Update

To prepare a USB flash drive for firmware update, please do the following:

1. Format your USB flash drive with the FAT/FAT32 format.
2. Create a folder called **firmware** on your USB flash drive.
3. On your computer, extract the compressed firmware file (.zip format) to a temporary folder.
4. Locate the folder named **arm-w.xy\_PREZ / arm-w.xy\_INTL** in the temporary folder, and then copy all files under **arm-w.xy\_PREZ / arm-w.xy\_INTL** to the folder **firmware** on your USB flash drive to get the USB flash drive ready for firmware update.




### NOTE

- The name of the folder **arm-w.xy\_PREZ / arm-w.xy\_INTL** varies, depending on the version of a new firmware file. For example, the folder name will be **arm-8.21\_PREA / arm-8.21\_INTL** for the firmware file of version 8.21-PREA / 8.21-INTL.

## Step 2: Update the Firmware of Your t66

To update firmware for your t66, please do the following:

1. In the Power-off state (the Power LED is off), plug your USB flash drive into a USB port on the front panel of your t66, and ensure that you have made power connection and connected a keyboard, mouse, and monitor to your t66.
2. Long press the power button to enter Atrust Thin Client Menu.

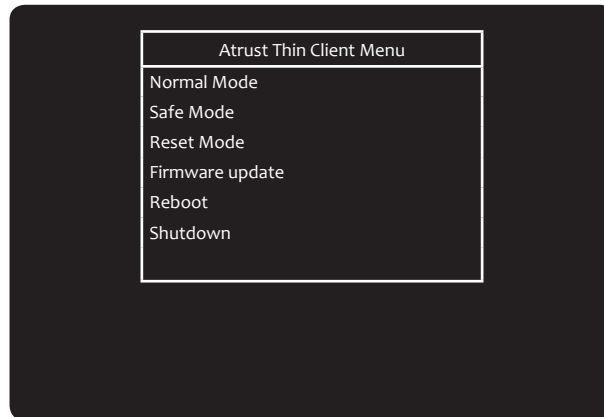

### NOTE

- You might need to wait about 5 seconds for this menu to appear on the screen.
- Six options are available on Atrust Thin Client Menu: **Normal Mode**, **Safe Mode**, **Reset Mode**, **Firmware update**, **Reboot**, and **Shutdown**. See the table below for the description of each option:

Menu Option	Description
Normal Mode	Boots up your t66 as the normal startup procedure.
Safe Mode	Clears and resets the current screen resolution setting.
Reset Mode	Resets your t66 to the factory default.
Firmware update	Updates firmware for your t66.
Reboot	Reboots your t66.
Shutdown	Shuts down your t66.

3. Use arrow keys on the keyboard to select **Firmware update**, and then press **Enter** to continue.
4. Atrust Thin Client Recovery System is launched with a message prompting for confirmation.
5. Use arrow keys on the keyboard to select **Yes**, and then press **Enter** to continue.
6. A new screen appears prompting you to select the source for firmware update.
7. Use arrow keys on the keyboard to select **USB**, and then select **Next**.
8. Press **Enter** on the keyboard to confirm.
9. A new screen appears prompting you to select the Recovery mode. Two modes are available: **INSTALL** and **UPDATE**.
10. Use arrow keys on the keyboard to select the desired mode, and then select **Next**.

11. Press **Enter** on the keyboard to confirm.
12. A new screen appears prompting you to select the desired display language for your t66.

**NOTE**

- The available languages may vary with the firmware version.
- The selected language will be the **default** system/display language. You are allowed to change the system/display language later in Atrust Client Setup, but **the default** is determined by the selection during installing/updating firmware.

13. Use arrow keys on the keyboard to select the desired language, and then select **Next**.
14. Press **Enter** on the keyboard to confirm.
15. Atrust Thin Client Recovery System starts updating firmware for your t66.
16. Upon completion, a success message appears. Press **Enter** to restart your t66 as required.
17. In case that you cannot control your mouse after restart, replugin the mouse or reboot your client to solve the problem.

## A.3 Using SECUREMATRIX Authentication for VMware Connections

### Enabling SECUREMATRIX Authentication for Custom VMware Connections


To enable SECUREMATRIX authentication for a custom VMware connection, please do the following:




#### NOTE

- SECUREMATRIX authentication is not available in Quick Connection mode.

1. On the local desktop, click **START > Settings > Atrust Client Setup** to launch Atrust Client Setup.
2. Click **Applications > VMware > Add** to create a new entry of connection settings.
3. On the General tab, type the desired session name and the server address of View Connection Server.

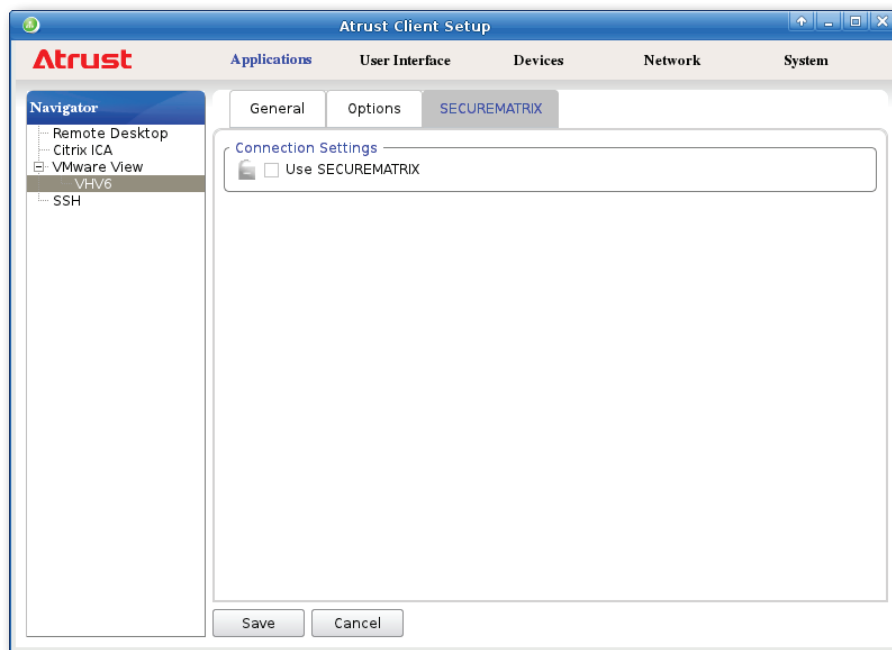

4. On the SECUREMATRIX tab, click to check **Use SECUREMATRIX**.

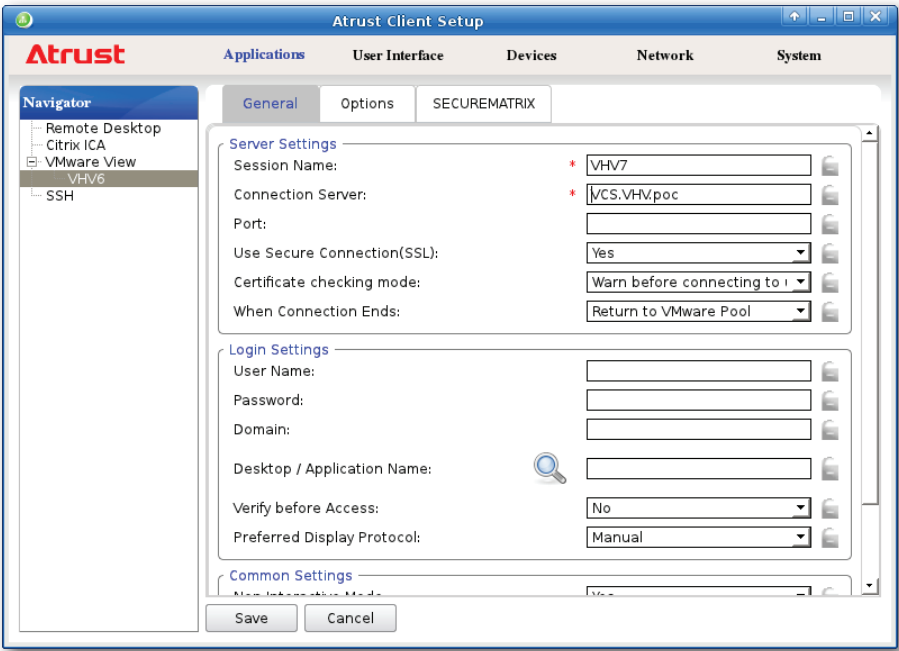

**NOTE**

- By default, SECUREMATRIX authentication is disabled.

5. Two fields appear for you to provide SECUREMATRIX related information. Type the server address of GSB server (the server for SECUREMATRIX authentication service).




6. Configure other connection settings if needed, and then click **Save** to confirm.
7. The access shortcuts will be created on the local desktop and START menu.

## Using SECUREMATRIX Authentication in VMware Connections

When SECUREMATRIX is enabled in your VMware connection, follow the steps and instructions below to use SECUREMATRIX authentication:

1. Click the shortcut on the local desktop or START menu.
2. A window appears to prompt for the Login ID of SECUREMATRIX authentication.

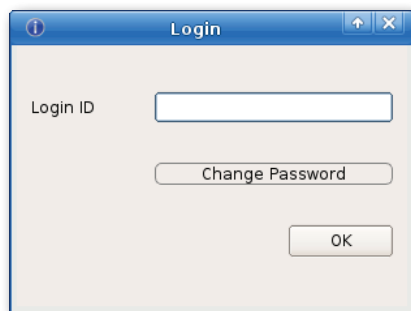


3. Type your Login ID, and then click **OK** to confirm.



### NOTE

- To change your password pattern, click **Change Password**. For details, please see "Changing Your Password Pattern for SECUREMATRIX Authentication" on page 220.

4. The SECUREMATRIX window appears prompting for the password.

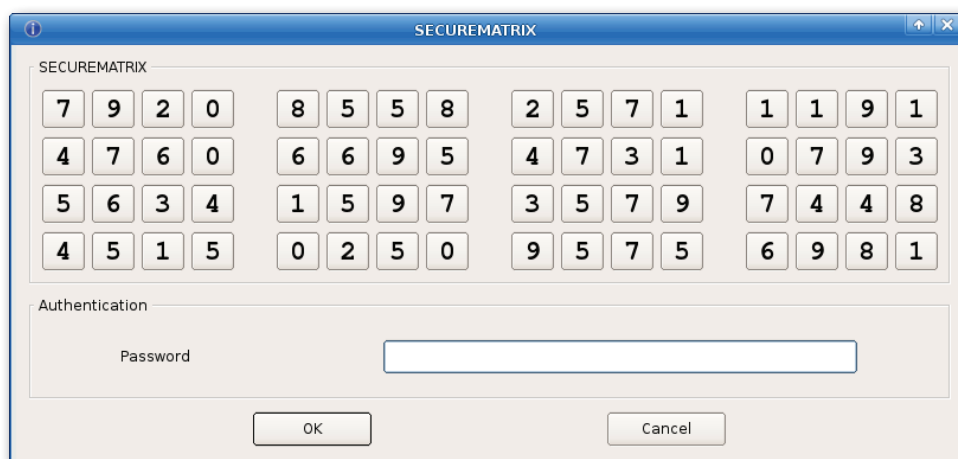


5. Type numbers under your **password pattern** using the keyboard or click numbers directly on the window, and then click **OK** to confirm.




TIP

- For example, if your *password pattern* is shown as below, type or click numbers, **0, 0, 4, 5, 1, 3, 6, 2**, in sequence.

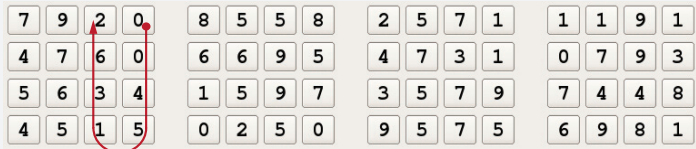

6. A message appears when SECUREMATRIX authentication is completed. Click **OK** to continue.

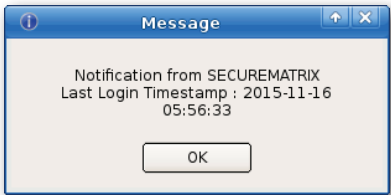

7. A message appears prompting to provide credentials for access to VMware virtual desktops and applications. Click **OK** to continue.




8. Type your credentials on the opened window, and then click **OK** to continue.



9. The Desktop and Application list appears. Double-click to select the desired desktop or application.



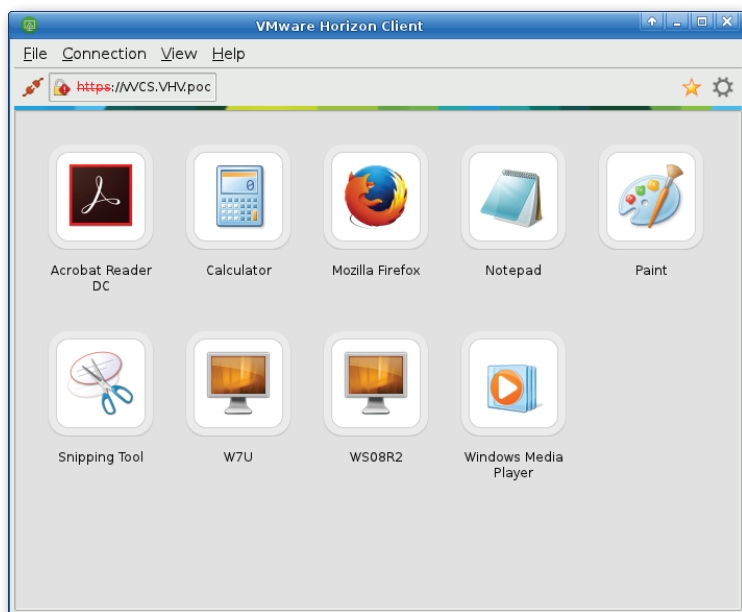


Changing Your Password Pattern for SECUREMATRIX Authentication

To change your password pattern for SECUREMATRIX authentication, please do the following:


- 1. On the window prompting for the Login ID as shown, type your Login ID, and then click **Change Password**.



- 2. Type or click numbers under your *old password pattern*, and then click **OK** to continue.

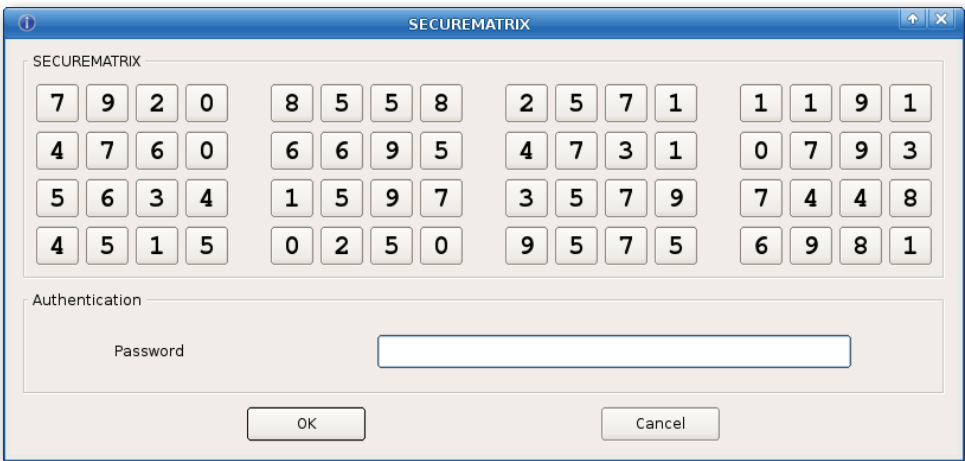

- 3. Type or click numbers under your *new password pattern*, and then click **OK** to continue.

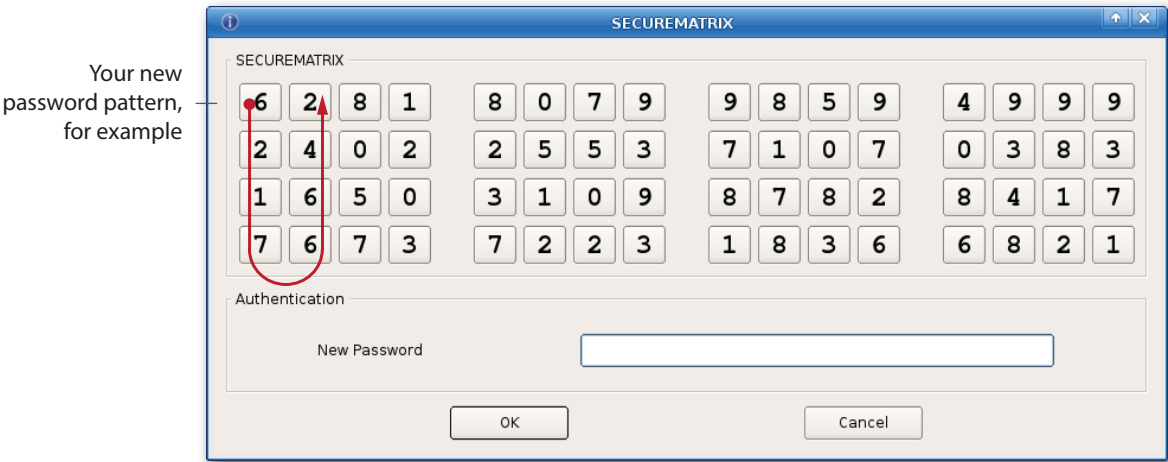

4. Type or click numbers under your *new password pattern* again, and then click **OK** to continue.

The screenshot shows a window titled "SECUREMATRIX". Inside, there is a 4x4 grid of numbers. A red line with arrows indicates a path starting from the number 7 in the first row, first column, moving right to 3, then down to 8, and finally right to 9. Below the grid, there is a section labeled "Authentication" with a text input field labeled "Confirm Password". At the bottom, there are two buttons: "OK" and "Cancel".

7	3	9	2	0	3	0	0	2	1	9	3	6	4	5	6
4	5	1	5	6	7	8	5	2	5	5	3	6	9	5	0
3	8	6	2	6	4	4	1	2	4	3	9	6	7	7	5
8	9	9	4	1	7	8	7	6	4	8	0	1	7	0	8

Authentication

Confirm Password

OK Cancel

5. A window appears showing your *new password pattern* in numerical order and prompting for confirmation. Click **OK** to confirm.

The screenshot shows the same "SECUREMATRIX" window. The 4x4 grid now displays the new password pattern in numerical order. The first column contains the numbers 1, 2, 3, and 4. The second column contains 8, 7, 6, and 5. The remaining cells in the grid are empty, represented by dashes. The "Authentication" section is now labeled "Confirmation" and contains the "OK" and "Cancel" buttons. A red line with arrows indicates the path from 1 to 8 to 7 to 6 to 5.

1	8	-	-	-	-	-	-	-	-	-	-	-	-	-	-
2	7	-	-	-	-	-	-	-	-	-	-	-	-	-	-
3	6	-	-	-	-	-	-	-	-	-	-	-	-	-	-
4	5	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Confirmation

OK Cancel



## Specifications

### Atrust t66 thin client

Processor	freescale™ ARM® i.MX 6Quad, 1.2 GHz
Random Access Memory	1 GB
Flash Memory	4 GB
Resolutions	Up to 1920 x 1080
I/O interfaces	<div>Front:</div> <div>2 x USB 2.0                      1 x Microphone                      Rear:                      2 x USB 2.0                      1 x DVI-I</div> <div>   1 x Headphone                      1 x RJ-45                      1 x DC IN</div>
Networking	1 x 10/100/1000Mb Ethernet
Power	Input: 100-240Vac, 0.5A, 50-60Hz Output: DC +5Vdc, 3A
Operating system	Atrust ARM Linux
Supported Protocols	Microsoft RDP with RemoteFX / Citrix ICA with HDX / VMware PCoIP
Management	Atrust Client Setup / Atrust Device Manager
Security	1 x Kensington lock slot
Mount	VESA mount kit, (W)114 x (H)6 x (D)60 mm (optional)
Dimensions	(W)135 x (H)29 x (D)93 mm
Weight	278 g (approx.), excluding AC adaptor
Environment	Operating Temperature:                      0° C ~ 35° C Non-operating Temperature:                      -30° C ~ 60° C Operating Humidity (Rh):                      10% ~ 90% (non-condensing) Non-operating Humidity (Rh):                      5% ~ 95%





